


# Bell Mobility Sun Telecom Pager



For self-service paging, please visit Web Xtend  
<http://xtendwebx/webxchange/wc/wwwcgi.dll?40UU406N~Login>

## Turning pager On and Off


To turn pager on:

Press and hold the  button.

To turn pager off:




1. Press the  button until **POWER OFF** is displayed on the screen.
2. Press the  button.

## Receiving and Reading Messages



Press the  button to stop the alert and read the message.

## Deleting Messages

To delete an individual message:

1. Press the  button until the message is displayed on the screen.
2. Press the  button until **DELETE** is displayed on the screen.
3. Press the  button. Message will be deleted.




To delete all messages:

1. Press  button until **DELETE ALL** is displayed on the screen.
2. Press the  button. All messages will be deleted.




*(Only unlocked messages can be deleted.)*

## Locking and Unlocking Messages

To lock a message:




1. Press the  button until the message is displayed on the screen.
2. Press the  button until **LOCK** is displayed on the screen.
3. Press the  button. Message will be locked and the locked icon will appear.

To unlock a message:

1. Press the  button until the message is displayed on the screen.
2. Press the  button until **UNLOCK** is displayed on the screen.
3. Press the  button. Message will be unlocked and the locked icon will disappear.




## Setting the Date and Time

To set the date and time:

1. Press the  button until **DATE-TIME** is displayed on the screen.
2. Press the  button until the correct year is displayed on the screen.
3. Press the  button.
4. Repeat steps 3 and 4 to set the month, date and time.



## Changing Ring tones

To change the ring tone:

1. Press the  button until **SET ALERT** is displayed on the screen.
2. Press the  button until the desired ring tone is heard.
3. Press the  button. Ring tone will be changed.

## Setting to pager to Vibrate Mode



To set the pager to vibrate:

1. Press the  button until **VIBRATION** is displayed on the screen.
2. Press the  button.

*(If you do not see **VIBRATION** as one of the options, then the pager is already in vibrate mode.)*

## Setting to pager to Audible Mode

To set the pager to audio:




1. Press the  button until **AUDIO** is displayed on the screen.
2. Press the  button.

*(If you do not see **AUDIO** as one of the options, then the pager is already in audible mode.)*

## Low Battery Indicator

When the battery is low, a low battery icon will be displayed and the alarm tone will sound.

### Legend:

-  → Read Button
-  → Function Button
-  → Light Button