



MEDIA & EVENTS



SDI — HD-SDI INPUT MODULE

R9842364

INSTALLATION MANUAL
For Solaris

Barco nv Media

Noordlaan 5, B-8520 Kuurne

Phone: +32 56.36.89.70

Fax: +32 56.36.88.24

E-mail: media@barco.com

Visit us at the web: www.barco.com

Barco nv Events

Noordlaan 5, B-8520 Kuurne

Phone: +32 56.36.89.70

Fax: +32 56.36.88.24

E-mail: events@barco.com

Visit us at the web: www.barco.com

1. INSTALLATION PROCEDURE



Before starting the installation procedure, switch off the Solaris LC40 and unplug from the wall outlet.



For a fully implementation, Solaris LC40 must be equipped with software version 1.08 or higher.

1.1 Removing the actual module or dummy

How to remove

1. Turn out both fixing screws holding the actual installed module or the dummy cover. (image 1-1)
2. Slide out the actual installed module or take away the dummy cover.

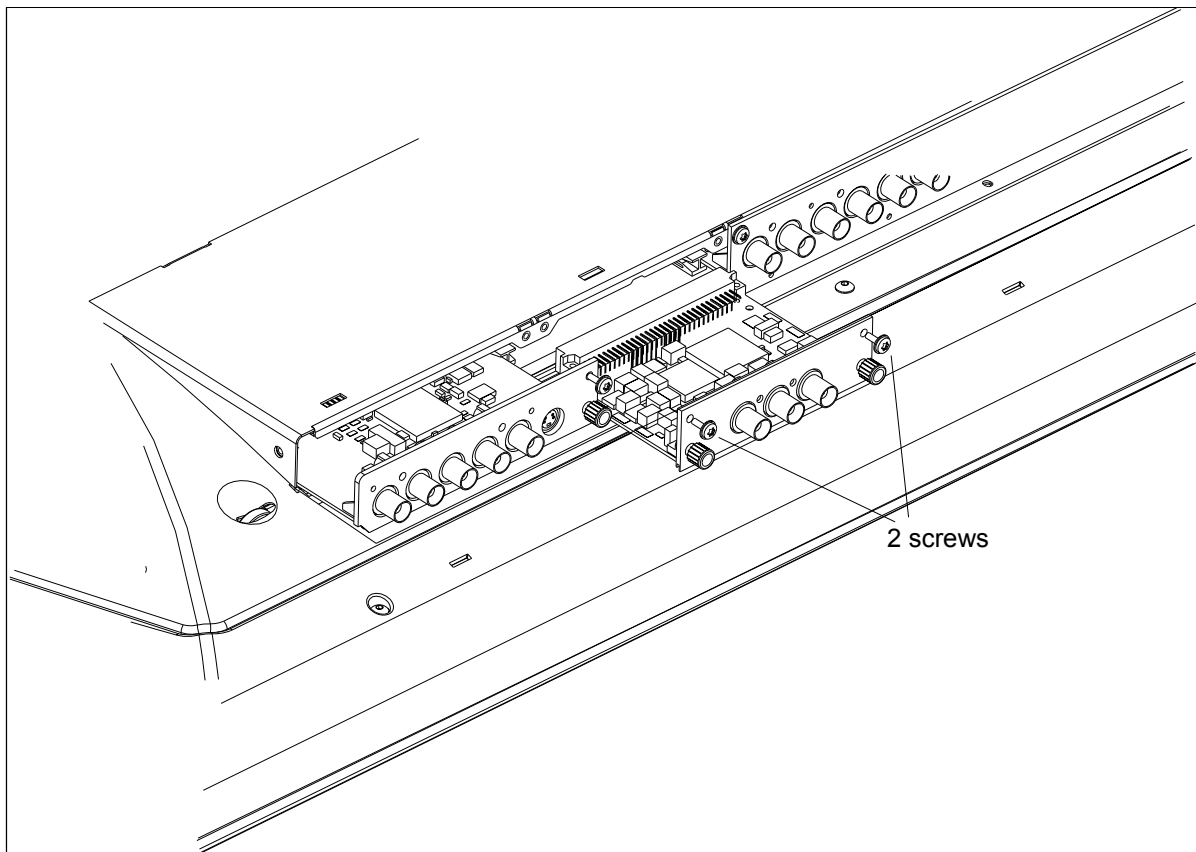


Image 1-1

1.2 Inserting a new module

How to insert

1. Slide the module into the slot. Insure the module is seated correctly in the guide grooves.
2. Press on both handles of the input module until the module plug seats in the connector of the Solaris LC40.
3. Secure the input module by turning in both removed screws.
4. Reconnect to the wall outlet and start up the Solaris LC40.

1.3 Specifications overview

Specifications

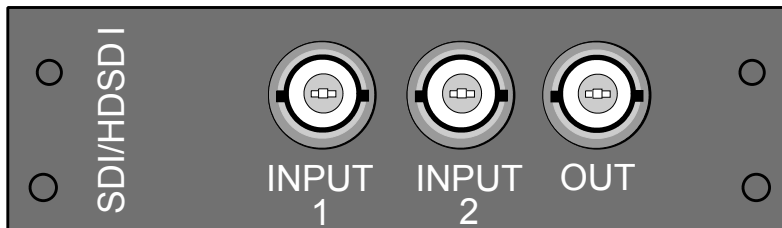


Image 1-2
HD-SDI input module

SDI/HD-SDI input 1: BNC

SDI/HD-SDI input 2: BNC

Auto input detection between input 1 and input 2

SDI/HD-SDI output : BNC (= loop through)

Typical : 0.8 V_{pp}

75 Ω terminated

Output impedance : 75 Ω



To select the HD-SDI input module and to configure the priority setting, consult the owner's manual of the Solaris LC40.
