

BURLEY®

BURLEY® STROLLER KIT

d'lite™

Euro d'lite™

Lady Bug™

Encore™

Solo™

Cub™



Owner's Instruction and Safety Manual

Congratulations!

By purchasing the Burley Stroller Kit, you've increased the fun and excitement that you and your family can have with your Burley child trailer.

IMPORTANT:

Because some of the features and guidelines for using your Burley merit close attention, it is very important that you familiarize yourself with the Stroller by reading this entire manual and your Burley Trailer manual before use. If you have any questions, please contact your Authorized Burley Dealer or check our website at www.burley.com.

Table of Contents

Introduction	Pg. 2
Safety Guidelines	Pg. 3
Hardware Bag Contents and Tool List	Pg. 4
Mounting the Wheel Pivot Assembly	Pg. 4
To Adjust the Tracking	Pg. 6
To Convert from Strolling to Trailering	Pg. 6
Maintenance	Pg. 7
Warranty	Pg. 8

WARNING

Failure to observe all of the safety guidelines in this manual could result in an accident and serious injury or death.

Safety Guidelines

Protect Your Children

Never leave your children unattended in the Stroller, and always use the handle bar tether. Use the shoulder harnesses and lap belts to securely hold your children in the Stroller at all times. For maximum stability and safety, seat a single child in the center. Periodically check the placement of the shoulder straps, especially for sleeping children. Make sure children cannot put a finger into the wheel spokes.

Loading Your Stroller

Do not overload your Stroller. The maximum load limit for children and/or cargo is 100 lb. (40 kg. in Europe) for two-child trailers, and 75 lb. (34 kg. in Europe) for single child models. When placing children or cargo into the Stroller, keep the load centered and in front of the axle. Pack the load as low as possible and make sure items cannot shift. Loose, heavy objects can injure passengers in event of a sudden stop or tip over.

Always Use Your Cover

Always use your cover when using the Stroller outdoors. Never leave your children unattended in direct sunlight, as heat buildup in the trailer can cause serious harm. Open or close the vinyl window and periodically check to make sure your children are comfortable.

Proper Wheels and Tires are Essential

Use only the factory-supplied wheels, and keep them properly maintained. Inflate tires to 30–35 P.S.I. and check pressure before each use. Do not use higher-pressure or knobby tires. For a smoother ride, we recommend using tires with street tread.

Use Your Flag

Always use the safety flag—it will help make the trailer more visible.

Observe Age and Height Restrictions

The Stroller seat is intended only for children old enough to sit upright and alone. Adequate neck strength is required to hold his/her head upright. A physician should evaluate anyone who is of questionable developmental age for using this Stroller. Never carry a child whose sitting height is above the roll bar, because their chance of injury is significantly higher in the event of a tip over.

Use Your Parking Brake

To maintain control of the Stroller, always set the parking brake before releasing the handle. Make sure the parking brake is properly adjusted and working prior to using your Stroller, especially after changing the tires or removing the wheels.

Walk on Suitable Surfaces

Your Stroller was designed for use on surfaces that are meant for walking. Do not use the Stroller on stairs, escalators or other uneven surfaces while your children are in it. Never use your Stroller with inline or roller skates.

Hardware Bag Contents and Tool List

IMPORTANT:

Please verify that you have received all of the contents listed. Do not proceed with assembly if any parts are missing; contact Burley immediately for replacement parts.

Bag Contents:

- (1) ¼ x 2" hex bolt
- (2) lock nuts
- (1) Pivot wheel assembly
- (2) ¼" x 1" hex bolts

Tools Required:

- (2) 7/16 inch wrenches or small adjustable wrenches
- (1) 3/4 inch wrench
- (1) 5/32" hex wrench

Mounting the Wheel Pivot Assembly


The Stroller wheel folds out of the way for trailering, or drops down into position for strolling. The wheel mounts at the end of the trailer's tongue.

Temporary Hitch Removal

Before installing the wheel pivot assembly, unhitch the trailer tongue from the bicycle. Loosen and remove the locking nut and bolt from the tongue (the bolt can be discarded; a longer bolt is provided for the next step). Remove and save the hitch, locking nut, safety strap and the D-ring for re-installation. Do not remove the hitch connector in the tongue end.

Re-Assembly with the Wheel Pivot Assembly in Place

Slide the tongue into the wheel pivot assembly and line up the hole in the tongue with the hole in the top of the assembly. Run the provided 2 inch bolt through the grommet in the end of the safety strap, the holes in the wheel pivot assembly and the tongue, and finally the D-ring. Secure the bolt with the locking nut (tighten to 6 ft-lbs). The end of the bolt should be flush or completely pass through the end of the nut. Place the 1" bolts through the holes on the side of the pivot assembly. Secure the bolts with the lock nuts (tighten to 6 ft-lbs.).

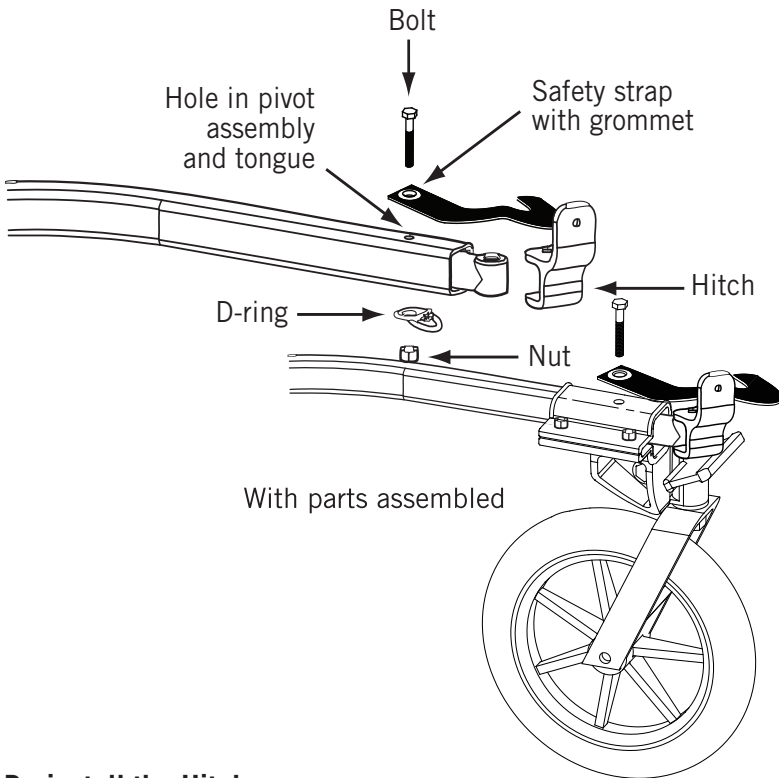


Re-install the Hitch

To re-install your hitch, place the Stroller wheel in the “Bike” (up) position, so that it is out of the way, and tighten the knob. (See the following section “Converting From Strolling to Trailering” for more details.) Then mount the hitch to the left rear dropout of your bike. Slide the hitch connector end on the tongue between the hitch side arms, insert the retaining pin through the holes and close the pin. Wrap the safety strap around the inside of the chain stay twice and then over the hitch body. Fasten the hook to the D-ring on the top of the tongue. (See your trailer manual for more instruction.)

To Adjust the Tracking


To adjust the tracking of the stroller wheel (which allows the stroller to roll straight), loosen set screw with 5/32" hex wrench, adjust the bushing with a 3/4" wrench. (See the illustration below or above). Turn the bushing until the wheel is perpendicular to the ground. Test the tracking by pushing the stroller away from you to make sure it rolls straight. Make any additional adjustments before putting your child in the trailer.

When aligned tighten set screw.

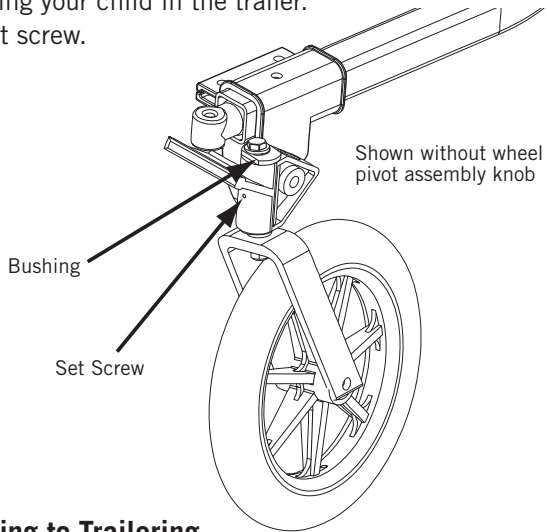

To Convert from Strolling to Trailering

The wheel must be placed in the up position in order to attach the trailer to a bicycle. The conversion from “Stroller” (down) position to “Bike trailer” (up) position, is quick and requires no tools. First, engage the parking brake. Loosen the wheel pivot assembly knob by turning it counterclockwise, until the triangular pivot section can be rotated. Swing the wheel up until the word “BIKE” on the triangular pivot section appears. The arrow should point at the “B” in “BIKE”. Line up the small triangular section with the larger triangular section (with “BIKE” printed on it). Tighten the knob. Now attach the trailer to your bike, using your Burley hitch, retaining pin or bolt, and safety strap.

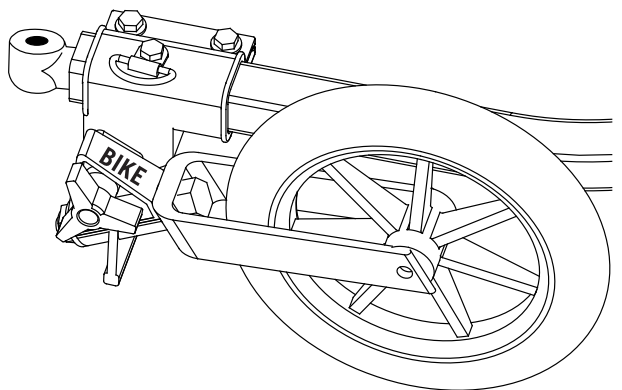

WARNING

When converting your Stroller to a bicycle trailer, make sure that the Stroller wheel is in the proper position before attaching the trailer to your bicycle. Do not use this product as a bicycle trailer without the retaining pin or bolt and safety strap properly installed. Failure to follow the instructions in this manual and your trailer manual can cause an accident resulting in serious injury.

Maintenance

- Lubricate the wheel-pivot assembly twice a year for normal use, or monthly if used in wet or salty conditions.
- Inspect handle, receivers, parking brake and wheel pivot monthly.
- Contact your Authorized Burley Dealer to replace any loose or damaged parts.

Burley Stroller Kit Limited Warranty

Burley will repair or replace parts it determines to be defective as follows: plastic parts for five years and durable frame parts for the lifetime of the Stroller Kit. The owner of a Burley Stroller Kit must present the Stroller Kit for repair at an Authorized Burley Dealer, together with an original sales receipt or similar proof of purchase. This warranty applies only to the original owner and is nontransferable. Burley can not be responsible for failure due to improper assembly, modification of parts or instructions, neglect, abuse, accident, and/or normal wear. The warranty does not cover any trailer used for rental, competition, or commercial use.

Burley neither assumes nor authorizes any person to assume any other liability in connection with Burley products, and there are no oral agreements or warranties collateral to or affecting this agreement.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

BURLEY®

Copyright ©2007 by Burley Design, LLC
“Burley” is a registered trademark of Burley Design LLC
Burley Design, LLC • 4020 Stewart Rd • Eugene, OR 97402
541.687.1644 • Fax 541.687.0436 • www.burley.com