

Instruction Manual

Be sure to carefully read this instruction manual **before** using the product to ensure proper use of the stroller and keep it for future reference. Record the following information for quick reference.

Date Purchased: _____ Model Number: 2680 - _____ Color _____

 
Attach copy of sales receipt.

Located on the rear right leg.


Fabric Pattern _____

Parts List


Make sure you have all the parts listed below before using your stroller. If any parts are missing, call Consumer Affairs at 1-800-99-COMBI.

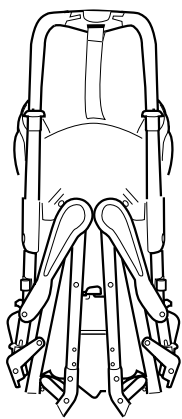


Main Body

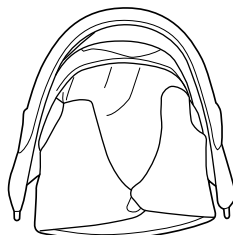 


Canopy

 

Front Wheel
x2

 


Rear Wheel
x2

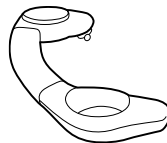 


Kid's Tray



 Stroller Pack

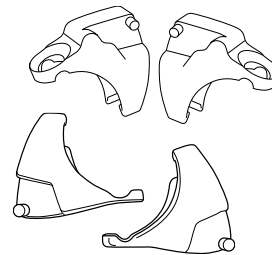


Combi Connection
Attachments

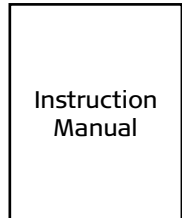 


Instruction
Manual

 Name of Parts

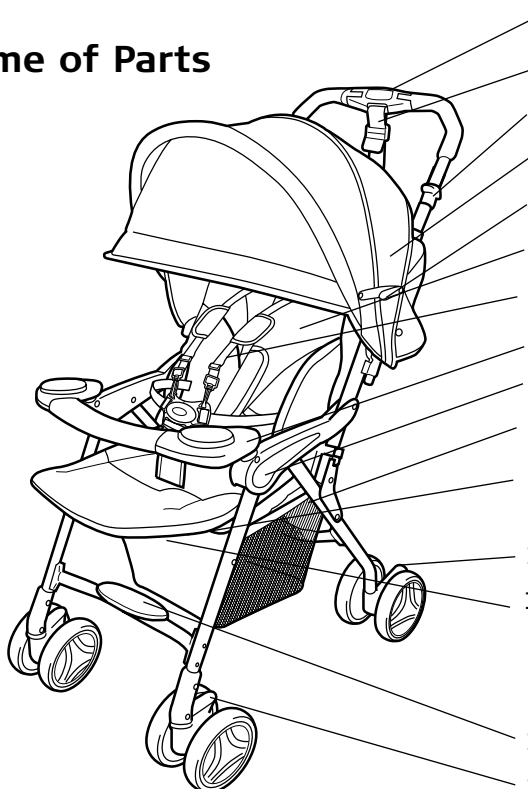

 - 1 Handle
- 2 Carrying Strap
- 3 Fold Release Lever
- 4 Speaker Pockets (Inside Canopy)
(Speakers sold separately.)
- 5 Canopy Lever
- 6 Seat Cushion
- 7 5-Point Harness
- 8 Kid's Tray
- 9 Armrest
- 10 Basket
- 11 Seat Extension
(located under the seat cushion)
- 12 Brake Lever
- 13 Auto Folding Latches
(under the seat cushion on the
right and left sides)
- 14 Footrest
- 15 Swivel Lock Lever

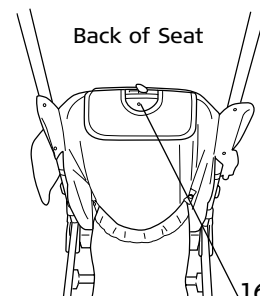

16 Reclining Lever

⚠️ WARNINGS For your child's safety:

If your stroller is not used in compliance with these instructions, serious injury may result.

⚠️ WARNING

Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.

⚠️ WARNING

Avoid serious injury from falling or sliding out. Always use attachment strap.



⚠️ WARNING

Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.



⚠️ WARNING

Do not use seat from stroller to carry child.



⚠️ WARNING

Do not lift or carry the stroller while occupied. The stroller may fold.



⚠️ WARNING

Always remove child before detaching, reattaching stroller seat.



⚠️ WARNING

Do not allow your child to stand in or on the stroller.



 
⚠️ WARNING

Do not hang items on the handle or place items on canopy. This could cause the stroller to become unbalanced or tip over.



⚠️ WARNING

Never leave child unattended.

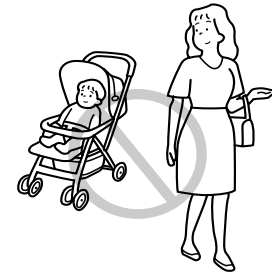


⚠️ WARNING

Never carry more than one child in the stroller. Do not allow a child to ride or sit on areas of stroller other than the seat.



⚠️ WARNING

 Always engage both brakes when parking the stroller.

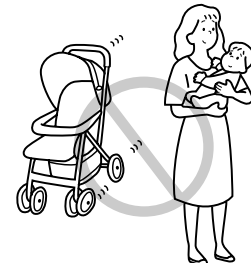


⚠️ WARNING


CHILD MAY SLIP INTO LEG OPENINGS AND STRANGLE. NEVER USE IN RECLINED CARRIAGE POSITION UNLESS THE PERMANENTLY ATTACHED SAFETY COVER IS USED.

In the event of damage or problems, discontinue use and contact Combi Consumer Affairs for instructions: 1-800-992-6624.

 Opening the Stroller

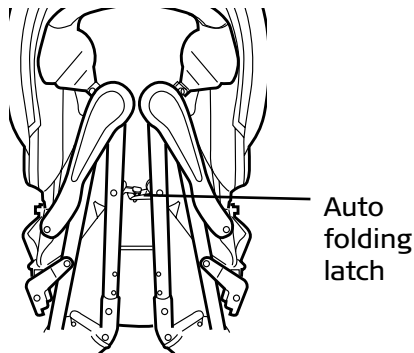


 Holding the handle from underneath will make it easier.

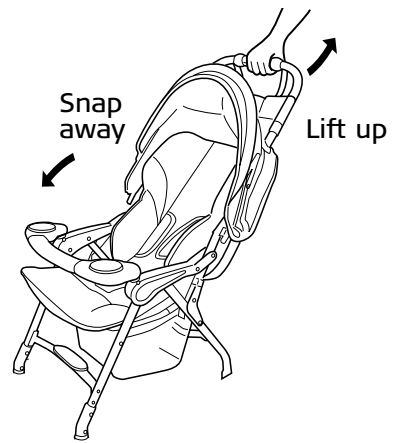


2. Grip the handle on each side and turn outward to open fully.
3. Lift up the handle and snap the stroller away from you.

 Attaching the Rear Wheels

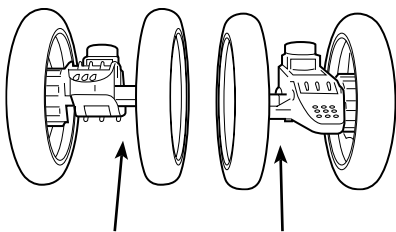

 
Note:
Attach the rear wheel assemblies to each stroller leg with the wheel spacer facing inward.

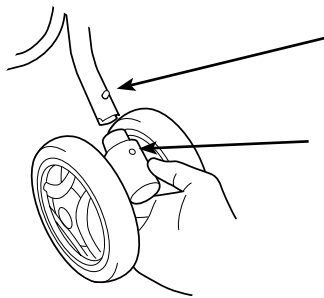

1. Stand behind the stroller.
2. Locate the small chrome pin on each rear stroller leg.
3. Locate the small opening on each rear wheel assembly.
4. Insert the leg into the wheel assembly until the small silver pin locks into the opening.


Attaching & Removing the Front Swivel Wheels

 Place front swivel wheel assembly on the swivel shaft. The assembly is secure when it locks onto the shaft.

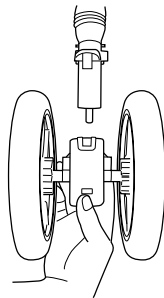


Removing the Swivel Wheels

 Press in the square button located at the bottom of the wheel holder while pulling the assembly off of the swivel shaft.

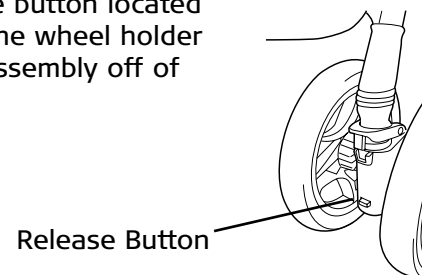

Attaching the Canopy

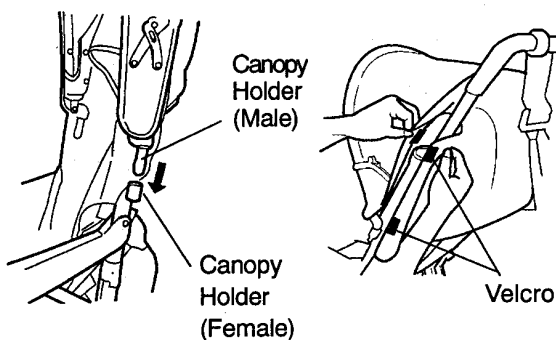 

CAUTION

Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller by laying it down, be sure the canopy is off the ground to prevent it from bending.

Attaching the Canopy

 
1. Confirm the canopy is facing in the proper direction.
2. Fully insert the canopy holder (male) to the canopy holder (female) until a click is heard.
3. Fasten the canopy Velcro on both sides around the handles to the seat back Velcro (2 places.)

Removing the Canopy



Pull the Velcro apart and squeeze the bottom of the canopy holder (male). Lift the canopy until it releases from the female holder.

Installing Optional Speakers

Speakers sold separately.

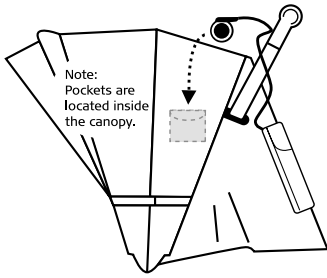

  1. Insert a speaker into the small pockets located on both sides of the canopy.
2. Place your portable CD, cassette or MP3 player inside the large storage pocket on the back of the canopy.
3. Route speaker cords through canopy to inside pocket.
4. Insert the (2.8mm) plug into player.

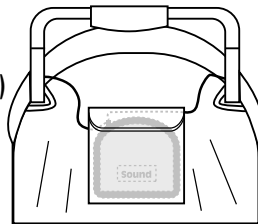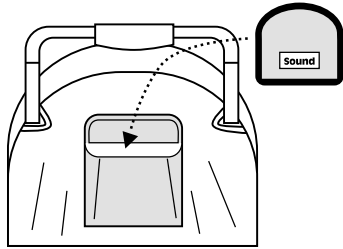

CAUTION

Be sure to test the volume on your player. Set it at a comfortable level so that it does not startle your baby when turning it on. Loud volume can hurt your baby's ears. If you notice that the sound has become weak or distorted or if tracks do not change, this is an indication that your batteries are low. Replace the batteries and set the volume at a comfortable level.

CAUTION

Before folding your stroller, be sure to remove your player from the back pocket of the canopy. This will make it easier to fold the stroller.

When you fold the stroller, you may leave the speakers in the Acoustic Canopy, but only for short periods of time.

In the summer, the temperature may get as high as 212°F/100°C or more. Do not leave your stroller, with the speakers in the Acoustic Canopy pockets, in your car trunk where the temperature may reach high levels. Store speakers in a cool and dry area.



 
 
WARNING:

To avoid serious injury keep stereo speakers and cords out of reach of children.

Using the Front Swivel Wheels

To lock swivels, push both swivel lock levers **down**.

To unlock swivels, lift both swivel lock levers **up**.

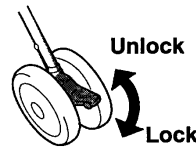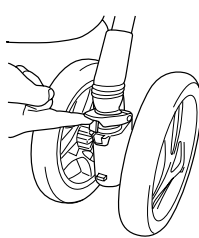

Using the Brakes

To lock brakes, push both brake levers **down**.

To unlock brakes, lift both brake levers **up**.

CAUTION

Push the stroller forward to ensure that the brakes are properly engaged.

 
Using the Safety Cover



WARNING: Child may slip into leg openings and strangle. Never use in reclined carriage position(s) unless safety cover is securely fastened.

CAUTION

Before folding the stroller, unfasten and store the safety cover under the seat. The stroller will not fold with it attached.

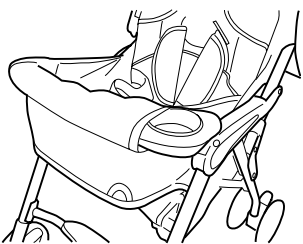

Installing the Safety Cover

 
1. Lift the seat cushion and pull safety cover out.
2. Place the safety cover over the guardrail and secure it with the Velcro.

Using the Reclining Backrest



WARNING:

Never use seat in reclined position unless the permanently attached safety cover is used.

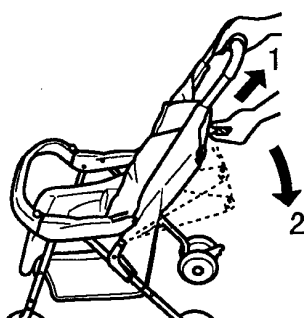


1. Press the lever at the top of the seat to the left.
2. Adjust the backrest gently to any of three positions.

To return the backrest to the upright position, simply lift the backrest gently into place.


CAUTION

Be careful when reclining the backrest while your baby is in the stroller to prevent abrupt changes in seating position.

 Using the Guardrail

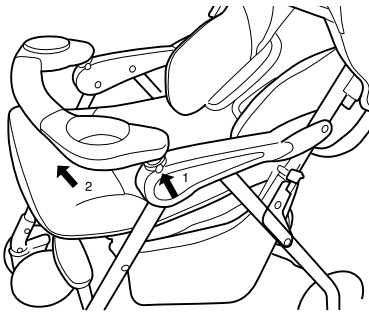


 1. Squeeze the guardrail release buttons on both sides to release the guardrail.
2. When one side is released, the guardrail will pivot to allow easy access to the seating area.

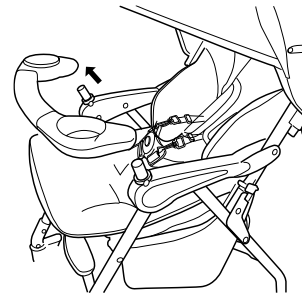

3. When both sides are released the guardrail can be removed.
4. To attach the guardrail slip it over the armrest pins until you hear the pins click into position.

 Using the Seat Extension

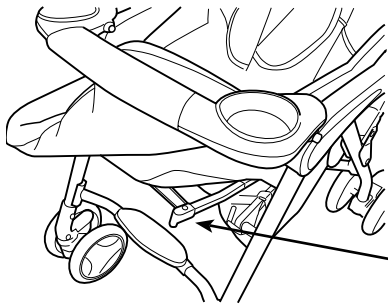


1. Lift the seat cushion and locate the seat extension.
2. Pull out the seat extension.


When not in use, push the seat extension back to the original position.

Seat extension

 Using and Adjusting the 5-Point Harness

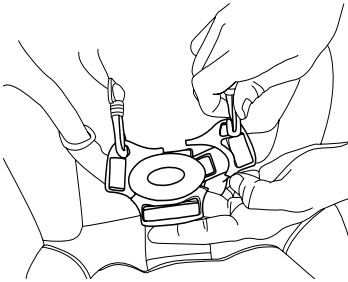

 1. Place the crotch belt between the baby's legs.
2. Insert both waist belt buckles into the middle plastic piece.
3. Attach each shoulder strap's hook to the top of the waist belt clips.
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle.

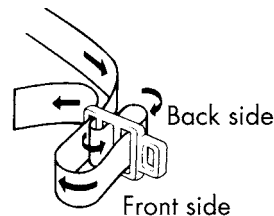


WARNING:


Avoid serious injury from falling or sliding out. Always use the 5-point harness.

Folding the Stroller

 
1. Fold the canopy by lifting the canopy levers.
2. Remove your player from the back pocket of the canopy.
3. Place seat in the upright position.
4. Hold the folding levers up on both sides of the handle while completing step 5.
5. Tilt the stroller onto its back wheels and roll forward. Then pull the handle back quickly to fold front guardrail to backrest.
6. Turn handle inward with an underhand hold to latch and lock.

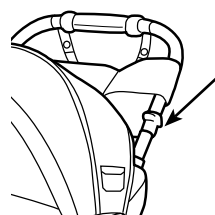

Fold Release Lever

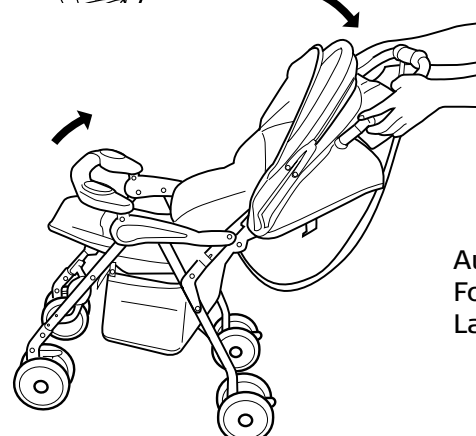 


Turn inward to fold.

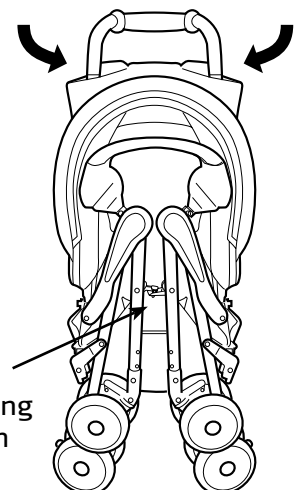 

Auto Folding Latch

 Removing/Attaching the Seat Cushion

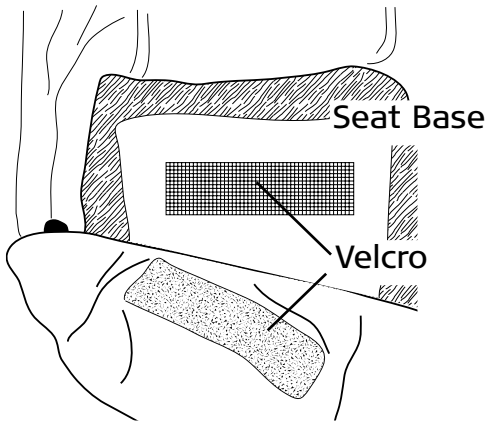

Removing

1. Unbuckle the 5-point harness and pull all the straps through the seat cushion.
2. Grasp the seat cushion at the top and unfasten from the Velcro.

Attaching

 
1. Pass the 5-point harness waist belt straps through the appropriate locations of the seat cushion.
2. Fasten the Velcro.

CAUTION

If seat cushion is ripped or torn, do not use.

Do not use the stroller without the seat cushion.

Using the Basket

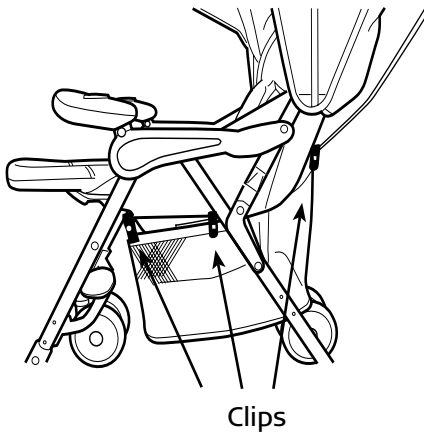

Removing

Unfasten clips on front and side of basket.

 
Attaching

Reverse the procedures for **Removing**.

CAUTION


Do not place more than 11 lbs. in the basket. Remove all items from the basket before folding the stroller.

Using the Combi Connection Attachments

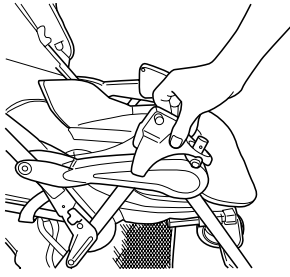


ATTACHING THE COMBI CONNECTION ATTACHMENTS

 
1. After removing the Kid's Tray Guardrail attach the Combi Connection Attachments by slipping them over the armrest pins until you hear the plastic tabs click into position. Gently pull up on attachment, to be sure it is secure.

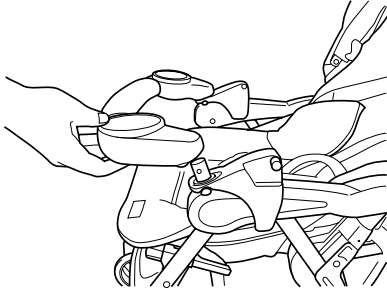

2. Attach Kid's Tray Guardrail and pull up on guardrail to ensure it is secure.

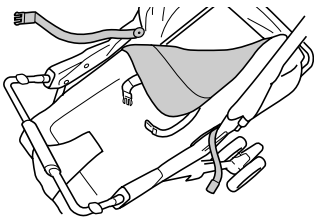 

 3. Recline the backrest to the middle position. Pull the Carrier Attachment Straps from behind the seat cushion and lay them over the armrests.

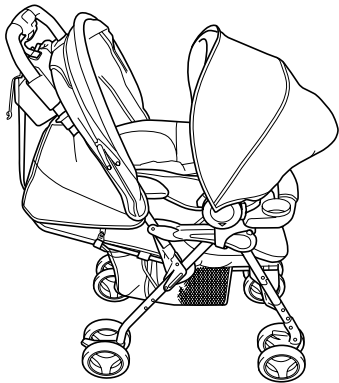

4. Attach Combi Connection infant seat to attachments and press down until seat locks in place.



5. Bring the Carrier Attachment Straps through the slots in the infant car seat/carrier and fasten the buckle. (If the strap is the incorrect length, adjust as needed. To adjust, thread fabric through each side of the buckle.)

Infant car seat **MUST** be secured to stroller. After installation, lift car seat to verify it is securely locked onto stroller.

⚠️ WARNINGS

⚠️ WARNING

When Combi Connection infant car seat is in the stroller, ALWAYS ensure seat is locked in position by pulling up on infant seat.

⚠️ WARNING

Attachment straps MUST be used to secure seat.

⚠️ WARNING

The Combi Connection infant car seat attachments are ONLY to be used when attaching the Combi Connection to this stroller. DO NOT use for any other purpose.

⚠️ WARNING

To ensure your child's safety, please refer to the Combi Connection instruction manual.

 
⚠️ WARNING

If unable to securely attach the Combi Connection to your stroller, discontinue use and contact Consumer Affairs.

⚠️ WARNING


DO NOT carry stroller by using Combi Connection infant car seat handle.

Removing the Combi Connection Infant Seat from Stroller

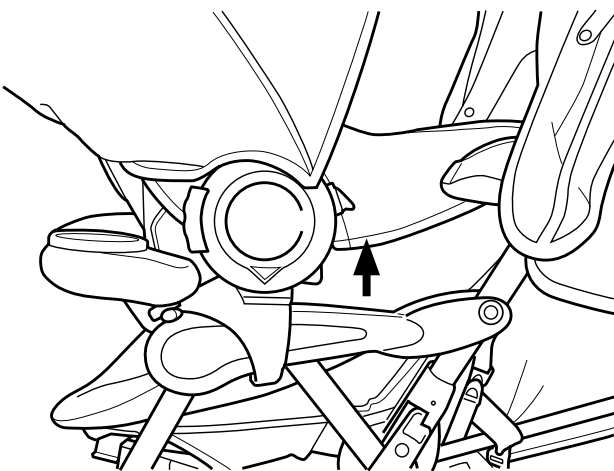


1. Locate the release lever and **pull upward to unlock** the side of the infant seat.

 Removing Combi Connection Attachments

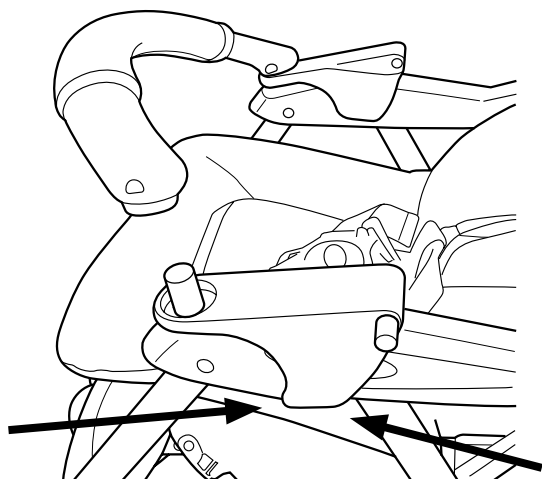

1. Remove infant seat and guardrail.

 2. Pull bottom of Combi Connection attachment away from stroller gently to release.

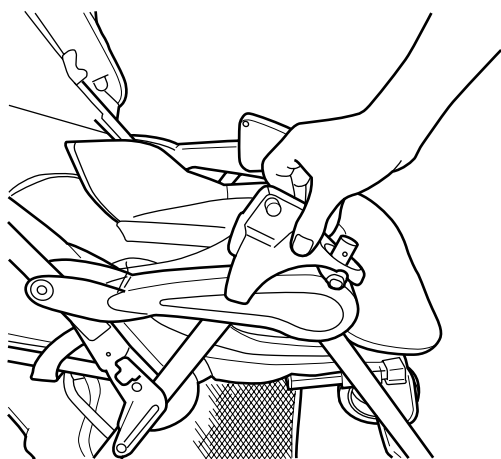

3. Lift attachment up and away from guardrail post.

Trouble Shooting

STROLLER WON'T FOLD

- Check to see that the seat belt is not caught in the side.
- Make sure front swivels are locked.
- Make sure the backrest is in the upright position.
- Remove all items from the basket.
- Remove your player from back pocket of the canopy.

DIFFICULT TO STEER/STROLLER PULLS TO ONE SIDE

 
- Remove any items hanging from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean and add silicone to wheels, if necessary.

DIFFICULT TO GET UP CURBS

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.

DIFFICULT GOING DOWN CURBS

- Turn stroller around, bringing rear wheels toward the edge of the curb. Gently lower rear wheels onto the surface below. Once the rear wheels have landed, guide the front portion of the stroller, using the armrest as support.

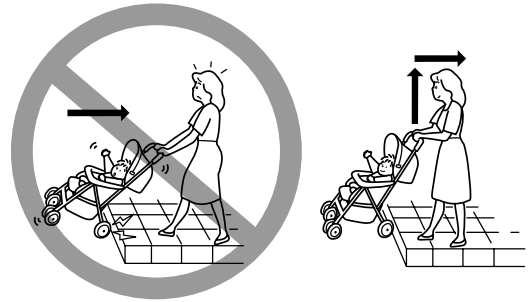

Routine Maintenance

STORE IN A COOL AND DRY AREA, especially in the summer. Do not store the stroller in the trunk of a vehicle.

SEAT CUSHION

The seat cushion is machine washable. Set to gentle cycle using warm water and a mild detergent. Do not use bleach. Lay seat cushion and canopy and car seat covers flat to dry in shaded area. Do not machine dry. To prevent color fading, do not leave soaking for a long period. If the seat cushion is frayed or unraveling, discontinue use and call Consumer Affairs for further instruction.

CANOPY, SEAT BELT, FIXED BASE SEAT, TRAVEL BAG, STROLLER PACK AND BASKET

Hand wash with a soft brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent then apply directly to the dirty area. Wipe out the detergent.

MAIN BODY

Briskly wipe off any mud and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry. Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

 
WHEEL ASSEMBLIES

After prolonged normal use, the wheels of your stroller may not swivel or turn as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheels by pressing the release button and wiping off mud and dirt. **Do not use soap and water to wash wheels.** Periodically check that all screws, bolts and nuts are tight.


Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add silicone* to **the wheel assemblies** in small amounts.

Do not use lubricants because oil attracts dust and would hinder the movement rather than improve it.

*Silicone spray is available in varying size cans at most hardware stores.

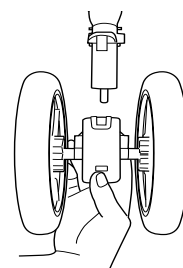

Front Swivel Wheel

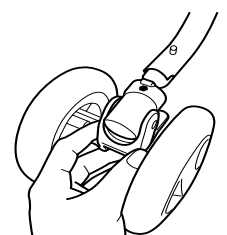 

Rear Wheel

LIMITED WARRANTY

1. Combi Juvenile Products, when purchased from an authorized retailer; are warranted to the original purchaser to be free of defect in materials and workmanship for a period of one (1) year from date of purchase. Warranty is valid for products purchased and used in the U.S. only, and used in compliance with the warrantor's use and maintenance instructions. Save your carton and receipt in case of return for warranty service is necessary.
2. During the warranty period your Combi product will either be repaired or replaced, at the warrantor's discretion, without charge if it is purchased from an authorized Combi dealer and is found to be defective in workmanship or materials. For service call 1-803-548-6633. The warrantor shall not be responsible for any costs incurred by the consumer in returning a defective product for repair.

This limited warranty shall not apply to normal wear to the product, or if the product has been:

- a. Damaged due to accidents, misuse, abuse or neglect as determined by Combi.
- b. Tampered with or repaired by other than an authorized Combi repair center or with parts other than Combi approved parts.
- c. Leased or rented for commercial use.

THE WARRANTY PROVIDED HEREIN IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED. WARRANTOR'S OBLIGATIONS AND THE CONSUMER'S OR OTHER BUYER'S REMEDIES UNDER THE LIMITED WARRANTY ABOVE ARE EXCLUSIVE AND ARE STRICTLY LIMITED TO REPAIR OR REPLACEMENT AS STATED. ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ON THE PART OF THE WARRANTOR AND ANY SUPPLIER OR DEALER ARE HEREBY ALSO EXPRESSLY EXCLUDED.

Some states limit or do not allow exclusions or limitations on how long an implied warranty lasts so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Instruction Manual

If you would like to place an order for the following parts, please fill out the form below and return it to the following address:

Combi USA, Inc.

Attn: Consumer Affairs
1962 Highway 160 W, Suite 100
Fort Mill, SC 29708-8027

or Fax this completed form to

803-548-3663

IMPORTANT: We must have this information to process your order:

Model Number: 2680 - _____ Color & Pattern of Fabric: _____

Located near the rear right leg.

Parts List for the Savvy EX Model 2680.

	Price	Quantity	Total
1. Canopy	\$ 40.00		
2. Shoulder Pad Set	10.00/set		
3. Basket	20.00		
4. Seat Cushion	35.00		
5. Standard Guardrail	15.00		
6. Guardrail Cover	15.00		
7. Carrying Strap	12.00		
8. Rear Wheel Assemblies (left and right sides)	20.00/set		
9. Front Swivel Wheel Assemblies (left and right sides)	20.00/set		
10.			
11.			
12.			
	Amount of Order		
	ADD Shipping & Handling		
	Sales Tax (6%) (SC residents only)		
	Total		

If you need to order other parts for your stroller, please call us toll-free at 1-800-99-COMBI.

Shipping and Handling Fees: Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S.

Ship To:

Consumer Name _____

Street Address _____

Street Address _____

City, State, Zip _____

Telephone Number _____

Charge to my credit card:

- VISA MASTERCARD
 AMERICAN EXPRESS DISCOVER

Card Number _____

Expiration Date _____ - _____ - _____

Cardholder's Signature _____