

Instruction Manual


Read all instructions BEFORE assembly and USE of product. **KEEP INSTRUCTIONS FOR FUTURE USE.** Record the following information for quick reference. Note: Illustrations are only representative and not actual. Attach copy of sales receipt.

Date Purchased: _____ Model Number: 4010 - _____ Color _____
 Attach copy of sales receipt. Located on the rear right leg.


Parts List

Fabric Pattern _____

Make sure you have all the parts listed below before using your stroller. If any parts are missing, call Consumer affairs at 1-800-99-COMBI.

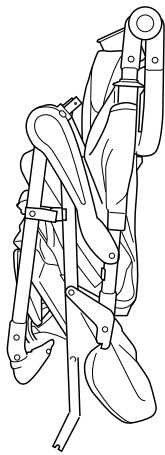


Main Body

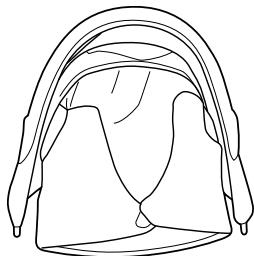


Canopy



Cupholder

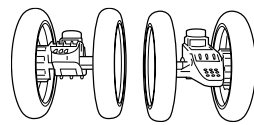


Rear Wheels

 


Front Wheel
x2



 Kid's Tray



Perfect Match™
Guardrail

 


Travel System Guardrail




Instruction
Manual


Name of Parts

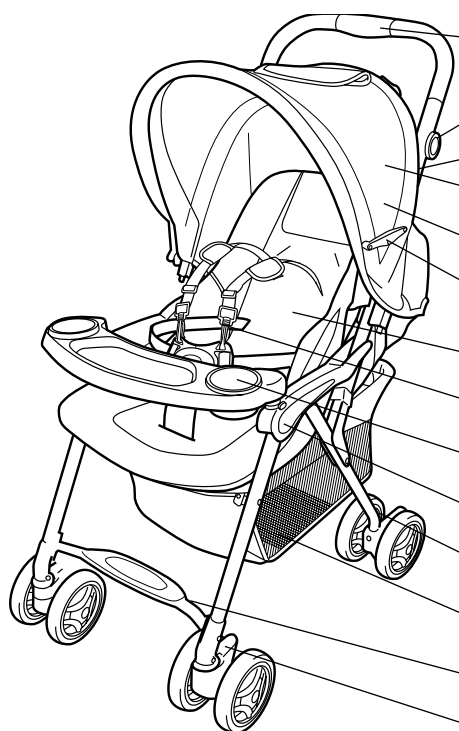


- 1 Handle Grip
- 2 Pivot Handle Button
- 3 Folding Lever
- 4 Speaker Pockets (Inside Canopy)
- 5 Canopy
- 5 Canopy Lever
- 6 Seat Cushion
- 7 5-Point Harness
- 8 Kid's Tray
- 9 Armrest
- 10 Brake Lever
- 11 Basket
- 12 Footrest
- 13 Swivel Lock Lever

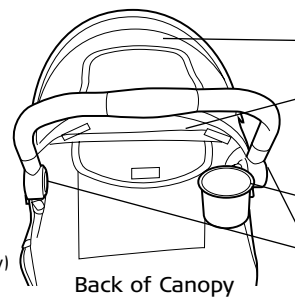


- 14 Viewing Window
- 15 Player Storage Pocket
- 16 Cupholder
- 17 Folding Levers

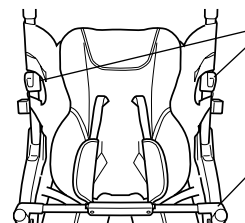

- 18 Infant Car Seat/Carrier Locks

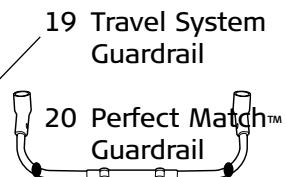

- 19 Travel System Guardrail
- 20 Perfect Match™ Guardrail

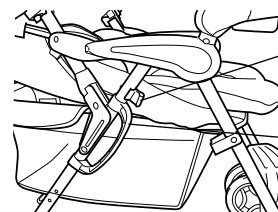

- 20 Folding Latch
- 21 Carrying Handle

WARNINGS For your child's safety:

If your stroller is not used in compliance with these instructions, serious injury may result.

In the event of damage or problems, discontinue use and contact Combi Consumer affairs for instructions: 1-800-99-COMBI.



⚠ WARNING
AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE 5-POINT HARNESS.



⚠ WARNING
NEVER LEAVE CHILD UNATTENDED.

⚠ WARNING

Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. See Page 11 of this manual for more information.



⚠ WARNING
DO NOT LIFT AND CARRY the stroller while open with a child in it. The stroller may slip.



⚠ WARNING
Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.

⚠ WARNING

DO NOT ALLOW CHILD TO LEAN OVER SIDES OF STROLLER. IT MAY BECOME UNBALANCED AND TIP OVER.

⚠ WARNING

Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition to exist.



⚠ WARNING
Do not allow your child to stand in or on the stroller.



⚠ WARNING
Do not put or hang things on the canopy or handle because it could cause the stroller to become unbalanced or tip over.

⚠ WARNING

TO AVOID BURNS, do not place bottles/cups with hot liquids in the cupholder.

⚠ WARNING

Do not load more than 11 lbs. (5kg) in the basket.



⚠ WARNING
Never carry more than one child in the stroller. Do not allow a child to ride or sit on areas of stroller other than seat. **Maximum weight of child: 45 lbs. (20 kg)**



⚠ WARNING
Always engage both brakes when parking the stroller.

CAUTIONS:

1. Improper usage or lack of knowledge regarding the instructions can result in dangerous situations, personal injury or damage to the stroller.
2. Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.
3. Push the stroller at a normal walking speed only.


All products specifications are subject to change without notice. Sizes and weights are intended as guides and are approximations. Combi reserves the right to modify the products in its line during the course of the year. Non contractual media. Colors are as accurate as the media in which they appear allows. ©Combi USA, Inc. 2004

Opening the Stroller


1. Press the pivot buttons in and raise pivot handle.



2. Place one hand on the handle and one hand on the seat. While grasping the handle, push the seat away from the handle until the stroller opens entirely and locks into the opened position.

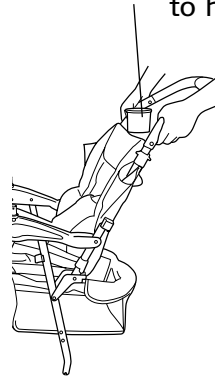


3. Attach Cupholder to handle.

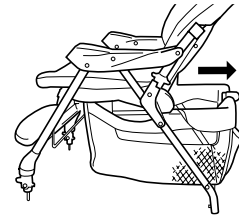


4. Pull the basket frame until it clicks and locks into place.

Note: The basket locks into a fixed position and is not moveable.

Attaching the Rear Wheels

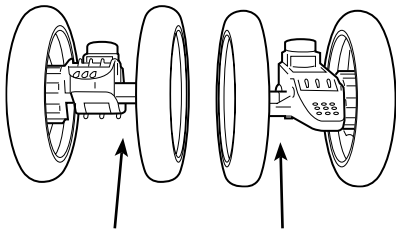


Note:
Attach the rear wheel assemblies to each stroller leg with the wheel spacer facing inward.

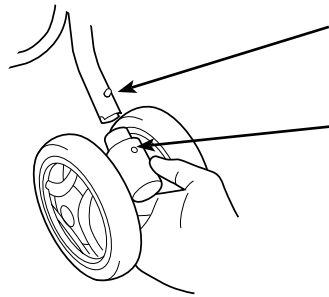

1. Stand behind the stroller.
2. Locate the small chrome pin on each rear stroller leg.
3. Locate the small opening on each rear wheel assembly.
4. Insert the leg into the wheel assembly until the small silver pin locks into the opening.

Attaching & Removing the Front Swivel Wheels


Place front swivel wheel assembly on the swivel shaft. The assembly is secure when it locks onto the shaft.

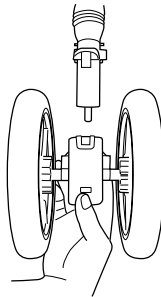

Removing the Swivel Wheels

Press in the square button located at the bottom of the wheel holder while pulling the assembly off of the swivel shaft.


Release Button

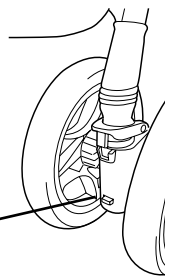


Using the Front Swivel Wheels

To lock swivels, push both swivel lock levers **down**.

To unlock swivels, lift both swivel lock levers **up**.

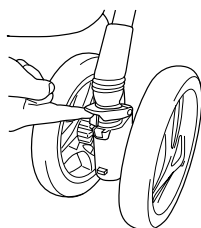

Using the Brakes

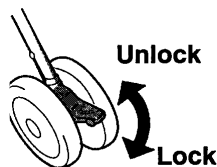


To lock brakes, push both brake levers **down**.

To unlock brakes, lift both brake levers **up**.

CAUTION
Push the stroller forward to ensure that the brakes are properly engaged.

Attaching the Canopy

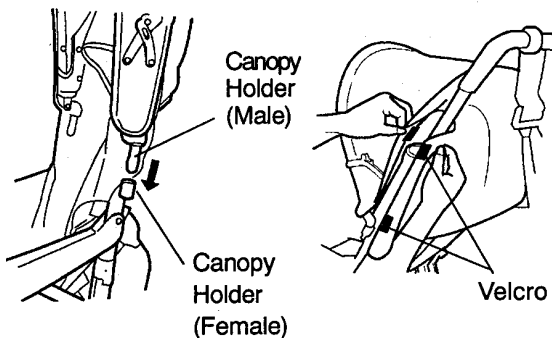

CAUTION

Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller by laying it down, be sure the canopy is off the ground to prevent it from bending.


Attaching the Canopy

1. Confirm the canopy is facing in the proper direction.
2. Fully insert the canopy holder (male) to the canopy holder (female) until a click is heard.
3. Fasten the canopy velcro on both sides around the handles to the seat back velcro (2 places.)

Removing the Canopy


Pull the velcro apart and squeeze the bottom of the canopy holder (male). Lift the canopy until it releases from the female holder.

Installing Optional Speakers

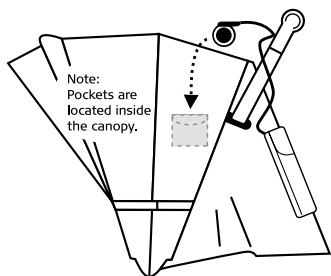


1. Insert a speaker into the small pockets located on both sides of the canopy.

2. Place your portable CD, cassette or MP3 player inside the large storage pocket on the back of the canopy.

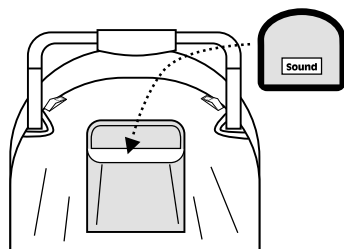

3. Attach the speaker cords through the Velcro holders on both sides of the storage pocket.

4. Insert the (2.8mm) plug into player.

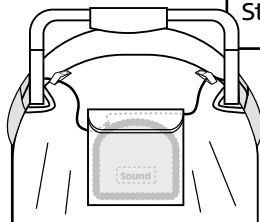

CAUTION

Be sure to test the volume on your player. Set it at a comfortable level so that it does not startle your baby when turning it on. Loud volume can hurt your baby's ears. If you notice that the sound has become weak or distorted or if tracks do not change, this is an indication that your batteries are low. Replace the batteries and set the volume at a comfortable level.

CAUTION

Before folding your stroller, be sure to remove your player from the back pocket of the canopy. This will make it easier to fold the stroller.

When you fold the stroller, you may leave the speakers in the Acoustic Canopy, but only for short periods of time.


In the summer, the temperature may get as high as 212°F/100°C or more. Do not leave your stroller, with the speakers in the Acoustic Canopy pockets, in your car trunk where the temperature may reach high levels. Store speakers in a cool and dry area.



WARNING:

To avoid serious injury keep stereo speakers and cords out of reach of children.

Using the Reclining Backrest

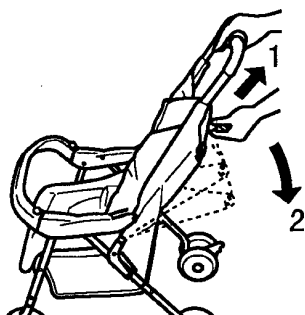

1. Press the lever at the top of the seat to the left.
2. Adjust the backrest gently to any of three positions.

To return the backrest to the upright position, simply lift the backrest gently into place.




WARNING:

Never use seat in reclined position unless the permanently attached safety cover is used.

CAUTION

Be careful when reclining the backrest while your baby is in the stroller to prevent abrupt changes in seating position.

Using the Kid's Tray

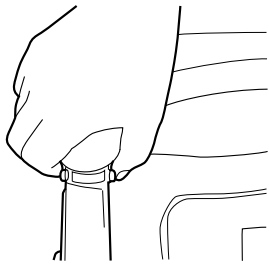


1. Squeeze the Kid's Tray release buttons on both sides to release the Kid's Tray.
2. When one side is released, the Kid's Tray will pivot to allow easy access to the seating area.




WARNING:

Pull on each side of the Kid's Tray to make sure that it is completely attached. Do not lift the stroller by the Kid's Tray. To avoid burns, do not carry bottles/cups with hot liquids.

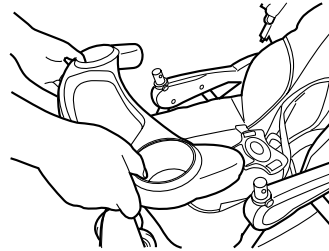

3. When both sides are released the Kid's Tray can be removed.
4. To attach the Kid's Tray, gently slip it over the armrest pins until you hear the pins click into position.

Using and Adjusting the 5-Point Harness

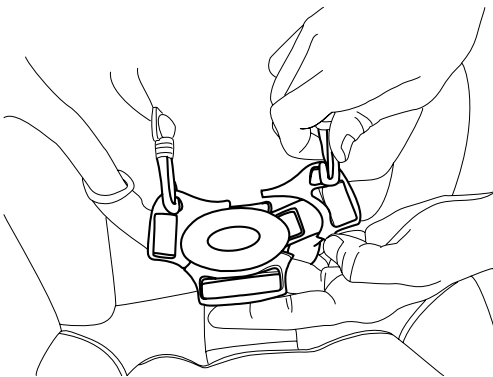

WARNING:


Avoid serious injury from falling or sliding out. Always use 5-point harness.



WARNING:





Even when the seat belt is fastened, be careful not to let the child slip out or stand.

1. Place the crotch belt between the baby's legs.
2. Insert both waist belt buckles into the middle plastic piece.
3. Attach each shoulder strap's hook to the top of the waist belt clips.
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle.

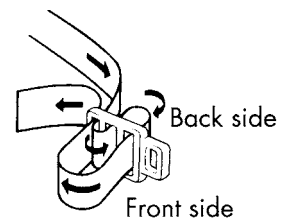

Folding the Stroller

1. Fold the canopy by lifting up on the canopy levers.
2. Remove your player from the back pocket of the canopy.
3. Place seat in the upright position.
4. Lock swivel wheels.
5. Lift and hold the fold release levers located on each side near the top of the handle. Then, tilt the stroller backward until it starts to fold.
6. Grasp the handle and pull the Kid's Tray toward the backrest. The latch, located on the front leg will lock into the rear leg to hold the stroller in folded position.

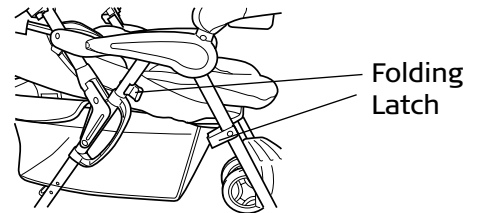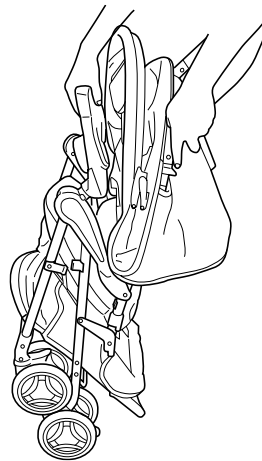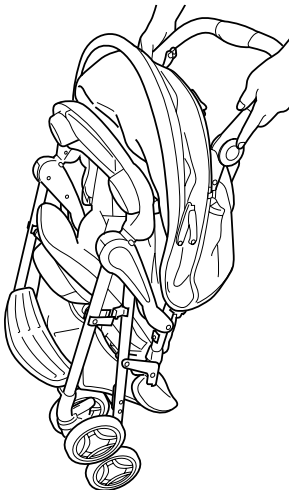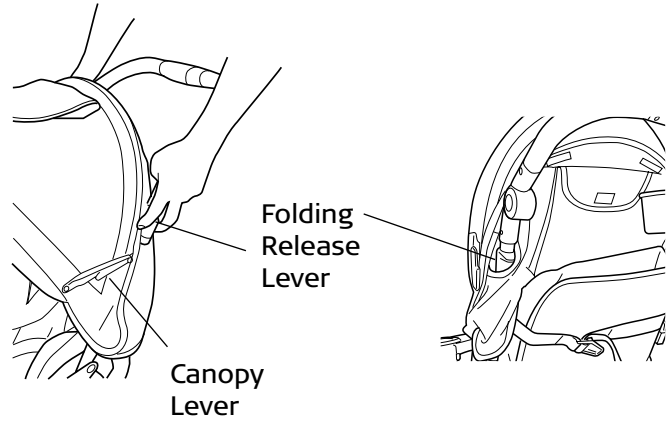


Removing/Attaching the Seat Cushion

CAUTION

If seat cushion is ripped or torn, do not use.

Do not use the stroller without the seat cushion.

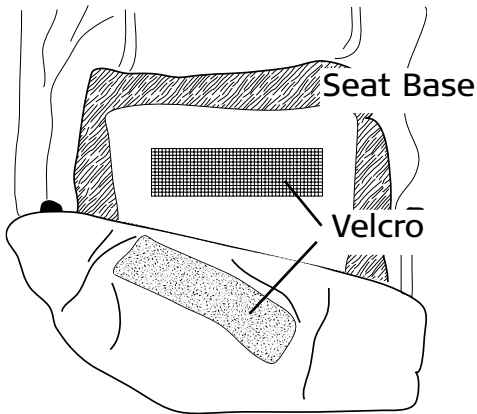

Removing

1. Unbuckle the 5-point harness and pull all the straps through the seat cushion.
2. Grasp the seat cushion at the top and unfasten from the velcro.


Attaching

1. Pass the 5-point harness waist belt straps through the appropriate locations of the seat cushion.
2. Fasten the velcro.

Using the Basket

CAUTION

Do not place more than 11 lbs. in the basket. Remove all items from the basket before folding the stroller.

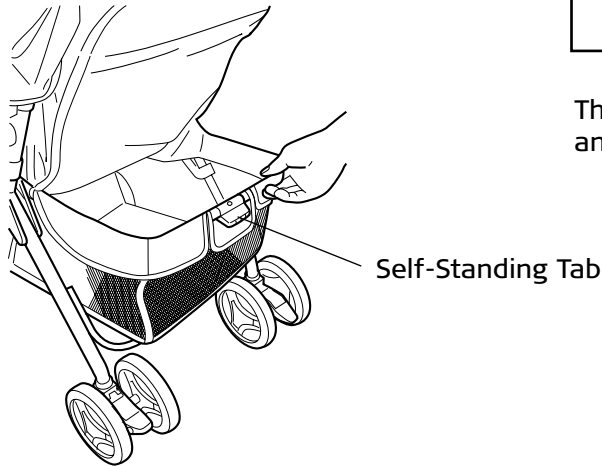


The basket locks into a fixed position and is not moveable.

Using the Safety Cover (Boot)

! WARNING: Child may slip into leg openings and strangle. Never use in reclined carriage position(s) unless safety cover (boot) is securely fastened.

CAUTION

Before folding the stroller, unfasten and store the safety cover (boot) under the seat. The stroller will not fold with it attached.

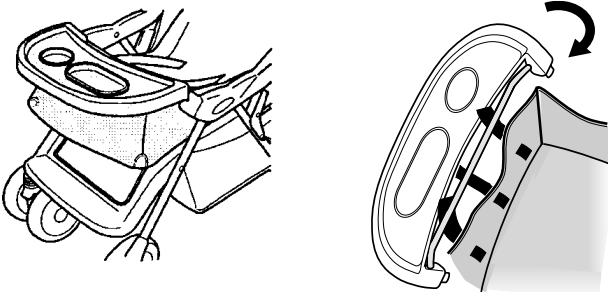


Installing the Safety Cover (Boot)

1. Lift the seat cushion and pull safety cover (boot) out.
2. Place the safety cover (boot) over the guardrail and secure it with the velcro.

Using the Travel System Guardrail


CAUTION

Pull on each side of Travel System Guardrail to make sure that it is completely attached.

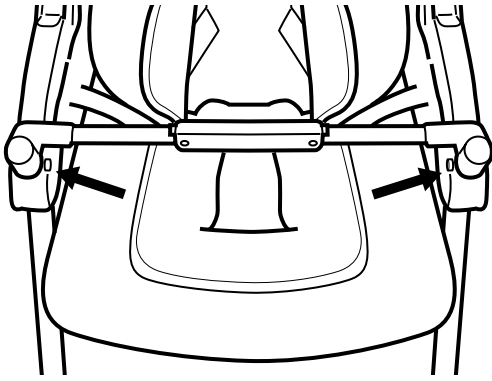


ATTACHING THE TRAVEL SYSTEM GUARDRAIL


1. After removing the Kid's Tray Guardrail, attach the Travel System Guardrail by gently slipping it over the armrest pins until you hear the pins click into position. Gently tug on the side, to be sure it is secure.

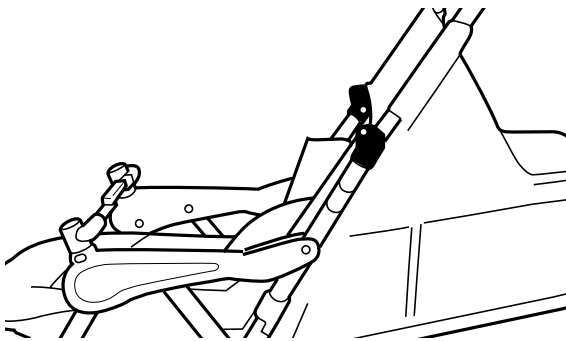

2. Recline the backrest to the middle position or lower.

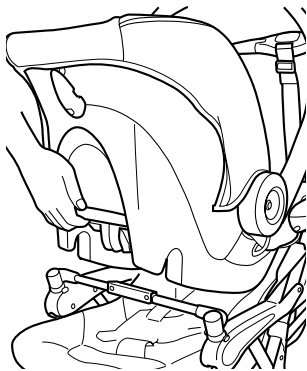


3. Lock the "V" slot of the Combi Infant Car Seat/Carrier over the Travel System Guardrail.

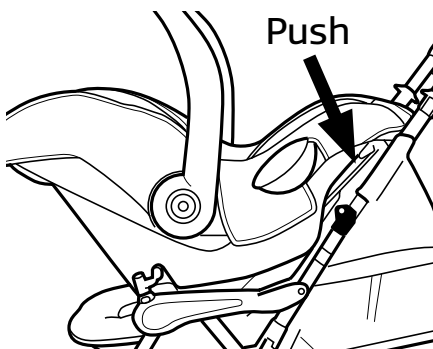


4. Rotate until the foot end of Combi Infant Car Seat/Carrier locks into the Infant Car Seat/Carrier Locks located on each side of the handle. Push down on the foot end of the seat to ensure engagement.
5. Be certain that the Combi Infant Car Seat/Carrier is securely attached to the stroller by lifting up on the Combi Infant Car Seat/Carrier handle.

Removing the Infant Car Seat from the Travel System Guardrail

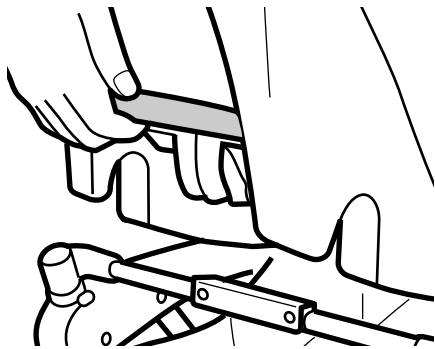



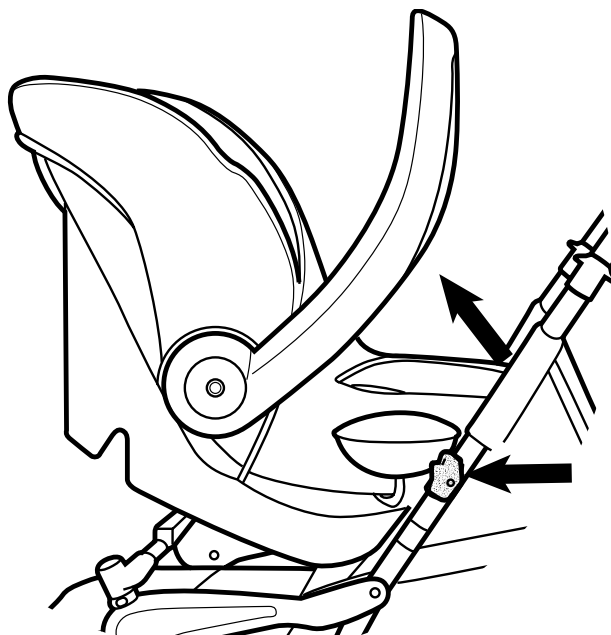




1. Locate the release lever and **pull upward to unlock** the back of the Combi Infant Car Seat/Carrier from the Travel System Guardrail.



2. **Lift up** the front end of the Combi Infant Car Seat/Carrier to release from the infant car seat/**Carrier Locks** located on either side of the handle.

The Travel System Guardrail

WARNINGS

-  When the Combi Infant Car Seat/Carrier is in the stroller, always lock into the Combi Infant Car Seat/Carrier Locks and Travel System Guardrail.
-  Discontinue use if damage is noted on the Travel System Guardrail or the Combi's Infant Car Seat/Carrier Locks on the stroller.
-  The Travel System Guardrail is only to be used when attaching Combi's Infant Car Seat/Carrier. Do not use for any other purpose.
-  Do not lean on or hang things from the Travel System Guardrail.
-  To assure safety for the baby, please refer to Combi's instructions for use with your Combi Infant Car Seat/Carrier.
-  If unable to securely attach Combi's Infant Car Seat/Carrier using the Travel System Guardrail, discontinue use and contact Combi Consumer affairs.
-  Do not carry stroller by using Combi's Infant Car Seat/Carrier handle.

The Perfect Match™ Guardrail & Carrier Attachment Strap

Perfect Match™ Compatible Infant Car Seats

Graco® Snug Ride®, Snug Ride DX5®, Snug Ride LX5®









Century® Smart fit- Supreme®, Assura, Smart Fit Plus 22, Smart Fit Plus 22V, Smart Fit Elite, Avanta SE, Avanta DX.

Evenflo® On My Way, On My Way Position Right, On My Way Position Right V Plus new Cozy Carry, Portabout

Cosco® Eddie Bauer

Trade name and trademarks of Graco®, Century®, Evenflo® and Cosco® are the property of their respective owners and no endorsement of or approval by them is intended or implied. All Combi® Perfect Match™ strollers are compatible with specified models of the Graco®, Century®, and Evenflo® infant car seat/carrier models and the Cosco® Eddie Bauer as of the date this printing was prepared. Copyright May 2004 Combi USA, Inc.


WARNINGS

-  When infant car seat/carrier is in the stroller, always fasten the Carrier Attachment Straps.
-  The Perfect Match™ Guardrail is only to be used when attaching infant car seat/carriers. Do not use for any other purpose.
-  To assure safety for the baby, please refer to the manufacturer's instructions for use of your infant car seat/carrier.
-  If unable to securely attach infant car seat/carrier using the Perfect Match™ Guardrail, discontinue use and contact COMBI Consumer affairs.
-  Do not lift stroller by using infant car seat/carrier handle.
-  Discontinue use if fraying or damage is noted to Carrier Attachment Strap.
-  If unable to firmly attach Perfect Match™ Guardrail (as per instructions), discontinue use and contact COMBI Consumer affairs.
-  Do not lean on or hang things from the Perfect Match™ Guardrail.

Using the Perfect Match™ Guardrail

CAUTION



Pull on each side of Perfect Match™ Guardrail to make sure that it is completely attached.

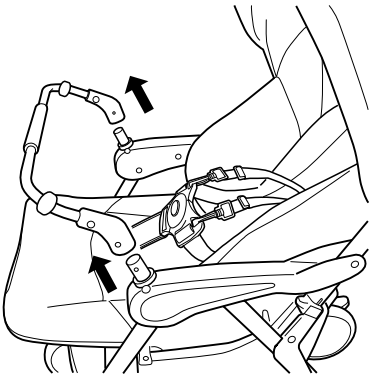

ATTACHING THE PERFECT MATCH™ GUARDRAIL


1. Remove standard guardrail and attach Perfect Match™ Guardrail by slipping it over the armrest pins until you hear the pins click into position.

Keep Positioning Rings toward the ends of the guardrail.

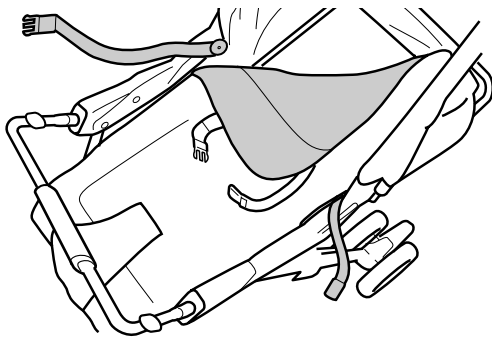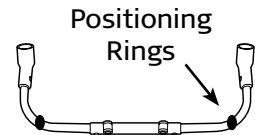

2. Recline the backrest to the middle position. Pull the Carrier Attachment Straps from behind the seat cushion and lay them over the armrests.

Note: When using the Evenflo® infant car seat/carrier it may be necessary to leave the backrest in the upright position to provide the proper recline angle on the infant seat/carrier.

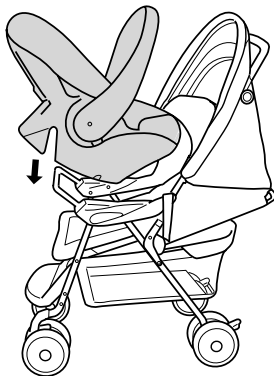


3. Hook carrier over the Perfect Match™ Guardrail and rotate until the foot end of infant car seat/carrier is solidly against the backrest of stroller.

Push the positioning rings snugly against each side of the car seat/carrier.



4. Bring the Carrier Attachment Straps through the slots in the infant car seat/carrier and fasten the buckle. (If the strap is the incorrect length, adjust as needed. To adjust, thread fabric through each side of the buckle.)

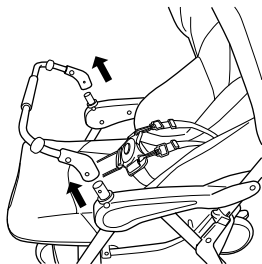

REMOVING THE PERFECT MATCH™ GUARDRAIL

1. Remove the infant car seat/carrier by reversing the above steps.
2. Squeeze the guardrail release buttons on both sides and lift up to release the guardrail.

Trade name and trademarks of Graco®, Century®, Evenflo® and Cosco® and Baby Trends are the property of their respective owners and no endorsement of or approval by them is intended or implied. All Combi® Perfect Match™ strollers are compatible with specified models of the Graco®, Century®, and Evenflo® infant car seat/carrier models and the Cosco® Eddie Bauer as of the date this printing was prepared.

Routine Maintenance

STORE IN A COOL AND DRY AREA, especially in the summer. Do not store the stroller in the trunk of a vehicle.

SEAT CUSHION

The seat cushion is machine washable. Set to gentle cycle using warm water and a mild detergent. Do not use bleach. Lay seat cushion and canopy and car seat covers flat to dry in shaded area. Do not machine dry. To prevent color fading, do not leave soaking for a long period. If the seat cushion is frayed or unraveling, discontinue use and call consumer affairs for further instruction.

CANOPY, SEAT BELT, FIXED BASE SEAT, STROLLER PACK AND BASKET

Hand wash with a soft brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent then apply directly to the dirty area. Wipe out the detergent.

MAIN BODY

Briskly wipe off any mud and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry. Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.


WHEEL ASSEMBLIES

After prolonged normal use, the wheels of your stroller may not swivel or turn as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheels by pressing the release button and wiping off mud and dirt. **Do not use soap and water to wash wheels.** Periodically check that all screws, bolts and nuts are tight.

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add silicone* to **the wheel assemblies** in small amounts.

Do not use lubricants because oil attracts dust and would hinder the movement rather than improve it.

*Silicone spray is available in varying size cans at most hardware stores.

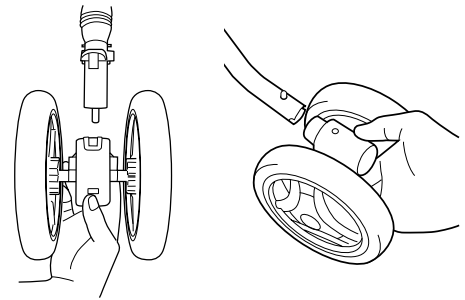

Front Swivel Wheel

Rear Wheel

Trouble Shooting

STROLLER WON'T FOLD

- Check to see that the seat belt is not caught in the side.
- Make sure front swivels are locked.
- Make sure the backrest is in the upright position.
- Remove all items from the basket.
- Remove your player from back pocket of the canopy.

DIFFICULT TO STEER/STROLLER PULLS TO ONE SIDE

- Remove any items hanging from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean and add silicone to wheels, if necessary.

DIFFICULT TO GET UP CURBS

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.

DIFFICULT GOING DOWN CURBS

- Turn stroller around, bringing rear wheels toward the edge of the curb. Gently lower rear wheels onto the surface below. Once the rear wheels have landed, guide the front portion of the stroller, using the armrest as support.



Savona TS/PM
Stroller

4010 Series

Instruction Manual

If you would like to place an order for the following parts, please fill out the form below and return to the following address:

Combi USA, Inc.

Attn: Consumer Affairs Department
1962 Highway 160 W, Suite 100
Fort Mill, SC 29708-8027

or Fax this completed form to

803-548-3663

IMPORTANT: We must have this information to process your order:

Model Number: 4010 - _____ Color & Pattern of Fabric: _____
Located on the rear right leg.

Parts List for the Savona TS/PM 4010.

	Price	Quantity	Total
1. Canopy	\$ 35.00		
2. Basket	20.00		
3. Seat Cushion	35.00		
4. Kid's Tray	20.00		
5. Shoulder Pad Set	10.00/set		
6. Travel System Guardrail	10.00		
7. Perfect Match Guardrail	10.00		
8. Rear Wheel Assemblies (left and right sides)	20.00/set		
9. Front Wheel Assemblies (left and right sides)	20.00/set		
10. Cupholder			
	Amount of Order		
	ADD Shipping & Handling		
	Sales Tax (6%) (SC residents only)		
	Total		

If you need to order other parts for your stroller, please call us toll-free at 1-800-99-COMBI.

Shipping and Handling Fees: Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S.

Ship To:

Customer Name

Street Address

Street Address

City, State, Zip

Telephone Number

Charge to my credit card:

- VISA MASTERCARD
 AMERICAN EXPRESS DISCOVER

Card Number _____

Expiration Date _____ - _____ - _____

Cardholder's Signature _____

Check enclosed

02/20/05