

Combi

Combi IV 7720 Series Instruction Manual


Read all instructions BEFORE assembly and USE of product. **KEEP INSTRUCTIONS FOR FUTURE USE.** Record the following information for quick reference.

Note: Illustrations are only representative and not actual. Attach copy of sales receipt.


Date Purchased: _____ Model Number: 7720 - _____ Color _____

Located near the rear right leg.


Make sure you have all the parts listed below before using your stroller. If any parts are missing, call Consumer Affairs at 1-800-992-6624.

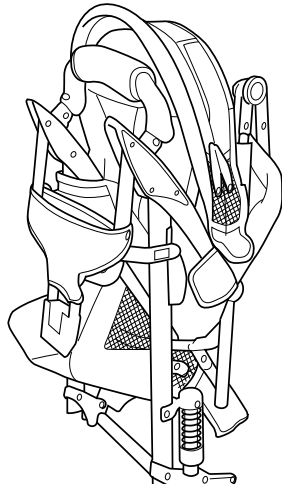


Main Body

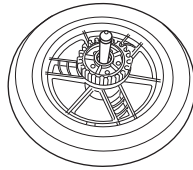


Rear Wheel x2

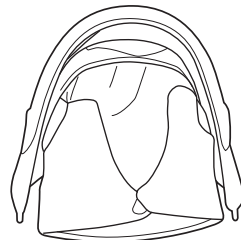

Canopy

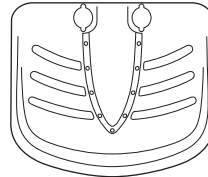

Footrest x1

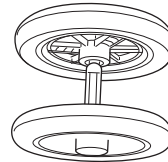

Front Wheel x1




Kid's Tray




Parent Tray x1

Travel System Guardrail

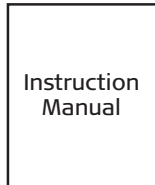

Instruction Manual

Name of Parts

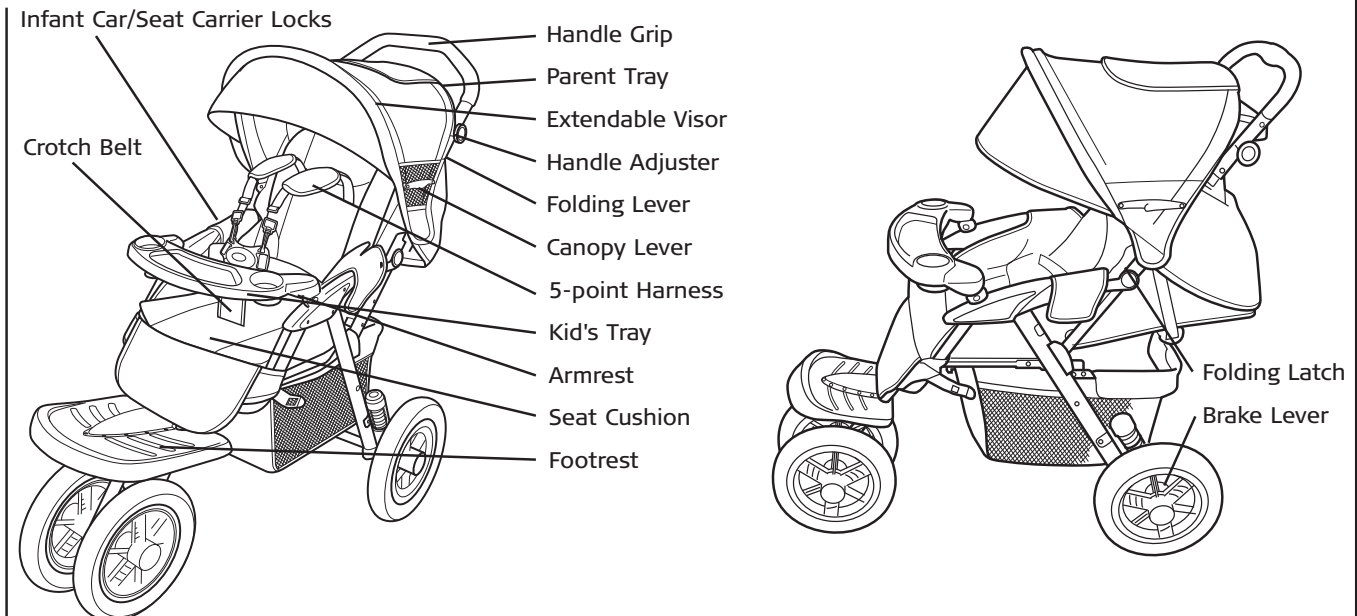



WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS COULD RESULT IN SERIOUS INJURY OR DEATH.

ALL OPERATING AND ASSEMBLY PROCEDURES SHOULD BE PERFORMED BY AN ADULT.

In the event of damage or problems, discontinue use and contact Combi Consumer Affairs: 1-800-99-COMBI.

⚠ AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE 5-POINT HARNESS SYSTEM.

⚠ DO NOT LIFT AND CARRY the stroller while occupied. The stroller may fold.

⚠ Do not allow your child to stand in or on the stroller.

⚠ Never carry more than one child in stroller. Do not allow a child to ride or sit on areas of the stroller other than seat.

⚠ NEVER LEAVE CHILD UNATTENDED.

⚠ Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.

⚠ Do not hang items on the handle or place items on canopy. This could cause the stroller to become unbalanced or tip over.

⚠ Always engage both brakes when parking the stroller.

⚠ Do not allow children to lean over sides of stroller. It may become unbalanced and tip over.

⚠ Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition. Do not load more than 10 lbs. (4.5kg) in either basket.

⚠ Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.

⚠ When Combi Tyro infant seat is attached, **ALWAYS ensure it is secure by pulling up on the handle.**

⚠ **ALWAYS secure your child with the infant carriers 5-point harness before using it with the stroller.**

⚠ The guardrail **MUST be attached to the stroller before attaching the infant carrier.**

⚠ To ensure your child's safety, please refer to the Combi Tyro instruction manuals before using it with this stroller.

⚠ If unable to securely attach the Combi Tyro to your stroller, discontinue use and contact Consumer Affairs.

⚠ DO NOT carry stroller by using the Combi Tyro infant car seat handle.

⚠ TIPPING HAZARD: DO NOT place weight on rear of infant seat while attached to the stroller. This could cause the stroller to become unbalanced and tip over.

⚠ This stroller is designed to be pushed at a normal walking speed. This is not a jogging stroller.


⚠ Child may slip into leg openings and strangle. Never use in reclined carriage position unless the permanently attached safety cover is used.

Use only the Combi Tyro infant carrier with this stroller.

Total Maximum weight of child **MUST not exceed 45 lbs. (20 kg).**

All products specifications are subject to change without notice. Sizes and weights are intended as guides and are approximations. Combi reserves the right to modify the products in its line during the course of the year. Non contractual media. Colors are as accurate as the media in which they appear allows.
© Combi USA, Inc. 2005

Opening the Stroller

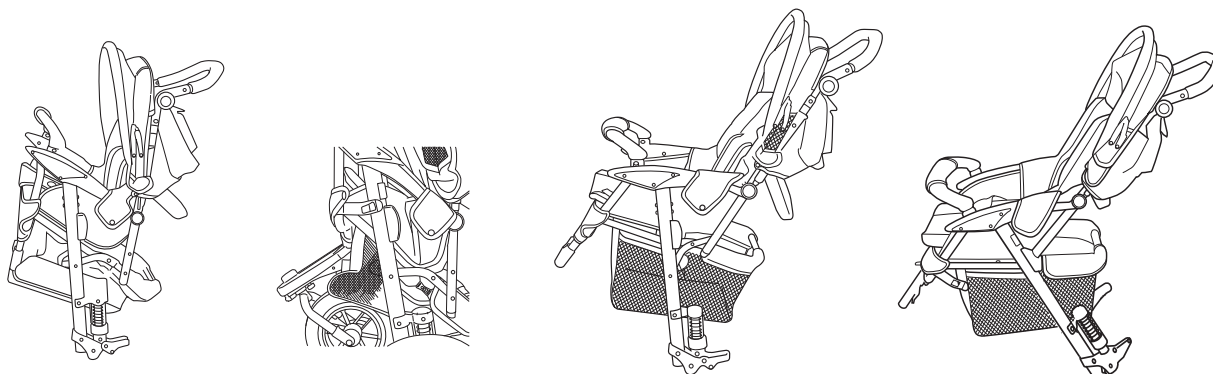

1. Before opening, fully extend the handle by pushing handle adjuster buttons and rotating the handle to upright position.
2. Pull the lock lever out to release the stroller.
3. Lift the handle and snap the stroller away from you. It will open and automatically lock into position.

Front Wheel and Footrest Assembly

1. Lean stroller back and slide the footrest onto the two front stroller legs (figure A) until both pins snap in place (figure B). Pull down on footrest to ensure it is secure.
2. With footrest in place, slide wheels onto the two front stroller legs until both pins snap in place (figure C). Pull down on wheel to ensure it is secure.

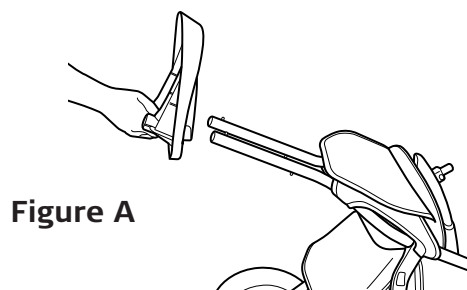


Figure A

Removing the front wheel and footrest:

1. Press in the two pins that secure the front wheel while sliding the wheel off of the stroller leg (figure D).
2. Press in the two pins holding the footrest while sliding the footrest off of the stroller leg (figure E).

Figure B

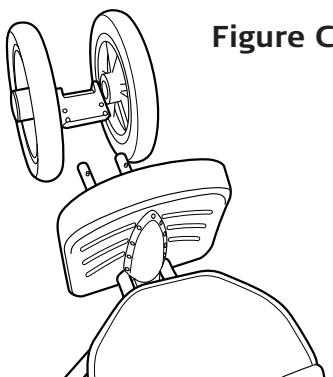
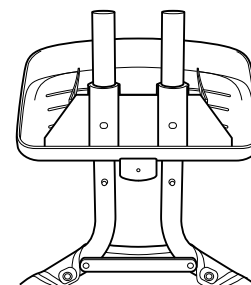


Figure C

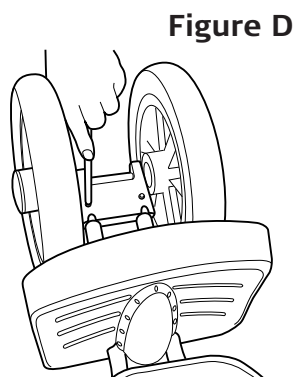


Figure D

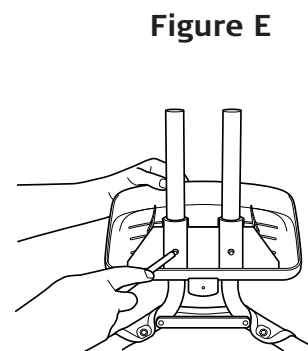


Figure E

Rear Wheel Assembly

1. Insert wheel into rear axle (figure a) until it clicks into place. Pull wheel out to ensure it is secure.
2. Repeat this step with the opposite side.

Removing the Rear Wheels

Press the release lever as shown in Figure (B) while pulling the rear wheel away from the stroller.

Figure A


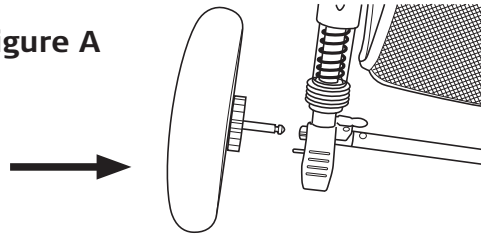


Figure B

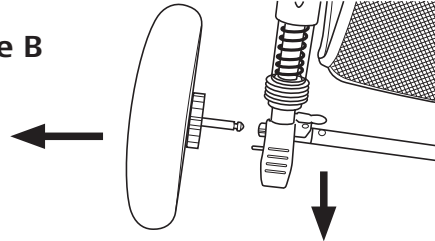

Attaching the Canopy


1. Ensure the canopy is facing the proper direction.
2. Fully insert both sides of the canopy (male) into each side of canopy holders (female).
3. Attach the velcro located on each side of the canopy around the stroller handle.

Removing the Canopy


Pull the velcro apart, squeeze the bottom of the canopy holder (male) and pull the canopy off.

CAUTION

Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller by laying it down, be sure the canopy is off the ground to prevent it from bending.

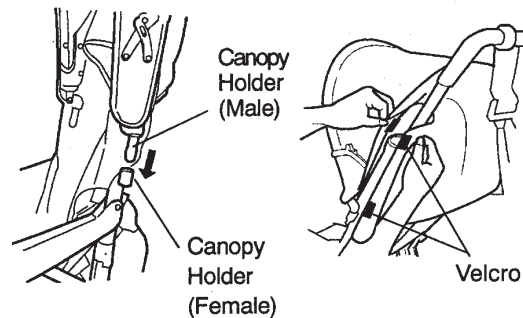

Attaching the Kid's Tray

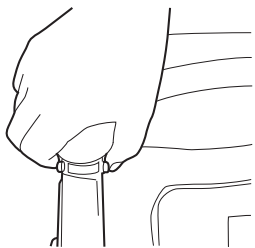

Attaching the Kid's Tray


Push the Kid's Tray into the guardrail posts on the armrest until they lock in place. Check to make sure each side is firmly attached.

Removing the Kid's Tray

Press the buttons on each side of the armrest while pulling the Kid's Tray away.


! WARNING

Pull on each side of the Guardrail to make sure that it is completely attached. Do not lift the stroller by the Guardrail.

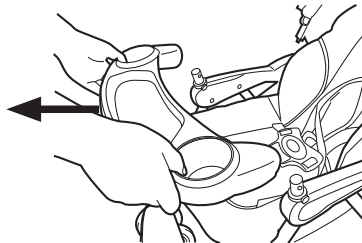

Attaching the Parent Tray

Holding the Parent Tray with the center compartment facing toward you, align the tongue from both sides of the Parent Tray to the groove on the handle, located opposite the handle adjuster buttons. Slide Parent Tray down until it clicks into place and then pull up on it to be sure it is secure.

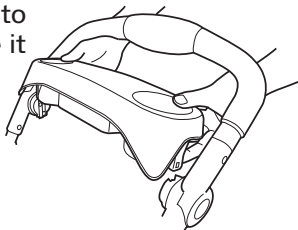

! WARNING

TO AVOID BURNS, never place hot liquids in the Parent Tray. To prevent tipping, DO NOT place more than 3 lbs. on the Parent Tray.

Removing the Parent Tray


Locate the tabs underneath the Parent Tray, on each side of the tray. While pulling the tab out toward the adjuster button, push the Parent Tray upward.

Using the Rear Brakes

CAUTION
Push the stroller forward to ensure that the brakes are properly engaged.

To lock brakes, push both brake levers DOWN.


To unlock brakes, push both brake levers UP.

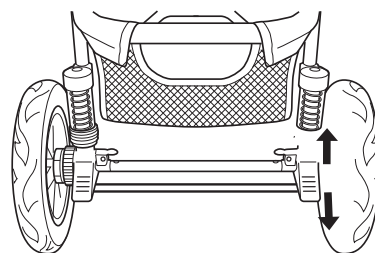

Using the Reclining Backrest

! WARNING

Never use seat in reclined position unless the permanently attached safety cover is used.

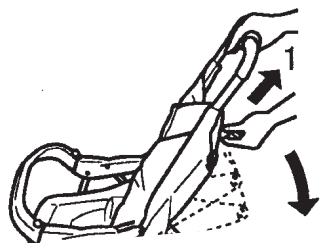


1. Press the lever at the top of the seat to the left.
2. Adjust the backrest gently to any of three positions.

To return the backrest to the upright position, simply lift the backrest gently into place.


CAUTION
Be careful when reclining the backrest while your baby is in the stroller to prevent abrupt changes in seating position.

Using and Adjusting the 5-point Harness

CAUTION
Avoid serious injury from falling or sliding out. Always use harness.

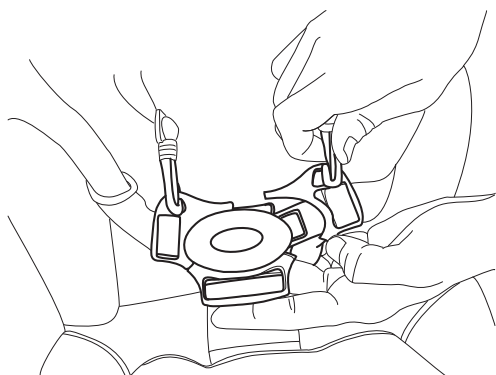

1. Place the crotch belt between the baby's legs.
2. Insert both waist belt buckles into the middle plastic piece.
3. Attach each shoulder strap's hook to the top of the waist belt clips.
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle.

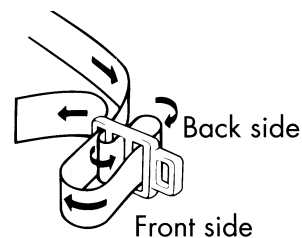

Removing/Attaching the Seat Cushion

Removing

1. Unbuckle the 5-point harness and pull all the straps through the seat cushion.
2. Grasp the seat cushion at the top and unfasten from the velcro.

Attaching

1. Pass the 5-point harness straps through the appropriate locations in the seat cushion.
2. Fasten the velcro.


CAUTION

If seat cushion is ripped or torn, do not use. Do not use the stroller without the seat cushion.

Folding the Stroller

1. Raise the backrest to the upright position.
2. Fold the canopy by lifting the canopy levers.
3. Lift up and hold the Folding Levers located on each side near the top of the handle as shown in the Figure (A). Then, tilt the stroller backward until it starts to fold.
4. Grasp the guardrail and handle in opposite hands and pull together.
5. Engage the folding latch on the side of the stroller as shown in the Figure (B).
6. Rotate handle to fold position as shown in the Figure (C).

Figure A

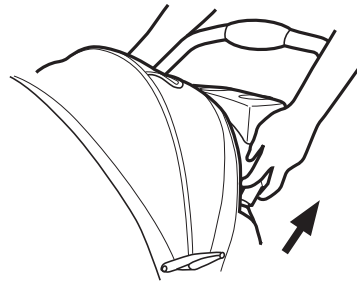

Folding Levers are located below the handle adjuster buttons on each side of the handle.

Figure B


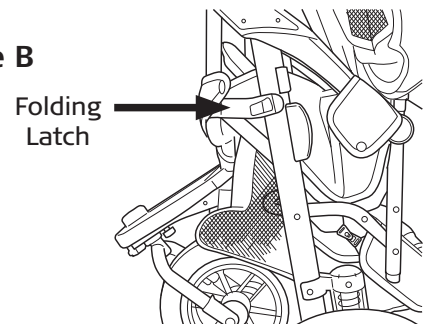



Figure C

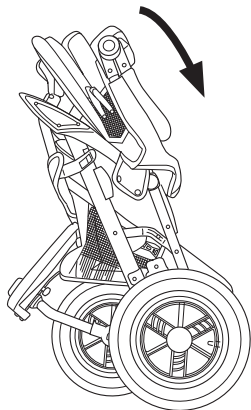

! WARNINGS

NOTE:

Make sure you use the Travel System Guardrail provided with the stroller.

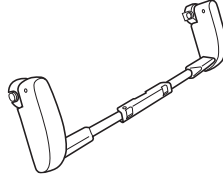

! When the Combi Infant Car Seat/Carrier is in the stroller, always lock into the Combi Infant Car Seat/Carrier Locks and the Travel System Guardrail.

! The Travel System Guardrail is only to be used when attaching Combi's Infant Car Seat/Carrier. Do not use for any other purpose.


! Discontinue use if the Travel System Guardrail is damaged.

! Do not lean on or hang things from the Travel System Guardrail.

! If unable to securely attach Combi's Infant Car Seat/Carrier using the Travel System Guardrail, discontinue use and contact Combi Consumer Affairs.

! Do not carry stroller by using Combi's Infant Car Seat/Carrier handle.

Using the Safety Cover (Boot)

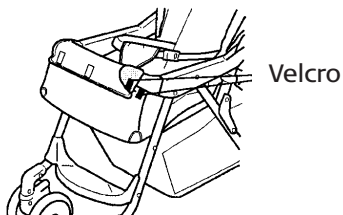

Installing the Safety Cover (Boot)

1. Lift the seat cushion and pull safety cover (boot) out.
2. Place the safety cover (boot) over the guardrail and secure it with the velcro.

! WARNING

Child may slip into leg openings and strangle. Never use in reclined carriage position(s) unless safety cover (boot) is securely fastened.


CAUTION

Before folding the stroller, unfasten and store the safety cover (boot) under the seat. The stroller will not fold with it attached.

Using the Travel System


CAUTION

Pull on each side of the Travel System Guardrail to make sure that it is secure.

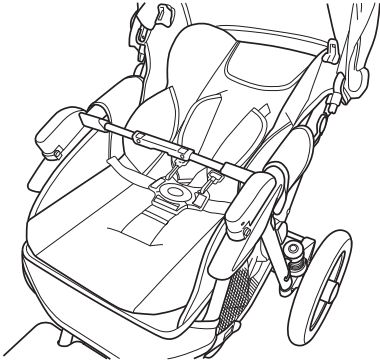


ATTACHING THE Travel System Guardrail


1. After removing the Guardrail, attach the Travel System Guardrail by slipping it over the armrest pins until you hear click into position. Gently tug the side, to be sure it is secure.

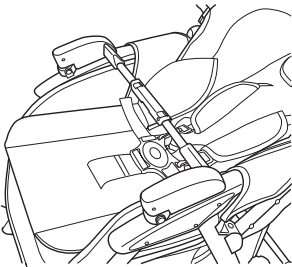

Note:
Ensure the
Travel System
Guardrail is
attached in
the proper
direction.

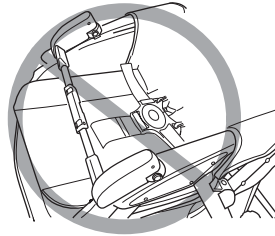


2. Recline the backrest to the middle or lower position.

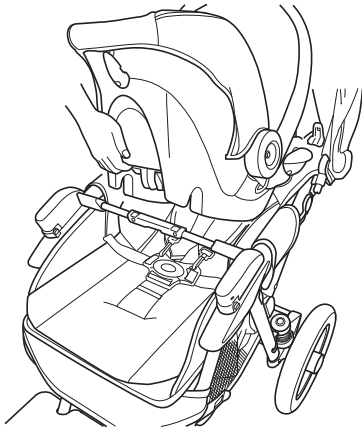


3. Lock the "V" slot of the Combi Infant Car Seat / Carrier over the Travel System Guardrail.

4. Rotate until the foot end of Combi Infant Car Seat / Carrier locks into the Infant Car Seat / Carrier Locks located on each side of the handle. Push down on the foot end of the seat to ensure engagement.

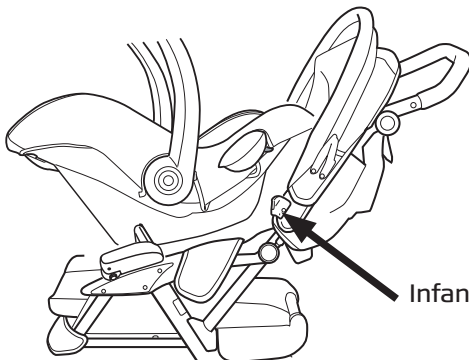


5. Be certain that the Combi Infant Car Seat / Carrier is securely attached to the stroller by lifting up on the handle Combi Infant Car Seat / Carrier.


Removing the Infant Car Seat from the Travel System Guardrail

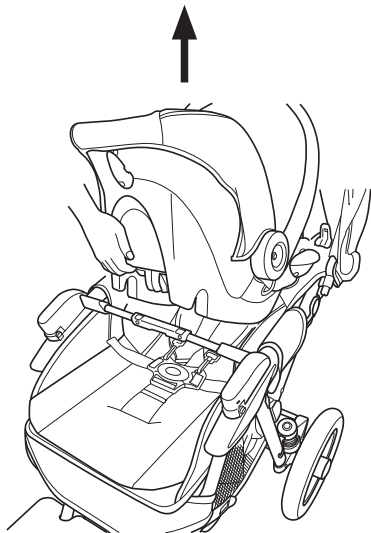

1. Locate the release lever and pull upward to unlock the back of Combi Infant Car Seat / Carrier from the Travel System Guardrail.

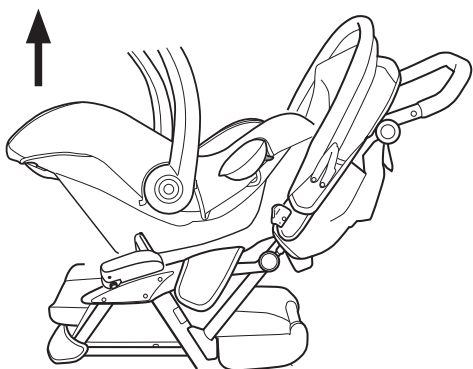

2. Lift up the front end of the Combi Infant Car Seat / Carrier to release from the Carrier Locks located on either side of the handle.

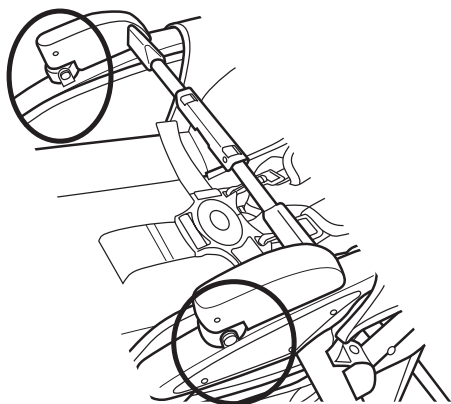

DETACHING THE ATTACHMENT BAR

3. Squeeze the release buttons on both sides to release the Travel System Guardrail.

Routine Maintenance

STORE IN A COOL AND DRY AREA, especially in the summer. Do not store the stroller in the trunk of a vehicle.

SEAT CUSHION

The seat cushion is machine washable. Set to gentle cycle using warm water and a mild detergent. Do not use bleach. Lay seat cushion and canopy and car seat covers flat to dry in shaded area. Do not machine dry. To prevent color fading, do not leave soaking for a long period. If the seat cushion is frayed or unraveling, discontinue use and call Consumer Affairs for further instruction.

CANOPY, SEAT BELT, FIXED BASE SEAT, TRAVEL BAG, STROLLER PACK AND BASKET

Hand wash with a soft brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent then apply directly to the dirty area. Wipe out the detergent.

MAIN BODY

Briskly wipe off any mud and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry. Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.


WHEEL ASSEMBLIES

After prolonged normal use, the wheels of your stroller may not swivel or turn as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheels by pressing the release button and wiping off mud and dirt. **Do not use soap and water to wash wheels.** Periodically check that all screws, bolts and nuts are tight.

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add silicone* to **the wheel assemblies** in small amounts.

Do not use lubricants because oil attracts dust and would hinder the movement rather than improve it.

*Silicone spray is available in varying size cans at most hardware stores.

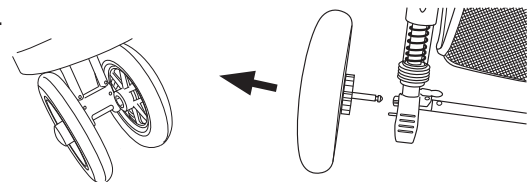

Front Wheel

Rear Wheel

Trouble Shooting

STROLLER WILL NOT FOLD

- Check to see that the attachment strap is not caught in the side.
- Make sure front swivels are locked.
- Remove all items from the basket.
- Make sure the seat back is in the upright position.


Note: Illustrations are for reference only and may not represent the actual product.

DIFFICULT TO STEER/STROLLER PULLS TO ONE SIDE

- Remove any items hanging from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean and add silicone to wheels, if necessary.

DIFFICULT TO GET UP CURBS

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheel clears.

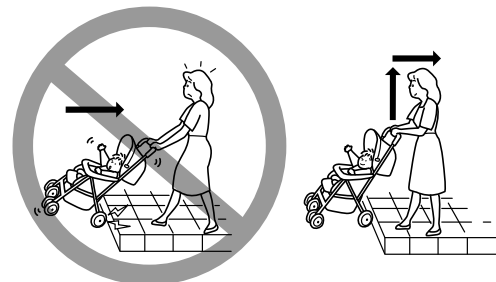

DIFFICULT TO GET DOWN CURBS

- Turn stroller around, bringing rear wheels toward the edge of the curb. Gently lower rear wheels onto the surface below. Once the rear wheels have landed, guide the front portion of the stroller, using the armrest as support.

LIMITED WARRANTY

1. Combi Juvenile Products, when purchased from an authorized retailer; are warranted to the original purchaser to be free of defect in materials and workmanship for a period of one (1) year from date of purchase. Warranty is valid for products purchased and used in the U.S. only, and used in compliance with the warrantor's use and maintenance instructions. Save your carton and receipt in case of return for warranty service is necessary.
2. During the warranty period your Combi product will either be repaired or replaced, at the warrantor's discretion, without charge if it is purchased from an authorized Combi dealer and is found to be defective in workmanship or materials. For service call 1-803-548-6633. The warrantor shall not be responsible for any costs incurred by the consumer in returning a defective product for repair.

This limited warranty shall not apply to normal wear to the product, or if the product has been:

- a. Damaged due to accidents, misuse, abuse or neglect as determined by Combi.
- b. Tampered with or repaired by other than an authorized Combi repair center or with parts other than Combi approved parts.
- c. Leased or rented for commercial use.

THE WARRANTY PROVIDED HEREIN IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED. WARRANTOR'S OBLIGATIONS AND THE CONSUMER'S OR OTHER BUYER'S REMEDIES UNDER THE LIMITED WARRANTY ABOVE ARE EXCLUSIVE AND ARE STRICTLY LIMITED TO REPAIR OR REPLACEMENT AS STATED. ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ON THE PART OF THE WARRANTOR AND ANY SUPPLIER OR DEALER ARE HEREBY ALSO EXPRESSLY EXCLUDED.

Some states limit or do not allow exclusions or limitations on how long an implied warranty lasts so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

