

 
### Instruction Manual

Read all instructions BEFORE assembly and USE of product. **KEEP INSTRUCTIONS FOR FUTURE USE.** Record the following information for quick reference. Note: Illustrations are only representative and not actual. Attach copy of sales receipt.


Date Purchased: \_\_\_\_\_ Model Number: 7655 - \_\_\_\_\_ Color \_\_\_\_\_  
 Attach copy of sales receipt. Located on the rear right leg.

### Parts List


Make sure you have all the parts listed below before using your stroller. If any parts are missing, call Consumer Affairs at 1-800-992-6624.

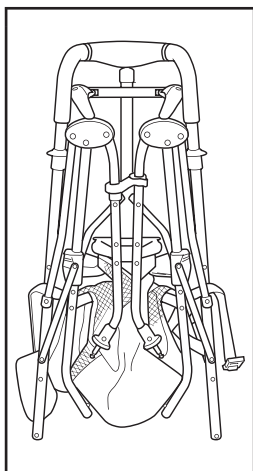

Main Body

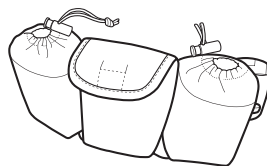 

Stroller Pack

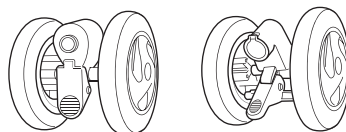 


Front Wheels  
(x2)

Rear Wheels  
(x2)




 Warranty Card

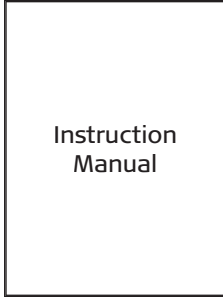

Instruction  
Manual

### Name of Parts

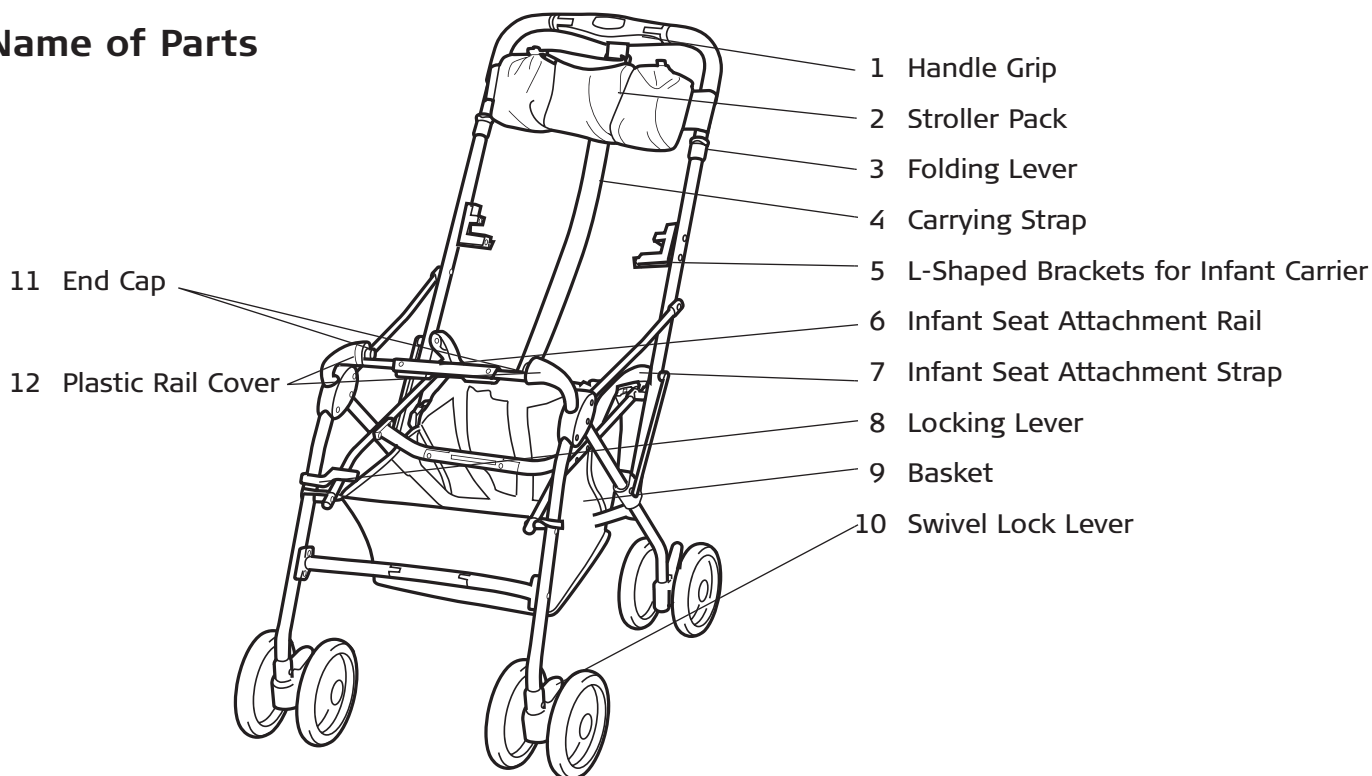 

- 1 Handle Grip
- 2 Stroller Pack
- 3 Folding Lever
- 4 Carrying Strap
- 5 L-Shaped Brackets for Infant Carrier
- 6 Infant Seat Attachment Rail
- 7 Infant Seat Attachment Strap
- 8 Locking Lever
- 9 Basket
- 10 Swivel Lock Lever

- 11 End Cap
- 12 Plastic Rail Cover

# ⚠️ WARNINGS For your child's safety:

If your stroller is not used in compliance with these instructions, serious injury may result.



**⚠️ WARNING**  
AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE ATTACHMENT STRAP. INFANT SEAT HARNESS MUST BE USED WHEN USING THIS PRODUCT.



**⚠️ WARNING**  
NEVER LEAVE CHILD UNATTENDED.

In the event of damage or problems, discontinue use and contact Combi Consumer Affairs for instructions: 1-800-992-6624.



**⚠️ WARNING**  
DO NOT LIFT AND CARRY the stroller while open with a child in it. The stroller may slip.



**⚠️ WARNING**  
Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.

**⚠️ WARNING**  
DO NOT ALLOW CHILD TO LEAN OVER SIDES OF STROLLER. IT MAY BECOME UNBALANCED AND TIP OVER.

**⚠️ WARNING**  
Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition to exist.



**⚠️ WARNING**  
Do not allow your child to stand in or on the stroller.



**⚠️ WARNING**  
Do not put or hang things on the handle because it could cause the stroller to become unbalanced or tip over.

**⚠️ WARNING**  
Do not load more than 10 lbs. (4.5kg) in the basket.

**⚠️ WARNING**  
TO AVOID BURNS, do not place bottles/cups with hot liquids in the Stroller Pack. Do not place more than 2 lbs. in the Stroller Pack.

**Note:** Illustrations are for reference only and may not represent the actual product.



**⚠️ WARNING**  
Never carry more than one child in the stroller. Do not allow a child to ride or sit on areas of stroller other than the seat.



**⚠️ WARNING**  
Always engage both brakes when parking the stroller.

## CAUTIONS:

1. Improper usage or lack of knowledge regarding the instructions can result in dangerous situations, personal injury or damage to the stroller.
2. Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.
3. Push the stroller at a normal walking speed only.





Please refer to manufacturer's infant carrier instruction manual for minimum and maximum weight accommodation. Only transport infants that are within size and weight limitations of infant car seat as described in the manufacturer's instruction manual.

All products specifications are subject to change without notice. Sizes and weights are intended as guides and are approximations. Combi® reserves the right to modify the products in its line during the course of the year. Non contractual media. Colors are as accurate as the media in which they appear allows. ©Combi USA, Inc. 2004

## Assembling the Stroller


1. Remove stroller and wheel assemblies from the plastic bag.
2. Remove and discard both black rubber caps from stroller frame.
3. Release locking latch by pulling latch away from stroller frame.
4. Grip the handle on each side with an under hand hold and turn outward to open.
5. Lift up the handle and snap the stroller away from you. It will open and lock automatically into position.

Note: Illustrations are for reference only and may not represent the actual product.

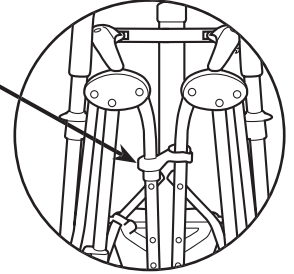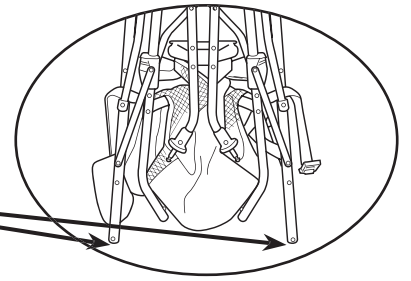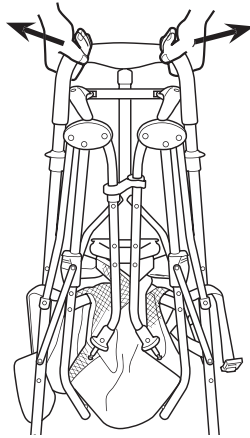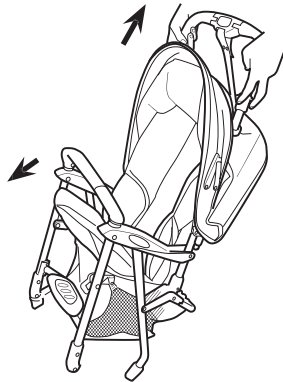


## Attaching & Removing the Front Swivel Wheels

1. Turn stroller over and remove packaging material from stroller frame.
2. Insert the front wheels onto the stroller leg. Make sure the swivel wheel lever is behind the stroller leg and released. You will hear a click when the wheel is properly attached.

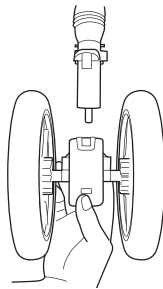


### Removing the Swivel Wheels

Press in the rectangular button located at the bottom of the wheel holder while pulling the assembly off of the swivel shaft.

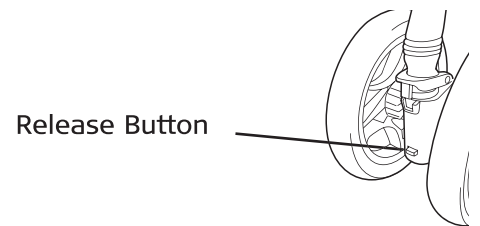


## Attaching and Removing the Rear Wheels

1. Locate the small opening on each rear wheel assembly.

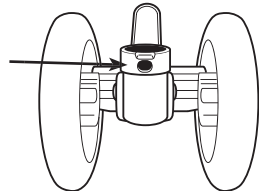


2. Locate the small chrome pin on each rear stroller leg.

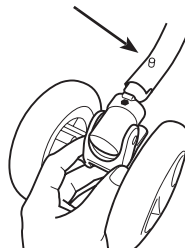

3. Insert the leg into the wheel assembly until the small chrome pin locks into the opening.

To remove the wheels, push in small chrome pin and pull wheels off the frame.


## Using the Swivel Wheels

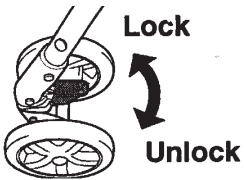

To lock swivels, lift both swivel lock levers up.

To unlock swivels, push both swivel lock levers down.

## Using the Brakes

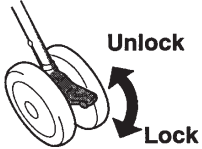

To lock brakes, push both brake levers down.

To unlock brakes, lift both brake levers up.

### CAUTION

Push the stroller forward to ensure that the brakes are properly engaged.

## Compatibility

### Flash EX Compatible Infant Car Seats

Combi Tyro, Combi Connection

Graco® Snug Ride®, Snug Ride DX5®, Snug Ride LX5®

Century® Smart Fit Supreme®, Assura, Smart Fit Plus 22, Smart Fit Plus 22V, Smart Fit Elite, Avanta SE, Avanta DX.

Evenflo® Portabout, Discovery

Cosco® Eddie Bauer

Peg-Perego® - Primo Viaggio

Trade name and trademarks of Graco®, Century®, Evenflo®, Cosco® and Peg-Perego® are the property of their respective owners and no endorsement of or approval by them is intended or implied. The Combi Flash EX stroller is compatible with specified models of the Graco®, Century®, and Evenflo®, Cosco® and Peg-Perego® infant car seat/carrier models as of the date this printing was prepared. Copyright May 2005 Combi USA, Inc.

## ! WARNINGS

 
- ! When infant car seat/carrier is in the stroller, always fasten the infant seat harness as well as the carrier attachment straps.
- ! If unable to securely attach infant car seat/carrier to the Combi Flash EX, discontinue use and contact Combi Consumer Affairs.
- ▲ The Combi Flash EX is only to be used when attaching infant car seat/carriers. Do not use for any other purpose.
- ▲ Do not lift stroller by using infant car seat/carrier handle.
- ▲ To assure safety for the baby, please refer to the manufacturer's instructions for use of your infant car seat/carrier.
- ▲ Discontinue use if fraying or damage is noted to carrier attachment strap.

Trade name and trademarks of Graco®, Century®, Evenflo® and Cosco® and Peg-Perego are the property of their respective owners and no endorsement of or approval by them is intended or implied. All Combi Flash EX strollers are compatible with specified models of the Graco®, Century®, Evenflo®, and the Peg-Perego® infant car seat/carrier models as of the date this printing was prepared.

Copyright May 2005 Combi USA Inc.

## Attaching/Releasing Infant Seat


Combi Tyro, Combi Connection, Graco Snugride, Evenflo, Portabout, Peg-Perego

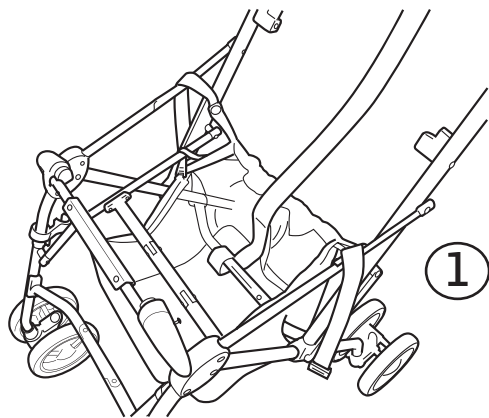


Note: Illustrations are for reference only and may not represent the actual product.

1. Unbuckle the attachment strap and lay over the right and left side of the stroller frame.

2. Hook the infant seat onto front rail of the stroller. The foot end of infant car seat/carrier will rest on the two L-shaped brackets.

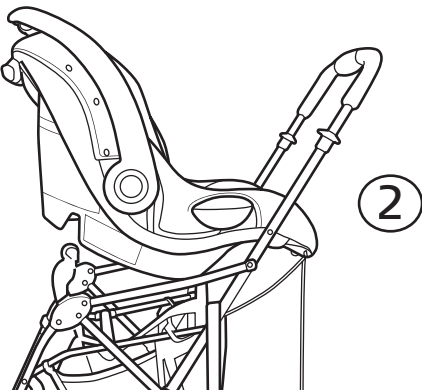

3. Bring the infant seat attachment straps through the seat belt guides in the infant car seat/carrier and fasten the buckle. To loosen, tilt the buckle and pull up. To tighten, pull the strap.

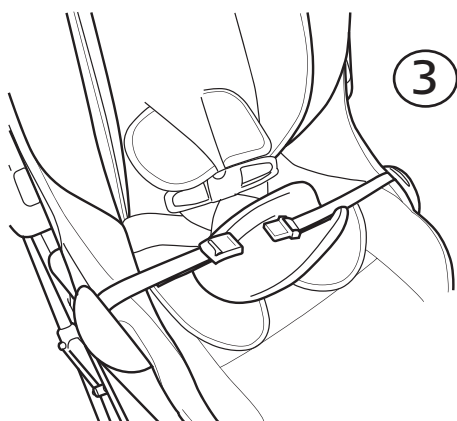

### **▲ WARNING**


Never use this product without securing the attachment strap to the infant seat.

### **▲ WARNING**

The infant harness must be buckled correctly per your manufacturer's instructions.

### **▲ WARNING**

Make sure you tighten the attachment strap before usage.

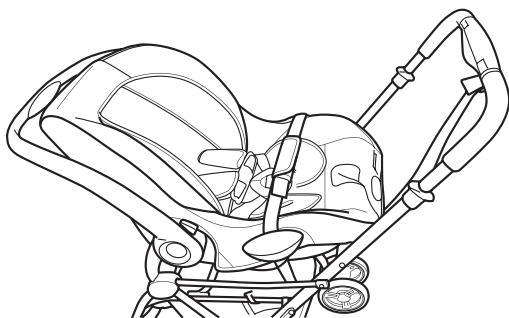

### **REMOVING THE INFANT SEAT/CARRIER**

Remove the infant car seat/carrier by reversing the above steps. See your infant car seat manufacturer's instructions for proper release lever operation.

 
 
 
 
Trade name and trademarks of Graco®, Century®, Evenflo® and Cosco® and Peg-Perego are the property of their respective owners and no endorsement of or approval by them is intended or implied. All Combi Flash EX strollers are compatible with specified models of the Graco®, Century®, Evenflo®, and the Peg-Perego® infant car seat/carrier models as of the date this printing was prepared.

Copyright May 2005 Combi USA Inc.

# Attaching/Releasing Infant Seat

Cosco, Eddie Bauer,  
Evenflo, Discovery, Peg-Perego


Note: Illustrations are for  
reference only and may not  
represent the actual product.

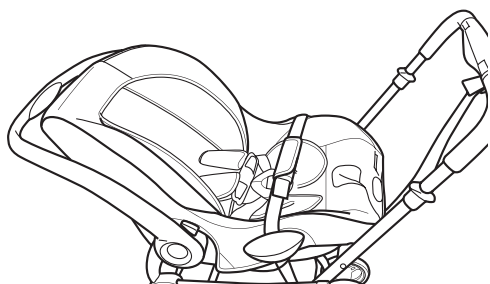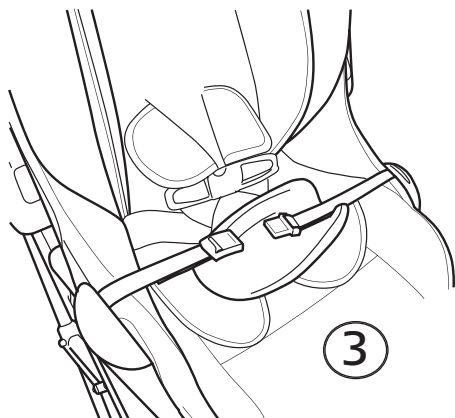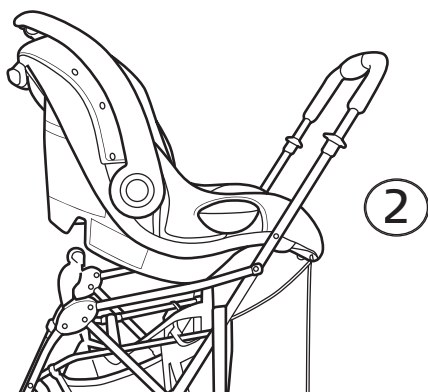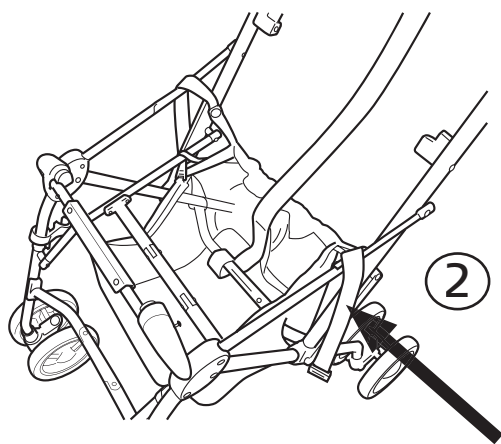

1. Use object to press in plastic tabs to release right and left end caps. (See diagram A) The plastic tabs are located underneath the front rail of the stroller on the plastic right and left rail covers. (See diagram 1) Right and left end caps will be released by pressing in plastic tabs. (See diagram B) End caps must be removed to install Cosco Eddie Bauer, Evenflo, Discovery or Peg-Perego infant carrier.

2. Unbuckle the attachment strap and lay over the right and left side of the stroller frame.
3. Hook the infant seat onto front rail of the stroller. The foot end of infant car seat/ carrier will rest on the two L-shaped brackets.

3. Bring the infant seat attachment straps through the seat belt guides in the infant car seat/ carrier and fasten the buckle. To loosen, tilt the buckle and pull up. To tighten, pull the strap.

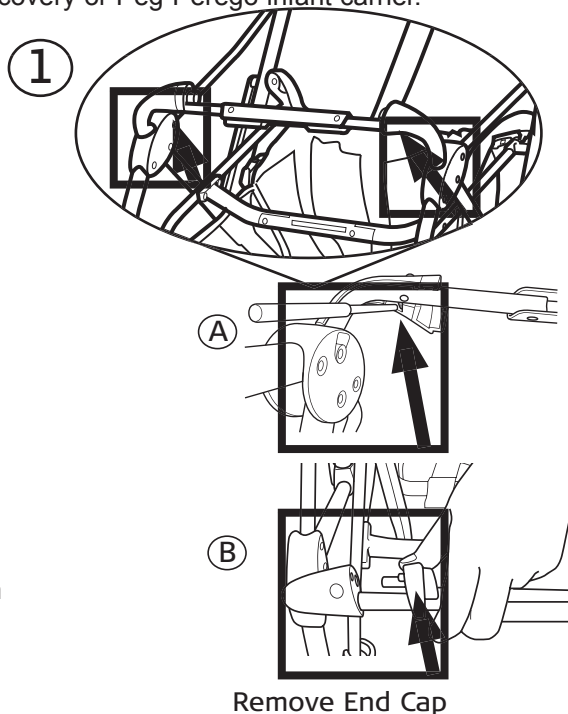

## **▲ WARNING**

Never use this product without securing the attachment strap to the infant seat.

## **▲ WARNING**

The infant harness must be buckled correctly per your manufacturer's instructions.

## **▲ WARNING**

Make sure you tighten the attachment strap before usage.

## REMOVING THE INFANT SEAT/CARRIER


Remove the infant car seat/ carrier by reversing the above steps. See your infant car seat manufacturer's instructions for proper release lever operation.

Trade name and trademarks of Graco®, Century®, Evenflo® and Cosco® and Peg-Perego are the property of their respective owners and no endorsement of or approval by them is intended or implied. All Combi Flash EX strollers are compatible with specified models of the Graco®, Century®, Evenflo®, and the Peg-Perego® infant car seat/ carrier models as of the date this printing was prepared.

Copyright May 2005 Combi USA Inc.

## Folding the Stroller



1. Remove infant seat.
2. Lock both front swivel wheels.
3. Empty the basket.
4. Lift the folding levers on both sides of the handle.

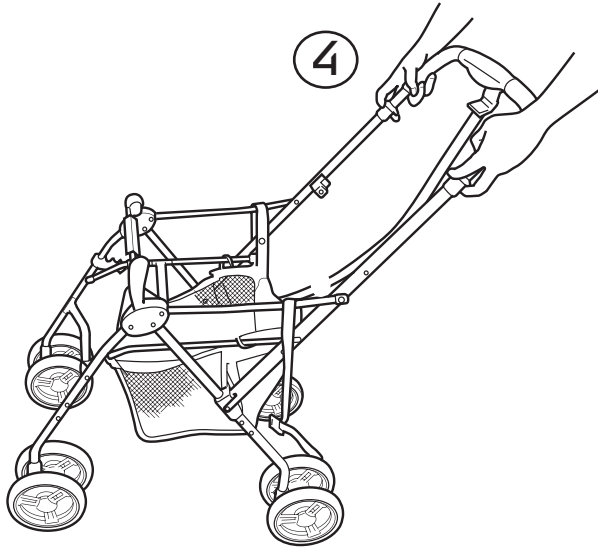



### CAUTION

For safety purposes, the folding levers should be operated only when folding the stroller.

5. Tilt handle back and fold.
6. Fold handle inward and lock with the folding latch.

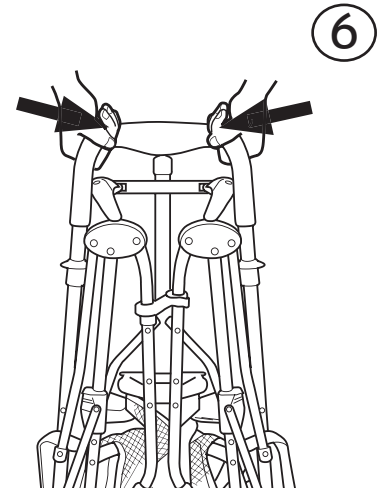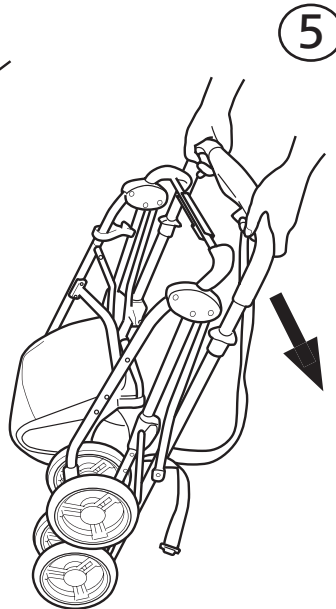

## Attaching the Basket

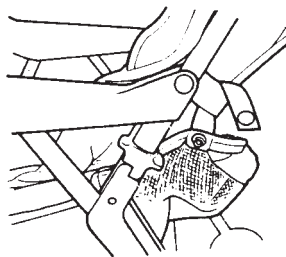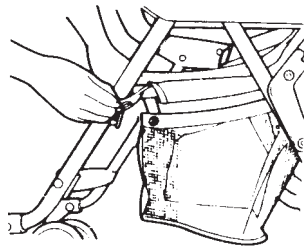

### CAUTION

Do not place more than 10 lbs. in the basket.  
Remove all items from the basket before folding the stroller.

1. Loop the front, rear and middle straps of the basket around the stroller frame and snap together.

## Removing the Basket

1. Press the gray plastic tabs together to detach basket. Gray tabs are located at the top corner of the basket in the front, middle and rear.

## Using the Stroller Pack



### WARNING

#### Attaching

Hook the clips into the slots on the handle and wrap the velcro straps around the handle.

#### Removing

Unfasten the velcro straps and unhook the clips.

**TO AVOID BURNS, do not place bottles/cups with hot liquids in the Stroller Pack. Do not place more than 2 lbs. in the Stroller Pack**

## Routine Maintenance

**STORE IN A COOL AND DRY AREA**, especially in the summer. Do not store the stroller in the trunk of a vehicle.

#### WAIST BELT AND BASKET

Hand wash with brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent and apply directly to the dirty area. Wipe out the detergent.

#### MAIN BODY

Briskly wipe off any mud and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry.

**Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.**


#### WHEEL ASSEMBLIES

After prolonged normal use, the wheels of your stroller may not swivel or turn as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheels by pressing in the release button and wiping off mud and dirt. **Do not use soap and water to wash wheels.** Periodically check that all screws, bolts and nuts are tight.


Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add silicone\* to **the wheel assemblies** in small amounts.

**Do not use lubricants because oil attracts dust and would hinder the movement rather than improve it.**

\*Silicone spray is available in varying size cans at most hardware stores.

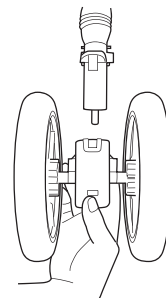

Front Swivel Wheel

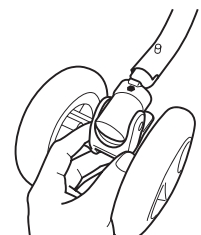

Rear Wheel



## Trouble Shooting

Note: Illustrations are for reference only and may not represent the actual product.

### STROLLER WILL NOT FOLD


- Check to see that the attachment strap is not caught in the side.
- Make sure front swivels are locked.
- Remove all items from the basket.

### DIFFICULT TO STEER/STROLLER PULLS TO ONE SIDE

- Remove any items hanging from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean and add silicone to wheels, if necessary.

### DIFFICULT TO GET UP CURBS

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.

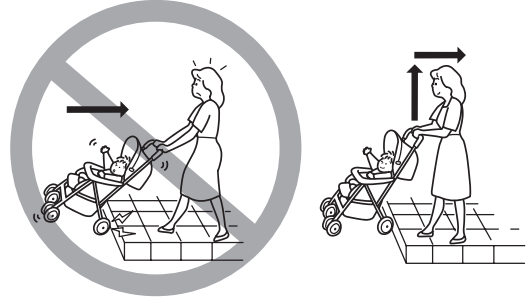







# Flash EX 7655 Series

## Instruction Manual

If you would like to place an order for the replacement parts, please fill out the form below and return to the following address:

**Combi**  
Attn: Consumer Affairs  
1962 Highway 160 W, Suite 100  
Fort Mill, SC 29708-8027

or **Fax this completed form to**  
**803-548-3663**

**IMPORTANT: We must have this information to process your order:**

**Model Number: 7655 - \_\_\_\_\_**  
Located on the rear right leg.

**Parts List for the Flash EX (7655 Series) only.**

	Price	Quantity	Total
1. Basket	10.00		
2. Rear Wheel Assemblies (left and right sides)	15.00/set		
3. Front Wheel Assemblies (left and right sides)	15.00/set		
4. Carry Strap	12.00		
5. Stroller Pack	15.00		
6.			
7.			
8.			
9.			
10.			
11.			

If you need to order other parts for your stroller, please call us toll-free at 1-800-992-6624.

**Shipping and Handling Fees:** Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S. Combi USA reserves the right to change pricing at any time.

Amount of Order		
ADD Shipping & Handling		
Sales Tax (6%) (SC residents only)		
Total		

**Ship To:**

\_\_\_\_\_

Customer Name

\_\_\_\_\_

Street Address

\_\_\_\_\_

Street Address

\_\_\_\_\_

City, State, Zip

\_\_\_\_\_

Telephone Number

**Charge to my credit card:**

VISA                                       MASTERCARD

AMERICAN EXPRESS                       DISCOVER

\_\_\_\_\_

Card Number

Expiration Date \_\_\_\_\_ - \_\_\_\_\_ - \_\_\_\_\_

\_\_\_\_\_

Cardholder's Signature

**Check enclosed**

04/13/05