



You can rely on Defy. To simplify.



**HB3708**

**INSTRUCTION MANUAL  
HAND BLENDER SET**

# Read this manual before operation of the appliance!

Dear Customer,

 
Congratulations on the purchase of your new Defy appliance!

Please read this manual carefully before using your appliance for the first time and then store it within easy reach for future reference. We trust you will enjoy years of trouble free use.

## The user manual:

- This manual will provide you with information on how to safely operate and care for your appliance in order that you gain the maximum benefit from it.
- Pay particular attention to any safety instructions.

## Controls and parts

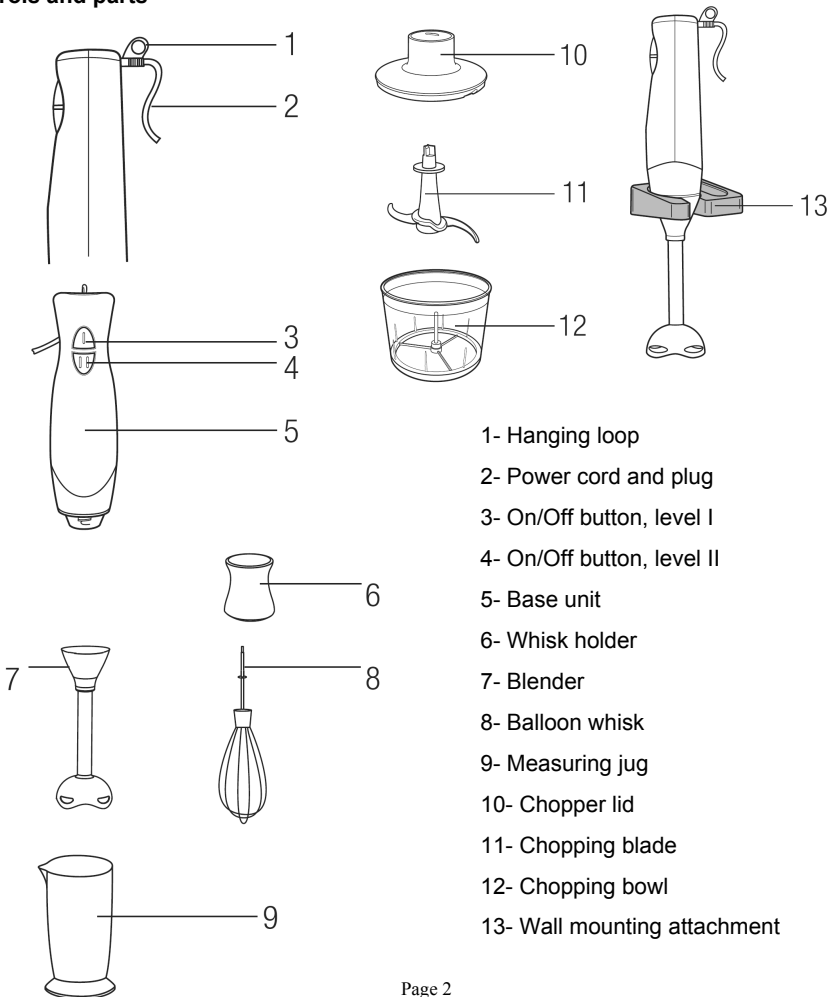

- 1- Hanging loop
- 2- Power cord and plug
- 3- On/Off button, level I
- 4- On/Off button, level II
- 5- Base unit
- 6- Whisk holder
- 7- Blender
- 8- Balloon whisk
- 9- Measuring jug
- 10- Chopper lid
- 11- Chopping blade
- 12- Chopping bowl
- 13- Wall mounting attachment

# 1 Safety and set-up

---

**Please read this instruction manual thoroughly prior to using this appliance! Follow all safety instructions in order to avoid damages due to improper use!**



**Keep the instruction manual for future reference. Should this appliance be given to a third party, then this instruction manual must also be handed over.**

- This appliance is intended for private domestic use only and is not suitable for professional catering purposes. It should not be used for commercial use.
- The blades are very sharp! Handle the sharp blades with utmost care, especially during removing and cleaning, in order to avoid injuries.
- Never clean the appliance with bare hands. Always use a brush.
- Do not touch any moving parts of the appliance. Do not attach or remove the parts until the appliance comes to a complete stop.
- Always keep hair, clothing and any other utensils away from the appliance during operation in order to prevent injury and damages.
- Check if the mains voltage on the rating label corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to pull out the plug.
- Do not wrap the power cord around the appliance.
- For additional protection, this appliance should be connected to a household faulty current protection switch of no more than 30 mA. Consult your electrician for advice.
- Do not immerse the appliance, power cord or power plug in water or in other liquids.
- Always remove the power plug from the wall socket before assembling the appliance, after using the appliance, before disassembling, before cleaning the appliance, before leaving the room or if a fault occurs. Do not disconnect the plug by pulling on the cord.
- Do not squeeze or bend the power cord and do not rub it on sharp edges in order to prevent any damage.
- Keep the cord away from hot surfaces and open flames.
- Do not use an extension cord with the appliance.
- Never use the appliance if the power cord or the appliance is damaged.
- Our Household Appliances meet applicable safety standards, thus if the appliance or power cord is damaged, it must be repaired or replaced by the dealer, a service centre or a similarly qualified and authorized service person to avoid any dangers. Faulty or unqualified repair work may cause danger and risks to the user.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.**
- **Children should be supervised to ensure that they do not play with the appliance.**
- **Do not leave the appliance unattended as long as it is in use. Extreme caution is advised when the appliance is being used near children and people with limited physical, sensory or mental capabilities.**
- Before using the appliance for the first time, clean all parts which come into contact with food carefully. Please see details in the "Cleaning and Care" section.
- Dry the appliance and all parts before connecting it to the mains supply and before attaching the accessories.

## Safety and set-up

---

- Do not operate the appliance without ingredients in the measuring jug or chopping bowl.
- Never place the appliance, attachments, power cord or plug on hot surfaces such as gas or electric burners or hot oven surfaces and never use with hot liquids or food. Let hot food and liquids cool down to min. 80°C or less before using the appliance.
- Do not use the appliance for anything other than its intended use.
- Never switch on the appliance for longer than necessary for processing the food.
- Never use the appliance with damp or wet hands.
- Operate the appliance with the supplied parts only.
- The appliance is designed to process only common household quantities.
- Do not use the appliance if the blades are damaged or show signs of wear.
- Make sure that there is no danger that the power cord could be accidentally pulled or that someone could trip over it when the appliance is in use.
- Position the appliance in such a way that the plug is always accessible.
- A spatula may be used to remove the food from the measuring jug and chopping bowl. Make sure that the appliance is switched off before doing this.
- We do not recommend operating the appliance with dry or hard foods or for ice crushing as this may result in dull blades.
- Remove bones and stones from food to prevent the blades and the appliance from being damaged.

	The manufacturer strives for continuous improvement. For this reason, the text and illustrations in this manual are subject to change without notice.
	If the appliance is damaged in any way do not use it. Report the damage to your dealer who will take the necessary corrective action.

## 2 Operation

### Preparation

- 1 Remove all packaging and sticker materials and dispose of them according to the applicable regulations.
- 2 Before using the appliance for the first time, clean parts which come into contact with food (see the "Cleaning and care" section).
- 3 Cut food into small pieces before processing with the appliance.

### Maximum quantities and processing time


Refer to the table for the maximum quantities and processing time.

Ingredients	Maximum quantities	Processing time
Meat/Fish	200g	10-15 seconds
Herbs	20g	20 seconds
Nuts	200g	15 seconds
Cheese	150g	15 seconds
Bread	1 slice	20 seconds
Eggs (hard-boiled)	2 eggs	5 seconds
Onions (cut in 8 pieces)	100 g	10 seconds


### Mounting the wall mounting attachment

You can put your appliance to a practical place by mounting the wall mounting attachment.

1. Hold the wall mounting attachment "13" in the desired position on the wall. Mark the two drill holes. Drill the holes and insert the supplied dowels.


	<b>WARNING:</b> Make sure that you do not drill into electrical lines or water pipes!
---	---

2. Secure the wall mounting attachment "13" to the wall using the supplied screws and dowels.
3. You can place the base unit "5" on the wall mounting attachment "13".


	The base unit can also be hung on a hook with the hanging loop "1".
---	---


### Operation

1. Put the food that you would like to puree or mix in the measuring jug "9" or in any other similar bowl.
2. Connect the base unit "5" to the blender "7" by putting the blender onto the base unit. Turn the base unit to the left.
  - Make sure the blender is properly attached to the base unit
3. Insert the plug "2" into the wall socket.
4. Immerse the blender "7" in the measuring jug "9", where the ingredients to be blended are.


	To prevent the ingredients from splashing, do not press the On/Off button level I "3" and On/Off button level II "4" until the blender has been immersed in the ingredients.
---	--

5. Press and hold down the On/Off button level I "3".
  - The appliance starts operating.




	Always use the appliance on level I. If necessary, press and hold down the On/Off button level II "4". Once you release the On/Off button level I "3", the appliance switches off automatically.
---	--

	Do not use the appliance for longer than one minute at a time.
---	--



6. Move the appliance slowly up and down and in circles to blend the ingredients.
7. Release the On/Off button level I "3" or On/Off button level II "4" when you finish the process and disconnect the power plug from the socket
8. Remove the mixture from the measuring jug "9".
9. Disassemble the blender "7" from the base unit "5" by turning the base unit to the right and pulling it off.

	Do not overfill the measuring jug "9" or other similar bowl to prevent the mixture from overflowing. Smaller amounts can be processed easier.
---	---

 
 
## Operation


	<p>If you would like to use the blender directly in the cooking pot, first take the cooking pot off the stove to prevent the blender from overheating.</p>
	<p>Do not operate the appliance continuously for more than 1 minute, in order to prevent overheating of the appliance.</p>
	<p>Never switch on the appliance for longer as you need to process the food.</p>

## Chopping


	<p>Do not chop extremely hard items such as coffee beans, ice cubes, nutmeg, grains and bones. Remove stalks from herbs, shells from nuts, bones, tendons and gristle from meat</p>
	<p>Prepare the food in small amounts (total max. 200 g).</p>


1. Put the chopping bowl "12" on a stable, flat, clean and dry surface.
2. Place the chopping blade "11" onto the spindle in the chopping bowl .

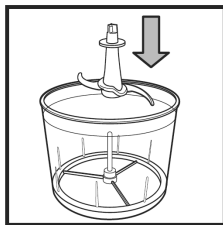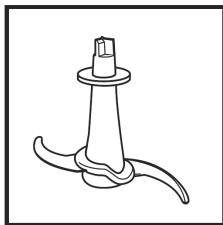


	<p><b>WARNING:</b> The chopping blade is very sharp, be careful while placing the chopping blade "11". Do not touch the chopping blade with bare hands.</p>
---	---

 
3. Place the ingredients in the chopping bowl "12".
4. Put the chopper lid "10" onto the chopping bowl "12".
5. Put the base unit "5" onto the chopper lid "10". Turn the base unit to the left so that it is firmly locked into place. Make sure the base unit is securely attached to the chopper unit.

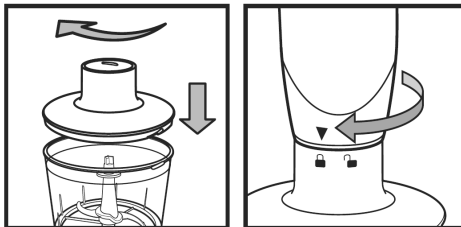

	<p>During operation always hold the chopping bowl "12" with one hand to prevent it from falling over.</p>
---	---





6. Insert the plug "2" into the wall socket.
7. Press and hold down the On/Off button level II "4".
  - The appliance starts operating.

	<p>Do not use the chopper for longer than 1 minute at a time.</p>
---	---



	<p>You will achieve the best results if you press the On/Off button, level II "4" intermittently.</p>
---	---

8. Release the On/Off button level II "4" when you finish the process and disconnect the power plug from the wall socket.
9. Disassemble the base unit "5" from the chopper lid "10" by turning the base unit to the right and pulling it off.
10. Take the chopper lid "10" off. Take the chopping blade "11" out of the chopping bowl "12" carefully prior to emptying the chopped food.

## Operation




	<p>If the chopper does not work or if the chopping blade "11" only turns slowly, first pull out the power plug "2". Then take the base unit "5" and the chopper lid "10" off. Check the chopping bowl "12" to see if there is something blocking the chopping blade. Maybe you put too much hard food in the chopping bowl.</p>
	<p>If the ingredients stick to the side of the chopping bowl "12", a spatula may be used to remove the food from the chopping bowl. To do this, the appliance must be switched off.</p>
	<p>Do not operate the appliance continuously for more than 1 minute, in order to prevent overheating of the appliance.</p>
	<p><b>WARNING:</b> Do not touch the chopping blade with your bare hands. The chopping blade is very sharp.</p>

### Whisking

	<p>You can use the balloon whisk "8" for whipping cream and beating eggs.</p>
	<p>Never use more than 4 egg whites or 400 ml cream.</p>




1. Put the balloon whisk "8" onto the whisk holder "6" until it clicks into place.
2. Connect the base unit "5" to the whisk holder "6" by putting the whisk holder onto the base unit. Turn the base unit to the left. Make sure that the whisk holder is securely attached into the base unit.
3. Put the ingredients that you would like to process in the measuring jug "9" or in any other similar bowl.
4. Connect the power plug "2" into the wall socket.
5. Hold the balloon whisk "8" into the mixture to be processed.

6. Press and hold the On/Off button level I "3" or II .
  - The appliance starts operating.
7. Move the appliance slowly up and down and in circles to whisk the ingredients.
8. Release the On/Off button level I "3" or II "4" when you finish the process and disconnect the power plug from the wall socket.
9. Remove the mixture from the measuring jug "9".
10. Disassemble the base unit "5" from the whisk holder "6" by turning the base unit to the right and pulling it off.




	<p>Do not operate the appliance for longer than 3 minutes at a time.</p>
	<p>Do not overfill the measuring jug "9", or the similar bowl to prevent the mixture from overflowing. Smaller amounts can be processed easier.</p>
	<p>If you would like to use the balloon whisk directly in the cooking pot, first take the cooking pot out off the stove to prevent the balloon whisk from overheating.</p>

### 3 Information

#### Cleaning and care

	<b>WARNING:</b> Never use petrol, solvents or abrasive cleaners, metal objects or hard brushes to clean the appliance.
	<b>WARNING:</b> Do not touch the chopping blades with bare hands. The blades are very sharp. Use a brush!
	<b>WARNING:</b> Never put the base unit "5" or power cord in water or any other liquids and never hold them under running water.

1. Turn the appliance off and disconnect it from the wall socket.
2. Let the appliance cool down completely.
3. Use a damp soft cloth to clean the base unit "5".
4. Immediately after using, clean the blender "7", chopper lid "10" and whisk holder "6" with warm, soapy water and dry them thoroughly. Never submerge them in dishwasher.

	Only the following parts can be cleaned in dishwasher: balloon whisk "8", chopping bowl "12", chopping blade "11" and measuring jug "9".
	Before using or storing the appliance after cleaning, dry all parts carefully using a soft towel.
	<b>DANGER!</b> Always disconnect the plug from the wall socket before any maintenance or cleaning.

Record in the space below the listed information for future reference.

SERIAL NUMBER.....

DATE OF PURCHASE.....

PURCHASED FROM.....

.....

#### Storage

- If you do not plan to use the appliance for a long period of time, please store it carefully.
- Make sure the appliance is unplugged and completely dry.
- Store the appliance in a cool, dry place.
- Make sure the appliance is kept out of the reach of children.


#### Environmental note

This appliance has been made from high quality materials and parts which can be reused and are suitable for recycling.

Do not dispose of the appliance with normal household waste at the end of its service life. Consult your local authorities for disposal information and facilities available.

#### Help protect the environment by recycling used appliances.


#### Technical data

	This appliance conforms to the European directives 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU.
---	---

**Power supply:** 220-240V~, 50 Hz

**Power:** 400 W

Technical and design modifications reserved.

	<b>Warning:</b> Repairs must be carried out by authorised persons only. Repairs carried out by incompetent persons create a user risk.
---	--

Please register your product at

**www.defy.co.za**

DEFY APPLIANCES (PTY) LTD  
P.O.BOX 12004  
JACOBS  
DURBAN  
4026  
SOUTH AFRICA



**Service Centres**

If you have followed the instructions and still have a problem, contact the nearest Defy Service Centre. They will be able to advise you on any aspect of the appliance.

**South African Service Agents:****BLOEMFONTEIN**

160 Long Street, Hilton, Bloemfontein 9301  
Tel: 051 400 3900

[Bloemfontein.Service@defy.co.za](mailto:Bloemfontein.Service@defy.co.za)

**CAPE TOWN**

5A Marconi Rd. Montague Gardens, 7441  
Tel: 021 526 3000

[CapeTown.Service@defy.co.za](mailto:CapeTown.Service@defy.co.za)

**DURBAN**

35 Intersite Avenue, Umgeni Business Park,  
Durban, 4051  
Tel: 031 268 3300

[Durban.Service@defy.co.za](mailto:Durban.Service@defy.co.za)

**EAST LONDON**

16 Bowls Rd. Arcadia, East London, 5201  
Tel: 043 743 7100

[EastLondon.Service@defy.co.za](mailto:EastLondon.Service@defy.co.za)

**JOHANNESBURG**

Cnr. Mimetes & Kruger Sts. Denver ext.12  
Johannesburg, 2094

Tel: 011 621 0200 or 011 621 0300

[Gauteng.Service@defy.co.za](mailto:Gauteng.Service@defy.co.za)

**POLOKWANE**

87 Nelson Mandela Drive, Superbia 0699  
Tel: 0152 92 1166 / 7 / 8 / 9

[Polokwane.Service@defy.co.za](mailto:Polokwane.Service@defy.co.za)

**PORT ELIZABETH**

112 Patterson Road, North End, Port Elizabeth  
6001

Tel: 041 401 6400

[PortElizabeth.Service@defy.co.za](mailto:PortElizabeth.Service@defy.co.za)

**PRETORIA**

Block A1 Old Mutual Industrial Park,  
Cnr. D.F.Malan Drive & Moot Str. Hermanstad,  
0082

Tel: 012 377 8300

[Pretoria.Service@defy.co.za](mailto:Pretoria.Service@defy.co.za)

**Sub-Saharan Africa Service Agents:****ZAMBIA: SOUTHGATE INVESTMENTS LTD**

Plot 1606, Sheki Sheki Road  
P.O. Box 33681

Lusaka, 10101, Zambia

Tel: +260 0211 242332/3

Fax: +260 0211 242933

[sgiservicecentre@microlink.zm](mailto:sgiservicecentre@microlink.zm)

**NAMIBIA: ATLANTIC DISTRIBUTORS (PTY) LTD**

10 Tienie Louw Street, Northern Industrial Area  
P.O. Box 21158, Windhoek, Namibia

Tel: (061) 216162

Fax: (061) 216134

[atlantic@mweb.com.na](mailto:atlantic@mweb.com.na)

**ZIMBABWE: TRADECOMAFRICA**

Trade Com Africa, 183 Loreley Crescent  
Msasa, Harare, Zimbabwe

Tel: +263 4 486165/6

Cell: +263 772 469010

Cell: +263 772 469011

**BOTSWANA: RAY MORGAN AGENCIES**

RMA Service Centre, Plot 48, East Gate  
Gaborone International Commerce Park  
Kgale View, Gaborone  
Botswana

Tel: +267 390 3996 / 390 3912

Fax: +267 318 7376

Cell: +267 7134 6539

[service@rma.co.bw](mailto:service@rma.co.bw); [raja@rma.co.bw](mailto:raja@rma.co.bw)

**SWAZILAND: LYNDS DISTRIBUTORS**

P.O Box 716, Mbabane, Swaziland, H100

Tel: (00268) 2515 4310/8

Fax: (00268) 2518 4318

**MOZAMBIQUE: COOL WORLD. LDA**

Rua da Resistencia No. 97B R/C

Cell: +258 84 44 61 234

[coolworldlda@hotmail.com](mailto:coolworldlda@hotmail.com)

Nosso Show Room

Av: da Industrias, Parcela No.735 \* 735A  
Machava, Maputo

**OTHER AREAS ARE SERVICED BY OVER 200 AUTHORISED SERVICE AGENTS.  
PLEASE CONSULT THE NEAREST REGIONAL DEFY SERVICE CENTRE FOR DETAILS.**

## 5 Warranty

---

This certificate is issued by DEFY APPLIANCES (PTY) LIMITED manufacturers of Defy and Ocean products, hereinafter the Company, to the original purchaser only, of the appliance described on the certificate and shall constitute the only warranty given in respect of this appliance.

The Company warrants to the original purchaser that for a period of ONE YEAR from date of purchase the appliance is free from defect under normal domestic use, both in workmanship and material, subject to the following conditions.

1. Repair or replacement of any part of this appliance, found by the Company to be defective, shall be at the election of the Company. The Company reserves the right to effect such service through any of its Service Divisions or Authorised Service Dealers. The cost of such service shall be borne by the Company in full, provided that the appliance is located no further than 50km from a Company Service Centre or an Authorised Service Dealer. Where the appliance is located beyond the 50km radius, the purchaser shall be liable for the standard travelling charges, as determined by the Company.
2. Vitreous enamelware, fuses and lamps are specifically excluded from these warranties. It is an express condition of these warranties that the purchaser takes due care and attention in the use and maintenance of the appliance. Abuse, misuse in conflict with operating instructions, connection to incorrect voltages and subjection to commercial use shall release the Company from its obligations.
3. This warranty shall become void and cease to operate if the appliance is dismantled by, or any repairs to the appliance are effected by any persons not duly authorised by the Company, or if substitute parts not approved by the Company are used in the appliance, or if the serial number of the appliance is removed.
4. The Company shall not be responsible for damages resulting from fire, flood, civil disturbances or any Act of God. The Company shall not, in terms of these warranties be responsible nor held liable for any consequential loss or damage of any kind caused by or due to the failure or malfunction of the appliance.
5. The Company shall not be responsible for transportation or other costs other than those incurred within the provisions of Point 1 of this Certificate.
6. **For warranties in the Republic of South Africa and Sub-Saharan Africa, please contact your nearest Defy office. Please refer to page 9 for respective South African service agents and Sub-Saharan Africa service agents.**
7. Where service is requested under warranty and no fault or defect can be found by the Company, all costs incurred will be for the purchaser's account.
8. This Certificate as well as your invoice will serve as proof of purchase. For the purpose of warranty, it will be essential to produce this Certificate and invoice. Failure to do so, will render the purchaser liable for service costs.

**KEEP THIS CERTIFICATE AND SALES INVOICE AS PROOF OF  
PURCHASE FOR WARRANTY PURPOSES.**