



COMMITTED TO DELIVERING QUALITY
AND INNOVATIVE PRODUCTS FOR YOU
AND YOUR FAMILY



INSTRUCTION MANUAL

AXIOM™ 2, 3 & 4



Congratulations on
your purchase of a
Dreamer Design™
Axiom™ Stroller.





Included in the stroller box you will have the below listed items. If you are missing any of the listed items please call 1-800-278-9626

- A 1 Stroller frame with seat, basket, sun canopy and wrist strap
- B 1 Front stroller wheel
- B 2 Rear stroller wheels
- C 1 Rain cover
- C 1 Tire pump
- D 1 Owners manual
- E Swivel wheels
- F Foot plate
- Adjustment straps - *Not Shown*

Correct assembly of this stroller is vital for safe use by you and your passenger. We strongly recommend that you follow these assembly instructions closely. Choosing not to follow these Instructions, is outside of the manufacturer's or distributor's liability.

Stroller Frame



- Lay the stroller flat on the ground as shown.
- Lift the handle until the stroller is completely unfolded.
- Lift the upper handle into place and lock the swing clasps.
- Pull the rear support bars back and insert the QR pins.

Foot Well Assembly



- Start by inserting the fork tips into the fork tubes.
- Find the fender and brake caliper bracket. Insert the two 1" bolts through the cross bar.
- Slip the fender into position on the fork and over the bolts.
- Place the brake bracket into position over the bolts and install the nuts but do not tighten.
- Position the cover plates on the fork as shown.
- Install the four 1 1/4" x 3/4" bolts starting from the bottom of the fork through the fork, fender, and cover plate. Install the nuts.
- Once you have the brake caliper, fender and cover plates in place tighten all 6 nut and bolt sets.
- Install the front and rear wheels.
- Set all the brakes.

Wheel Installation



Rear wheels

- Remove wheels from plastic bag
- Remove foam cover from wheel axel
- Place rear footbrake in upright position
- Push the "push" button on the outside of the rear wheel; insert the rear wheel axle into the rear stroller frame axle. Give the wheel a tug to make sure it is locked into place.

Warning: Be sure to discard plastic bags from wheels, they are a suffocation hazard to children.



Front wheels

- Tip the stroller back so it is resting on its handle and rear wheels to put the front wheel on.
- Remove front wheel from plastic bag, remove the foam protector
- Make sure the brake release lever is pointed away from the stroller
- Starting from the bottom of the brake pads, push the wheel up and in between the brake pads.
- Rotate the wheel upwards and find the flat sides of the round axle and slide all the way to the back of the forks, on both sides.
- The quick release lever should be straight out. While holding the lever, tighten the thumbnut until it is snug. The axle should not move side to side.
- Flip the quick release lever down so it is flush with the frame. Give the wheel a tug to make sure it is secure.

Warning: Check to make sure the stroller wheels are secure before each use.

- Close the brake calipers by pushing the lever backwards all the way.
- Make sure the seat strap is snapped around the frame on both sides by the basket.

Seat Installation



Remove the seat from the plastic bag.

Insert the support panels into the pockets at the back and bottom of the seat. Zip closed.

Hang the seat on the frame starting with the upper handle sleeve.

Work your way down the handle and snap each button on both sides of the frame.

Flip the kick panel back and wrap the top strap around the frame and connect each end together. Be sure not to wrap the straps around the lower support bars only the frame after adjusting foot well positions

At the back of the seat wrap and button the anchor straps around the rear support bars.

Adjust the harness system and any other positioning assistance that may be required.

Brakes



Your stroller comes with two brakes: a foot brake and a hand brake. The hand brake, located on the handle, locks the front wheel. The foot brake is located near the basket, on the rear axle. It locks the rear wheels.

**You should always use both brakes when the stroller is not being pushed.*

To lock the hand brake, pull the lever in and hold it while you push the button down. As you hold the button down, release the brake lever.

To release the hand brake pull the lever in until the button pops up.

To lock the foot brake you simply push it down with your foot. Then try to push the stroller to make sure the brake is secure.

Pull the foot brake up with your foot to release it.

To adjust the hand brake if it becomes loose, turn the barrel toward you, away from the locking ring. Tighten the locking ring to make a gap no more than a 1/4" wide. If still too loose, adjust barrel down by the brake caliper.

**These adjustments should be done in small increments - only a small amount of adjustment in necessary.*

NEVER trust your brakes 100%! Always keep an eye on your stroller. Always use your safety wrist strap any time a child is in the stroller.

Warning: Never leave your child unattended.



Foot Well Adjustment

Once the passenger is in his/her normal riding position, this position will best determine the appropriate location for the foot wells.

Your foot well is adjustable to fit most passenger needs. Start by accessing the need of the user.

Position the two bolts as shown in one of the hole sets. The bolts may be placed in any of three hole sets to accommodate your needs.

The foot well can be positioned up or down in one inch increments.

The foot wells may also be tilted from side to side in 25-degree increments.

If necessary you may also shift the foot well from left to right 1/2" increments.

Once you and the rider are satisfied with the position of the foot wells secure them to the frame using the four 1 1/4" X 1/4" bolts.



Seat Recline

The seat is fully reclined by unbuckling the strap behind the seat.

Warning: Passenger may slip into leg opening and strangle. Never use in reclined position unless the firmness panel is in place.

The seat is removed by undoing the Velcro® and the straps from the foot plate and the frame. The seat needs to be unsnapped from the frame.



Harness

Undo both buckles from the padded center strap.

Place passenger in the seat.

Adjust the padded center strap forward or backward to fit the passenger.

Adjust the padded shoulder harness up or down on the Velcro strips to fit the passenger.

Buckle the two buckles to the padded center strap.

Pull the adjustment strap until the padded center strap and the padded shoulder harness are both snug.



Warning: Avoid serious injury from falling or sliding out. Always use seat belt.



Sun Canopy

Remove the sun canopy from the plastic bag and snap the claps onto the frame through the slots in the seat. The clasp may feel tight. Start by installing on one end and rolling onto the tube. The mesh visor should be at the front of the stroller when installed.

Warning: Be sure to discard plastic bag from the canopy, it is a suffocation hazard.



Basket

Your basket has two sets of straps. One set should Velcro® around the lower handle. The other set should Velcro® around the uprights.



● Height Adjustable Handle

Your stroller is equipped with a height adjustable handle.

To adjust your handle, push the buttons on the inside of both handles.

While holding the buttons, rotate the handle to the desired height.



● Storage

Your stroller has many places to store your stuff. There is a pocket located on the back of the seat, as well as pockets for keys or a cell phone on both sides.

There is also a key leash and two water bottle holders located on the back of your stroller.

Another place for storage is the basket under the seat.

Warning: Do not store more than 12 pounds between the pockets and basket. Overloading the stroller may cause it to become unstable and tip over.



● All Weather Cover

If you get stuck in the rain, your all weather cover will keep your passenger dry. Just drape the cover over your bubble canopy and seal the back velcro strips together.

Next, buckle the straps around the foot plate, which attach underneath between the brake calipers and the frame.



● Folding

Pull pin from each up-right strut, fold the strut forward.

Pull the latches on both sides of the frame and push down on the handle until the forks and handle meet.

If you like your stroller to fold more compactly, simply take the wheels off.



● Maintenance

We recommend that you have an experienced dealer perform these maintenance checks once a year. Lubrication of the following items is necessary:

1. Pivot point and cable of hand brake.
2. Hand brake cable by caliper lever.
3. Front wheel axle.
4. Quick release lever.
5. Insert in frame for rear wheels.
6. Wheel nub and ball bearings of rear wheel.
7. Locking bars of folding mechanism.

Replace the brake pads when the grooves become worn away. Check all bolts are tight and springs are secure for rear foot brake.

Check fabric seams and straps for fraying or tearing. Keep stroller out of the sun and in a dry place, when not in use, to prevent fading and mildew. Check the frame for loose rivets, cracks and wear. Check to make sure all nuts and bolts are tight on the frame.

Frequently Asked Questions

a) Can I roller blade with my stroller?

We do not recommend this, it is too easy to lose control and cause possible harm to your passenger and yourself.

b) What if I break my stroller?

No problem, call for help at 1-800-278-9626. DO NOT RETURN YOUR STROLLER TO THE STORE.

c) Is the fabric on my stroller washable?

Yes the seat, canopy and basket are all removable and machine washable in cold water with mild detergent and placed back on your stroller to dry. Be sure to remove all seat panels before washing and replace when finished.

Reminders

ALWAYS use your safety wrist strap any time the passenger is in the stroller.

ALWAYS engage rear foot brake when loading and unloading passenger.

NEVER leave the passenger unattended in or around the stroller.

NEVER overload the stroller. Overloading the stroller may cause the stroller to become unstable and tip over.

DO NOT allow the passenger to stand in the stroller. This may cause the stroller to tip and cause injury to the passenger or others.

Accessories



Back Pack

A very spacious bag equipped with cell phone and water bottle pockets. Packed and over the shoulder allows this bag to keep up with even the busiest of families.



Sheering Insert

Soft, cushioned comfort for your child's ride.



4 Piece Pillow

Specifically for our Axiom line, each pillow plays an important part in the passenger's comfort. Head support, lateral or positioning support and back/bottom support.



Bug Canopy

Versatile canopy that provides protection from bugs to flying debris to shade from the sun.



Flashing Light

Provides dual-flashing modes, is water resistant, and can be seen for up to 1600 ft.



Deluxe Carry Bag

Contains a removable, hard back and bottom support, as well as hand, shoulder, and adjustable back straps.



Bunting Bag

Styled similar to a sleeping bag but designed to fit for use in your stroller. The zip close padded bag keeps your child snug and warm.

800.278.9626 | FX: 509.453.8326

sales@dreamerdesign.net | www.dreamerdesign.net