


***Personal CD-R/RW Player
with 60 Second Anti-Shock
and Wired Remote Control,
Stereo Headphones, Car Kit***

OWNER'S MANUAL

HD9116BL

Visit our web site at www.emersonradio.com

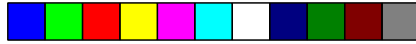

 
Thank you.....

For purchasing this Emerson Personal CD Player. The CD player has a 20 track programmable memory so you can listen to the songs on your favorite CDs in any order you choose. Or you can use the Random playback feature and let the player select the playback order for you. Use the 3-way Repeat feature to repeat a single track, the entire disc, or a programmed sequence of tracks, indefinitely. We've also included 60 second Electronic Anti-Shock Protection which makes this player virtually skip-free during most active uses.

Finally, this model includes a cassette adapter that allows you to play your CDs through the cassette player in your car radio, and a wired remote control that lets you operate the player while it is being carried in a purse, back-pack, or pocket book.

Please read this Owner's Manual completely and carefully to make sure you understand the proper operation of this product, and get the maximum enjoyment out of all the features of this state-of-the-art CD player.

Once again, thanks for purchasing this Emerson product.



IMPORTANT NOTES

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD,
DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

Avoid installing the unit in locations described below:

- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
- Dusty places.
- Places subject to constant vibration.
- Humid or moist places.

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM



This product contains a low power Laser Device.

CAUTION

THIS LASER COMPACT DISC PLAYER FUNCTIONS BY HELP OF INVISIBLE LASER LIGHT AND IS EQUIPPED WITH SAFETY SWITCHES TO AVOID EXPOSURE WHEN DOOR IS OPEN AND SAFETY INTERLOCKS ARE DEFEATED. IT IS DANGEROUS TO DEFEAT OR BYPASS SAFETY SWITCHES.



DANGEROUS VOLTAGE

Uninsulated Dangerous Voltage, that may be of sufficient magnitude to constitute a risk of electric shock to persons is present within this product's enclosure.




ATTENTION

The Owner's Manual contains important operating and maintenance instructions.

For your safety, it is necessary to refer to the manual.

This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

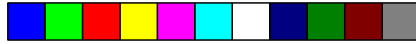

PREPARATION FOR USE

Remove The Transit Card

This personal CD player is shipped with a dummy CD 'transit card' inside the CD compartment. The purpose of this card is to prevent the laser from moving during shipment of the product. This card must be removed before using the CD player.

Slide the **OPEN** switch to the right to unlock the CD door. Remove the 'transit card' from the player and discard it.

Power Sources

This personal CD player is designed to operate on two "**AA**" batteries, not included. Use a well known brand of Alkaline batteries for longest life and best performance.

This player can also be operated by with an optional AC/DC converter/adaptor, not included. If you decide to purchase an optional AC/DC adapter the specification must be as follows:

 
Input: 120V 60Hz AC

Output: 4.5V DC, 500 mA.

Plug: Female Type with Positive Center, "UL" Listed.

Positive (+) —  — Negative (-)


You may also purchase a "Universal" type AC/DC adapter which allows you to select the required output voltage and plug polarity, and normally includes multiple plug sizes to fit most brands of equipment. Always look for the "**UL**" listing mark when you purchase an adapter.



Installing The Batteries


NOTE: The battery compartment is located on the bottom cabinet.

 - 1.) Press the battery door locking tab in the direction of the 'Arrow' to open the battery door. Lift the door upward as shown.

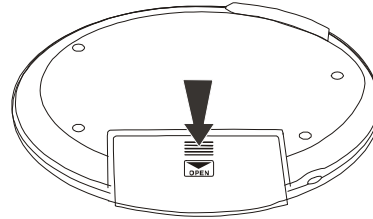

- 2.) Insert two alkaline "AA" batteries in the battery compartment. Be sure to observe the polarity markings engraved in the battery compartment.

 
If the batteries are inserted incorrectly the unit will not work.

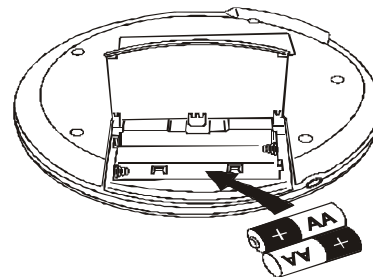


- 3.) Close the battery door, and push the battery door downward until you hear a 'click' sound to lock the door again.

- 4.) Close the CD door.

Replacing The Batteries

 
When the battery symbol  appears in the display the batteries are becoming weak and should be replaced. Always replace both batteries at the same time with new fresh alkaline batteries. Do not mix old and new batteries or different types of batteries together.

If the display remains blank when you press the  (Play/Pause) button, the batteries are completely dead. Replace them immediately. If dead batteries are left inside the battery compartment for a long period of time they may leak and cause damage to the unit, and such damage or corrosion from leaking batteries is not covered by your warranty.



Connecting The Optional AC Adapter (Not Included)

- 1.) Connect the small female plug of the optional AC adapter to the "DC IN 4.5 V" jack on the right side of the CD player.
- 2.) Connect the adapter housing to your 120V 60Hz AC outlet.

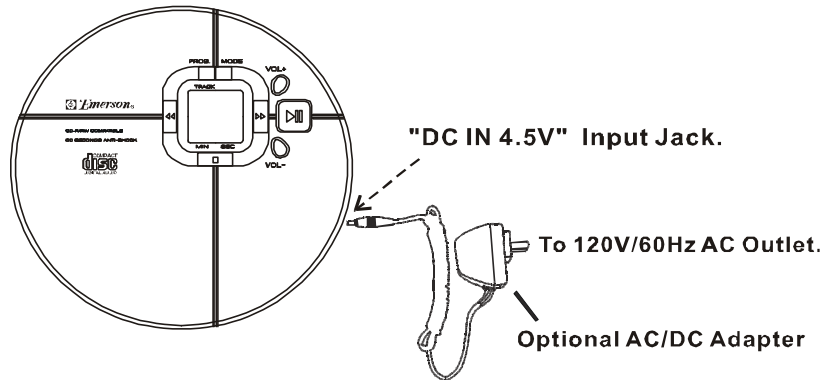


Notes:

- *Never connect or disconnect the adapter from the AC outlet while your hands are wet.*
- *The housing of the AC adapter may become warm during operation. This is normal.*
- *The female plug of the AC adapter must be completely disconnected from the CD player in order to operate the player on batteries.*


BATTERY PRECAUTIONS

- Replacement of batteries must be done by an adult.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed.
- Only batteries of the equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Dispose of batteries properly. Do not dispose of batteries in fire. The batteries may explode or leak.

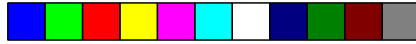


Connecting The Stereo Headphones And Remote Control

 - Connect the plug of the supplied stereo headphones directly to the green-colored **PHONES** jack on the left side of the cabinet.

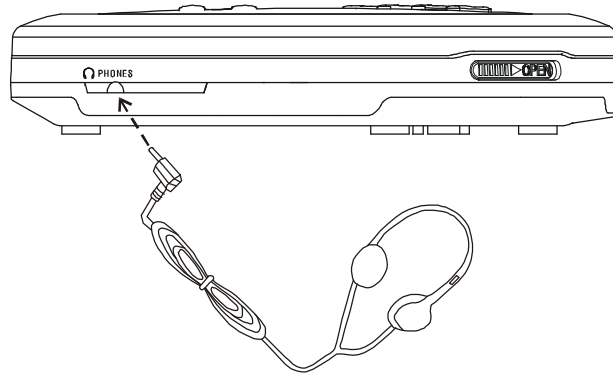

- Or you may connect the headphones to the supplied Remote Control, then to the **PHONES** jack.


NOTE: The control buttons **▶||** (Play/Pause), **■** (Stop), **▶▶** (Skip Forward), **◀◀** (Skip Reverse), **VOL+**, and **VOL-** function same as those on front panel.

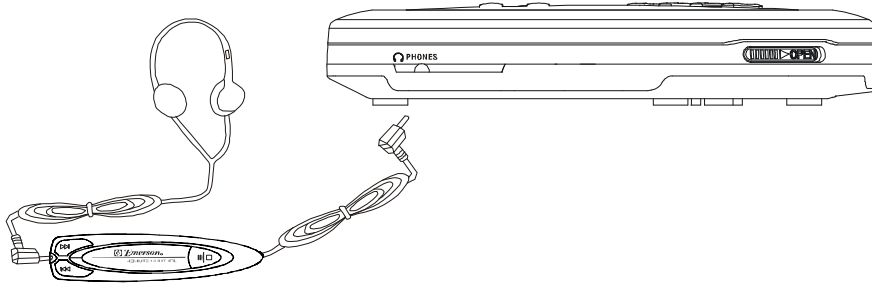 




NOTE: Make sure that the plugs are inserted into the jacks as far as they will go. If the plugs are not fully inserted, you may only hear sound from one side of the headphones.

IMPORTANT!

 Always set the **VOL-** control to a low level before you put the headphones on and begin playing a CD. Then start playback and gradually increase the volume to a comfortable listening level. Do not play the CD at loud volume levels that might prevent you from hearing warning sounds such as car horns, etc.



LOCATION OF CONTROLS AND INDICATORS

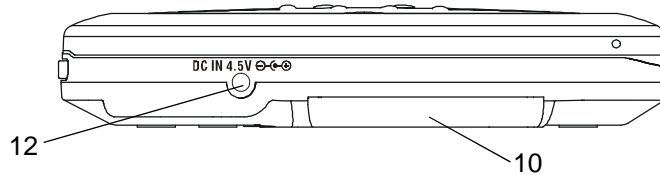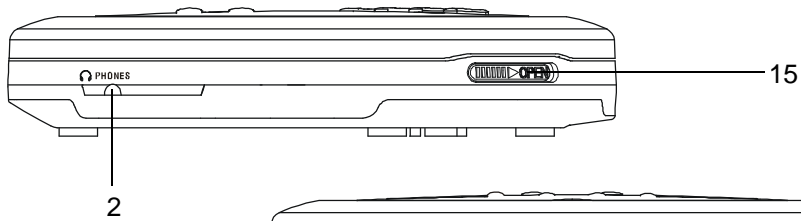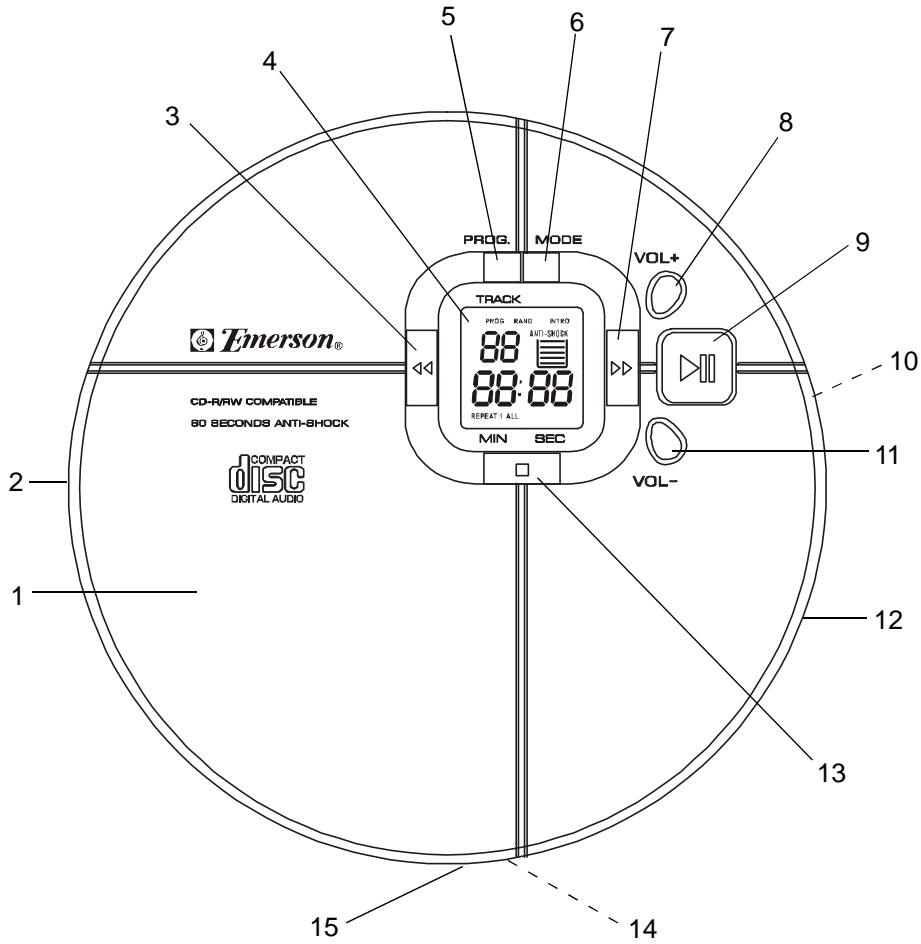   

7



 
- 1.) CD Door.
- 2.) **PHONES** Jack – Connect stereo headphones, included, to this jack.
- 3.) **⏮** (Skip Reverse) Button.
- 4.) LCD Display – Shows Track number, Playing time, Anti-Shock status, Program, Repeat, Random, and Intro modes.
- 5.) **PROG.** (Program) Button.
- 6.) **MODE** Button – Selects the playback mode: Repeat 1/All, Shuffle, or Intro.
- 7.) **⏭** (Skip Forward) Button.
- 8.) **VOL+** Control – Raises the volume.
- 9.) **⏸** (Play/Pause) Button.
- 10.) Battery Compartment (On Bottom Cabinet).
- 11.) **VOL-** Control – Decreases the volume.
- 12.) **DC IN 4.5V** Input Jack – Connect an AC adapter (not included) to this jack to use 120V 60Hz house current.
- 13.) **■** (Stop) Button.
- 14.) **DBBS ON/OFF** Switch (On Bottom Cabinet).
- 15.) **⏪ OPEN** Switch – Slide to the right to unlock and open the CD door.






LCD DISPLAY INDICATORS

LCD Display

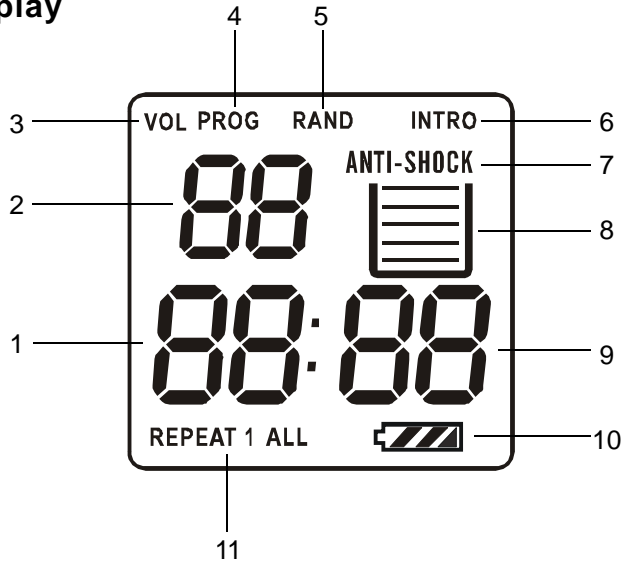

- 1.) Elapsed Time (Minutes) Display.
- 2.) Volume level (00-32) and Track Number Display.
- 3.) **VOL** (Volume) Indicator – Appears when adjusting Volume level.
- 4.) **PROG** (Program) Indicator – Appears when programming tracks or playing programmed tracks.
- 5.) **RAND** (Random) Indicator – Appears when Random playback mode is selected.
- 6.) **INTRO** Indicator – Appears when Intro playback mode is selected.
- 7.) **ANTI-SHOCK** Indicator – Indicates Anti-Shock Protection is activated.
- 8.) Anti-Shock Status Bar.
- 9.) Elapsed Time (Seconds) Display.
- 10.) Battery Status Indicator – Appears when battery level becomes low.
- 11.) **REPEAT 1 /ALL** Indicators – Appears when the Repeat playback mode is selected.

 


OPERATING INSTRUCTIONS

Special Functions

HOLD Switch (On Wired Remote Control Only)

 The **HOLD** switch on the side cabinet of the wired remote control must be in the 'Off' (left) position to start the CD player with the wired remote control. While the **HOLD** switch is 'On', all of the controls on the Wired Remote Control are disabled. This prevents the player from starting accidentally by something pressing against the **▶II** (Play/Pause) button.

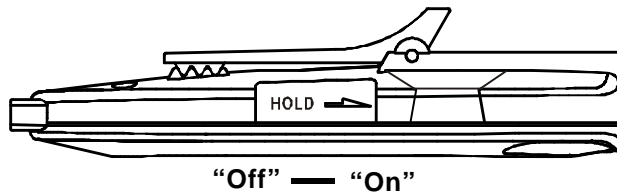



After you begin CD playback you may also slide the **HOLD** switch to the 'On' (right) position to disable all the controls on the Wired Remote Control.



DBBS ON/OFF Switch (On Bottom Cabinet)

 During CD playback you may slide the **DBBS** switch to the "**ON**" position to activate the Bass Boost function as desired.

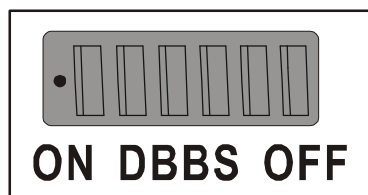

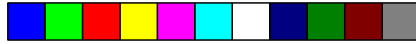


Electronic Anti-Shock Protection

This CD player includes an Electronic Anti-Shock Protection circuit that continuously stores 60 seconds of CD music in an electronic memory. If the player is bumped or shaken you will not hear any skipping because the player is reading from the memory, not directly from the disc. Of course if the shaking continues for more than 60 seconds, the Anti-Shock memory will be depleted and the player may then skip or stop if the shaking continues.


Anti-Shock memory function is automatically activated during playback. The display will show the Anti-Shock meter and begin to fill up with bars. Each bar represents approximately 12 seconds of music in the memory.



 When all 5 bars appear, the memory contains 60 seconds of music.

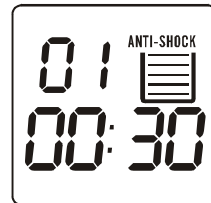

 If the player is bumped or shaken one or more of the bars may disappear as the memory is depleted.

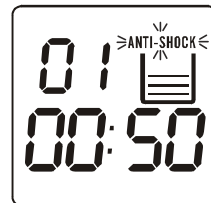

When the shaking stops the memory will fill up again.



Normal CD Playback

 
- **Make sure you have installed the batteries.**
- **Make sure the HOLD switch on the wired remote control is set to the 'Off' (left) position.**
- **Make sure to set the VOL control to a low setting before you put on the headphones.**

IMPORTANT:

This CD player can play normal CDs plus CD Recordable (CD-R) and CD ReWritable (CD-RW) discs. However the playability of CD-R/RW discs may be affected by the type of software that was used in 'ripping' the tracks from the original discs and 'burning' the tracks onto the blank media. Playability may also be affected by the quality and condition of the blank media you use for recording. 100% compatibility cannot be guaranteed. This is not an indication of any problems with your player.

1.) Slide the CD door **OPEN** switch to the 'right' to unlock and open the CD door.


2.) Place your CD on the center spindle with the printed label side facing up. Press downward on the disc near the center hole until the disc is fully seated on the spindle.

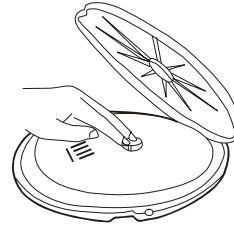

3.) Close the CD door and connect the headphones to the **PHONES** jack by pushing the headphone plug into the **PHONES** jack as far as it will go.

4.) Press the **▶||** (Play/Pause) button to begin playback. The display will briefly show "60 SEC", then "--" flashes while the player reads the disc.

 The total tracks and playing time will appear briefly in the display and then the playback will begin on track "01". The display will show the elapsed playing time of the track being played.

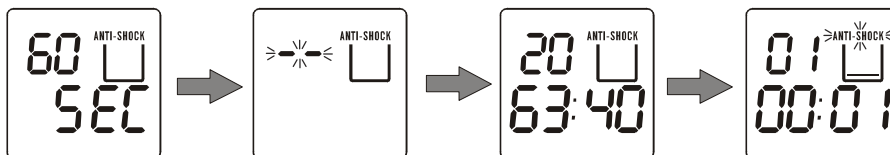



5.) Adjust the **VOL+ / -**, and **DBBS** controls as desired.

6.) Playback will continue until the end of the disc, then the player will stop automatically and the display will again show the total tracks and playing time on the disc. After approximately 30 seconds the power switches 'Off' automatically to conserve the batteries and the display goes blank.

To stop playback before the disc ends press the ■ (Stop) button at any time. Press the ■ (Stop) button after the disc has stopped to shut the power 'Off' completely.

Pause Control

To pause momentarily during playback press the ►|| (Play/Pause) button again.

The elapsed time display flashes. The sound stops but the disc continues to spin.

Press the ►|| (Play/Pause) button once more to cancel Pause mode and resume normal playback. The elapsed time display stops flashing.



Skip/Search Controls

Press the ►► or ◀◀ buttons repeatedly during playback to skip to higher or lower numbered tracks. Playback will begin on the selected track.

To search within a track at high speed to locate a specific musical passage depress and hold either the ►► or ◀◀ controls. The player will search rapidly forward or backward as long as the buttons are depressed.

The volume is automatically reduced during high speed search. When you reach the desired point, release the buttons. Normal playback will resume at that point and the volume returns to normal level.



MODE Button

Pressing the **MODE** button during playback cycles the player through the following four special playback modes:

REPEAT 1 → **REPEAT ALL** → **INTRO** → **RAND** Playback.

 
Repeat Playback

The player can be programmed to continuously repeat a single track or the entire disc automatically.

One Track Repeat

During playback press the **▶▶** or **◀◀** buttons to select the track to be repeated, then press the **MODE** button once.

The **REPEAT 1** indicator appears in the display and the selected track will be repeated continuously.

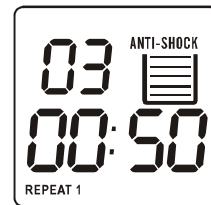


Press the **■** (Stop) button to cancel One Track Repeat playback.


All Tracks Repeat

Press the **▶▶** (Play/Pause) button to begin playback, then press the **MODE** button twice.

 The **REPEAT ALL** indicator will appear in the display and the entire disc will be repeated continuously.

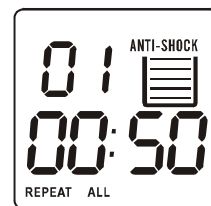

 Press the **■** (Stop) button to cancel All Track Repeat playback.




INTRO (Intro Scan) Playback


The Intro Scan feature plays only the first 10 seconds of each track on the disc. This feature is useful when you are trying to find a particular song but you cannot remember the title.

- 1.) Load your disc in the player as usual and press the **▶||** (Play/Pause) button to begin playback.

 - 2.) When playback begins press the **MODE** button 3 times.
The **INTRO** indicator flashes.

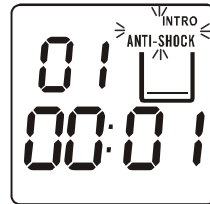

- 3.) Press the **▶||** (Play/Pause) button once more.
The **INTRO** indicator stops flashing and remains 'On'.
The player backs up to the beginning of track 1, plays the first 10 seconds of each track on the disc, and then stops.

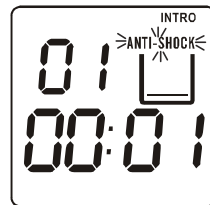 


To cancel Intro Scan playback press the **■** (Stop) button.

Random Playback


When Random playback is selected all the tracks on the disc will be played back in random order.

- 1.) Load your disc in the player as usual and press the **▶||** (Play/Pause) button to begin playback.

 
- 2.) When playback begins press the **MODE** button 4 times.
The **RAND** indicator flashes.

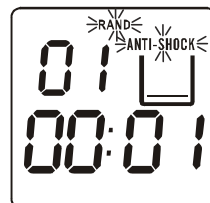

- 3.) Press the **▶||** (Play/Pause) button once more. The **RAND** indicator stops flashing and remains 'On'. The player randomly selects a track for playback. After each track has played once the player stops.

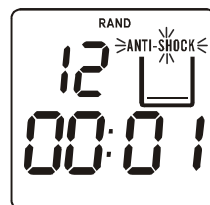 

To cancel Random playback press the **■** (Stop) button.

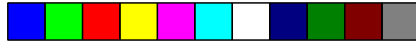


Programmed Playback

You can program up to 20 tracks on a disc to play in any desired order.

NOTE: You can program a disc either during playback or in Stop mode.


- 1.) Press the **PROG** button once. The **PROG** indicator and the track number '00' begin flashing.

 The Program Number "01" appear

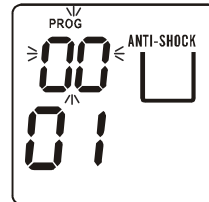


- 2.) Press the **▶▶** or **◀◀** button to select the first track to be programmed.

 Example: Track "07".

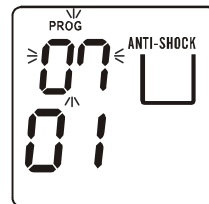

- 3.) When the desired track number is flashing in the display press the **PROG** button again to enter the desired track number in Program Number "01".

 
The track number returns to "00" and the Program Number advances to "02".

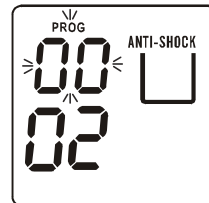

- 4.) Repeat Steps 2 and 3 to program additional tracks up to a maximum of 20.

- 5.) Press the **▶||** (Play/Pause) button to begin programmed playback.

 The **PROG** indicator remains in the display.

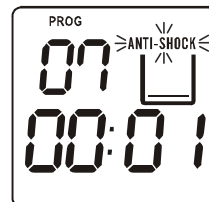

NOTES:


- Playback begins with the first track you programmed and continues until all programmed tracks have been played, and then the player stops. The programmed sequence will remain in the memory until the power shuts off (approximately 30 seconds) or until the CD door is opened.
- If you press the **PROG** and **▶||** (Play/Pause) buttons again before the power shuts off the programmed sequence will play again.



Using The Car Cassette Adapter

 
Compact discs played in this unit can be heard through a car cassette deck by using the CD cassette adapter. When listening to a CD in the car, use the supplied CD cassette adapter to play a CD through a car stereo cassette deck.

Operating instructions

- 1) Insert the cassette adapter plug into the  **PHONES** jack of the CD player.

NOTE: Make sure that the cassette adapter plug is inserted into the **PHONES** jack as far as it will go. If the plug is not fully inserted, you may only hear sound from one of the car speaker.

- 2) Adjust the CD player's **VOL+** control to maximum level.
- 3) Turn on the car stereo cassette deck, set the car stereo volume to a low level and insert the cassette adapter with the **THIS SIDE UP** markings facing upwards into the car cassette deck slot. The cord should be able to exit at the front of the cassette deck. If using an auto-reverse cassette deck, set the direction control as if playing the top side of the cassette adapter or the adapter will not work.
- 4) Play the CD and adjust the volume of the car stereo. The CD player's **VOL+ / -** controls will affect the car stereo sound level.

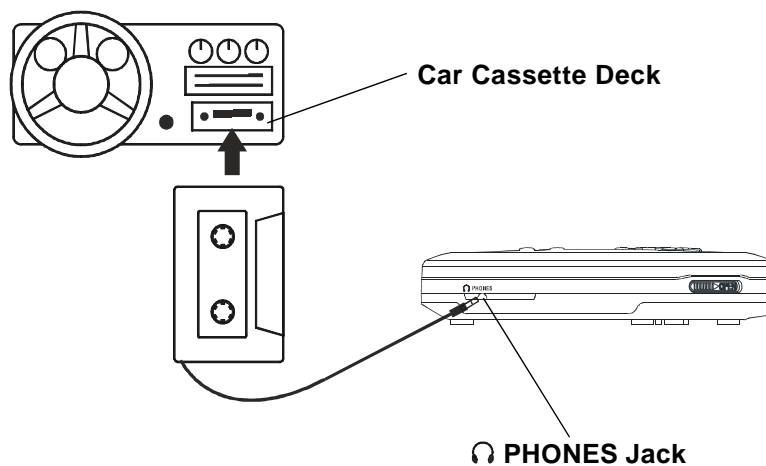




Using The Car DC-DC Converter


You can save money on batteries by using the supplied Car DC-DC Converter.

- 1) Insert the small end of the Car DC-DC Converter into the **DC IN 4.5V** Input Jack on the CD player.
- 2) Insert the large end of the Car DC-DC Converter into the car cigarette lighter socket.

NOTES:

 - Use only the supplied Car DC-DC Converter with the CD player.
- Unplug the Car DC-DC Converter from the cigarette lighter when not in use to avoid draining the car's battery.
- Do not leave on dashboard or exposed to direct sunlight as excessive heat may damage the CD player.

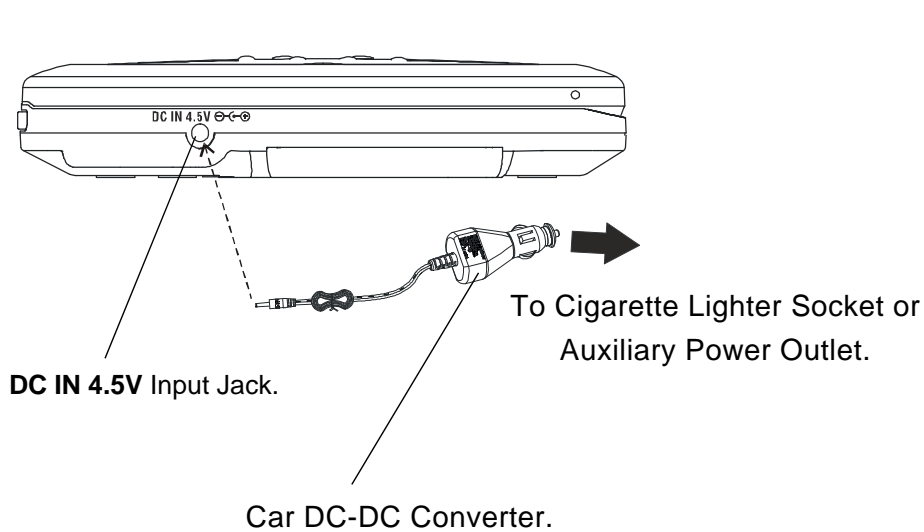

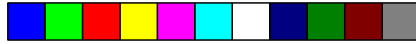


CARE AND MAINTENANCE

Cleaning the Lens

A dirty lens will cause sound skipping and, if the lens is very dirty, the CD may not work. Open the disc cover and clean the lens as follows:

Dust or Dry Particles

 Using a camera lens brush/blower, blow on the lens several times, then wipe it lightly with the brush to remove dust. Then, blow on the lens once more.

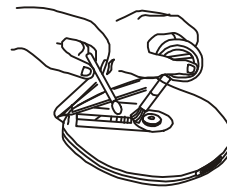


Fingerprints

To remove fingerprints from the lens, use a cotton swab starting in the middle and working to the outside edge.

Use only very light pressure on the lens to avoid forcing it out of alignment.


Cleaning the Disc

 When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out.

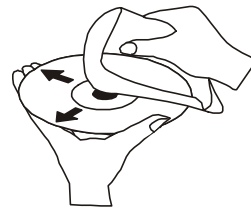

NOTE:

Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray intended for analog discs.

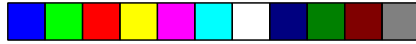

Cleaning the Cabinet

If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth.

Never allow water or any liquid to get inside the cabinet.

Never use any abrasive cleaners or cleaning pads as these will damage the finish of your CD player.




TO FIND THE LOCATION AND PHONE NUMBER OF YOUR NEAREST SERVICE CENTER PERMITTED TO PERFORM WARRANTY...

CALL TOLL FREE: 1-800-695-0098

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE
PLEASE CALL:
1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE WRITE TO:
Emerson Radio Corp.,
Consumer Affairs Dept.,
5101 Statesman Drive,
Irving, TX 75063.

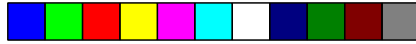

LIMITED WARRANTY

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$9.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.,
5101 Statesman Drive,
Irving, TX 75063.

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

AU898M

The Serial Number of your CD player can be found on the bottom cabinet. We suggest that you record the Serial Number of your unit in the space below for future reference.

Model Number: HD9116BL

Serial Number: _____





HD9116-040306-01

Printed in China