

# Getting Started

---

## Logic Developer - PLC PLC Programming Software

**Version 4.00**

May 2003

GFK-1918D



All rights reserved. No part of this publication may be reproduced in any form or by any electronic or mechanical means, including photocopying and recording, without permission in writing from GE Fanuc Automation Americas, Inc..

### **Disclaimer of Warranties and Liability**

The information contained in this manual is believed to be accurate and reliable. However, GE Fanuc Automation Americas, Inc. assumes no responsibilities for any errors, omissions or inaccuracies whatsoever. Without limiting the foregoing, GE Fanuc Automation Americas, Inc. disclaims any and all warranties, expressed or implied, including the warranty of merchantability and fitness for a particular purpose, with respect to the information contained in this manual and the equipment or software described herein. The entire risk as to the quality and performance of such information, equipment and software, is upon the buyer or user. GE Fanuc Automation Americas, Inc. shall not be liable for any damages, including special or consequential damages, arising out of the use of such information, equipment and software, even if GE Fanuc Automation Americas, Inc. has been advised in advance of the possibility of such damages. The use of the information contained in the manual and the software described herein is subject to GE Fanuc Automation Americas, Inc. standard license agreement, which must be executed by the buyer or user before the use of such information, equipment or software.

### **Notice**

GE Fanuc Automation Americas, Inc. reserves the right to make improvements to the products described in this publication at any time and without notice.

© 2003 GE Fanuc Automation Americas, Inc. All rights reserved. CIMPPLICITY is a registered trademark of GE Fanuc Automation. Any other trademarks referenced herein are used solely for purposes of identifying compatibility with the products of GE Fanuc Automation Americas, Inc.

We want to hear from you. If you have any comments, questions, or suggestions about our documentation, send them to the following email address:

[doc@gefanuc.com](mailto:doc@gefanuc.com)

# Contents

---

<b>1</b>	<b>Welcome</b>	<b>1</b>
	System Requirements	.3
	Installation	.4
	Product Authorization	.5
	Technical Support	.7
<b>2</b>	<b>CIMPLICITY Machine Edition</b>	<b>9</b>
	Quick Start	.10
	Projects	.12
	Tools	.14
	Variables	.16
	Options	.19
	Machine Edition Help	.20
	Companion Help	.20
	InfoViewer Help	.20
<b>3</b>	<b>GE Fanuc PLC Targets</b>	<b>23</b>
	Adding, Configuring and Converting Targets	.24
	Adding Targets	.24
	Configuring Targets	.25
	Converting Targets	.26
	Configuring Communication	.28
	Configuring Communication for PACSystems™	.28
	Configuring Communication for non-PACSystems™ PLCs	.30
	Interacting with the PLC	.33
	Validating a Target	.33
	Online/Offline	.33
	Upload/Download	.35
	Run/Stop	.36
	Fault Tables	.37
	Reference View Tables	.38
	Reports	.40

<b>4</b>	<b>Hardware Configuration (HWC)</b>	<b>43</b>
	PACSystems™ RX7i .....	43
	Configuring PACSystems™ RX7i Hardware .....	44
	Redundancy (Series 90™-70 and PACSystems™ RX7i only) ..	50
	Configuring Redundant Systems .....	52
	Series 90™-30: DSM314 Motion Module .....	55
	Series 90™-70 Genius Remote I/O Scanner .....	57
	VersaMax Remote I/O .....	59
<b>5</b>	<b>Logic Editors</b>	<b>63</b>
	LD Editor .....	66
	Working with the LD Editor Offline .....	67
	Editing Logic as Text .....	70
	Working with the LD Editor Online .....	72
	Word-for-Word Changes .....	73
	Writing Changes to a Target PLC .....	74
	LD Functions .....	75
	IL Editor .....	79
	Working with the IL Editor Offline .....	80
	Working with the IL Editor Online .....	82
	Writing Changes to a Target PLC .....	83
	IL Instructions and Functions .....	84
	C Blocks .....	86
	Working with C blocks .....	86
	C Programs .....	88
	User Programs .....	88
	Working with User Programs .....	89
<b>6</b>	<b>Motion Programming</b>	<b>91</b>
	PLC Motion Editor .....	92
	Working with the Motion Editor .....	93
	Motion Commands .....	94
	Local Logic .....	95
	Working with Local Logic Editor .....	96
	Local Logic Variables .....	97
	Local Logic Commands and Operators .....	99

CAM Editor .....	100
Working with the CAM Editor .....	101




# 1

# Welcome

Congratulations on your purchase of Logic Developer - PLC, the GE Fanuc PLC programming component of Machine Edition automation software. This software package provides all the tools necessary to create powerful control applications.

Logic Developer - PLC provides a way to configure your PLC hardware or remote I/O, create and edit PLC logic, upload and download projects, and monitor and debug the execution of control programs. Projects can be imported from Logicmaster, VersaPro, and CimplicityControl folders.

## CIMPLICITY Logic Developer - PLC Environment

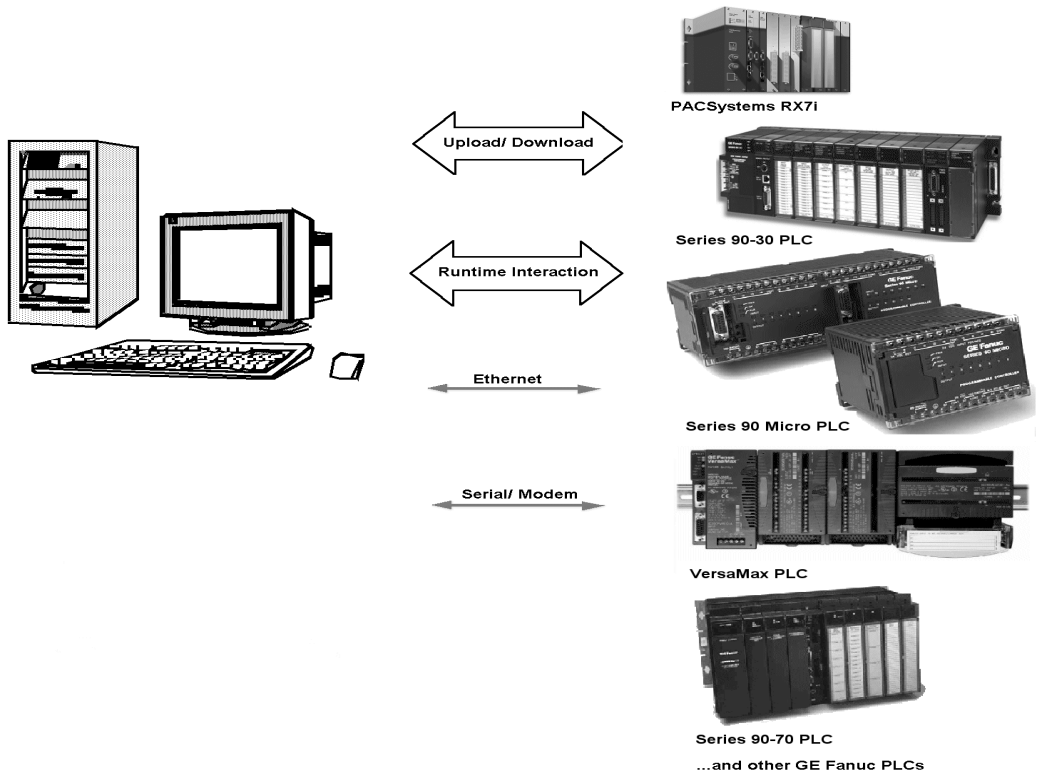

Logic Developer - PLC makes it possible to develop control applications on a personal computer and download them to a PLC via Ethernet or serial/modem connection.

Hosted in the Machine Edition environment, Logic Developer - PLC takes advantage of a powerful set of common programming tools (see page 14). The same tools can be applied to Logic Developer - PC (PC Control), Logic Developer - State, CIMPLICITY View and CIMPLICITY Motion components, providing a single programming environment. The Machine Edition environment unites and organizes components, providing data sharing and networked operation.

The following features are included in this version of Logic Developer - PLC:

- **Hardware Configuration (HWC):** a comprehensive tool for configuring and customizing GE Fanuc PLCs or racks of Remote I/O for your specific operating needs. For more information on Hardware Configuration, see page 43.
- **LD Editor:** an intelligent, cell-based, graphical editor for developing LD (Ladder Diagram) logic. You can customize the look and feel of the LD Editor. For more information on the LD Editor, see page 63.
- **IL Editor:** an easy-to-use, free-form text editor for creating Instruction List logic. Configurable formatting rules and color coding make your scripts easy to read. For more information on the IL editor, see page 79.
- **C Blocks and C Programs:** independent sections of executable code, written in C language, that are developed outside of Logic Developer - PLC. Precompiled C blocks and C programs are imported into your project. For more information on C blocks, see page 86. For more information on C programs, see page 88.
- **PLC Motion Editor:** a free-form text editor that enables you to enter the program in your preferred style. The PLC Motion editor is specifically designed for support of the IC693DSM314 motion module. For more information on the Motion editor, see page 91.
- **Local Logic Editor:** a text-based editor used for developing logic that executes locally on a IC693DSM314 motion module. Local Logic runs synchronously with the PLC Motion program, but is independent of the PLC's CPU. For more information on the Local Logic editor, see page 95.
- **CAM Editor:** an accessory for the Logic Developer - PLC Motion editor specifically designed for support of the IC693DSM314 motion module. It provides a graphical means to create, edit, and manage electronic CAM profiles. For more information on the CAM editor, see page 100.



---

## **SYSTEM REQUIREMENTS**

To use Logic Developer - PLC and its tools, you require the following:

- Windows® NT version 4.0 with service pack 6.0 or later

**OR**

Windows 2000 Professional

**OR**

Windows XP Professional

**OR**

Windows ME

**OR**

Windows 98 SE.

- Internet Explorer™ version 5.5 with Service Pack 2 or later. (You must install IE5.5 SP2 before installing Machine Edition.)
- 500 MHz Pentium-based computer. (1 GHz recommended.)
- 128 MB RAM (256 MB recommended).
- TCP/IP Network protocol-based computer.
- 150-750 MB free hard disk space depending on the selected products.
- 200 MB hard disk space for sample projects (optional).
- Additional hard disk space for projects and temporary files.

---

## INSTALLATION

For last-minute information, release notes, and supported hardware lists for Machine Edition products, see the Important Product Information (IPI) document on the CD. There are several ways to view this document

- When installing Machine Edition, select **Important Product Information** on the initial Launcher screen.
- From the Machine Edition Help menu, choose **Important Product Information**.
- When running Machine Edition, click the InfoView tab in the Navigator, then double-click the Important Product Information page under Getting Started in the Table of Contents.
- When running Machine Edition, click the Home button on the InfoViewer toolbar, then click the What's New link under Get Started on the left hand side.

If you have a previous version of Machine Edition installed on your workstation, you must uninstall it before installing the latest version. You can do so by selecting the "Uninstall CIMPLICITY Machine Edition" option from the CIMPLICITY Machine Edition Start menu group. All projects, settings, and authorizations will remain intact during an uninstall operation.

### To install Logic Developer - PLC

1. **Insert the CIMPLICITY Machine Edition CD into your CD-ROM drive.**  
By default, the setup program will automatically start. If the setup program does not automatically start, run *Setup.exe* in the root directory of the CD.
2. **Click *Install* to start the install process.**
3. **Follow the instructions as they appear on the screen.**

---

## PRODUCT AUTHORIZATION

Before you can start developing projects with Logic Developer - PLC, you must authorize the software with a program called Product Authorization. If you don't authorize the software, you can use it for only a four-day trial period. This procedure takes only a few minutes and enables you to take advantage of any product support for which you qualify. You will need to contact us by telephone, fax, or e-mail as part of the authorization process.

### To authorize a copy of Machine Edition

1. **Have your serial numbers ready.**  
The serial numbers can be found on the License Key sheet that came with your product.
2. **Run the Product Authorization program from the Start menu > Programs > Product Authorization.**  
The Product Authorization dialog box appears.
3. **Click Add.**
4. **Select the medium with which you are authorizing: Internet, Phone/Fax/E-mail, or Floppy Disk Transfer. Click Next.**  
If you choose the Internet option, proceed to step 5.  
If you choose the Phone/ Fax/E-mail option, proceed to step 5.  
If you choose the Floppy Disk Transfer option, ensure you have an authorization disk before proceeding.
5. **Fill in the fields in the dialog box.**  
Fields that are identified with an asterisk (\*) must be filled in.
6. **If authorizing by:**
  - **Internet**, click **Submit Authorization**. We will reply by e-mail with your new key code(s).
  - **Phone**, click **Phone/Fax** and call the number on the screen to receive a new key code(s).
  - **Fax**, click **Phone/Fax**. In the dialog box that appears, click **Print FAX**. Fax the Product Authorization Request to us, using our fax number on the printout. We will reply by fax with your new key code(s).
  - **E-mail**, click **Send E-mail**. In the dialog box that appears, click **Authorize** to e-mail us. We will reply by e-mail with your new key code(s).

Product Authorization is complete after you enter the new key code and it has been accepted. Depending on the product you have purchased, you may need to run the Product Authorization program a number of times.

## To move the authorization to another computer

You can run the software on only the computer that the Product Authorization was run on. If you want to develop your projects on a different computer, you need to complete the following steps to move the authorization from one computer to another.

1. **Install Logic Developer - PLC on the computer that the authorization will be moved to. Run the Product Authorization program from the **Start menu > Programs > CIMPLICITY Machine Edition > Product Authorization.****  
The Product Authorization dialog box appears.
2. **Click **Software.****  
There is a Target Site Code on the top right-hand side of the screen. Write down this site code carefully. It must be accurate for the move to work. You will need the Target Site Code when you move the authorized software from the source computer.
3. **Click **Add.****  
The Product Authorization wizard appears.
4. **Click **Authorize by disk.****  
At this point, you need to go to the source computer that has the authorized software, and move the authorization to a disk.
5. **From the source computer, run the Product Authorization program and click **Software.****
6. **Click **Move,** and then click **OK.** Enter the Target Site Code that you wrote down from Step 3 and click **Next.** Verify that the site code is correct and click **OK.****
7. **Insert a blank formatted floppy disk into the floppy drive and click **Next.****  
The authorization code will be moved to the disk and a dialog box should appear telling you it was successful.
8. **Click **OK.****
9. **Go back to the computer to which you are moving the authorization and insert the floppy disk.**  
The screen that is asking for an authorization disk should be displayed.
10. **Click **Next.****
11. **Click **Finish.****  
A screen should appear telling you the move was successful.
12. **Click **OK.****  
The authorization has now been moved to the new computer.

---

## TECHNICAL SUPPORT

Support is available to registered users at no charge for 90 days after purchase. A support agreement can be purchased from your local GE Fanuc distributor if extended support is required.

If problems arise that can't be solved using the information in your product manual, online Help system, or the GE Fanuc Technical Advisor knowledge base, contact us by telephone, fax, or mail.

When contacting us, call from a telephone near your computer and have your CIMPLICITY Machine Edition software running. Have the following information handy to help us assist you as quickly as possible:

- The serial number from your installation CD case, and the Product name and version number from the **Help>About** dialog box.
- The brand and model of any hardware in your system.
- Operating system and version number.
- The steps you performed prior to the problem occurring.

### North America

**Support Hotline:** 1-800-GEFANUC (1-800-433-2682)

**Fax:** (780) 420-2049

**Internet:** <http://www.gefanuc.com>

**Email:** [support@gefanuc.com](mailto:support@gefanuc.com)

**Comments about our manuals and help:** [doc@gefanuc.com](mailto:doc@gefanuc.com)

**Mailing Address:** GE Fanuc  
2700 Oxford Tower, 10235 - 101 St.  
Edmonton, AB, Canada, T5J 3G1

### South America

**Telephone:** +58 (261) 760 2862

**Fax:** +58 (261) 765 0909

**Internet:** <http://www.gefanuc.com> (visit our Portuguese web site at [www.gefanuc.com.br](http://www.gefanuc.com.br))

**E-Mail:** [luis.wilhelm@gefanuc.com](mailto:luis.wilhelm@gefanuc.com)

**Mailing Address:** GE Fanuc Automation Latin America  
Calle 120 con Av. 17, Los Haticos -GE Turbimeca  
Maracaibo, Venezuela

### Europe

**Internet:** For up-to-date contact information, visit [www.gefanuc-europe.com](http://www.gefanuc-europe.com) and click on "Offices and Services".

For up-to-date technical information visit [www.gefanuc.com/support](http://www.gefanuc.com/support).

**E-mail:** [plc\\_europe@gefanuceur.ge.com](mailto:plc_europe@gefanuceur.ge.com)




# 2

## CIMPLICITY Machine Edition

Machine Edition offers you a complete solution for the development of automation applications in one package. Machine Edition features an integrated development environment and tools that enable you to spend more time building applications and less time learning the software. All Machine Edition products are fully integrated into the environment and interact with each other.

- They share the same set of tools providing a consistent interface throughout the development process.
- They feature full drag-and-drop capabilities between tools and editors.
- They feature a true scalable solution. You have the choice of what type of machine your projects run on.
- They automatically display Help in the Companion for what you click on.

The following illustrates a Machine Edition project:

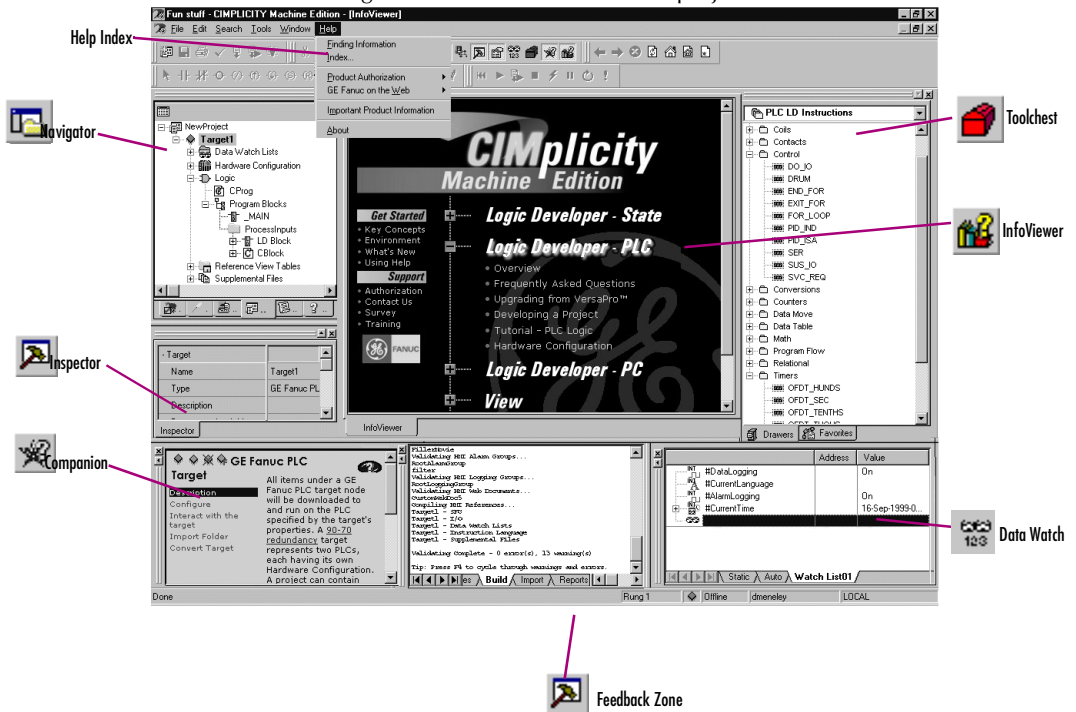


## QUICK START

Machine Edition makes it easy to get started developing a project.

### To start Machine Edition

1. Click  **Start**, point to **Programs**, point to **CIMPLICITY Machine Edition** and then choose **CIMPLICITY Machine Edition**.

After Machine Edition initializes, the Environment Themes dialog box appears.

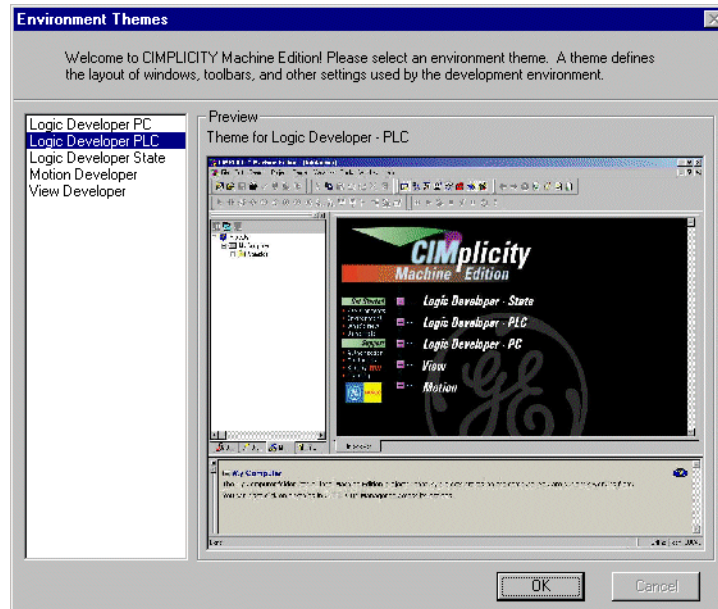


**Note:** The Environment Themes dialog box appears automatically the first time you start Machine Edition. To change the theme later, choose **Apply Theme** from the **Windows** menu.

2. Choose the **Logic Developer - PLC** theme.
3. Click **OK**.

When you open a project, the appearance of your Machine Edition screen will match the preview in the Environment Themes dialog box.



The CIMPLICITY Machine Edition dialog box appears.

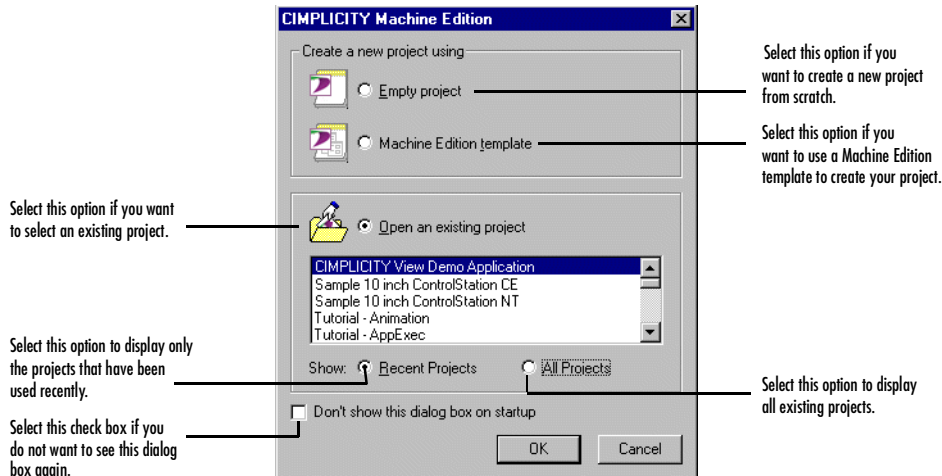

4. Select the appropriate option to open a project. The **Open an existing project** option is selected by default.

**Notes:**

- If you select either the **Empty project** option or the **Machine Edition template** option, the New Project dialog box appears and you can continue creating a new project (see page 12).
  - If you select the **Open an existing project** option, you can also select either the **Recent Projects** option or the **All Projects** option. The **Recent Projects** option is selected by default.
5. If you selected the **Open an existing project** option, select from the list the project that you want to open.  
The existing projects include samples and tutorials that you can open and use to familiarize yourself with Machine Edition.
  6. If you want, select the **Don't show this dialog box on startup** option.
  7. Click **OK**.

Your project opens in the Machine Edition environment that you specified in the Environment Themes dialog box.

## PROJECTS

You can create and edit Machine Edition projects using products such as CIMPLICITY View, Logic Developer - PC, CIMPLICITY Motion, Logic Developer - State, and Logic Developer - PLC. These products share Machine Edition tools to provide a high level of integration between the various parts of your project.

You can import folders created with Logicmaster, CimplicityControl, or VersaPro. Using Logic Developer - PLC, you can build multiple projects to suit your specific requirements.


### To create a new project using a template

Before creating a project, there are some things you should know:

- The primary components your project will contain.
- The PLC you project will run on.

1. From the **File** menu, choose **New Project**, or click  on the File toolbar.


The New Project dialog box appears.

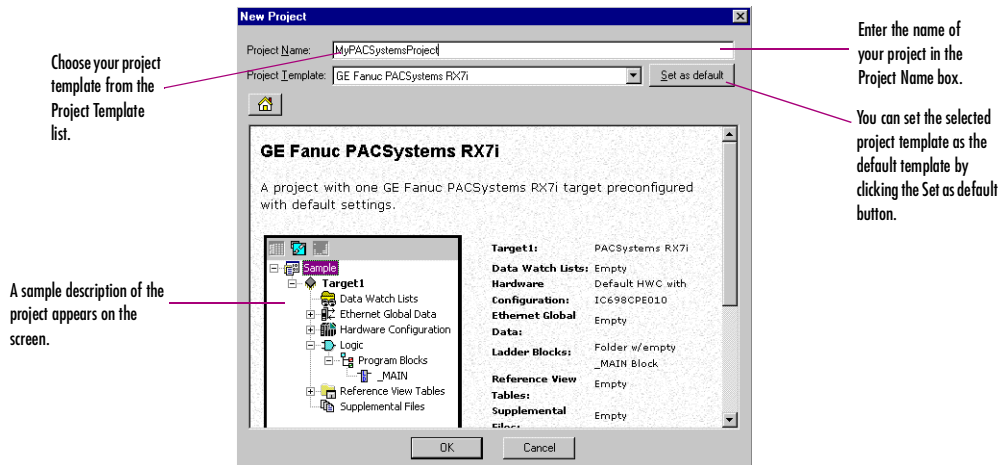

2. Choose a Project Template that suits your needs.
3. Enter a descriptive Project Name.
4. Click **OK**.

Your project opens in the Machine Edition environment.

## To open an existing project for editing

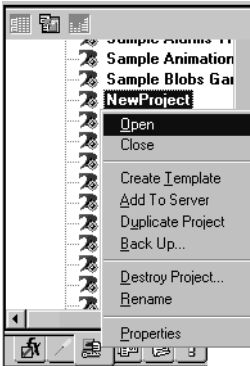

Navigator: Manager tab


1. Open the  Navigator and choose the  Manager tab.

A list of projects is displayed.

2. Right-click a project and choose **Open**.

Your project loads and is ready for editing.

---


 **Want to know more?** In the Help Index, look up “Projects”.

---

## To import a folder

1. Open the Navigator and choose the Project tab.
2. Select the target that you want to import the folder into.
3. Right-click the target, point to **Import**, and choose the folder type.
4. In the dialog box that appears, navigate to and double-click the folder you want to import.

---


 **Want to know more?** In the Help Index, look up “import a CimplicityControl folder”, “import a Logicmaster folder”, or “import a VersaPro folder”.

---

## TOOLS

Project development is supported by the Machine Edition tools. Each tool is opened and closed by means of a button on the Tools toolbar.

A description of each tool's function is provided below.

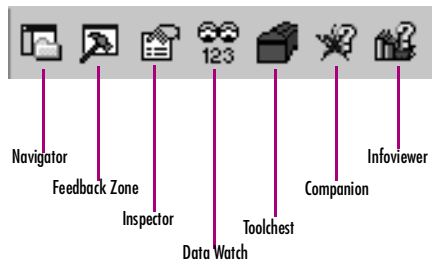

### Navigator

The Navigator is a docking tool window containing a set of tabs. Each tab displays information about your development system in a hierarchical tree structure similar to Windows Explorer. The available tabs depend on which Machine Edition products you have installed and what kind of work you are developing or managing. The Project tab shows the overall organization of your application.

### Feedback Zone

The Feedback Zone window is a docking window used to display several types of output information generated by Machine Edition components. This interactive window uses category tabs to organize the output generated from the Machine Edition products you have installed.

### Inspector

The Inspector lists the properties and current settings for a selected object or element. You can edit these properties directly in the Inspector. When you select several objects, the Inspector window lists the properties common to all of them. The Inspector window provides a simple method of viewing and setting properties for all objects.

### Data Watch

The Data Watch tool is a runtime debugging tool that enables you to monitor and edit the values of variables. This tool is useful while working online to a target. With the Data Watch tool, you can monitor individual variables or user-defined lists of variables. Data Watch lists can be imported, exported, or saved with a project.

**Toolchest**

The Toolchest is a powerful storehouse of objects you can add to your project. You can drag most items directly from the Toolchest into Machine Edition editors. You can choose from predefined objects or create your own reusable fxClasses. The Toolchest adds true object-oriented capability to Machine Edition.

**Companion**

The Companion provides useful tips and information while you work. While the Companion is open, it tracks your moves and displays help on whatever item is currently selected in the Machine Edition environment. It is context-sensitive and displays a description of whatever you click on the Machine Edition screen.


**InfoViewer**

The InfoViewer is an embedded Web browser used mainly to display

- Machine Edition help.
- Machine Edition reports.
- The documentation associated with a project or target.


If you are familiar with Internet Explorer or Netscape Navigator, then you are already familiar with the basic InfoViewer interface. Like the Companion, the InfoViewer is context-sensitive. Press F1 to get help on any item you select in the Machine Edition environment. A table of contents is found in the InfoView tab of the Navigator.

---

 **Want to know more?** In the Help Index, look up "Tools: an Overview".

---

## VARIABLES

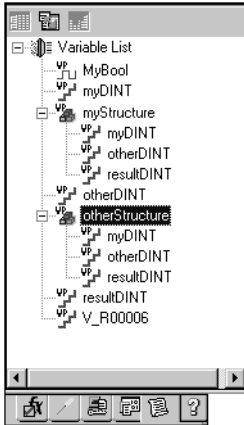

Navigator: Variables tab

A variable (sometimes called a tag) is a named storage space for data values.

All variables in a project are displayed in the Variables tab of the Navigator. A variable represents a memory location in the target PLC. Each variable must be mapped to a reference address (for example, %R00001) for all PLC families except PACSystems™ RX7i. On a PACSystems™ RX7i, if you don't map to a specific reference address, it is considered a symbolic variable. Machine Edition handles all the mapping for you in a special portion of PACSystems™ user space memory.

The reference address and other properties of a variable, such as data type, are configured in the Inspector.

Arrays and compound structure variables are supported by Machine Edition. Variable definitions can be imported from and exported to a variety of file types. You can edit your variables in a spreadsheet and then import them. Logic Developer - PLC variables, that is, variables used on GE Fanuc PLC and PACSystems™ targets, can be viewed in CIMPLICITY View. The following diagram shows the Inspector displaying a typical set of variable properties.

Variable [TPAC]	
Name	BOOL
Description	
Publish	True
Array Dimension 1	0
Data Source	GE FANUC PLC
Ref Address	%I00001
Data Type	BOOL
Current Value	Off
Initial Value	Off
Default Display Format	On / Off
Retentive	False
Initial Force State	On
Current Force State	Not Forced

General


## To create a variable



New Variable menu

1. In the Variables tab of the Navigator, right-click Variable List, point to **New Variable** and then choose the data type of the variable.

The New Variable dialog box appears.

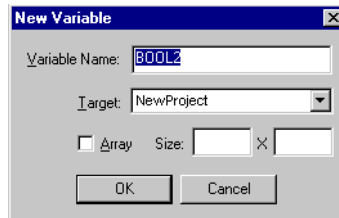

2. Type a name for the variable and press **ENTER**.

Variable names can range from 1 to 32 characters, begin with a letter, contain upper or lower case letters, use numbers between zero and nine, and use the underscore character (“\_”).

3. Select the target the variable will be used in.
4. If the new variable is an array, select the Array check box and enter the size(s).
5. Click **OK**.

A new variable with a default name appears in the list.

## To map a variable to PLC memory

In order to successfully download a project to the PLC, variables must be properly mapped to the PLC’s memory, unless they are symbolic variables, which a PACSystems™ RX7i will automatically map for you. There are two ways to map a non-symbolic variable.

### First method:

1. In the Variables tab of the Navigator, right-click a variable and choose **Properties**.

The Inspector displays the properties of the variable.

2. In the **Ref Address** field, enter an address. You can:
  - Spell out the exact address, for example, %R00123 or 123R. In either case this maps the variable to %R00123.
  - Enter only the memory area, for example %R. This maps the variable to the next highest available address. For example, if %R00122 was the last address used, entering %R maps the variable to %R00123.

**Second method:**


1. In the  Variables tab of the  Navigator, right-click a variable and choose **Properties**.

The Inspector displays the properties of the variable.

2. Click the Ref Address field and then click the  button.



The Reference Address Wizard appears.

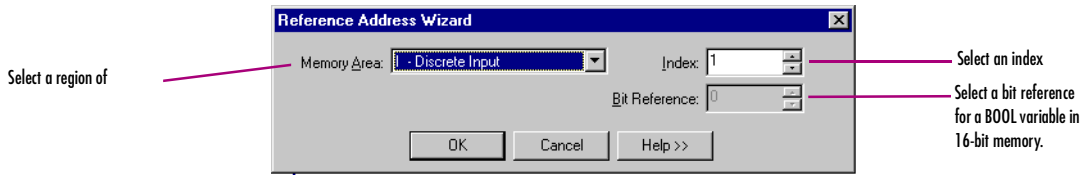


3. From the **Memory Area** list, choose a region of PLC memory.
4. In the **Index** box, enter an index from the beginning of the region.
5. Select a bit reference.

The **Bit Reference** box is available only if you're mapping a BOOL variable to 16-bit memory area on a PACSystems™ PLC.

6. Click **OK**.

Your variable is mapped to the Reference Address.


---

 **Want to know more?** In the Help Index, look up “Variables”, “Importing variables from a file”, “Symbolic Variable”, and “Bit addressing in 16-bit memory”.

---



## OPTIONS

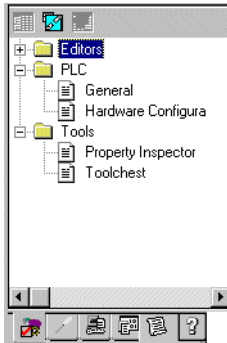

Navigator: Options tab

The Options tab of the Navigator contains option and preference settings. Options are organized into folders and pages. Click or to expand or collapse folders. Examples:

**Editors** > **Ladder** > **View >Coil Justification**: The leftmost column in which coils can be placed; also the column where the right power rail resides. The default is 10.

**PLC**> **General** > **Duplicate Addresses**: Indicates whether to prevent, warn about, or ignore mapping two variables of the same data size (1, 8, 16, 32, or 64 bits) and length (array size) to the same reference address.

**PLC** > **Hardware Configuration** >**New Reference Assignment**: The way in which default reference addresses will be assigned when modules are added to the Hardware Configuration.

### To set options and preferences

1. In the Options tab of the Navigator, expand an options folder and right-click a page within the folder to display the option's properties in the Inspector.
2. In the Inspector, edit the option's settings as needed..

---

**Want to know more?** In the Help Index, look up "Options", "Confirmations", "PLC Options", and "General Options".

---

## MACHINE EDITION HELP


CIMPLICITY Machine Edition includes a comprehensive online help system that enables you to access specific help topics while working with Machine Edition.

Use the InfoViewer or Companion to access help.


### Companion Help

The Companion is a Machine Edition help system that provides useful tips and information while you work. While the Companion is open, it displays help on whatever item is currently selected in the Machine Edition environment, tracking your movements while you work.

#### To use Companion help

1. Ensure the  Companion window is open. To open it, press Shift+F11.
2. Click on any item on the screen.

A description of the item you clicked appears in the Companion.

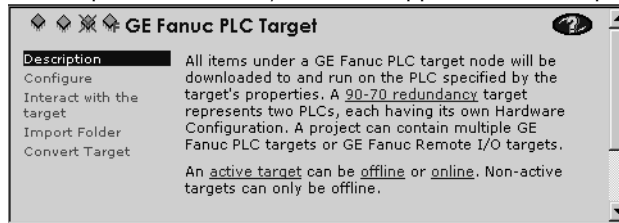


### InfoViewer Help

The InfoViewer, another Machine Edition help system, provides detailed information. The InfoViewer has its own toolbar for navigating the help system, a Table of Contents (in the InfoView tab of the Navigator), and a searchable index. As with the Companion, InfoViewer help is context-sensitive. Click an item on the screen and press F1 to display the appropriate topic in the InfoViewer.

## To use the Help index

1. From the Help menu, choose Index.

The Index dialog box appears.

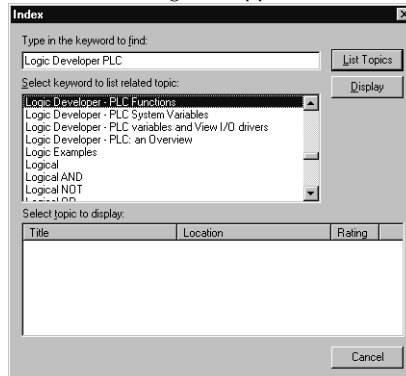


2. Enter a keyword in the top text box or select one in the middle text box.
3. Click **List Topics**.

A list of topics appears in the bottom text box. The topics are sorted by their rating or likelihood of containing the correct information.

4. In the bottom text box, select a topic to display.
5. Click **Display**.

The selected Help topic is displayed in the InfoViewer.

## To look up topics in the Help Table of Contents

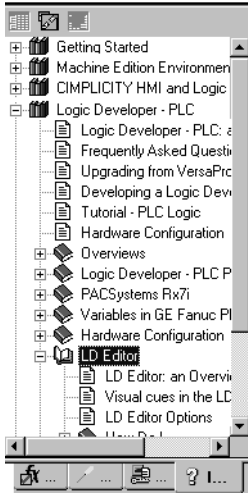


**Navigator: InfoView Tab**

1. Open the InfoView tab of the Navigator.

A table of contents for the entire help system appears.

2. Expand Libraries and Books to locate a topic of interest
3. Double-click a topic.


The topic is displayed in the InfoViewer.

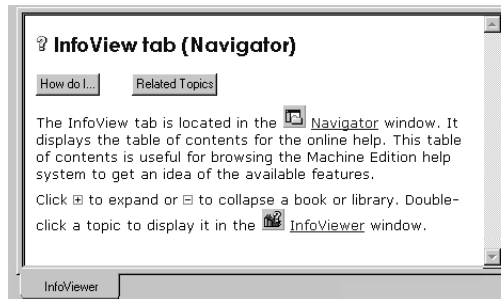


# 3

## GE Fanuc PLC Targets

---

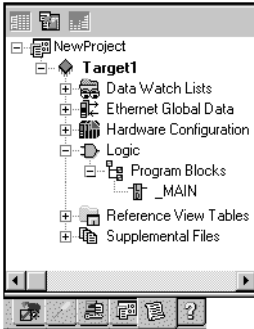

Navigator: New PACSystems™ Project

A  target represents a run-time destination of the programs you develop with Logic Developer - PLC. Each target contains all of the components that will download to it. Logic Developer - PLC supports the following GE Fanuc PLC target families:

- PACSystems™ RX7i
- Series 90™-70 PLC
- Series 90™-30 PLC
- VersaMax® PLC
- VersaMax® Nano/Micro PLC
- Series 90™ Micro PLC

and the following remote I/O interface targets:

- GE Fanuc Series 90™-70 Genius Remote I/O Scanner
- GE Fanuc VersaMax® Ethernet
- GE Fanuc VersaMax® Genius
- GE Fanuc VersaMax® Profibus

## ADDING, CONFIGURING AND CONVERTING TARGETS


### Adding Targets

Normally a target is present in a project when you use a template to create the project (see page 12). A project can contain multiple targets. The actual largest number possible may vary, depending on the available memory on your computer, the operating system you are using, or the available disk space, etc.

One target is required for each PLC or remote I/O adapter your project accesses, except when you are using CPU redundancy. In this case, one target contains a Primary Hardware Configuration and a Secondary Hardware Configuration, which respectively correspond to the primary PLC and the redundant PLC. For more information, see page 50.

Existing targets can be converted from one GE Fanuc PLC family to another. For more information, see page 26.

#### To add a target to a project

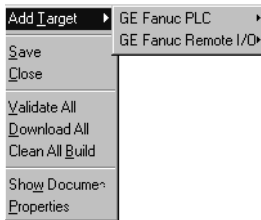


Project right-click menu




1. In the Project tab of the Navigator, right-click the Project node and point to **Add Target**.
2. Point to **GE Fanuc PLC** or **GE Fanuc Remote I/O** and then respectively choose the PLC family or the Remote I/O.

## Configuring Targets

The properties of a target specify the PLC family, the communication connections between your computer and the PLC, and various other settings. All properties are edited in the Inspector. The following table describes a PLC target's properties:

Name	Edit the name for your target in this field.
Type	The type of target is set by default to GE Fanuc PLC. Note: Logic Developer - PLC is operational with GE Fanuc PLCs only.
Description	Enter a description of your project in this field. The maximum characters is 255.
Documentation Address	Enter the URL where your project documentation is stored.
Family	By changing the PLC type in this field, you initiate a target conversion. <b>Caution: Changes are irreversible.</b>
PLC Target Name	The name of the target as stored on the PLC target.
Update Rate (ms)	Set the rate at which the screen is updated while online.
Sweep Time (ms)	The sweep time of the PLC when online is also displayed on the status bar.
PLC Status	The online/offline, run/stop status of the PLC.
Dual HWC	(Series 90™-70 only.) Indicates whether HWC redundancy is set up. Change the field to False to delete the secondary HWC.
Selected HWC	(Displayed only if Dual HWC is set to True.) Change the selected HWC in this field.
Physical Port	Choose the type of connection to the PLC (Ethernet, COM, or modem).
IP Address	(Ethernet protocol only.) Set the IP address of the PLC.
 Additional Configuration	Group of properties used for the detailed configuration of your communication connection.

### To configure a PLC target

1. In the  Project tab of the  Navigator, right-click a  target and choose **Properties**.





The properties of the target appear in the Inspector.


2. In the Inspector,  configure the properties as needed.

## Converting Targets

With Logic Developer - PLC, you can convert targets from one GE Fanuc PLC family type to another. This enables you, for example, to take logic written for a Series 90™-70 PLC and convert it for use on a PACSystems™ RX7i. However, target conversions are irreversible; when logic blocks are deleted during a conversion, they cannot be restored. It is recommended that you make a backup of your project before converting a target in it. There may also be execution differences when converting an application from one GE Fanuc PLC family type to another. You must validate the application execution prior to deployment into a production environment.

### To convert a target

1. In the  Project tab of the  Navigator, right-click an existing  target and choose **Properties**.  
The Inspector displays the target's properties.
2. In the  Inspector, click **Family**.
3. From the list, choose the new PLC Family you want to convert the target to.

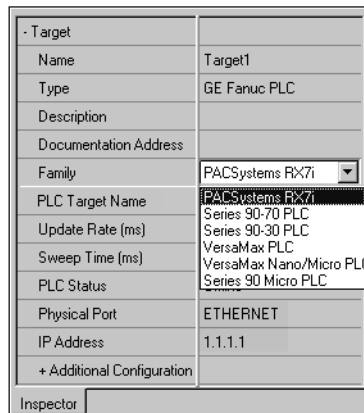

Target conversion involves the following changes:

- Stripping all the configured modules from the original Hardware Configuration (HWC) and setting up the destination family's default HWC, with a single power supply and a CPU.

**Note:** PACSystems™ RX7i supports many Series 90™-70 modules and some Series 90™-70 expansion racks. When converting a Series 90™-70 target to a PACSystems™ RX7i target, the supported modules and expansion racks are retained (with rare exceptions). The modules' parameters are also retained or




converted to the nearest equivalent. Unsupported expansion racks are converted to the nearest equivalent, which retains the supported modules. All Hardware Configuration changes made during the conversion are documented in a target conversion report.

- Deleting or adding target components, blocks, and/or programs.
- Updating the system variables, including the fault locating references.
- Displaying a conversion report in the InfoViewer when converting to PACSystems™ targets only

**Warning:** Changing the PLC Family can result in logic in your project becoming invalid.

**Note:** PLC hardware must be configured before it will be operational. For detailed information on hardware configuration, see page 46..

---





 **Want to know more?** In the Help Index, look up "Target Conversions (GE Fanuc PLC Targets)".

---

## CONFIGURING COMMUNICATION

In order for Logic Developer - PLC to communicate with a target PLC, a connection must be properly configured. The properties of a target are adjustable to accommodate your connection(s).

### To configure an Ethernet or serial connection


1. In the  Project tab of the  Navigator, right-click a  target and choose **Properties**.
2. In the  Inspector, set the **Physical Port** property to Ethernet or a COM port (or a modem if one is installed).
3. If the **Physical Port** is Ethernet, enter the **IP Address** of the target PLC.

**Note:** You can connect to a GE Fanuc PACSystems™ RX7i by means of Ethernet only.

4. Double-click **Additional Configuration** to access the detailed settings for your connection.

**Note:** Serial communication with a non-PACSystems™ PLC is always available if it is the only device connected and an SNP\_ID is not specified. An IP address must be set in the PLC before an Ethernet link can be established.

---

 **Want to know more?** In the Help Index, look up “Configuring a direct connection”.

---

### Configuring Communication for PACSystems™

The only communication method supported by a PACSystems™ is Ethernet. This ensures fast communication, because every PACSystems™ has an embedded Ethernet adapter.

### To configure communication with a PACSystems™ RX7i

1. Physically connect the PACSystems™ RX7i to the Ethernet network.
2. Set up a temporary IP address. For more information, see “To set a temporary IP address for a PACSystems™ RX7i”.

The temporary IP address enables you to communicate with the PACSystems™ RX7i the first time.

3. Do one of the following:

If there is already a hardware configuration stored on the PACSystems™ RX7i target, it contains a permanent IP address. To obtain this permanent IP address from the PACSystems™, upload the hardware configuration from the PACSystems™ RX7i.


- OR -

Set up a permanent IP address. For more information, see “To set a permanent IP address for a PACSystems™ RX7i”.

### To set a temporary IP address for a PACSystems™ RX7i

1. In the  Utilities tab of the  Navigator, double-click  Set Temporary IP Address.

The Set Temporary IP Address dialog box appears.

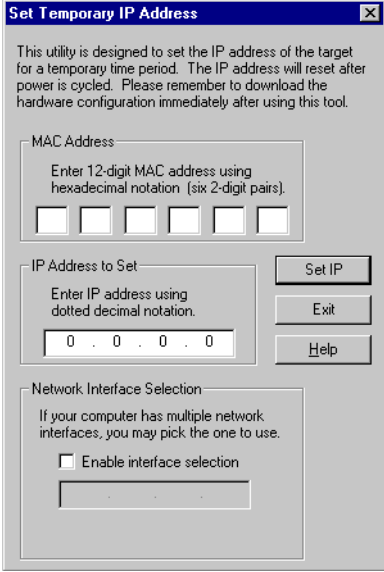

The dialog box titled "Set Temporary IP Address" contains the following sections:




- MAC Address:** A text area with the instruction "Enter 12-digit MAC address using hexadecimal notation (six 2-digit pairs)." and six input boxes.
- IP Address to Set:** A text area with the instruction "Enter IP address using dotted decimal notation." and a text box containing "0 . 0 . 0 . 0". To the right are buttons for "Set IP", "Exit", and "Help".
- Network Interface Selection:** A section with the instruction "If your computer has multiple network interfaces, you may pick the one to use." and a checkbox labeled "Enable interface selection". Below the checkbox is a list box.

2. In the MAC Address field, specify the MAC address for the PACSystems™ RX7i.
3. In the IP Address to Set field, specify the temporary IP address you want to set on the PACSystems™ RX7i.
4. If required, select the Network Interface Selection check box and specify the network interface the PACSystems™ RX7i is located on.
5. Click the Set IP button.

The IP address of the specified PLC or device is temporarily set to the indicated address.

**Warning:** The IP address set by the Set Temporary IP Address utility will not be retained through a power cycle. If you want to set a permanent IP address, you must do so by other methods.

### To set a permanent IP address for a PACSystems™ RX7i


1. In the  Project tab of the  Navigator, right-click the  target and choose **Properties**.

The  Inspector displays the target's properties.

2. In the IP Address property, enter an IP address.
3. Download the hardware configuration to the PACSystems™ RX7i. For more information, see page 35.

**Note:** Ensure that you have configured the rest of the hardware configuration before downloading it.





---

 **Want to know more?** In the Help Index, look up “Configuring communication with a PACSystems™ RX7i” and “Set Temporary IP Address utility”.


---

## Configuring Communication for non-PACSystems™ PLCs

### To set an IP address for Series 90™-70 PLCs

1. In the  Project tab of the  Navigator, expand the  Hardware Configuration node.
2. Expand the  Main Rack and double-click the slot where you want to add a communications module.

The Module Catalog appears.

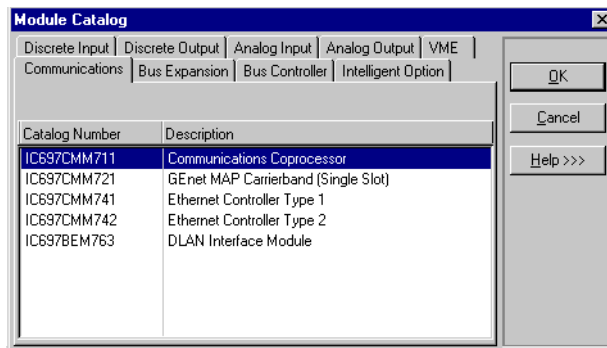

3. Choose the **Communications** tab and select the communications module you want to add.


Select either IC697CMM741 or IC697CMM742.

4. Click **OK**.

The Parameter editor opens showing the configuration settings for the module.

5. In the **Settings** tab, double-click the **IP Address** parameter.

The IP Address dialog box appears..

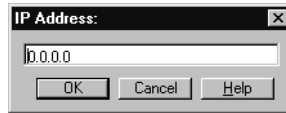

6. Enter the IP Address and click **OK**.

### To set an IP address for a Series 90™-30 CPU364 or CPU374


**Note:** For CPU364 and higher-end Series 90™-30 CPUs, the Ethernet adapter is built into the CPU. For other Series 90™-30 CPUs, the Ethernet connects through an optional expansion slot on the rack.

1. Obtain an IP address, perhaps from your network administrator.
2. In the Project tab of the Navigator, expand the Hardware Configuration node to reveal the rack and slot containing a CPU364 or CPU374.
3. Right-click the slot containing the CPU364 or CPU374 and choose **Configure**.

The Parameter editor appears.




4. In the Parameter editor, click the Ethernet tab.

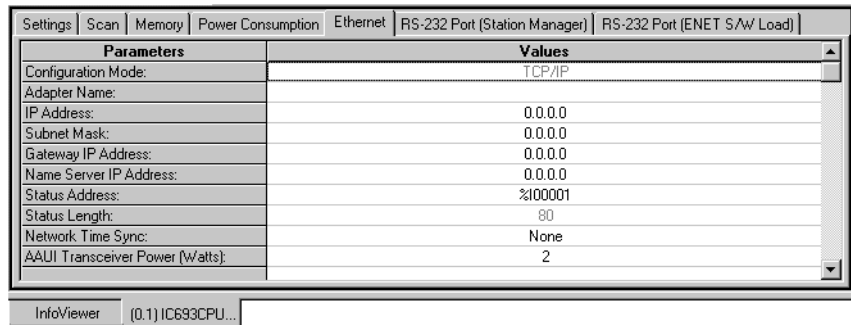The Parameter editor displays the contents of the Ethernet tab.





5. Double-click the **IP address** parameter.  
The IP Address dialog box appears
6. Enter the IP address in the box and click **OK**.

**To set an IP address for other Series 90™-30 CPUs (not CPU364 or CPU374)**

1. In the  Project tab of the  Navigator, expand the  Hardware Configuration node.
2. Right-click the slot containing an Ethernet Interface Module (IC693CMM321) and choose **Configure**.  
The Parameter editor opens showing the configuration settings for the module.
3. In the Settings tab, double-click the **IP Address** field.  
The IP Address dialog box appears.
4. Enter the IP address and click **OK**.

**To download an IP address to a non-PACSystems™ target**

1. Configure a CPU or Ethernet COM Module with an IP address using  Hardware Configuration.
2. Right-click the target and choose **Properties**.  
The  Inspector displays the target's properties.
3. In the Physical Port property, select a serial connection.
4. Right-click the target and choose **Go Online**.
5. Right-click the target and choose **Download to PLC**.  
The Download to PLC dialog box appears.
6. Select **Hardware Configuration** and click **OK**.  
The IP address is assigned to the PLC.
7. Right-click the target and choose **Go Offline**.
8. Right-click the target and choose **Properties**.
9. In the Physical Port property, select Ethernet.

The next time you go online, Machine Edition will use an Ethernet connection with the specified IP address.

---

## INTERACTING WITH THE PLC




Communicating with the PLC is necessary to perform such operations as storing and loading programs or monitoring data values and PLC status information. You can connect to a PLC from Logic Developer - PLC over a serial, Ethernet or modem connection, depending on the capabilities of the PLC.


All interactions with a target are available from the target's right-click menu.

### Validating a Target

Validating your project detects any syntax errors that may be present. Error messages are generated for each error and displayed in the Feedback Zone. A project containing errors cannot be downloaded. For that reason, whenever you initiate a download, the logic is automatically validated.

#### To validate a target

- In the  Project tab of the  Navigator, right-click a  target and choose **Validate**.

Logic Developer - PLC checks all items under the target for syntax errors. Any errors detected are noted with messages in the Build tab of the  Feedback Zone.

**Tip:** Double-click an error message to locate the noted error in your project. The appropriate editor or tool opens automatically with the item in question selected. Tips showing you how to proceed are displayed in the Companion. To open the Companion, press SHIFT + F11.

### Online/Offline

When offline from a target PLC, there is no ongoing communication between the PLC and your development computer. When offline from the target PLC the number and type of interactions available are limited, and the actual communication link is not required as long as you only edit logic. If a communication link has been configured and the Offline PLC Operations option is enabled, you can:


- Download to the PLC .
- Upload from the PLC.
- Start the PLC.
- Stop the PLC.
- Clear the PLC.

When you issue such commands, the communication link becomes active while performing the operation and then returns to an idle state. When the Offline PLC Operations option is disabled, the only PLC operation you can perform while offline is to go online.

**Note:** You enable or disable the PLC Offline Operations option in the Options tab of the Navigator. For more information, see page 19.




While online to a target PLC, a communication link exists and is active and you have an ongoing real-time communication with the PLC. You can perform commands to monitor and control the PLC's action and memory including the commands available when offline. Also, while online, the LD editor displays a graphical representation of LD logic as it executes, if the PLC's project is equal to the current project. You can edit LD logic while online; you are prompted to download your word-for-word changes. For more information on word-for-word changes, see page 73.

---


 **Want to know more?** In the Help Index, look up "Offline versus Online".




---

## To go online to a PLC

- In the  Project tab of the  Navigator, right-click a  target PLC and choose **Go Online**.

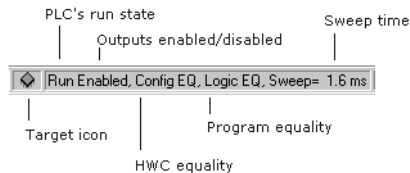Logic Developer - PLC connects your project to the PLC. The online status is indicated by the target icon in the Project tab and on the status bar.




**Note:** When online to a PLC, the target icon in the Project tab of the Navigator appears as  (equal),  (not equal), or  (stop faulted).

## To go offline from a PLC

- In the  Project tab of the  Navigator, right-click a  target PLC and choose **Go Offline**.

Logic Developer - PLC goes offline.

---

 **Want to know more?** In the Help Index, look up "going online with a PLC" and "going offline from a PLC".

---



## Upload/Download


The download process creates (or builds) and validates all runtime files necessary for a target to perform its role in a completed project. The compiled project is then transferred to the target hardware via the communication connection previously configured. For more information, see page 28.

The upload process acquires a project from an active PLC target and transfers it to Logic Developer - PLC for editing.

### To download to a target PLC

1. In the  Project tab of the  Navigator, right-click the  target to which you want to download files and choose **Download to PLC**.

The Download to PLC dialog box appears.

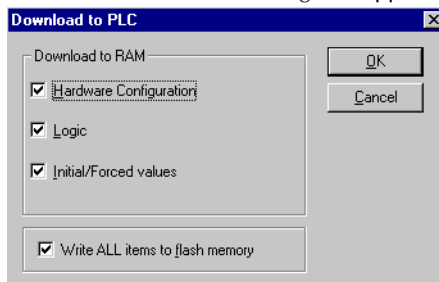


**Note:** If the PLC is running, you can download only logic that is not equal to the PLC's current logic and the Download to PLC dialog box does not appear.

2. Choose the items you want to download and click **OK**.

**Tip:** To download files for all targets in a project, right-click the project node and choose **Download All**. If you want to download files to the active target, choose **Download Active Target**.

**Note:** Only one project can be downloaded to a target at a time. If you download to a target machine that already has a project on it, the existing project is overwritten.

For each target that you download to, Machine Edition saves the project, performs a validation, builds the runtime files and attempts to establish a connection to the target. Any errors that occur are displayed in the Build tab of the  Feedback

Zone. If connection to a target is successful, Machine Edition sends all the necessary runtime files to the PLC.

---


? **Want to know more?** In the Help Index, look up “downloading to PLC”.

---

## To upload files from a PLC

1. In the  Project tab of the  Navigator, right-click the  target PLC from which you want to upload information and choose **Upload from PLC**.

The Upload from PLC dialog box appears.

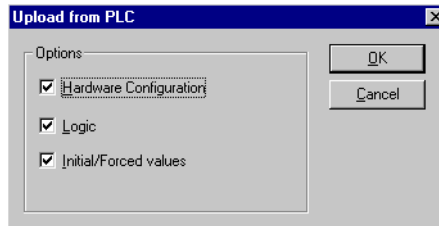

**Note:** If you are uploading from Logic Developer - State, only the Hardware Configuration can be uploaded.

2. Choose the item(s) you want to upload and click **OK**.

Logic Developer - PLC connects to the PLC and uploads the selected item(s) to Logic Developer - PLC. If you already had a version of the PLC’s project open, the uploaded project merges with the existing project. This ensures that all variable names are retained throughout the uploading process. If you upload to an empty target, all variables are assigned default names. For example, %R00001 is named R00001.

---

? **Want to know more?** In the Help Index, look up “uploading from PLC”.

---






## Run/Stop

You can set a target PLC to Run or Stop mode. In Stop mode, you can choose to enable or disable the outputs.




If you are starting a PACSystems™ RX7i or Series 90™-70 PLC, you can choose to have outputs enabled or disabled.

## To start a PLC

- In the  Project tab of the  Navigator, right-click a  target, point to **Online Commands** or to **Offline Commands**, and then choose **Start PLC**.

The target PLC begins executing its program.

## To stop a PLC


1. In the  Project tab of the  Navigator, right-click a  target, point to **Online Commands** or to **Offline Commands**, and choose **Stop PLC**.

The Stop PLC dialog box appears, prompting you to enable or disable the PLC's outputs.

2. Select an option.
3. Click **OK**.

The target PLC stops executing its program.

---

 **Want to know more?** In the Help Index, look up “starting the PLC” and “stopping the PLC”.

---

## Fault Tables


The PLC and I/O Fault Tables display fault information logged by the CPU or modules in the PLC. This information is used to determine if there are problems with the PLC hardware or software running in the PLC's CPU. To view the PLC and I/O fault tables, your computer must be online to the PLC.

## To view the fault table reports

- In the  Project tab of the  Navigator, right-click the  target you want to report on and choose **Diagnostics**.




Data values at sequential addresses are displayed, by default, from right to left, starting at the reference address specified. Both default and user-defined RVTs display rows of 8 cells for discrete memory and rows of 10 cells for register memory. The amount of data displayed in the columns depends on the data display format.

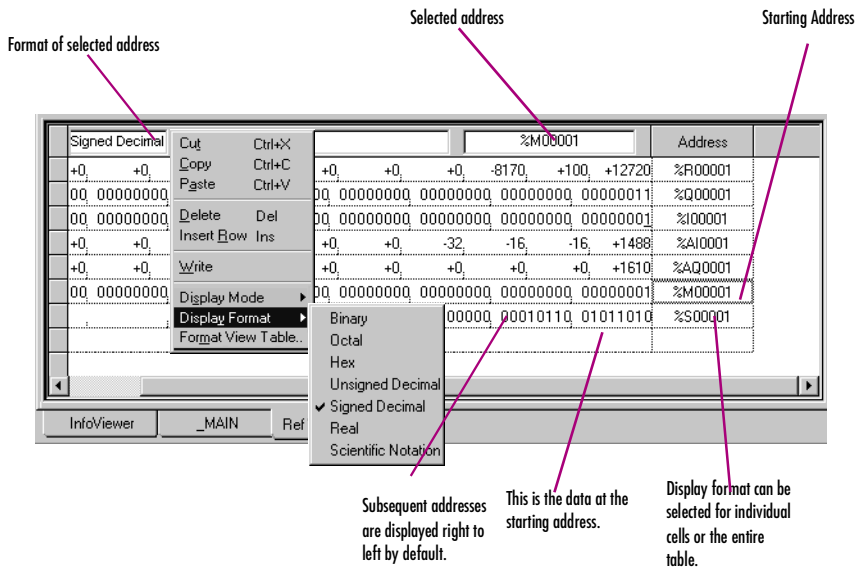

### To create a user-defined Reference View Table

- In the Project tab of the Navigator, right-click on the Reference View Tables folder and choose **New**.  
 A new Reference View Table with a default name is added to the folder.

## To work with a Reference View Table

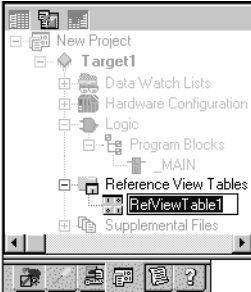

Navigator: Project Tab

Reference View Table node

1. In the Project tab of the Navigator, expand the Reference View Tables folder and double-click the table you want to view.

The Reference View Table appears in the Machine Edition main window.

2. Add reference addresses to the table as required.

**Note:** You cannot add reference addresses to a default RVT.

3. Format the table entries as desired.

---

**Want to know more?** In the Help Index, look up "RVT", then select "Working with Reference View Tables."

---

## Reports

Reports provide summaries and tables of information about your project. Most reports are displayed in the InfoViewer window (see page 20). The Reports tab of the Feedback Zone contains a list of all reports generated since the last Machine Edition project was opened. The following list shows the types of reports and logic printouts available in Logic Developer - PLC:

Address Use report	C block report*	Online Force Report
Hardware Configuration report	IL block report*	
Variables report(s)	Local Logic block report *	
CAM profile report	Motion block report*	

### Notes

- An asterisk (\*) indicates a logic printout.
- Reports are not generated for LD blocks. Rather, these blocks are printed directly from the Program Blocks node.


## To generate reports

- In the Project tab of the Navigator, right-click a node and choose **Report** to generate a report on that node.

A report is automatically generated and displayed in the InfoViewer.

**Note:** To generate an Online Force report for a target, you must be online to the target. Right-click the target, point to Online Commands, and then choose Online Force Report.

### To redisplay a previously generated report

1. In the  Feedback Zone, double-click the Reports tab.

A list of previously generated reports appears in the  Feedback Zone.


2. From the list choose the report you want to view.

The report displays in the Infoviewer.


Many items in a report contain hyperlinks. Click a hyperlinked item to jump to that item in the project. For example, if a variable's name appears hyperlinked in a report, clicking it selects that variable in the Variables tab of the Navigator.

Large reports are often separated into several pages. To view a different page of the report, scroll to the bottom of the report in the InfoViewer and click the number of the page you want to view.

### To print a report displayed in the InfoViewer



1. Do one of the following:
  - Generate the report you want to print.
  - OR -
  - Redisplay a previously generated report.
2. When the report is displayed, right-click the  InfoViewer window and select **Print**.

---

 **Want to know more?** In the Help Index, look up "Reports".


---

### To print LD Blocks

1. In the  Project tab of the  Navigator, expand the Logic node.
2. Right-click the Program Blocks node and choose **Print LD Blocks**.

The Print dialog box appears.
3. Select the blocks to print.
  - To print all of the target's LD blocks, select the **All** option.
  - To print only some of the target's LD blocks, select the **Selection** option, then select the check box in front of each block you want to print.
4. Select options as required and click **OK**.

---

 **Want to know more?** In the Help Index, look up "printing LD logic".

---





# 4


## Hardware Configuration (HWC)

Logic Developer - PLC supports six GE Fanuc PLC families and various remote I/O interfaces (see page 59) with a variety of CPUs, racks and modules for each. In order to operate, PLC hardware must be configured with Logic Developer - PLC or some other GE Fanuc tool. The HWC component of Logic Developer - PLC provides a way to completely configure your target equipment. This chapter details specifics on configuring PLC hardware for your operational needs.

The first step in configuring PLC hardware is to select the PLC you want to configure (see page 24). When creating a new project, you can use a project template containing default hardware configuration, or you can create an empty project and configure it manually.

### PACSystems™ RX7i

The PACSystems™ RX7i, pictured below, is the newest family of GE Fanuc PLCs. Most of its features are based on the features of the Series 90™-70 PLC family. The PACSystems™ RX7i's Ethernet capabilities are based on the Series 90™-30 CPU364.

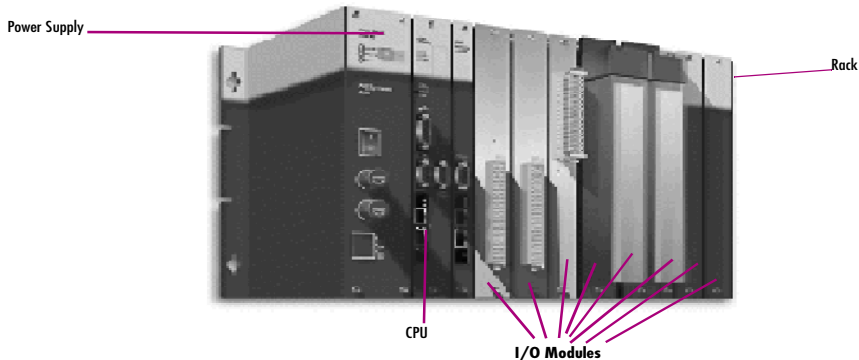

The PACSystems™ RX7i consists of a main rack and up to seven expansion racks. The PACSystems™ RX7i supports two types of main racks, IC698CHS017 and IC698CHS117. It supports five types of expansion racks, all of them Series 90™-70 racks. All main racks and expansion racks support three non-intelligent Series 90™-70 fan kits.

The PACSystems™ RX7i main racks have 18 single-width VME slots. Slot 0 supports two power supply modules: IC698PSA100 and IC698PSA350. Slots 1 and 2 are used to house a double-width CPU. PACSystems™ RX7i supports two CPUs IC698CPE010 (300 mHz) and IC698CPE020 (700 mHz). The PACSystems™ RX7i communicates through Ethernet only and the CPU has an embedded Ethernet adapter. In addition to the Ethernet adapter, up to three IC698ETM001 Ethernet modules can be installed in a PACSystems™ RX7i main rack. The Ethernet modules occupy only one slot. All of the IC698 modules are supported only on the main racks.

PACSystems™ RX7i supports several Series 90™-70 modules. Each one is double-width, that is, it occupies two slots on the main rack, but it occupies only one slot on a Series 90™-70 expansion rack. You can plug double-width modules into any two adjacent slots of the main rack except slots 0, 1, or 2. Because slot 17 is a double-width slot, any module in slot 17 occupies only slot 17. Slot 17 can also accept a single-width module.

PACSystems™ RX7i supports the following Series 90™-70 bus expansion modules:

- IC697BEM711
- IC697BEM713


In addition to the Series 90™-70 support, PACSystems™ also supports numerous Genius devices.

## Configuring PACSystems™ RX7i Hardware

When you create a target with a PACSystems™ RX7i rack system, the default HWC consists of the main rack, with a power supply in slot 0 and a single CPU in slots 1 and 2. You can change the default power supply and CPU, and add single-width or double-width modules. You can add up to seven secondary racks, and on each of these, you can add Series 90™-70 modules.

**Note:** On PACSystems™ RX7i targets, only one rack is added by default. On Series 90™-70 and Series 90™-30 PLCs, seven secondary racks are added by default to the HWC. You do not need to add them.

The configuration of the PACSystems™ RX7i is detailed in the following procedures. Configuration procedures for the other PLC types supported by Logic Developer - PLC are almost identical.

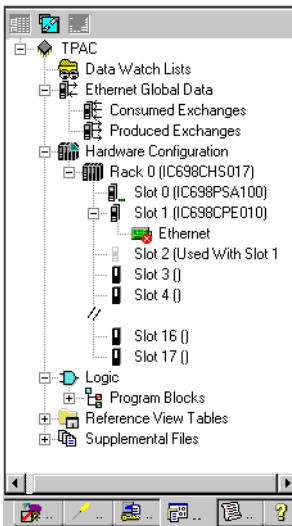


**Navigator: Project Tab displaying the HWC node of a PACSystems™ RX7i**

## To choose a power supply

The default power supply for the PACSystems™ RX7i is the PSA100. To change the power supply:

1. In the  Project tab of the  Navigator, right-click  Slot 0 and choose **Replace Module**.

A list of available power supplies appears.

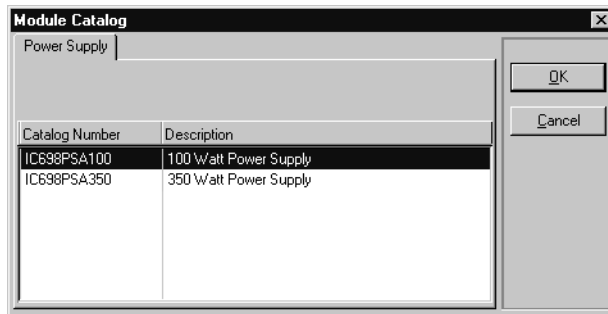

**Note:** For other GE Fanuc PLC families, there is no Slot 0. Right-click the PWR node instead.




2. Select the power supply you have installed in your rack and click **OK**.

## To choose a CPU



Configure	Enter
Cut	Ctrl+X
Copy	Ctrl+C
Paste	Ctrl+V
Add Module...	Ins
<b>Replace Module...</b>	
Delete Module	Del
Properties	Alt+Enter

HWC right-click menu


The default CPU specified in all project templates for a PACSystems™ RX7i is the CPE010. To change the CPU:

1. In the  Project tab of the  Navigator, expand the  Hardware Configuration folder.

All racks are revealed.

2. Expand the  Main rack.
3. Right-click  Slot 1 and choose **Replace Module**.

The Module Catalog dialog box appears.

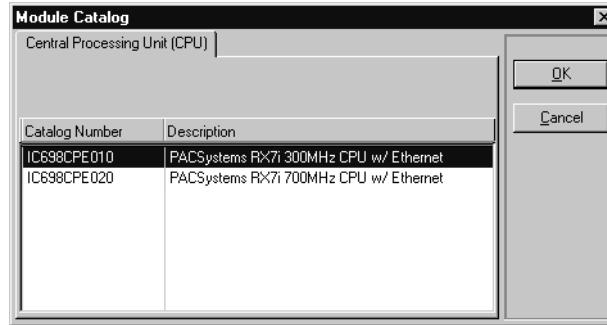

4. From the list, select a CPU.
5. Click **OK**.

A dialog box appears asking if you want to retain the settings from the existing CPU.

6. Click **Yes** or **No**.


**Note:** On targets other than PACSystems™, you are prompted to confirm the replacement.

The target is configured with the selected CPU.

## To configure a CPU

1. In the Project tab of the Navigator, right-click a slot containing a CPU and choose **Configure**.

The Parameter editor appears showing all configurable settings for the CPU.

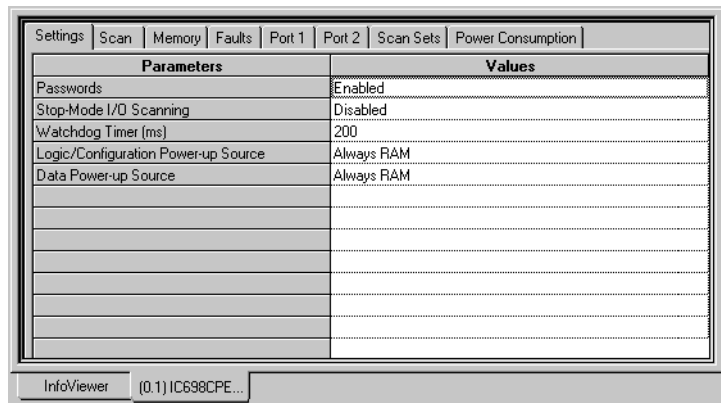


2. Modify the settings as required. For information on any parameter, select the parameter.

Help is displayed in the Companion.

**Tip:** To open the Companion, press SHIFT+F11.

## To add a secondary rack (PACSystems™ RX7i only)

**Note:** On Series 90™-70 and Series 90™-30 PLCs, seven secondary racks are added by default to the HWC. You do not need to add them.

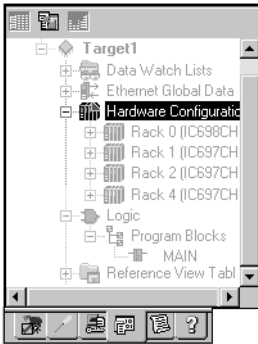


Navigator: Project tab

PACSystems™ HWC configuration

1. In the Project tab of the Navigator, right-click the HWC node and choose **Add Rack**.


The Module Catalog dialog box appears listing available rack types.

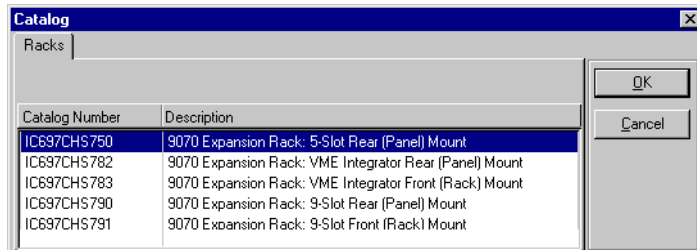

2. Select a rack and click **OK**.

The Series 90™-70 expansion rack is added to the PACSystems™ RX7i rack system. It is assigned an available number in the range of 1 through 7, excluding numbers already assigned to other expansion racks.

## To replace a rack

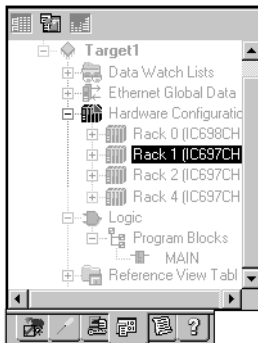


Navigator: Project tab

HWC configuration

1. In the Project tab of the Navigator, right-click a rack node and choose **Replace Rack**.

The Module Catalog dialog box appears listing available rack types.

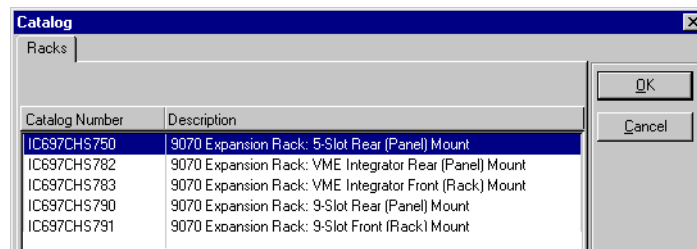

2. Select a rack and click **OK**.

### To add a fan kit to a rack (PACSystems™ RX7i only)


1. In the Project tab of the Navigator, expand the Hardware Configuration folder.
2. Right-click a rack and choose **Properties**.

The rack's properties are displayed in the Inspector.

3. In the Inspector, to the right of the Fan Catalog Number property, click .

Fan Catalog Number    None   


The Fan Kits catalog opens.

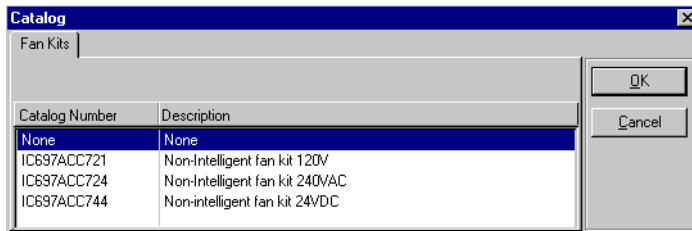

4. Select the fan kit you want to add and click **OK**.

The fan kit is added to the rack.

### To configure the Ethernet daughterboard (PACSystems™ RX7i only)

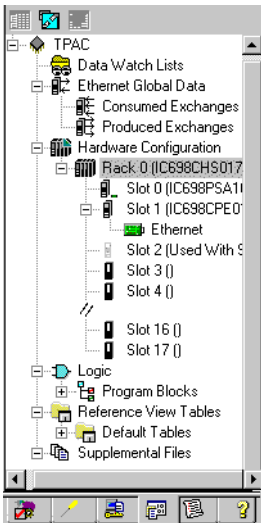





1. In the Project tab of the Navigator, expand the Hardware Configuration folder, then Rack 0 (the Main rack), and then Slot 1.
2. Double-click Ethernet adapter.

The Parameter Editor window opens.


3. Configure the Ethernet adapter's parameters as needed.

**Navigator: Project tab PACSystems™  
Ethernet Daughterboard**

### To add an Ethernet module (PACSystems™ RX7i only)

1. In the  Project tab of the  Navigator, expand the  Hardware Configuration folder and then  Rack 0 (the Main rack).
2. Right-click the slot you want to add an Ethernet module to and choose **Add Module**.

The Module Catalog opens.

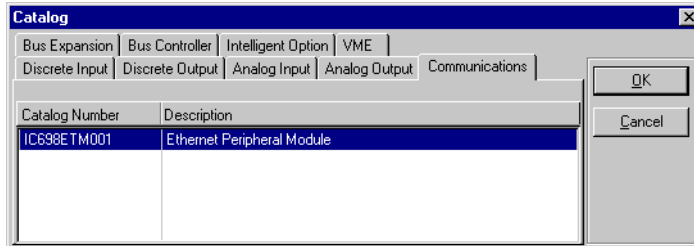

3. In the Communications tab of the Module Catalog, select the Ethernet Module and click **OK**.


The Ethernet module is added to the slot.

4. Double-click the Ethernet module (IC698ETM001).

The Parameter Editor opens.

5. Configure the Ethernet module's parameters as needed.

---

 Want to know more? In the Help Index, look up "configuring a PACSystems™ RX7i Rack System".

---


## Redundancy (Series 90™-70 and PACSystems™ RX7i only)

In redundant systems, two units are set up and configured to share the responsibility of a single unit. If one unit fails or is taken offline, the other unit assumes responsibility without interrupting operation of the entire system.

There are three types of redundant systems:

- Basic CPU Redundancy (Series 90™-70 only)
- Genius Redundancy
- CPU Redundancy Over Genius (Series 90™-70 only)

### Basic CPU Redundancy

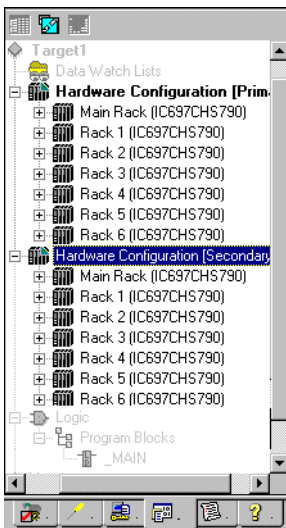

**Navigation: Project Tab**  
**HWC Node**  
**CPU Redundancy**  
**(Series 90™-70 only)**

(Series 90™-70 CPUs CGR772 and CGR935 only.) To implement CPU redundancy, a single target is associated with two physical PLCs, a Primary and a Secondary. Both PLCs share the same logic, but each has its own Hardware Configuration (HWC): Primary or Secondary. The selected HWC is the HWC that you can go online with, download to, upload from, and so on.

Series 90™-70 rack systems support three types of basic CPU redundancy. These redundant systems can be used in combination with Genius redundancy schemes.

- Single Bus with Preferred Master - uses a single Genius bus with one or more bus controllers in each PLC. The primary unit is always chosen as the active unit when the units initially synchronize.
- Single Bus with Floating Master - uses a single Genius bus with one or more bus controllers in each PLC. No switchover occurs on initial synchronization to make the primary unit the active unit.
- Dual Bus with Floating Master - uses dual busses with one or more bus controllers in each PLC. No switchover occurs on initial synchronization. Bus Switching Modules (BSMs) are required in accordance with configuration of a dual bus network. This option provides redundancy of both the PLC and the I/O bus.



## Genius Redundancy

(PACSystems™ RX7i and Series 90™-70.) A redundant Genius system contains duplicate components that are controlled in a way that keeps the Genius system operating properly even if one of the duplicate components fails or is taken out of service. Redundant Genius systems can be used in combination with Series 90™-70 redundant CPU systems.

You can configure five types of redundant Genius systems:

- Genius Dual Bus Redundancy (Paired GBC Internal)
- Genius Dual Bus Redundancy (Paired GBC External)
- Genius Dual GBC Redundancy (Paired GBC Internal)
- Genius Dual GBC Redundancy (Paired GBC External)
- Genius Dual Bus & Dual GBC Redundancy


## CPU Redundancy Over Genius

(Series 90™-70 only.) A CPU Redundancy Over Genius system contains duplicate components that are controlled in a way that keeps the system operating properly if one of the duplicate components fails or is taken out of service.

Five types of CPU Redundancy Over Genius systems can be built upon the various types of redundant Genius systems combined with the basic CPU Redundancy schemes.

- CPU Redundancy (GHS) Using Genius Dual GBC Redundancy (Paired GBC External) - Single Bus with Preferred Master
- CPU Redundancy (GDB) using Genius Dual GBC Redundancy (Paired GBC External) - Single Bus with Floating Master
- CPU Redundancy (GDB) using Genius Dual Bus Redundancy (Paired GBC External) - Single Bus with Floating Master
- CPU Redundancy (GDB) using Genius Dual Bus and Dual GBC Redundancy - Dual Bus with Floating Master
- CPU Redundancy (GDB) using a Mixed Genius Redundancy Scheme

---





 **Want to know more?** In the Help Index, look up “Redundant HWC Overview”.


---

## Configuring Redundant Systems


The procedures below are the general steps to follow for configuring redundant systems. For the procedures on configuring specific redundancy systems, see the online help.

### To set up the primary hardware configuration for CPU redundancy (Series 90™-70 only)

1. In the  Project tab of the  Navigator, expand the  target node for which you want to set up CPU redundancy.
2. Right-click  Hardware Configuration, point to **Redundancy**, and choose **Wizard**.

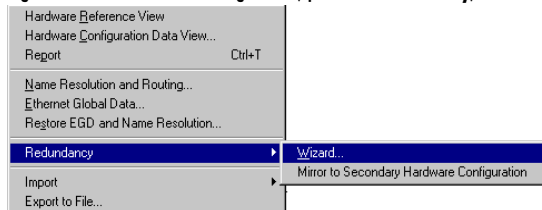

The Redundancy Wizards dialog box opens, with the **Set up a Primary Hardware Configuration for CPU Redundancy** option selected by default.

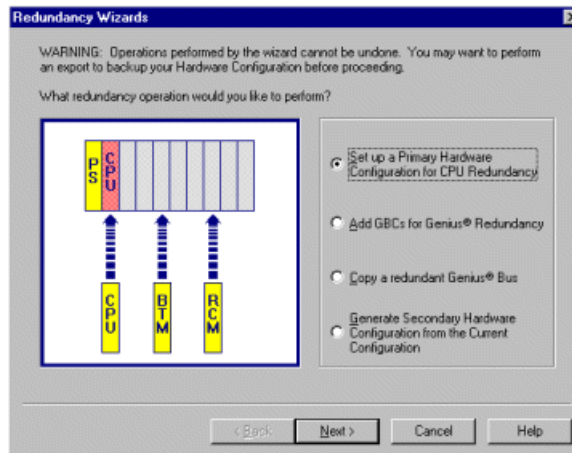




- Click **Next** and follow the wizard to the end. The wizard adds a redundant CPU, the Bus Transmitter Module (BTM) and the Redundancy Communications Module (RCM) to the configuration.

**Note:** The target property, **Dual HWC**, is now available in the Inspector and is set to False.


Target	
Name	Target1
Type	GE Fanuc PLC
Description	
Documentation Address	
Family	Series 90-70 PLC
Program Name	Target1
Update Rate (ms)	250
Sweep Time (ms)	Offline
PLC Status	Offline
Dual HWC	False
Physical Port	COM1
Additional Configuration	

Inspector

## Adding Genius Bus Controllers (GBC) to your system (PACSystems™ RX7i and Series 90™-70)

- In the  Project tab of the  Navigator, expand the  target for which you want to set up redundancy.
- Right-click  Hardware Configuration, point to **Redundancy**, and choose **Wizard**.

The Redundancy Wizards dialog box appears.

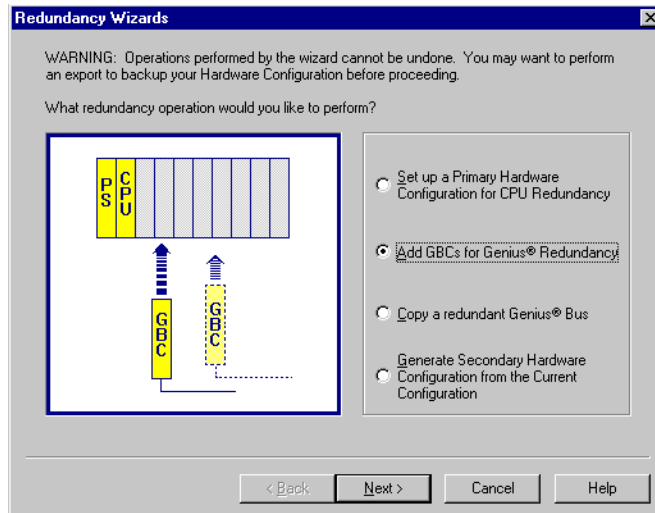


3. Select **Add GBCs for Genius Redundancy**.
4. Click **Next** and follow the wizard to the end. The wizard allows you to select a Genius redundancy scheme and the location of the GBC modules. You can run this wizard multiple times to configure additional pairs of redundant busses in the same system.

**Note:** When you add a Genius Bus Controller (GBC) to a Series 90™-70 rack, a new Genius bus network is automatically created and associated with that slot and GBC module. Up to 31 Genius I/O devices (blocks) can be connected to a GBC through its Genius bus.

### Configuring the secondary hardware configuration (Series 90™-70 only)

1. In the  Project tab of the  Navigator, select the  Hardware Configuration folder.
2. Right-click Hardware Configuration, point to **Redundancy**, and choose **Mirror to Secondary Hardware Configuration**.

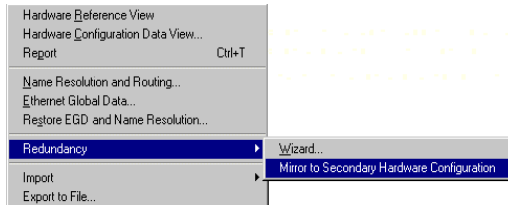


A secondary rack system that is a copy of the primary rack system is generated. The target now displays two Hardware Configurations (HWCs), one labeled [Primary] and the other, [Secondary]. The Primary HWC is bolded because it is currently selected. The target property, **Dual HWC**, is now set to True.

Target	
Name	Target1
Type	GE Fanuc PLC
Description	
Documentation Address	
Family	Series 90-70 PLC
Program Name	Target1
Update Rate (ms)	250
Sweep Time (ms)	Offline
PLC Status	Offline
Dual HWC	<input checked="" type="checkbox"/> True
Selected HWC	Primary
Physical Port	CDM1
Additional Configuration	
Inspector	

**Note:** You can mirror as many times as necessary to synchronize the two HWCs after modifying the primary HWC. Each time you mirror the primary HWC, the secondary HWC is updated to reflect those changes.

---

 **Want to know more?** In the Help Index, look up “Redundancy”.

---

## Series 90™-30: DSM314 Motion Module


The Series 90™-30 supports a module which no other GE Fanuc PLC family supports: the Motion Mate DSM314 (see page 91). The DSM314 is a high performance, easy-to-use multi-axis motion control module. Compatible with Series 90™-30 PLC logic solving and communications functions, the DSM314 supports the following servo types:

- Digital - GE Fanuc digital servo amplifiers and motors.
- Analog - GE Fanuc SL Series analog servos and third-party servos.

The DSM314 Motion module has four axes that can be individually configured in Standard or Follower mode. It can control up to four analog mode servo axes or up to two digital mode servo axes. When axis one and two are controlling digital mode servos, axis three can control an analog servo.

In order to perform motion programming in Logic Developer - PLC, you must have a DSM314 motion module properly configured (see page 91).

### To add a DSM314 motion module


1. With a rack of the  Hardware Configuration node expanded, right-click the empty slot you want to add a DSM314 motion module to and choose **Add Module**.

The Module Catalog dialog box appears.

2. On the Module Catalog dialog box, click the **Motion** tab.

A selection of motion modules appears in the Module Catalog dialog box.

3. From the list, select Motion Mate DSM314.

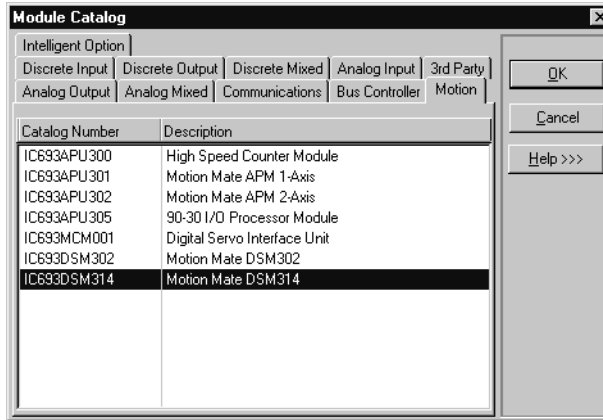

4. Click OK.

A DSM314 is added to the hardware configuration of your project.

### To configure a DSM314

1. In the Project tab of the Navigator, double-click the slot containing a Motion Mate DSM314.


The Parameter editor appears.

Parameters	Values
<i>Number of Axes:</i>	4
%I Reference:	%I00001
%I Length:	80
%Q Reference:	%Q00001
%Q Length:	80
%AI Reference:	%AI0001
%AI Length:	84
%AQ Reference:	%AQ0001
%AQ Length:	12
<i>Axis 1 Mode:</i>	Analog Servo
<i>Axis 2 Mode:</i>	Analog Servo
<i>Axis 3 Mode:</i>	Auxiliary Axis
<i>Axis 4 Mode:</i>	Disabled
<i>Local Logic Mode:</i>	Disabled
Total Encoder Power (Watts):	0

2. Configure the DSM314 by using the Parameter editor.


**Note:** For details on configuring the DSM314, see *GFK-1742, Motion Mate DSM314 for Series 90-30 PLCs Users Manual*.

### Series 90™-70 Genius Remote I/O Scanner

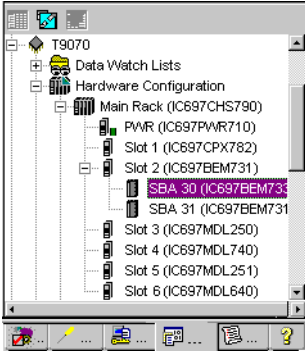

A Remote I/O Scanner (IC697BEM733) is a Genius device that is part of a Genius Bus system. As such, it is added as a Genius device to the Genius Bus Controller (GBC) and it is represented in Logic Developer - PLC by an SBA node under the GBC node in a Series 90™-70 target.

**Navigator: Series 90™-70 Remote I/O Scanner as a Genius device under a GBC**

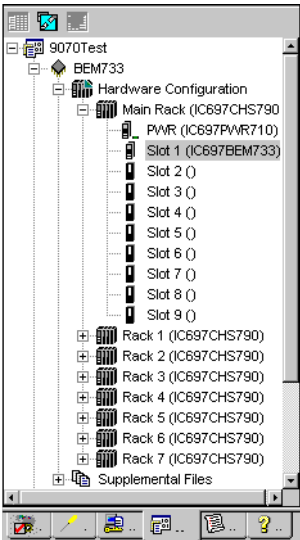


A Remote I/O Scanner resides in Slot 1 of the main rack of a Series 90™-70 PLC. I/O modules can be inserted into the other slots of the main rack and on all the slots of the other racks. As such, the Remote I/O Scanner is represented by a target in the Project tab of the Navigator, and is also represented by a module in slot 1 of the main rack of that target.

**Navigator: Series 90™-70 Remote I/O Scanner as a target and as a module in Slot 1 of the main rack**

### To set up a Remote I/O Scanner

1. Add the Remote I/O Scanner as a Genius device to the GBC.
2. When prompted to add a new target for the Remote I/O Scanner, click **Yes**.  
Logic Developer - PLC automatically sets up some of the properties that link the Remote I/O Scanner to its GBC.
3. Set up the SBA to the same value to the Remote I/O Scanner as a target and to the Remote I/O Scanner as a Genius Device.  
Now whenever you update the I/O map on the Remote I/O Scanner, the I/O map is automatically updated to the GBC.
4. Configure the Remote I/O Scanner's target properties.
5. Add and configure the I/O on the Remote I/O Scanner's rack system.
6. Configure the Remote I/O Scanner's module properties.
7. Configure the properties of the Remote I/O Scanner as a Genius bus device.


---

 **Want to know more?** In the Help Index, look up "IC697BEM733, Remote I/O Scanner".

---



## VersaMax Remote I/O

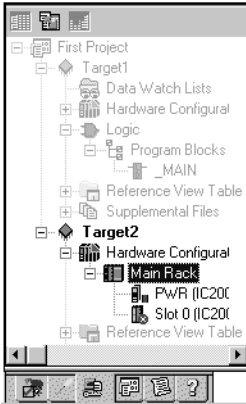

Navigator: VersaMax Remote I/O

VersaMax remote I/O consists of a Network Interface Unit (NIU) (Ethernet, Genius or Profibus), and one or more I/O modules. If your target type is remote I/O, you can use Logic Developer - PLC to configure this hardware. Once configured, the remote I/O can be controlled from a PLC or PC controller. The differentiating factor between a VersaMax remote I/O and a PLC is that a remote I/O is simply an input/output device with a communication interface. Unlike a PLC, a remote I/O has no CPU.

When working with the VersaMax Remote I/O hardware configuration, Logic Developer - PLC enables you to add racks, configure the power supply and configure modules.

Remote I/O targets are generally added to a project when you create a project with a template (see page 12). You can add additional Remote I/O targets later.


### To create a project containing a GE Fanuc Remote I/O target from a template

1. From the **File** menu, choose **New Project**.  
The New Project dialog box appears.
2. From the Project Template list, choose the GE Fanuc Remote I/O you want to add to your project.
3. Enter a descriptive Project Name.
4. Click **OK**.

A new Remote I/O project is started.




### To add a GE Fanuc Remote I/O target to an existing project

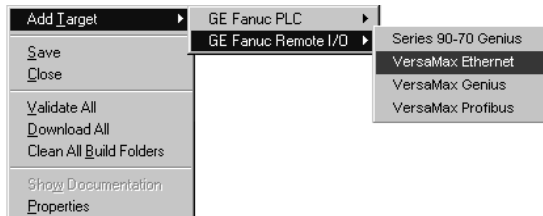1. In the Project tab of the Navigator, right-click the Project node.
2. Point to **Add Target**, then to **GE Fanuc Remote I/O**, and choose the remote I/O you want to add.




**Note:** The **Series 90-70 Genius** option is a Series 90™-70 Remote I/O Scanner (see page 57).

### To replace the power supply for your remote I/O configuration


1. In the  Project tab of the  Navigator, expand the  Hardware Configuration node of the remote I/O.

The Navigator displays the following:

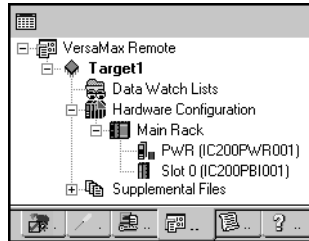

2. Right-click the  PWR node and choose **Replace Module**.

The Module Catalogue dialog box appears:

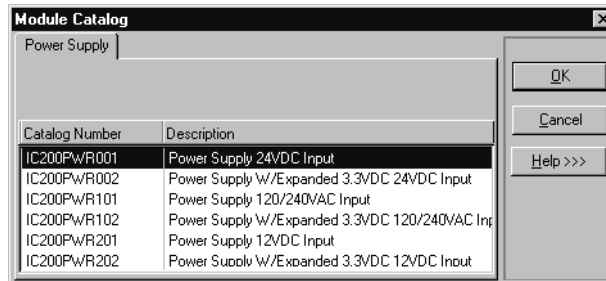


3. From the list, select the power supply that you want to configure for your system.

### To add a new Carrier/Base to your VersaMax Remote I/O


1. In the  Project tab of the  Navigator, select a  remote I/O target.
2. Expand the Hardware Configuration node and the Main Rack node.

The Navigator displays the following:

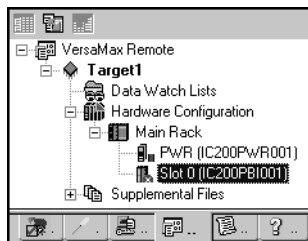

3. Right-click the  Slot 0 node and choose **Add Carrier/Base**.

The Module Catalog dialog box appears.

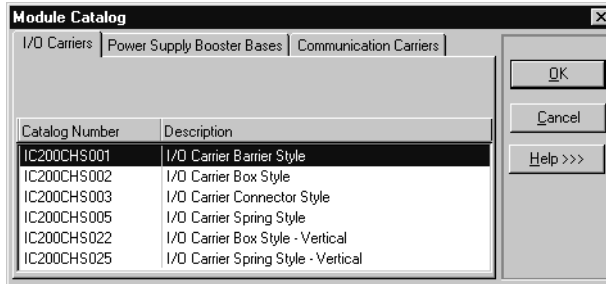

4. Select the carrier/base that you want to add to the remote I/O target.


**Note:** You can add a maximum of eight carrier modules to each VersaMax® rack.

5. Click **OK**.

### To add a module to a carrier/base

1. Double-click an empty carrier/base.

The Module Catalog appears.

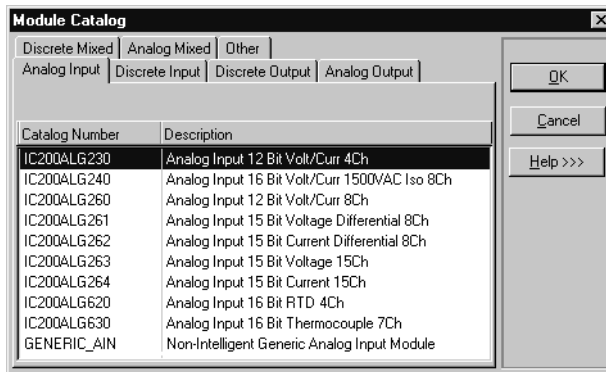

2. From the Module Catalog list, select the module that you want to install.

---


**Want to know more?** In the Help Index, look up “Hardware Configuration”.


---





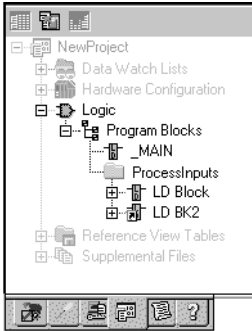

# 5
 
## Logic Editors



The following logic types are supported by Logic Developer - PLC (not including motion programming) and are compiled and downloaded to the PLC represented by the associated GE Fanuc PLC target. The  Logic folder of a GE Fanuc PLC target includes:

-  Ladder Diagram (LD) Blocks
-  Instruction List (IL) Blocks
-  C Blocks
-  C programs

These items will be downloaded to, and run on, the target. Each block and user program is a named section of executable code. Blocks can be grouped under user-defined folders in the Program Blocks folder. C programs are grouped under the main Logic folder.

Each target must contain one block or user program named “\_MAIN”. On any target except a release 6 or later Series 90™-70 PLC, the \_MAIN block is first to execute when the project is downloaded to a PLC.

Depending on the type of target PLC, blocks other than “\_MAIN” can be scheduled for execution based on timer or I/O interrupts.







**Note:** On release 6 or later of Series 90™-70 PLCs, the LD program can be scheduled. That is, the Series 90™-70 PLC does not necessarily execute the \_MAIN LD block first.

---


 **Want to know more?** In the Help Index, look up “LD Program”.

---

## To create a user-defined folder






1. In the  Project tab of the  Navigator, expand the  target with the logic you want to organize and then expand the  Logic folder.
2. Right-click the  Program Blocks folder, point to **New**, and choose **Folder**.  
A new  user-defined folder appears with a default name.
3. Optionally enter a new folder name, which must be unique among the folders directly under the Program Blocks folder.

 
---

 **Want to know more?** In the Help Index, look up "PLC" then choose "Organizing Your PLC Logic".


---

## To schedule execution of a logic block

1. In the  Project tab of the  Navigator, right-click an existing LD, C or IL block, and choose **Properties**.  
The block's properties appear in the  Inspector.
2. In the  Inspector, click the  button in the Scheduling property.  
The Scheduling dialog box appears.


Block Properties	
Name	LDBK1
Description	
Block Type	BLK
Scheduling	
Parameters	
<input type="checkbox"/> Lock Settings	
Extra Local Words	128
Inspector	

**Inspector: IL, LD, C properties**

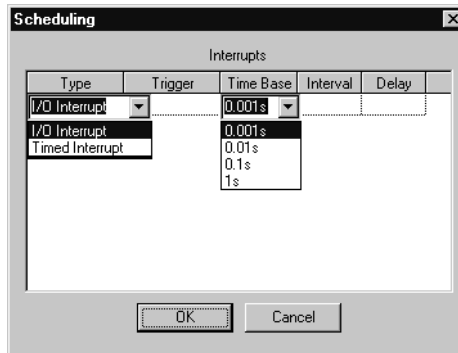


3. Configure scheduling by entering values in each of the fields.

---

 **Want to know more?** In the Help Index, look up "Scheduling."

---

### To set access control


1. Right-click an LD, IL or C Block and choose **Properties**.
2. In the  Inspector, expand the Lock Settings property.
3. In the Lock Type property, choose a setting from the list.
4. In the Password property, enter a password.

### To search/replace in one block


1. Double-click an LD or IL block to open it.
2. From the **Search** menu, choose **Find** or **Replace**.  
A dialog box appears.
3. In the **Find what** or in the **Text to find** field, enter the text to find.
4. (Only if you want to replace text) In the **Replace with** field or in the **New text** field, enter the text to replace the found text with.
5. Select or clear each search/replace option, as required.
6. Click **Find**, **Find next**, **Replace**, **Replace All**, **Close**, or **Cancel**, as required.

**Note:** Logic Developer - PLC provides the capability to search for some text in an entire target or portions thereof, which you can specify. Various options are available to narrow a search.

---

 **Want to know more?** In the Help Index, look up “Global” and select the “Conducting a Global Search” help topic.

---

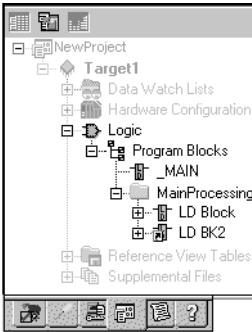

Navigator: Project tab

An LD Block

## LD EDITOR

The Ladder Diagram (LD) editor is used to create programs with the Ladder Diagram programming language. LD logic graphically represents the programmed actions performed by a PLC as it executes.

The LD editor is cell-based with rungs constructed of horizontal sequences of instructions that are wired together. A given instruction and its operands can occupy one or more cells.

You can work with the LD editor while offline to edit a disk copy of a project, or while online to monitor the execution of the logic while you fine tune the project by making word-for-word changes (see page 73).

You can customize the appearance and behavior of the LD editor.

An LD block is a named section of LD Logic that is compiled and downloaded to the PLC represented by the associated target. The following table describes the number of blocks supported by each CPU type for a given target.

CPU Type	Number of Blocks	Maximum Number of Blocks
VersaMax	64 subroutine blocks plus one _MAIN block	65
Series 90™-30	64 subroutine blocks plus one _MAIN block	65
Series 90™-70	255 subroutine blocks plus one _MAIN block	256
PACSystems™	511 subroutine blocks plus one _MAIN block	512

### To customize the LD editor

1. In the Options tab of the Navigator, expand the Editors folder and then the Ladder folder.
2. Right-click a page (Confirmations, Editing, Font and Colors, or View), and choose **Properties**.

The configurable settings appear as properties in the Inspector.

3. In the Inspector, adjust settings as required.

### To create an LD block

1. In the Project tab of the Navigator, right-click the Program Blocks folder point to **New**, and then choose LD Block.



A new LD block with a default name is created.

**Note:** If you use a template or add a target, the first block added to a target is named “\_MAIN” and subsequent blocks added are named LDBK1, LDBK2, and so on, by default.

2. Rename the block as desired.

## To open an LD block for editing

- In the Project tab of the Navigator, double-click an LD block.

The block opens in the LD editor.

**Note:** You can have multiple blocks open for editing. To navigate to another open LD block, click the tab that displays its name at the bottom of the editor window.

## Working with the LD Editor Offline

While in offline mode, there is no live communication between the LD editor and the target. Most logic development is done while offline. The following diagram illustrates some of the more common operations you can perform using the ladder editor offline.

The screenshot displays the SIMPLICITY Machine Edition interface. The main window shows a ladder logic diagram with rungs. Annotations include:

- Insert common instructions and wiring with the ladder instruction toolbar.** (Points to the top toolbar)
- Drag variables to instruction operands to assign them.** (Points to the variable list on the left)
- Right-click to insert an instruction.** (Points to a right-click action on the diagram)
- Use the Inspector to configure address and length for instructions.** (Points to the Inspector window at the bottom left)
- The Companion tracks your moves and provides information on what you click.** (Points to the NOCON status window at the bottom left)
- In-place editor comment rungs.** (Points to a comment rung in the diagram)
- Drag LD instructions from the Toolchest.** (Points to the LD Instructions list on the right)
- Displays a list of the places the selected variable is used in the References tab of the Feedback Zone.** (Points to the References tab at the bottom right)

### To insert an instruction

1. In the LD editor, right-click an empty cell and choose **Place Instruction**.  
A smart list appears listing all available instruction mnemonics.
2. Choose an instruction mnemonic from the list and press ENTER.


**Note:** Only functions that have no inputs can be placed in the first column.

### To configure an instruction's address and length properties

There are two methods to configure an instruction's address and length properties.


#### First method

1. In the LD editor, insert an instruction that requires Address and/or Length configuration.

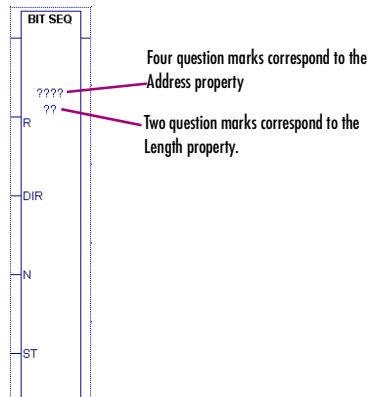

2. Right-click the instruction and choose **Properties**.


The Inspector displays the instruction's properties.

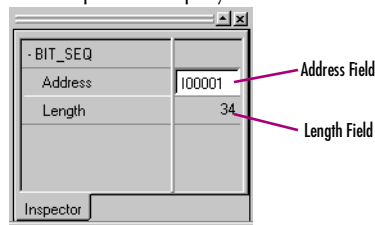

3. In the Address property, enter a variable name or a reference address to specify the start of a memory block.  
**Note:** If you type a reference address, it is converted to a variable name automatically.
4. In the Length property, enter the number of PLC registers that the instruction requires in the memory block.


## Second method

1. In the LD editor, insert an instruction that requires Address and Length configuration.

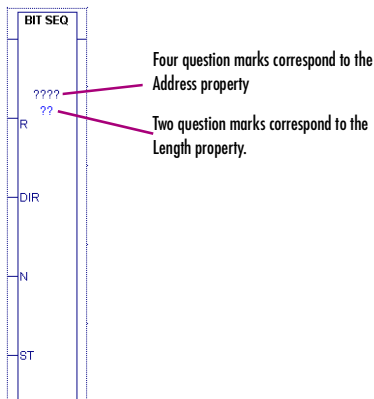

2. Double-click the instruction or select it and press ENTER.

The Function Properties dialog box appears.

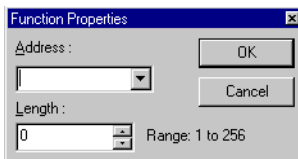

3. In the Address property, enter a variable name or a reference address to specify the start of a memory block.  
**Note:** If you type a reference address, it is converted to a variable name automatically.
4. In the Length property, enter the number of PLC registers that the instruction requires in the memory block.

### To assign variables to instruction operands

1. In the LD editor, double-click beside any operand of an instruction, or click there and press ENTER.

A smart list appears prompting you to enter a variable name or reference address.


**Note:** If the smart list that appears prompts you for a mnemonic, supply a contact or a wire.

2. Type, or choose from the list, a variable name or reference address.

If you enter a reference address, a variable name will be automatically substituted.

### Editing Logic as Text

You can enter LD logic into the LD editor by starting to type right into a cell. The smart list will appear and you can continue type your instructions and operands. When you press ENTER, the logic you typed will appear in customary graphic form in the LD editor. For example, in the first cell of a new rung, if you type `AD MyDint1 MyDint2 Result12;AD MyDint3 MyDint4 Result34`, the following logic will appear in the LD editor:

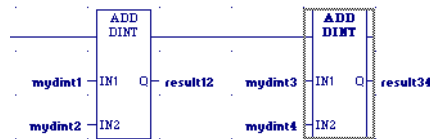

A horizontal wire was inserted in the first cell to make room for the ADD\_DINT instruction's operands and the operands were inserted in their proper places. In the keyboard entry, "AD" stood for "ADD\_DINT", because it was the first available instruction that begins with "AD" in the smart list. A semicolon separates the ADD\_DINT instructions. The required horizontal wires are supplied automatically..

---







**Want to know more?** In the Help Index, look up "Keyboard Method".

---

A powerful extension of typing logic into the LD editor is the ability to write LD logic in any text editor and copy and paste it into the LD editor, or to copy and paste logic from the LD editor to a text editor. You can copy an entire block of LD logic from the Navigator to any text editor, or copy sections of LD logic as text from the LD editor to any text editor. You can then edit the logic in the text editor and copy the edited logic back into the LD editor.

When LD logic is copied as text, a verbose format is used to make it easier to read, but when you edit the logic as text you can use the same shorthand used in the keyboard method of entering LD logic in the LD editor.

### To copy an entire LD block as text


1. Validate the  target to ensure that the LD block contains only valid logic.
2. In the  Project tab of the  Navigator, expand the target and expand the  Logic folder.
3. Expand the  Program Blocks folder and, if the LD block is in a  user-defined folder, expand the user-defined folder.
4. Right-click the LD block and choose **Copy**.

The contents of the LD block are copied to the Windows Clipboard.

5. Paste the contents of the Windows Clipboard into your text editor.

The LD logic is pasted as text.

### To copy a section of LD logic as text

1. Validate the  target to ensure that the LD block contains only valid logic.
2. In the LD editor, select the cells that contain the logic you want to copy as text.
3. Right-click the selected logic and choose **Copy**.

The LD logic is copied to the Windows Clipboard.

4. Paste the contents of the Windows Clipboard into your text editor.


The LD logic is pasted as text.

### To copy text into the LD editor

1. In the text editor, select and copy the LD logic to the Windows clipboard.
2. In the LD editor, do one of the following:
  - Select the cells that you want to overwrite.
  - OR -
  - Click the cell that will be the upper left corner of the LD logic you want to paste.
3. Right-click and choose Paste.

Existing cells in the LD editor are overwritten with the contents of the Windows clipboard.

---

 **Want to know more?** In the Help Index, look up "Copying LD Logic as Text: Overview".

---

## Working with the LD Editor Online




In online mode, there is a live communication connection to the target PLC enabling increased interaction with Logic Developer - PLC.

While online, the LD editor animates the LD logic to reflect program execution in the target PLC. Data values change in real time while coils and contacts indicate power flow. Many GE Fanuc targets also supports Run Mode Store (RMS), that is, they support the downloading of logic to a running target.

Three methods are at your disposal to make changes in your LD logic and download the changes to an online running PLC:

- **Online Editing** (PACSystems™ only): While you make your changes in your logic, the LD editor displays both the original logic and the modified logic, and the PACSystems™ executes the original logic. You can test your changes online, and the PACSystems™ retains an inactive copy of the original logic while executing the modified logic. You can then commit the modified logic permanently to the PACSystems™, or make the PACSystems™ revert back to the original logic, or cancel the test and continue editing the logic before testing the logic again or abandoning the modified logic.
- **Word-for-word changes:** Changes in the logic made while online that fit in the same amount of memory as the original logic. For example, changing an operand is usually a word-for-word change. You can make a word-for-word change and download it to the PLC while online without having to download all the logic.
- **Other logic changes:** Changes in the logic that do not fit in the same amount of memory as the original logic, for example, adding a new function in a rung or adding a new rung. Once you have completed a change, you can write the modified logic to the PLC while it is still running. (For some types of changes, you must stop the PLC and then download to it.)

### To go online to a target PLC

- In the  Project tab of the  Navigator, right-click the  Target and choose **Go Online**.

The grey target icon turns green to indicate that it is online. The status bar is updated to reflect the online status. The LD editor, if equal to the PLC, displays various online features, as shown in the following illustration:

The screenshot shows the SIMATIC Manager interface with the LD editor open. The main window displays a ladder logic diagram with three rungs. Rung 1 contains a 'Start' coil and a 'Stop' coil. Rung 2 contains a 'Run' coil and a 'Reset' coil. A 'BIT SEQ' block is also visible. The interface includes a project tree on the left, a status bar at the bottom, and a 'Watch List' table at the bottom right.

**Annotations:**

- Rung Number:** Points to the number '1' and '2' on the left side of the rungs.
- State Flow is indicated by bolded lines.** Points to the bolded lines in the 'Reset' coil.
- Online Status is indicated by the color of the target icon.** Points to the 'Target1' icon in the project tree.
- Right-click a variable to force it.** Points to the 'Reset' coil.
- PLC status and sweep time are displayed in real-time in the Inspector.** Points to the 'Inspector' window showing 'Sweep time (ms): 43' and 'PLC Status: Run Enabled'.
- A red, underlined variable indicates that it has been forced ON.** Points to the underlined variable '%I00004' in the 'Reset' coil.
- Online indicator** Points to the 'Online' indicator in the status bar.
- Monitor and change values in real-time with the Data Watch tool.** Points to the 'Watch List' table.
- Feedback Zone** Points to the status bar area.
- PLC status is indicated in the status bar.** Points to the status bar showing 'Run Enabled, Config EQ, Logic EQ, Sweep= 1.6 ms'.

**Watch List Table:**

Variable	Address	Value
Reset	%I00...	On
Up	%I00...	Off
Start	%I00...	Off
Up	%I00...	Off
Up	%I00...	Off

## Word-for-Word Changes

Word-for-word changes may be completed online to PACSystems™, Series 90™-30, Series 90™-70, Series 90™ Micro, and VersaMax® modular PLCs. (VersaMax Nano/ Micro PLCs do not support word-for-word changes.)

Several of the changes to the program that do not modify its size are considered word-for-word changes. Examples include changing the type of contact or coil, or changing a reference address used for an existing function block.

### To make word-for-word changes

1. While online to a target PLC, make a change to LD logic that does not change the logic size. You are prompted to download the change.

## 2. Click Yes.

The changes are written to the PLC.

## Writing Changes to a Target PLC

If you change the size of the program, you must write the changes to the PLC to maintain equality. You can do so whether the target is running or not. All PLC families support this run-mode store capability, but not every PLC in every family.

### To write changes to the target PLC

1. While online to a target, make a change to LD logic.
2. In the  Project tab of the  Navigator, right-click the  target, point to **Online Commands**, and choose **Write Changes**.


New logic is immediately written to the PLC without stopping the PLC. If the LD logic was altered, other than a word-for-word change, you are prompted to download to the running PLC. The entire target is validated, but only the changed blocks are downloaded.

### To turn on/off or force a variable

- In the LD editor, right-click a BOOL variable anywhere in LD logic and choose **Force ON**, **Force OFF**, **Turn ON**, or **Turn OFF**.

**Note:** Forcing a variable ON or OFF overrides any actions the application may take during runtime. That is, if a variable is forced OFF (0), but LD logic is trying to turn it ON (1), it stays OFF.

---

 **Want to know more?** In the Help Index, look up "Online Editing: an Overview" and "working online with LD editor: overview".


---



## LD Functions

The following is a list of all LD functions available in Logic Developer - PLC. An asterisk followed by the letter P (\*P) indicates the functions exclusive to PACSystems™ PLCs. An asterisk followed by "70" (\*70) indicates the functions exclusive to Series 90™-70 PLCs. A simple asterisk (\*) indicates the functions shared by PACSystems™ and Series 90™-70 PLCs and exclusive to them. Companion help indicates which PLCs support the other functions.

---

 **Want to know more?** In the Help Index, look up "LD Functions".

---

### Advanced Math

ACOS	COS	LN	SQRT_DINT	TAN
ASIN	EXP	LOG	SQRT_INT	
ATAN	EXPT	SIN	SQRT_REAL	

### Bit Operations

AND_DWORD*	BIT_SET_DWORD*	NOT_WORD	SHIFTL_DWORD*
AND_WORD	BIT_SET_WORD	OR_DWORD*	SHIFTL_WORD
BIT_CLR_DWORD*	BIT_TEST_DWORD*	OR_WORD	SHIFTR_DWORD*
BIT_CLR_WORD	BIT_TEST_WORD	ROL_DWORD*	SHIFTR_WORD
BIT_POS_DWORD*	MASK_COMP_DWORD	ROL_WORD	XOR_DWORD*
BIT_POS_WORD	MASK_COMP_WORD	ROR_DWORD*	XOR_WORD
BIT_SEQ	NOT_DWORD*	ROR_WORD	

### Coils

COIL	NEGCOIL	PTCOIL*P
CONTCOIL	NTCOIL*P	RESETCOIL
NCCOIL	POSCOIL	SETCOIL

### Contacts

CONTCON	LOALR*	NOCON	POSCON*
FAULT*	NCCON	NOFLT*	PTCON*P
HIALR*	NEGCON*	NTCON*P	

**Control**

DO_IO	EXIT_FOR*	PID_ISA	SVC_REQ
DRUM	FOR_LOOP*	SER	
END_FOR*	PID_IND	SUS_IO*	

**Conversions**

BCD4_TO_INT	DINT_TO_BCD8*	INT_TO_REAL	REAL_TO_WORD	UINT_TO_REAL*
BCD4_TO_REAL	DINT_TO_INT*	INT_TO_UINT*	TRUNC_DINT	WORD_TO_REAL
BCD4_TO_UINT*	DINT_TO_REAL	RAD_TO_DEG	TRUNC_INT	
BCD8_TO_DINT*	DINT_TO_UINT*	REAL_TO_DINT	UINT_TO_BCD4*	
BCD8_TO_REAL*	INT_TO_BCD4	REAL_TO_INT	UINT_TO_DINT*	
DEG_TO_RAD	INT_TO_DINT*	REAL_TO_UINT*	UINT_TO_INT*	

**Counters**

DNCTR	UPCTR
-------	-------

**Data Move**

BLK_CLR_WORD	BUS_TS_BYTE* <sup>P</sup>	DATA_INIT_UINT*	SWAP_WORD*
BLKMOV_DINT*	BUS_TS_DWORD* <sup>P</sup>	DATA_INIT_WORD*	VME_CFG_READ* <sup>70</sup>
BLKMOV_DWORD*	BUS_WRT_BYTE* <sup>P</sup>	MOVE_BOOL	VME_CFG_WRITE* <sup>70</sup>
BLKMOV_INT	BUS_WRT_DWORD* <sup>P</sup>	MOVE_DINT*	VME_RD_BYTE* <sup>70</sup>
BLKMOV_REAL	BUS_WRT_WORD* <sup>P</sup>	MOVE_DWORD*	VME_RD_WORD* <sup>70</sup>
BLKMOV_UINT*	COMM_REQ	MOVE_INT	VME_RMW_BYTE* <sup>70</sup>
BLKMOV_WORD	DATA_INIT_ASCII*	MOVE_REAL	VME_RMW_WORD* <sup>70</sup>
BUS_RD_BYTE* <sup>P</sup>	DATA_INIT_COMM*	MOVE_UINT*	VME_TS_BYTE* <sup>70</sup>
BUS_RD_DWORD* <sup>P</sup>	DATA_INIT_DINT*	MOVE_WORD	VME_TS_WORD* <sup>70</sup>
BUS_RD_WORD* <sup>P</sup>	DATA_INIT_DLAN* <sup>70</sup>	SHFR_BIT	VME_WRT_BYTE* <sup>70</sup>
BUS_RMW_BYTE* <sup>P</sup>	DATA_INIT_DWORD*	SHFR_DWORD*	VME_WRT_WORD* <sup>70</sup>
BUS_RMW_DWORD* <sup>P</sup>	DATA_INIT_INT*	SHFR_WORD	
BUS_RMW_WORD* <sup>P</sup>	DATA_INIT_REAL*	SWAP_DWORD*	

## Data Table

ARRAY_MOVE_BOOL	FIFO_WRT_WORD*	SEARCH_GE_UINT*	SEARCH_NE_DINT
ARRAY_MOVE_BYTE	LIFO_RD_DINT*	SEARCH_GE_WORD	SEARCH_NE_DWORD*
ARRAY_MOVE_DINT	LIFO_RD_DWORD*	SEARCH_GT_BYTE	SEARCH_NE_INT
ARRAY_MOVE_DWORD*	LIFO_RD_INT*	SEARCH_GT_DINT	SEARCH_NE_UINT*
ARRAY_MOVE_INT	LIFO_RD_UINT*	SEARCH_GT_DWORD*	SEARCH_NE_WORD
ARRAY_MOVE_UINT*	LIFO_RD_WORD*	SEARCH_GT_INT	SORT_INT*
ARRAY_MOVE_WORD	LIFO_WRT_DINT*	SEARCH_GT_UINT*	SORT_DINT*
ARRAY_RANGE_DINT*	LIFO_WRT_DWORD*	SEARCH_GT_WORD	SORT_WORD*
ARRAY_RANGE_DWORD*	LIFO_WRT_INT*	SEARCH_LE_BYTE	TBL_RD_DINT*
ARRAY_RANGE_INT*	LIFO_WRT_UINT*	SEARCH_LE_DINT	TBL_RD_DWORD*
ARRAY_RANGE_UINT*	LIFO_WRT_WORD*	SEARCH_LE_DWORD*	TBL_RD_INT*
ARRAY_RANGE_WORD*	SEARCH_EQ_BYTE	SEARCH_LE_INT	TBL_RD_UINT*
FIFO_RD_DINT*	SEARCH_EQ_DINT	SEARCH_LE_UINT*	TBL_RD_WORD*
FIFO_RD_DWORD*	SEARCH_EQ_DWORD*	SEARCH_LE_WORD	TBL_WRT_DINT*
FIFO_RD_INT*	SEARCH_EQ_INT	SEARCH_LT_BYTE	TBL_WRT_DWORD*
FIFO_RD_UINT*	SEARCH_EQ_UINT*	SEARCH_LT_DINT	TBL_WRT_INT*
FIFO_RD_WORD*	SEARCH_EQ_WORD	SEARCH_LT_DWORD*	TBL_WRT_UINT*
FIFO_WRT_DINT*	SEARCH_GE_BYTE	SEARCH_LT_INT	TBL_WRT_WORD
FIFO_WRT_DWORD*	SEARCH_GE_DINT	SEARCH_LT_UINT*	
FIFO_WRT_INT*	SEARCH_GE_DWORD*	SEARCH_LT_WORD	
FIFO_WRT_UINT*	SEARCH_GE_INT	SEARCH_NE_BYTE	

## Math

ABS_DINT*	ADD_UINT*	MOD_DINT	MUL_REAL	SUB_REAL
ABS_INT*	DIV_DINT	MOD_INT	MUL_UINT*	SUB_UINT*
ABS_REAL*	DIV_INT	MOD_UINT*	SCALE_INT	
ADD_DINT	DIV_MIXED*	MUL_DINT	SCALE_WORD	
ADD_INT	DIV_REAL	MUL_INT	SUB_DINT	
ADD_REAL	DIV_UINT*	MUL_MIXED*	SUB_INT	

**Program Flow**


CALL	ENDMCR	JUMP	LABELN	V_WIRE
COMMENT	ENDMCRN	JUMPN	MCR	
END	H_WIRE	LABEL	MCRN	

**Relational**

CMP_DINT*	EQ_UINT*	GT_REAL	LT_INT	RANGE_DINT
CMP_INT*	GE_DINT	GT_UINT*	LT_REAL	RANGE_DWORD*
CMP_REAL*	GE_INT	LE_DINT	LT_UINT*	RANGE_INT
CMP_UINT*	GE_REAL	LE_INT	NE_DINT	RANGE_UINT*
EQ_DINT	GE_UINT*	LE_REAL	NE_INT	RANGE_WORD
EQ_INT	GT_DINT	LE_UINT*	NE_REAL	
EQ_REAL	GT_INT	LT_DINT	NE_UINT*	

**Timers**

OFDT_HUNDS	ONDTR_HUNDS	TMR_HUNDS
OFDT_SEC*	ONDTR_SEC*	TMR_SEC*
OFDT_TENTHS	ONDTR_TENTHS	TMR_TENTHS
OFDT_THOUS	ONDTR_THOUS	TMR_THOUS

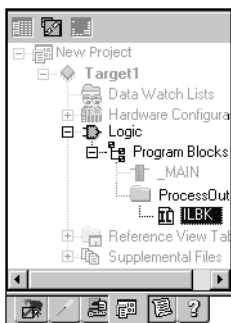

Navigator: Project tab

An IL Block

## IL EDITOR

Instruction List (IL) is a programming language specified by the IEC 61131-3 standard. This text language is accumulator-based and much like the assembly languages used for programming microprocessors. The instructions executed by the IL program modify or use an accumulator that is located in PLC memory. Two types of accumulators are defined: one analog accumulator for numeric and bitwise operations and eight boolean accumulators for discrete logic to support eight levels of nested boolean expressions. The IL editor is free-form with an option to apply a standard formatting rule. The appearance and behavior of the IL editor is user-configurable.

**Note:** Only Series 90™-30, VersaMax PLCs, and VersaMax Nano/Micro support IL logic.

### To configure accumulators

1. In the Project tab of the Navigator, right-click the Program Blocks folder and choose **Properties**.  
The Inspector opens, displaying the Accumulator Address properties.
2. In the Boolean Start property, enter the reference address of the first of eight PLC memory locations to use for boolean accumulators.  
The ending address is calculated automatically. The memory area must be %T, %M, or %Q.
3. In the Analog Start property, enter the PLC memory locations to use for the analog accumulator.  
The ending address is calculated automatically. The memory area must be %R, %AI or %AQ.

### To create an IL block

1. In the Projects tab of the Navigator, right-click the Program Blocks folder, point to **New**, and choose **IL Block**.  
An empty IL block with the default name "ILBkn" is added to the folder, where *n* represents a unique number.
2. Rename the block as desired.

### To open an IL block for editing

- In the Project tab of the Navigator, right-click an IL Block and choose **Open**.  
The block opens in the IL editor.

**Note:** You can have multiple blocks open for editing. To navigate to another open IL block, click the tab displaying its name at the bottom of the editor window.

## Working with the IL Editor Offline

Most project development is carried out while offline from the target PLC. Editing while offline provides maximum flexibility in editing and allows you to interact with the Machine Edition tools as shown in the following diagram.

The screenshot shows the SIMPLICITY Machine Edition IL Editor interface. The main window displays a ladder logic program with the following code:

```

Created: Friday, February 02, 2001

-----
*This is a test of Basic Boolean IL Logic. When r
*Test Discrete Variables should be ON.

'Boolean Storage Cases
LD BOOL #ALW_ON
ST_BOOL Test_STBool
LD BOOL #ALW_OFF
STN_BOOL T1[BOOL Target1.#ALW_OFF]

'Boolean Operators TRUE Cases
LD BOOL #ALW_ON
AND #ALW_ON
ST_BOOL Test_AND_T
OR #ALW_OFF
ST_BOOL Test_OR_T
LD BOOL #ALW_OFF

```

Annotations and their descriptions:

- The Variables tab of the Navigator lists all the variables in your projects.** (Points to the Navigator window on the left showing a list of variables like #ALW\_ON, #ALW\_OFF, etc.)
- Drag and drop variables from the Variables list into the IL editor.** (Points to a variable being dragged from the Navigator to the IL code.)
- A description of a variable pops up when you hover the mouse over it.** (Points to the Inspector window showing details for the variable #ALW\_ON.)
- Configure the accumulators in the Inspector.** (Points to the Inspector window showing accumulator settings.)
- The Companion tracks all of your moves and provides information on what you click.** (Points to the Companion window showing the instruction ADD\_DINT(m1, in2) and its description.)
- Right click in the IL Editor to insert an instruction or variable.** (Points to a right-click context menu in the IL editor showing options like Insert Keyword, Insert Variable, etc.)
- The Build tab of the Feedback Zone lists error messages when you validate.** (Points to the Build tab in the Feedback Zone at the bottom right, showing validation messages.)

### To insert an instruction or function

1. In the IL editor, right-click and choose **Insert Keyword**.  
A smart list appears listing all available instruction mnemonics.
2. From the list, select an instruction and press **ENTER**.  
The instruction is inserted in your logic.

### To assign operands to an instruction

1. In the IL editor, right-click and choose **Insert Variable**.  
A smart list appears showing all your defined variables.

2. Type, or choose from the list, a variable name or reference address and then press ENTER.

The name appears in your logic.

**Note:** If you entered a reference address or a new variable name, you must create a variable from it.

### To create a variable from a reference address

1. In the IL editor, right-click a reference address, point to **Create “name” as**, and then choose a data type.

A variable is created and a default name is applied. For example, if the reference address is %R0032, the auto-created variable is named R00032.


### To create a variable from a name

1. In the  IL editor, right-click a name, point to **Create “name” as**, and then choose a data type.

A variable is created with the name you right-clicked.


2. Map the variable to PLC memory. (See page 17.)

### To move or duplicate IL logic

1. In the  IL editor, select a range of logic.
2. To move it, click the selection and drag it to a new location. To duplicate it, press CTRL while clicking the selection, and drag the selection to where you want to place the duplicate.


When you release the mouse button, the selection is respectively moved to the new location or a duplicate copy of the selected logic is placed in the new area.

### To insert an inline comment

1. In the  IL editor, click where you want to insert an inline comment.
2. Type an apostrophe (') followed by comment text.

Press ENTER to complete the comment.

### To insert a block comment

1. In the  IL editor, click where you want to insert a block comment.
2. Type (\* followed by comment text.

A block comment can contain any number of characters and can span multiple lines.

3. Type \*) to complete the block comment.

### To reformat IL code

- In the  IL editor, right-click and choose **Beautify Source**.

The entire content of the IL editor is reformatted according to the default formatting (indentation) rules.

### Working with the IL Editor Online

While online to a target PLC, the IL editor enables you to edit logic, monitor data values, and change or force the state of BOOL variables in real-time. This allows you to test the execution of logic, to trigger an event within an executing project, or to remove an element from logic execution.

The screenshot shows the SIMPLICITY Machine Edition interface with the IL Editor open. The main window displays a ladder logic program with the following code:

```

Created: Friday, February 02, 2001

-----
This is a test of Basic Boolean IL Logic. When run,
All Test Discrete Variables should be ON.
-----
'Boolean Storage Cases
LD BOOL #ALW_ON
ST BOOL Test_STBool
LD BOOL #ALW_OFF
STN BOOL Test [BOOL Target1 #ALW_OFF = ON]

'Boolean Operators TRUE Cases
LD BOOL #ALW_ON
AND #ALW_ON
ST BOOL Test_AND_T
OR #ALW_OFF
ST BOOL Test_OR_T
LD BOOL #ALW_OFF

```

Annotations in the image point to various features:

- Target icon changes to indicate status of the PLC.** (Points to the Target icon in the top toolbar)
- Right-click a BOOL to change or force its state.** (Points to a right-click context menu over the variable `#ALW_OFF` in the code)
- The Companion tracks your moves and provides information on what you click.** (Points to the IL Block description window at the bottom left)
- Hover over a variable to show a popup of its value.** (Points to a tooltip over the variable `#ALW_OFF`)
- The Feedback Zone indicates that a connection has been established with the PLC.** (Points to the status bar at the bottom of the window)
- Monitor and change variable values in the Data Watch.** (Points to the Data Watch table at the bottom right)
- PLC status is indicated in the status bar.** (Points to the status bar at the bottom of the window)

The Data Watch table shows the following values:

Address	Value
0	0
0	0
0	0
12:00:00.00...	

#### To monitor a data value

- Click anywhere in the IL editor and hover the mouse pointer over a variable.

A tooltip appears, showing the variable's current value. This value, however, does not update. You must move the mouse pointer away and back over the variable.

#### To change a BOOL variable's state

- In the IL editor, right-click the BOOL variable whose value you want to change and choose **Turn On** or **Turn Off**.

The state of the variable in the target PLC changes when the command is received. It remains in that state until acted on by the PLC's logic.



### To force a BOOL variable's state

- In the IL editor, right-click a BOOL variable and choose **Force On** or **Force Off**.

The state of the forced variable will remain unchanged, regardless of any actions by the PLC's logic.

### To remove the force from a BOOL variable

- In the IL editor, right-click a BOOL variable and choose **Remove Forces**.




The state of the forced variable will be controlled by the PLC's logic.

## Writing Changes to a Target PLC

You can change your IL logic while online, but you must write the changes to the PLC to maintain equality. Writing changes to a target PLC requires the PLC to be online and running.


**Note:** If you go offline, you can do a regular download.

### To write changes to the target PLC (if the target PLC supports it)

1. While online to a target PLC, make a change to IL logic.
2. In the  Project tab of the  Navigator, right-click the  target, point to **Online Commands**, and choose **Write Changes to PLC**.

You are prompted to confirm a Run Mode Store. That is, the altered IL block will be downloaded to the PLC without stopping the PLC.

---

 **Want to know more?** In the Help Index, look up "Writing Changed Logic to the PLC"

---

## IL Instructions and Functions

The following is a list of all IL instructions and functions available in Logic Developer - PLC. An asterisk (\*) indicates the functions exclusive to VersaMax® PLCs. Companion help indicates which PLCs support the other functions.

### Basic Instructions

ADD	CAL	GT	MOD	NT	R	SUB
AND	DIV	LE	MUL	OR	RET	XORN
AND_WORD	EQ	LT	NE	ORN	RETC	
ANDN	GE	MCRN	NOT	PT	S	

### Advanced Math

ACOS	COS	LN	SQRT_INT	TAN
ASIN	EXP	LOG	SQRT_DINT	
ATAN	EXPT	SIN	SQRT_REAL	

### Bit Operations

AND_WORD	BIT_SEQ	MASK_COMP_DWORD	OR_WORD	SHIFTL_WORD
BIT_CLR_WORD	BIT_SET_WORD	MASK_COMP_WORD	ROL_WORD	
BIT_POS_WORD	BIT_TEST_WORD	NOT_WORD	ROR_WORD	

### Control

DO_IO	PID_ISA
DRUM	SER
PID_IND	SVC_REQ

### Conversions

BCD4_TO_INT	DINT_TO_REAL	RAD_TO_DEG	REAL_TO_WORD	WORD_TO_REAL
BCD4_TO_REAL	INT_TO_BCD4	REAL_TO_DINT	TRUNC_DINT	
DEG_TO_RAD	INT_TO_REAL	REAL_TO_INT	TRUNC_INT	

### Counters

DNCTR	UPCTR
-------	-------

**Data Move**

BLK_CLR_WORD	BLKMOV_DINT	MOVE_BOOL	MOVE_WORD
BLKMOV_INT	COMM_REQ	MOVE_REAL	SHFR_WORD
BLKMOV_REAL	MOVE_INT	SHFR_BIT	

**Data Table**

ARRAY_MOVE_BOOL	SEARCH_EQ_INT	SEARCH_GT_DINT	SEARCH_LT_BYTE	SEARCH_NE_WORD
ARRAY_MOVE_BYTE	SEARCH_EQ_WORD	SEARCH_GT_INT	SEARCH_LT_DINT	
ARRAY_MOVE_DINT	SEARCH_GE_BYTE	SEARCH_GT_WORD	SEARCH_LT_INT	
ARRAY_MOVE_INT	SEARCH_GE_DINT	SEARCH_LE_BYTE	SEARCH_LT_WORD	
ARRAY_MOVE_WORD	SEARCH_GE_INT	SEARCH_LE_DINT	SEARCH_NE_BYTE	
SEARCH_EQ_BYTE	SEARCH_GE_WORD	SEARCH_LE_INT	SEARCH_NE_DINT	
SEARCH_EQ_DINT	SEARCH_GT_BYTE	SEARCH_LE_WORD	SEARCH_NE_INT	

**Math**

ADD_DINT	DIV_DINT	MOD_DINT	MUL_DINT	SCALE_WORD*	SUB_REAL
ADD_INT	DIV_INT	MOD_INT	MUL_REAL	SUB_DINT	
ADD_REAL	DIV_REAL	MUL_INT	SCALE_INT*	SUB_INT	

**Program Flow**


CALL	ENDMCR	JUMP	LABELN	V_WIRE
COMMENT	ENDMCRN	JUMPN	MCR	
END	H_WIRE	LABEL	MCRN	

**Relational**

EQ_DINT	GE_DINT	GT_DINT	LE_DINT	LT_DINT	NE_DINT	RANGE_DINT
EQ_INT	GE_INT	GT_INT	LE_INT	LT_INT	NE_INT	RANGE_INT
EQ_REAL	GE_REAL	GT_REAL	LE_REAL	LT_REAL	NE_REAL	RANGE_WORD

**Timers**

OFDT_HUNDS	ONDTR_HUNDS	TMR_HUNDS
OFDT_TENTHS	ONDTR_TENTHS	TMR_TENTHS
OFDT_THOUS	ONDTR_THOUS	TMR_THOUS

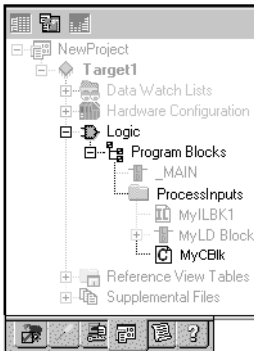
**Navigator: Project tab**
**A C Block**

## C BLOCKS

A C block is an independent section of executable code written in the C programming language, that is downloaded to and executed on the target PLC. C blocks are created externally using GE Fanuc's C Programming Toolkit and then imported into a project. A C block compiled for PACSystems™ has a .gefelf extension. A C block compiled for Series 90™-70 or Series 90™-30 has a .exe extension. C Blocks can be called as a subroutine from another block (LD or IL) but cannot call another block.


For more information on developing C Blocks, refer to *C Programmer's Toolkit for Series 90 PLCs* (GFK-0646) and *PACSystems RX7i C Toolkit User's Guide* (GFK-2259).

## Working with C blocks

### To import a C block

1. In the Projects tab of the Navigator, right-click the Program Blocks folder and choose **Add C block**.

The Open dialog box appears.

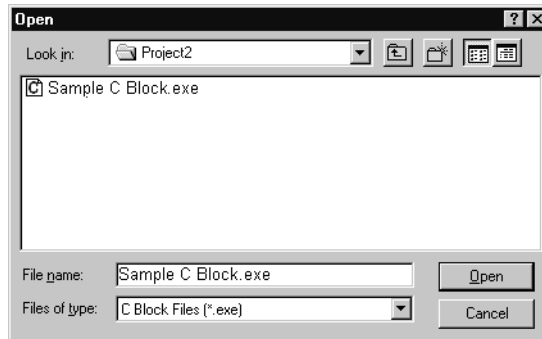

2. Browse to the .exe or .gefelf file you want to import and click **Open**.

The selected file is added to the Program Blocks folder with the same name as the .exe or gefelf file.

**Note:** You can then move the C Block to a user-defined folder.




---


**Want to know more?** In the Help Index, choose "C" and "User-Defined Folder".

---

## To set a C block's parameters

**Note:** This procedure applies only to PACSystems™ and to Series 90™-70 targets and to C blocks that were written to require parameters.

1. In the  Projects tab of the  Navigator, right-click the  C block and choose **Properties**.

The  Inspector displays the block's properties.


2. In the Inspector, select the Parameters property and click .

The Parameters dialog box opens.


3. Type a name and description for each required input and output parameter.

For information on the required parameters, consult the written documentation for the C block. The names you enter will display in the CALL instruction. The names and descriptions will display as tooltip help when you hover over the CALL instruction.

---

 **Want to know more?** In the Help Index, enter "Parameterized" and select the "C Block" help topic.

---

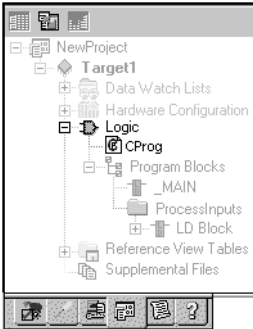
**Navigator: Project Tab**
**A C Program**

## C PROGRAMS

**Note:** C programs are supported only on Series 90™-70 CPUs, firmware release 6.00 and later.

A C program is an independent section of executable code, written in C language, that is downloaded to and executed on the associated target PLC. To develop a C program, use GE Fanuc's *C Programmer's Toolkit for Series 90 PLCs User's Manual* (GFK-0646). You then import it into a project.

A C program has access to all the % reference tables of the PLC except for the \_MAIN LD block's %P memory and the %L memory of any other LD block. A C program can also call any of the numerous PLC-embedded function blocks, which are included in the C Programmer's Toolkit.

A C program cannot be called as a subroutine. Execution is controlled only through scheduling. A C program cannot call another block as a subroutine.

By setting the parameters of a C program, you enable it to access memory directly. When a C program begins to execute, it reads the data for all the parameters and makes a copy of the data. If the C program's execution is interrupted or time-sliced over multiple scans, the C program, when it resumes execution, uses the copy of the data that it made upon beginning to execute.

You can add C programs to a Series 90™-70 target only if the \_MAIN block is an LD block. The LD program is then treated as a user program, which can be scheduled. The maximum number of C programs you can add is 15.

If you have State Logic on a Series 90™-70 target, it is compiled into a C Program called \_STATE, whether State Logic coexists with LD logic or not. If State Logic does not coexist with LD logic, \_STATE is the only C program supported by the target.

C programs can coexist with State Logic on a Series 90™-70 PLC. For such a target, the State Logic is compiled into a C program. This C program is named \_MAIN if there is no LD logic; however, if State Logic coexists with LD logic, the State Logic is compiled into a C program named \_STATE and one LD block must be named \_MAIN.

## User Programs


User programs consists of:

- C programs
- The LD program, if the \_MAIN block is an LD block.

## Working with User Programs

### To configure execution scheduling

1. In the  Projects tab of the  Navigator, right-click a  C program or the `_MAIN` LD block, and choose **Properties**.


The  Inspector displays the user program's properties.


2. In the Inspector, expand the **Scheduling** property.
3. Select a Schedule Mode.
4. Select the other properties used in the schedule mode you selected.
5. Click **OK**.

**Note:** If you made any entries, they are checked when you click **OK**. You must correct any errors before you can close the dialog box by clicking the OK button.

### Setting a C program's parameters

**Note:** You must provide a list of all the input and output parameters that the C program requires. The LD program does not use parameters.

1. In the  Projects tab of the  Navigator, right-click a  C program and choose **Properties**.

The  Inspector displays the C program's properties.

2. In the Inspector, select the **Parameters** property and click  .

The Parameters dialog box opens.

3. On the **Input** and **Output** tabs, enter up to 8 input and up to 8 output parameters. Each parameter has its own row on the tab. For each parameter, double-click the following cells and enter the required data:
  - **Name:** The parameter's name.
  - **Type:** The parameter's data type.
  - **Length:** The length of the input or output reference.
  - **Variable:** The first data item associated with the parameter.
  - **Description:** (Optional) The parameter's description.

---

 **Want to know more?** In the Help Index, choose "C Program".


---





# 6

## Motion Programming

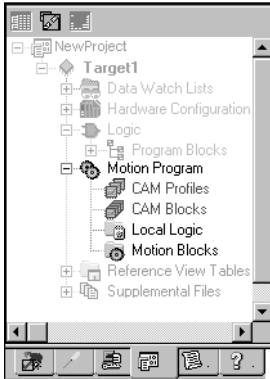




**Navigator: Project tab**

**Motion Program nodes**

Logic Developer - PLC supports motion programming for the Motion Mate DSM314 motion control module. A high performance, easy-to-use, multi-axis motion control module, the Motion Mate DSM314 is highly integrated with the Series 90™-30 PLC logic solving and communication functions.

The DSM314 (see page 55) supports 10 motion programs, 40 subroutines and a maximum total of 1000 motion program statements. Logic Developer - PLC, making motion programming possible, supports the following motion editors:




-  PLC Motion Editor
-  Local Logic Editor
-  CAM Editor






This chapter outlines basic procedures that will get you started with Logic Developer - PLC to create motion programs, using these three motion editors.

### To add a Motion component to a target



**Target right-click menu**


- In the  Project tab of the  Navigator, right-click the  target, point to **Add Component** and then choose **Motion**.

A  Motion Program node is added to your project. Included are empty  Motion Blocks,  Local Logic,  CAM Profiles and  CAM Blocks folders.

## PLC MOTION EDITOR

Logic Developer - PLC includes a PLC Motion Editor, which enables you to create PLC Motion blocks for the DSM314. This text-based editor is configurable as to its appearance and behavior. Comments and white space are not considered as PLC Motion program statements. Motion programming has a different programming syntax from Local Logic.

### To add a Motion Block

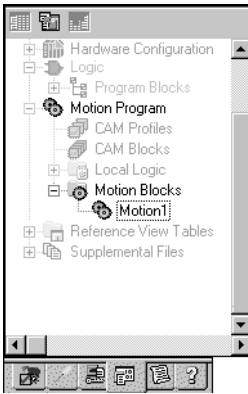

Navigator: Project tab

Motion Blocks

1. In the Project tab of the Navigator, expand the Motion Program folder.
2. Right-click the Motion Blocks folder and choose **New**.

A new empty PLC Motion block with a default name is added to your project.

3. Rename the block as desired.

### To open a motion block for editing

- In the Project tab of the Navigator, right-click the **Motion Block** node and choose **Open**.

The block opens for editing in the PLC Motion editor

## Working with the Motion Editor


### To insert a command

1. In the  Motion editor, right-click and choose **Insert Keyword**.

A smart list appears showing all available motion commands.

2. Select the appropriate command from the smart list and press **ENTER**.

The command is placed in the motion editor.

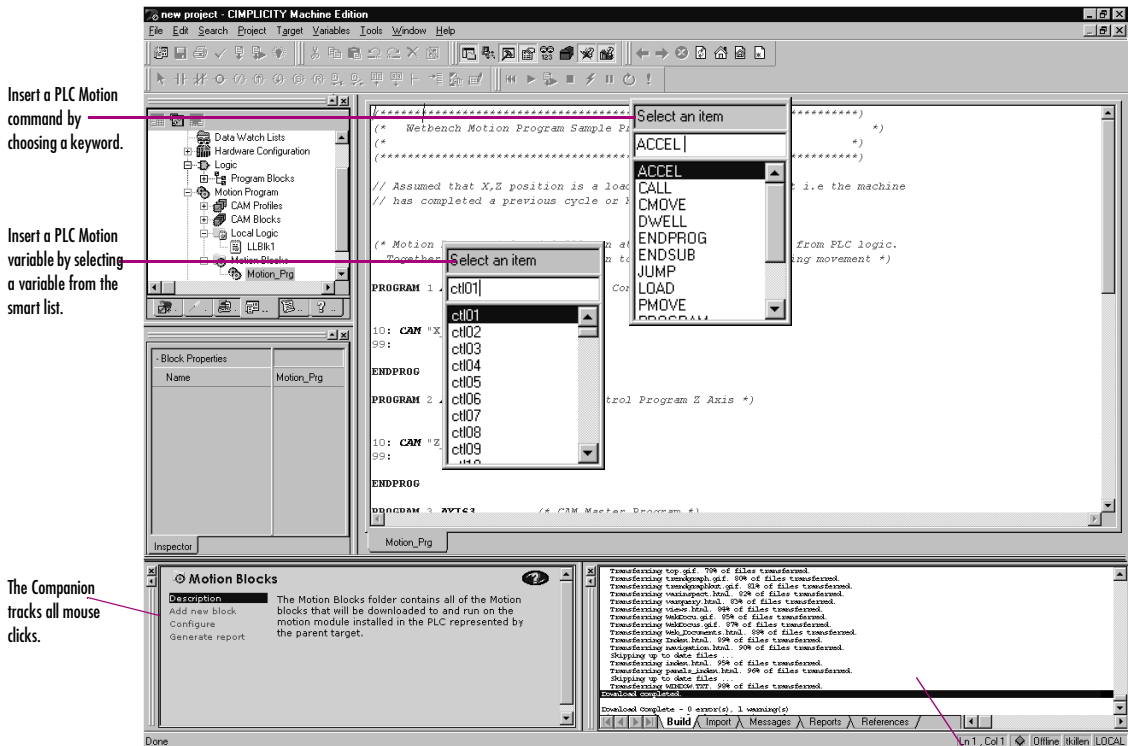


? Want to know more? In the Help Index, choose "PLC Motion Editor".

## Motion Commands

ACCEL	The ACCEL statement sets the axis acceleration for subsequent moves and remains in effect in a given program unless changed. Note: If a move instruction is executed before ACCEL, the tag Acceleration is used.
BLOCK NUMBER	Block numbers may be used as the destination of JUMP commands. Block numbers must be unique and can be between 1 and 65535.
CAM	The CAM statement starts CAM motion and specifies exit conditions.
CAM-LOAD	CAM-LOAD loads a parameter register with the starting location for a CAM slave axis.
CAM-PHASE	CAM-PHASE sets the phase for CAM commands.
CALL	The CALL command executes another block as a subroutine
CMOVE	The CMOVE command programs a continuous move using the specified position and acceleration mode.
DWELL	DWELL causes motion to cease for a specified time period before processing the next command.
ENDPROG	The ENDPROG statement terminates a PLC Motion program definition.
ENDSUB	The ENDSUB statement terminates a PLC Motion subroutine definition.
JUMP	Jump to a block number or a sync block within the current program or subroutine. The jump may be unconditional or conditional based on the status of a CTL bit.
LOAD	Initializes or changes a parameter data register with a 32-bit two's-complement integer value.
PMOVE	The PMOVE command programs a positioning move using the specified position and accelerator mode.
PROGRAM	The PROGRAM statement is the first statement in a motion program. The program statement identifies the program number (1-10) and the axis configuration. Program definitions cannot nest.
SUBROUTINE	The SUBROUTINE statement is the first statement in a motion subroutine. The subroutine statement identifies the subroutine number (1-40) and the axis configuration.
SYNC BLOCK	A sync block is a special case of a block number. A sync block may only be used in multi-axis programs.
VELOC	Sets the process VELOCITY used by subsequent motion program move commands and remains in effect until changed by another VELOC statement.

## LOCAL LOGIC

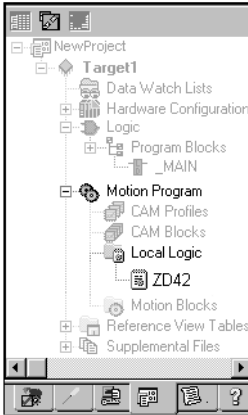

Navigator: Project tab

Local Logic





A Local Logic program runs synchronously with the Motion program, but is independent of the PLC's CPU scan. This allows the DSM314 to interact much more quickly with motion I/O signals on its faceplate connectors than would be possible if the logic for the signals was handled in the main ladder program running on the PLC.

Local Logic language uses free-form, text-based circuits and contains basic mathematical and logical constructs. Local Logic programming syntax allows you to assign a variety of logic tasks to your motion programs while working in conjunction with PLC Logic programs and motion programs to yield a flexible programming environment. Because it uses straightforward, understandable syntax, it is easy to gain proficiency with this editor.



The Local Logic programming language supports assignments, conditional statements, arithmetic, logical and relational statements. Local Logic provides the user access to motion controller data, parameters using a fixed set of variables, control and status bits.

- Parameter data - accessible from Local Logic host PLC and motion programs. The parameter data are similar to variables in a program.
- CTL bits - allow the Local Logic program or host PLC to signal the motion program to start an event.
- Motion program block numbers - the current block number can be used within the Local Logic program or host PLC to make an action occur only during a specific motion programming section.

### To create a Local Logic block

1. In the  Projects tab of the  Navigator, right-click the  Local Logic folder and choose **New**.  
A new  Local Logic block with a default name is created.
2. Rename the block as required.

### To open a Local Logic block for editing

- In the  Projects tab of the  Navigator, right-click the  Local Logic block and choose **Open**.  
The Local Logic block opens in the Local Logic editor and is ready for editing.

### Working with Local Logic Editor

The Local Logic editor has its own distinctive syntax for constructing Local Logic programs.

Navigator shows the organization of your project.

Drag and drop variables from the Local Logic Variable table into the Local Logic editor.

NAME	TYPE	GROUP	DESCRIPTION	R	W
Actual_Position_1	32 Bits	Status Variables	Actual_Position (user units)	X	
Actual_Velocity_1	32 Bits	Status Variables	Actual_Velocity (user units/sec)	X	
Analog_In1_1	Signed 16 Bits	Face Plate I/O	Analog Input 1 +/- 32000 +/- 4.10 dv	X	
Enable_1	Bit	Control Variables	Set this bit = 1 to enable the follower		X
Error_Code	Unsigned 16 Bits	Status Variables	Axis 1 Error Code	X	
FeedHold_1	Bit	Control Variables	Set this bit = 1 to initialize feedhold	X	
Follower_Enable	Bit	Status Variables	ON when follower is enabled	X	
Follower_Ramp_1	Bit	Status Variables	ON when follower accel / decel ramp is active	X	
Follower_Ratio_1	Signed 16 Bits	Control Variables	Ratio A cmd for follower A/B (slave/master) ratio	X	

```

Created: 06/16/2001
Description:

IF First_Local_Logic_Sweep THEN      (* If 1 sweep then *)
  P001:=0;                            (* Initial. *)
  P003:=0;                            (* Initial. *)
  P004:=0;                            (* Initial. *)
END_IF;

P001:=P001 + 2;                      (* Time in Mill

P100:=P001 MOD 1000;                (* Check to see in 1 Sec (1000 mSec) Passed *)
IF P100 = 0 THEN                    (* If Remainder of MOD Operation = 0, 1 Sec Passed *)

```

Select an item

- ABS
- BWAND
- BWNOT
- BWOR
- BWXOR
- END\_IF
- FALSE
- IF
- MOD

Right-click to choose commands from a list.

### To insert a Local Logic command

1. In the Local Logic editor, right-click and choose **Insert Keyword** from the menu.

A smart list appears showing all available Local Logic commands.

2. Select the desired command in the smart list and press ENTER

The command is inserted.

**Note:** You can drag variables from the Local Logic Variable Table to the Local Logic editor.

## Local Logic Variables

Local Logic is designed to complement a PLC's logic and mathematical capabilities. Solving small Local Logic and mathematical sets require a tight synchronization with the controlled motion.

Logic Developer - PLC includes a table containing Local Logic variables, the Local Logic Variable Table (LLVT), that you can drag into your logic programs. As illustrated in the diagram below, the LLVT has several tabs that organize the variables by category:

Click a heading to sort the table in ascending order. Click again to sort descending.

Right-click a name to copy it to the clipboard.

Click a tab to view a group of variables

NAME	TYPE	GROUP	DESCRIPTION	R	W
Actual_Position_1	32 Bits	Status Variables	Actual_Position (user units)	X	
Actual_Velocity_1	32 Bits	Status Variables	Actual_Velocity (user units/sec)	X	
Analog_Input_1_1	Signed 16 Bits	FacePlate I/O	Analog Input 1 +/- 32000 = +/- 10.Dv	X	
Analog_Input_2_1	Signed 16 Bits	FacePlate I/O	Analog Input 2 +/- 32000 = +/- 10.Dv	X	
Axis_OK_1	Bit	Status Variables	ON when axis is ready for commands	X	
Block_1	Unsigned 16 Bits	Status Variables	Motion program block number	X	
Commanded_Position_1	32 Bits	Status Variables	Commanded_Position (user units)	X	
Commanded_Torque_1	32 Bits	Status Variables	Reports digital servo torque in units of 0.01%	X	
Commanded_Velocity_1	32 Bits	Status Variables	Commanded_Velocity (user units/sec)	X	
Digital_Output_1_1	Bit	FacePlate I/O	Set this bit = 1 to turn on 24v output OUT1_A		X
Digital_Output_3_1	Bit	FacePlate I/O	Set this bit = 1 to turn on 5v output OUT3_A		X
Drive_Enabled_1	Bit	Status Variables	ON when enable output to servo is active	X	
Enable_Follower_1	Bit	Control Variables	Set this bit = 1 to enable the follower		X
Error_Code_1	Unsigned 16 Bits	Status Variables	Axis 1 Error Code	X	
FeedHold_1	Bit	Control Variables	Set this bit = 1 to initiate feedhold		X
Follower_Enabled_1	Bit	Status Variables	ON when follower is enabled	X	
Follower_Ramp_Active_1	Bit	Status Variables	ON when follower accel / decel ramp is active	X	

### To view the LLVT

1. In the InfoViewer tab of the Navigator, expand the Logic Developer - PLC library then expand the Local Logic Editor book and double-click Local Logic Variable Table.

The LLVT appears in the Infoviewer.

The variables or data in each tab are:

Axis 1	Variables specific to axis 1
Axis 2	Variables specific to axis 2
Axis 3	Variables specific to axis 3
Axis 4	Variables specific to axis 4
Global	Global data such as module status code
CTL bits	DSM general Control/Status bits
Parameter Registers	DSM parameter data

The table has six columns:

Name	Contains the variable name that is to be used within a Local Logic program
Type	The data type for this variable. For example, 32-bit means that this variable is a 32-bit variable.
Group	The group this variable is placed in. For example, Faceplate I/O means that this variable refers to a point on the module faceplate.
Description	This column contains a textual description of the variable. When the user hovers the mouse pointer over the description, a tool tip displays the description.
R	This column indicates if the variable can be read by a Local Logic program.
W	This column indicates if the variable can be written by a Local Logic program.

### To insert a Local Logic variable

1. In the Local Logic editor, right-click and choose **Insert Variable**.

A smart list appears prompting you to choose a Local Logic variable name.

2. Select a variable in the list and press ENTER.

The variable is inserted in your Local Logic.




## Local Logic Commands and Operators


Local Logic enables you to execute basic logic and mathematical functions on the DSM module. Commands use upper case characters only and are case sensitive.

ABS	TRUE	-(minus)	<= (less than or equal to)
BWAND	FALSE	/(divide)	<> (not equal)
BWOR	IF	*(multiply)	
BWXOR	THEN	:=(assign)	
BWNOT	END_IF	>(greater than)	
ON	MOD	< (less than)	
OFF	+ plus	>= (greater than or equal to)	

---

 **Want to know more?** In the Help Index, choose "Local Logic: an Overview".

---

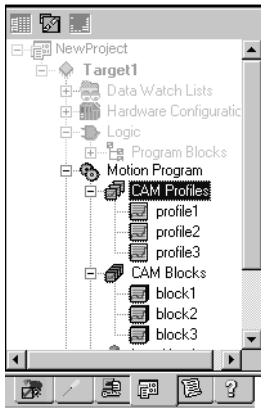

Project Tab: Navigator

CAM Blocks

## CAM EDITOR

The CAM editor is an accessory for Logic Developer - PLC motion programming that provides a means to create, edit, and manage electronic CAM profiles. Each CAM profile is a curve that specifies the response of a slave servo to a master position index. CAM profiles are referenced by name in the associated motion program and grouped into CAM blocks. Each block is intended for download to a specific motion module by means of a PLC controller. The hardware components are specified in the HWC for the associated project.

CAM profiles are user-defined in a library and then grouped into blocks by aliasing them. This allows you to reuse CAM profiles by including them in multiple CAM blocks.

### To create a CAM block

1. In the Project tab of the Navigator, expand the Motion Program folder.
2. Right-click the CAM blocks folder and choose **New**.  
A new CAM block with a default name is created.
3. Rename the block as desired.

### To import CAM blocks

1. In the Project tab of the Navigator, expand the Motion Program folder.
2. Right-click the CAM blocks folder and choose **Import from File**.  
The Open dialog box appears.
3. Browse to the CAM block you want to import (.csv or .txt file).
4. Click **Open**.  
The imported block appears in your project.

## Working with the CAM Editor

You can adjust the curves of your CAM profile to suit the specific needs of your project. With the CAM editor you create profiles by defining points on a master/slave position curve. Groups of adjoining points are allocated to sectors. Each sector is assigned a polynomial curve fit order (1,2,3) that specifies how the curve will be interpolated between points.

The screenshot shows the CAM Editor interface with the following components and callouts:

- Navigator:** Displays CAM profiles and blocks. Callout: "Navigator displays CAM profiles and blocks."
- CAM Profile Table:** Allows numeric editing and curve order grouping. Callout: "CAM profile table allows numeric editing and curve order grouping"
- Inspector:** Configure profiles and blocks in the Inspector. Callout: "Configure profiles and blocks in the Inspector."
- Companion:** Tracks your moves and provides information on what you click. Callout: "The Companion tracks your moves and provides information on what you click."
- Master/Slave Position Table:**

Master Position	Slave Position
0	0
76	-50659
127	491535
207	49767
219	70231
278	384022
282	260
389	593871
400	7565
436	13
438	248
440	7
450	6175
533	745245
580	446741
620	786331
642	58787
665	12
720	20845
960	540905
1000	0
1029	643076
1123	452047
1280	0
- Position Graph:** Curves of the profile can be adjusted and edited graphically. Callout: "Curves of the profile can be adjusted and edited graphically."
- Velocity/Accel/Jerk Graph:** Secondary curves show the velocity, acceleration and jerk of the CAM profile. Callout: "Secondary curves show the velocity, acceleration and jerk of the CAM profile."

### To create a CAM profile

- In the Project tab of the Navigator, right-click the CAM Profiles folder and choose **New**. A new CAM profile with a default name is added to your project.

### To configure a CAM profile

1. In the Project tab of the Navigator, right-click a CAM profile and choose **Properties**. The Inspector displays the properties of the CAM profile.
2. Adjust the properties of the CAM profile in the Inspector to specify its type and boundary conditions.


## To edit a CAM profile

1. In the  Project tab of the  Navigator, expand the  Motion Program folder and double-click a  CAM profile.

A graphical representation of your profile appears in the profile editor and a numeric representation appears in the profile table.

2. Insert and move points in the profile editor or table.
3. Group points into sectors in the profile table and assign curve fit order to each sector.


## To add an alias to a CAM block

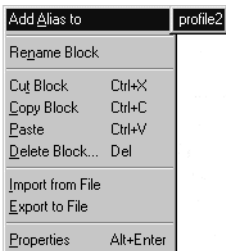

- In the  Project tab of the  Navigator, right-click a  CAM block, point to **Add Alias to**, and then choose a profile.

**Note:** Aliases correspond to CAM profiles within CAM blocks. In order to create aliases for CAM blocks, you must have previously created CAM profiles.

---

 **Want to know more?** In the Help Index, choose "CAM".

---

# Index

---

## A

- Access Control
  - Setting 65
- Accumulators
  - Configuring 79
- Adding
  - Carrier/Base to VersaMax
    - Remote I/O 60
  - DSM314 Motion Module 55
  - Ethernet Modules
    - (PACSystems™) 49
    - Genius Bus Controllers 53
    - Modules to a Carrier/Base 61
  - Adding Targets 24
  - Address and Length (LD)
    - Configuring 68
  - Address Use Report 40
  - Advanced Math Functions
    - IL 84
    - LD 75
  - Aliases 102
  - Analog Start Address 79
  - Arrays 16
  - Assigning
    - Operands to an
      - Instruction 80
    - Variables to Operands 70

## B

- Basic CPU Redundancy 50
- Basic Instructions
  - IL 84
- Bit Operations
  - IL 84
  - LD 75
- Bit References 18
- Blocks

- \_MAIN 63
- C 2, 63, 86
- CAM 100, 102
- IL 63
- LD 63, 66
- Local Logic 95
- PLC Motion 92
- Reports 40
- Scheduling 64
- BOOL Variables
  - Changing the State 82
  - Forcing the State 83
  - Removing the Force 83
- Boolean Start Address 79
- Build Tab 33, 35
- C**
- C Block Report 40
- C Blocks 2, 63, 86
  - Importing 86
  - Setting Parameters 87
- C Programs 2, 63, 88
  - Setting Parameters 89
- CAM Blocks 100, 102
  - Aliases 102
  - Creating 100
  - Importing 100
- CAM Editor 2, 91, 100
- CAM Profile Report 40
- CAM Profiles
  - Configuring 101
  - Creating 101
  - Editing 102
- Carrier/Base 61
  - Adding Modules 61
  - Adding to VersaMax Remote
    - I/O 60

- Changing the State of BOOL
  - Variables 82
- Choosing
  - CPUs 45
  - Power Supplies 45
- CIMPLICITY Machine Edition 1, 2, 6, 9, 12, 32, 35
- CIMPLICITY Motion 2, 12
- CIMPLICITY View 2, 12
- CimplicityControl 1, 12
- Coils
  - LD 75
- COM 25
- COM ports 28
- Communication
  - Configuring with non-
    - PACSystems™ RX7i 30
  - Configuring with
    - PACSystems™ RX7i 28
  - Ethernet 28
  - Serial Connection 28
- Companion 15, 33
- Companion Help
  - Using 20
- Compound Structure
  - Variables 16
- Configuring
  - Accumulators 79
  - Address and Length (LD) 67, 68
  - CAM Profiles 101
  - Communication with non-
    - PACSystems™ RX7i 30
  - Communication with
    - PACSystems™ RX7i 28
  - CPUs 32, 46
  - DSM314 55, 56

- Ethernet Communication 28
- Ethernet Daughterboard 48
- Execution Scheduling 89
- Hardware 27, 43
- PACSystems™ RX7i 44
- Redundant Systems 52
- Remote I/O 1
- Scheduling 64
- Secondary HWC 54
- Serial Communication 28
- Targets 25
- VersaMax Remote I/O 59
- Contacts
  - LD 75
- Context-Sensitive Help 15, 20
- Control Functions
  - IL 84
  - LD 76
- Conversion Functions
  - IL 84
  - LD 76
- Conversion Reports 27
- Converting Targets 26
- Copying
  - Entire LD Blocks as text 71
  - Sections of LD Blocks as text 71
  - Text into the LD Editor 71
- Counters
  - IL 84
  - LD 76
- CPE010 45
- CPU
  - Choosing 45
  - Configuring 32, 46
- CPU Redundancy
  - Setting Up Primary HWC 52
- CPU Redundancy Over
  - Genius 50, 51
- CPU364 31
- CPU374 31
- Creating
  - CAM Blocks 100
  - CAM Profiles 101
  - IL Blocks 79
- Local Logic Blocks 95
- Projects 12, 43
- Reports 40
- User-Defined Folders 64
- User-Defined RVTs 39
- Variables 17
- Variables from Names 81
- Variables from Reference
  - Addresses 81
- CTL Bits (Local Logic) 95
- Customizing the LD Editor 66
- D**
- Data Move Functions
  - IL 85
  - LD 76
- Data Table Functions
  - IL 85
  - LD 77
- Data Values
  - Monitoring 82
- Data Watch Tool 14
- Default RVTs 38
- Diagnostics 37
- Documentation Address 25
- Downloading IP Addresses
  - non-PACSystems™ 32
  - PACSystems™ RX7i 29, 30
- Downloading to a Target 35
- DSM314 55, 56, 91, 92, 95
  - Adding 55
  - Configuring 55, 56
- Dual HWC 25, 53, 54
- Duplicating IL Logic 81
- E**
- Editing
  - CAM Blocks 101
  - CAM Profiles 102
  - IL Blocks 79
  - LD Blocks 67, 70
  - LD Logic 70
  - Local Logic Blocks 95
  - PLC Motion Blocks 92
- Projects 12
- Variables 16
- Editing Online 72
- Editors
  - CAM 2, 91, 100
  - IL 2, 79
  - LD 2, 66
  - Local Logic 2, 91, 96
  - Logic 63
  - PLC Motion 2, 91, 92
- Ethernet 25, 28, 44, 48, 49
  - Adding Modules 49
- Ethernet Adapter 28
- Ethernet Daughterboard 44
  - Configuring 88
- Executing Programs 37
- Execution Scheduling
  - Configuring 89
- Expansion Racks 43, 44, 47
- F**
- Fan Kits
  - Adding to PACSystems™ RX7i 48
  - Catalog 48
  - Intelligent 43
  - Non-Intelligent 43
- Fault Locating References 27
- Fault Table Reports 37
- Fault Tables 37
- Feedback Zone 14, 33, 35, 40, 41
- Finding text
  - Global Search 65
  - In one block 65
- Folders
  - Importing 13
- Forcing BOOL Variables 74, 83
- Functions
  - IL 84
  - LD 75
- fxClasses 15
- G**
- GBC 54, 57

- Adding 53
- GE Fanuc
  - PLC 1, 2, 24
  - Remote I/O 24
  - Series 90™-70 Genius
    - Remote I/O Scanner 23
  - VersaMax Ethernet 23
  - VersaMax Genius 23
  - VersaMax Profibus 23
- Genius Bus Controller (GBC) 54, 57
  - Adding 53
- Genius Devices 44
- Genius Redundancy 50, 51
- Global Search 65
- Going Offline from a Target 34
- Going Online to a Target 34, 72

## H

- Hardware
  - Configuring 27, 43
- Hardware Configuration (HWC) 2, 26, 43
- Hardware Configuration Report 40
- Help
  - Companion 20
  - InfoViewer 20
- Help Index 21
- HWC 26, 43
  - Dual 54
  - Primary 50, 55
  - Secondary 50, 54, 55
  - Synchronizing 55
- Hyperlinks 41

## I

- IL Block Comments
  - Inserting 81
- IL BlockReport 40
- IL Blocks 63
  - Creating 79
  - Editing 79
- IL Code
  - Reformatting 81
- IL Editor 2, 79
  - Offline 80
  - Online 82
- IL Functions 84
  - Advanced Math 84
  - Basic Instructions 84
  - Bit Operations 84
  - Control 84
  - Conversion 84
  - Counters 84
  - Data Move 85
  - Data Table 85
  - Math 85
  - Program Flow 85
  - Relational 85
  - Timers 85
- IL Inline Comments
  - Inserting 81
- IL Instructions 84
  - Inserting 80
- IL Logic 2, 79
  - Duplicating 81
  - Moving 81
- Importing
  - C Blocks 86
  - CAM Blocks 100
  - Folders 13
- Index 21
- InfoViewer 15, 40
- InfoViewer Help 20
- Inserting
  - IL Block Comments 81
  - IL Inline Comments 81
  - IL Instructions 80
  - LD Instructions 68
- Inspector 14
- Installation 4
- Instruction List (IL) 79
- Instructions
  - IL 84
  - LD 75
- Interacting with the PLC 33
- Internet Explorer 15
- IP Address 25, 32

- Downloading to non-PACSystems™ 32
- Downloading to PACSystems™ RX7i 29, 30
  - Setting for Lower-End Series 90™-30 32
- Setting for PACSystems™ RX7i (Permanent) 30
- Setting for PACSystems™ RX7i (Temporary) 29
- Setting for Series 90™-30 CPU364 31
- Setting for Series 90™-30 CPU374 31
- Setting for Series 90™-70 30

## L

- Ladder Diagram Logic 2
- LD Blocks 63, 66
  - Copying Entire as Text 71
  - Copying Sections as Text 71
  - Editing 67, 70
  - Printing 41
  - Reports 40
- LD Editor 2, 66, 70
  - Copying Text into 71
  - Customizing 66
  - Offline 67
  - Online 72
- LD Functions 75
  - Advanced Math 75
  - Bit Operations 75
  - Coils 75
  - Contacts 75
  - Control 76
  - Conversion 76
  - Counters 76
  - Data Move 76
  - Data Table 77
  - Math 77
  - Program Flow 78
  - Relational 78
  - Timers 78
- LD Instructions 75

- Inserting 68
- LD Logic 2, 66, 70
- LLVT 97
- Local Logic 2, 91, 95
- Local Logic Block Report 40
- Local Logic Blocks
  - Creating 95
  - Editing 95
- Local Logic Editor 2, 91, 96
- Logic
  - IL 2, 79
  - LD 2, 66, 70
  - Local 2, 91
- Logic Developer - PC 2, 12
- Logic Developer - PLC 1, 2, 5, 6, 12, 23, 25, 33, 36, 43, 55, 63
- Logic Developer - State 2, 12, 36
- Logic Editors 63
- Logic Printouts 40
- Logicmaster 1, 12

## M

- Machine Edition 1, 2, 9, 12, 32, 35
  - Starting 10
- Making Word-for-Word
  - Changes 73
- Mapping Variables 17
- Math Functions
  - IL 85
  - LD 77
- Mnemonics 80
- Modem 25
- Module Catalog 30, 46, 47, 49, 60, 61
- Monitoring Data Values 82
- Motion 2, 12
- Motion Programming 91
- Motion Report 40
- Moving IL Logic 81

## N

- Navigator 14, 16, 34, 38
- Network Administrator 31
- Network Interface Unit (NIU) 59

- NIU 59

## O

- Offline 33
  - Going Offline from a Target 34
  - IL Editor 80
  - LD Editor 67
- Offline PLC Operations
  - Disabled 34
  - Enabled 33
- Online 33
  - Going Online to a Target 34
  - IL Editor 82
  - LD Editor 72
  - Target PLC 72
- Online Editing 72
- Online Force Report 40
- Opening a Project 13
- Operands
  - Assigning to an Instruction 80
  - Assigning Variables 70
- Options Tab 34, 38

## P

- PACSystems™ RX7i 16, 23, 26, 28, 43, 66, 72, 73, 75
  - Adding Fan Kits 48
  - Configuring 44
  - Downloading IP
    - Addresses 29, 30
  - Setting Permanent IP
    - Addresses 30
  - Setting Temporary IP
    - Addresses 29
- Parameter Data (Local Logic) 95
- Parameter Editor 31, 46, 56
- Parameters
  - C Blocks 87
  - C Programs 89
- Permanent IP Address
  - Setting for PACSystems™ RX7i 30

- PLC 1, 24
  - Family 25, 43
  - Interacting with 33
  - Motion Blocks 92
  - Motion Editor 2, 91, 92
  - Offline Operations 33, 34
  - Starting 37
  - Status 25
  - Stopping 37
- Power Supply 59
  - Choosing 45
- Primary HWC 50, 55
  - Setting Up for CPU Redundancy 52
- Printing
  - LD Blocks 41
  - Reports 41
- Product Authorization 5
- Program Flow Functions
  - IL 85
  - LD 78
- Programs
  - C Programs 2, 63, 88
  - User Programs 88, 89
- Projects
  - CIMPLICITY Machine Edition 9
    - Creating 12, 43
    - Downloading 35
    - Editing 12
    - Executing 37, 82, 99
    - Importing Folders 13
    - Opening 13
    - Uploading 35
- PSA100 45

## Q

- Quick Start 10

## R

- Racks 43, 59
  - Expansion 43, 44, 47
  - Replacing 47
  - Secondary 44, 47



- Redisplaying Reports 41
  - Redundancy 50
    - Basic CPU 50
    - Configuring Systems 52
    - CPU Over Genius 50, 51
    - Genius 50, 51
    - Wizards 52, 53
  - Reference Address 16, 39, 68
  - Reference View Tables
    - Default 38
    - User-Defined 38
    - Working with 40
  - Reference View Tables (RVT) 38
  - Reformatting IL Code 81
  - Relational Functions
    - IL 85
    - LD 78
  - Remote I/O 2, 24, 43, 60
    - Configuring 1
  - Remote I/O Scanner 57
    - Setting Up 58
  - Removing the Force from BOOL Variables 83
  - Replacing
    - Racks 47
    - Text 65
  - Reports 40
    - Address Use 40
    - C Block 40
    - CAM Profile 40
    - Conversion 27
    - Creating 40
    - Fault Table 37
    - Hardware Configuration 40
    - IL Block 40
    - LD Blocks 40
    - Local Logic Block 40
    - Motion 40
    - Online Force 40
    - Printing 41
    - Redisplaying 41
    - Variables 40
  - Reports Tab 40, 41
  - Right-Click Menu
    - HWC 45
    - Slots 44, 45
    - SNP\_ID 28
  - Starting a PLC 37
  - Starting Machine Edition 10
  - Status Bar 34
  - Stop Mode 36
  - Stopping a PLC 37
  - Sweep Time 25
  - Symbolic Variables 16, 17
  - Synchronizing
    - HWCs 55
  - System Requirements 3
- S**
- SBA Node 57
  - Scheduling
    - Blocks 64
    - Configuring 64
    - User Programs 89
  - Searching
    - Global Search 65
    - In one block 65
  - Secondary HWC 50, 55
    - Configuring 54
  - Secondary Racks 44, 47
  - Serial Communication 28
  - Series 90™ Micro 23, 73
  - Series 90™-30 23, 44, 55, 66, 73
  - Series 90™-70 23, 26, 43, 44, 50, 66, 73, 75, 88
    - Remote I/O Scanner 23
  - Series 90™-70 Genius Remote I/O Scanner 23, 57
  - Setting Access Control 65
  - Setting IP Addresses
    - Lower-End Series 90™-30 32
    - PACSystems™ RX7i (Permanent) 29
    - PACSystems™ RX7i (Temporary) 29
    - Series 90™-30 CPU364 31
    - Series 90™-30 CPU374 31
    - Series 90™-70 30
  - Setting Parameters
    - C Blocks 87
    - C Programs 89
  - Setting Up
    - Primary HWC for CPU Redundancy 52
    - Remote I/O Scanner 58
    - Target 33, 91
    - RMS 72
    - Run Mode 36
    - Run Mode Store (RMS) 72
    - Runtime Destination 23
    - Runtime Files 35
    - RVT 38
- T**
- Table of Contents 22
  - Target Properties 25
  - Targets 23, 63
    - Adding 24
    - Configuring 25
    - Converting 26
    - Downloading 35
    - Going Offline 34
    - Going Online 34, 72
    - Offline 33
    - Online 33
    - PACSystems™ RX7i 23
    - Remote I/O Scanner 57
    - Right-Click Menu 33, 91
    - Run Mode 36
    - Series 90™ Micro 23
    - Series 90™-30 23
    - Series 90™-70 23
    - Series 90™-70 Remote I/O Scanner 23
    - Stop Mode 36
    - Uploading 36
    - Validating 33
    - VersaMax 23
    - VersaMax Ethernet 23
    - VersaMax Genius 23
    - VersaMax Nano/ Micro 23
    - VersaMax Profibus 23
    - Writing Changes 74, 83
  - Technical Support 7
  - Templates 12, 24, 59

Temporary IP Address  
  Setting for PACSystems™  
  RX7i 29

Timers  
  IL 85  
  LD 78

Toolchest 15

Tools 14

## U

Uploading from a Target 36

URL 25

User Programs 88, 89  
  Scheduling 89

User-Defined Folders  
  Creating 64

User-Defined RVTs 38  
  Creating 39

Using 21, 22

Using Help  
  Companion Help 20

Help Index 21

InfoViewer Help 20

Table of Contents 22

Using Templates to Create  
  Projects 12

## V

Validating Targets 33

Variables 16, 27  
  Compound Structure 16  
  Creating 17  
  Creating from Names 81  
  Creating from Reference  
    Addresses 81  
  Editing 16  
  Forcing 74  
  Mapping 17  
  Symbolic 16, 17  
  Turning On or Off 74

Variables Report 40

VersaMax 23, 66, 73

Adding Carrier/Base to  
  Remote I/O 60

Configuring Remote I/O 59

Ethernet 23

Genius 23

Nano/ Micro 23, 73

Profibus 23

Remote I/O 59

VersaPro 1, 12

View 2, 12

Viewing Fault Table Reports 37

## W

Windows Explorer 14

Word-for-Word Changes 34, 72  
  Making 73

Working with Reference View  
  Tables 40

Writing Changes to a Target 74

Writing Changes to a Target  
  PLC 83