

# HANNspree Xv Quick Start Guide

## JT01-32E2 32" Liquid Crystal Display TV


This guide is designed as a reference to help you start using your LCD TV quickly. Please refer to the User's Manual for more detailed installation and safety instructions.

### Front View



- 1. Volume down button
- 2. Volume up button
- 3. OSD Menu button
- 4. Channel down button
- 5. Channel up button
- 6. Enter button
- 7. Power button
- 8. Infrared receiver
- 9. Power LED indicator

### Rear View

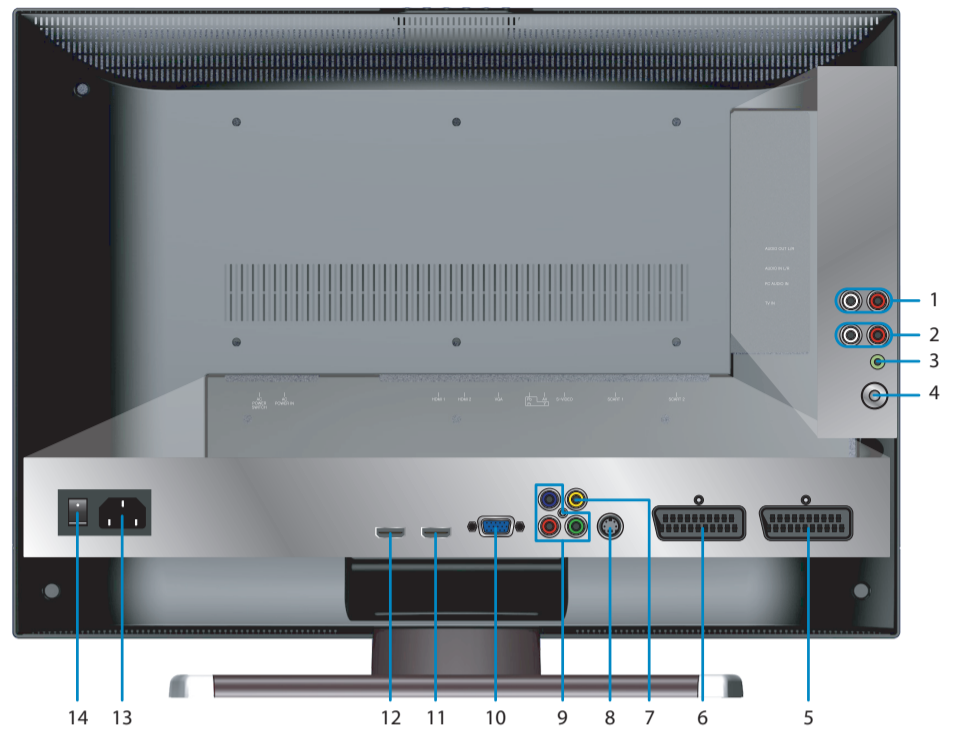

- 1. Audio Output for AV, S-Video or YPbPr components (L/R)
- 2. Audio Input for AV, S-Video or YPbPr/HDMI-DVI components (L/R)
- 3. Audio Input for VGA
- 4. RF Antenna / Cable TV Input
- 5. SCART2 / SCART2-SV Input
- 6. SCART1 Input
- 7. Composite Video input
- 8. S-Video Input
- 9. YPbPr/ HD Component Video Input
- 10. VGA (15 pin) Signal Input from Computer
- 11. HDMI2 Input Terminal (19 pin)
- 12. HDMI1 Input Terminal (19 pin)
- 13. AC Power Input
- 14. AC Power Switch

## Making Connections

### Connecting to Antenna/Cable TV



1. Connect one end of the UHF/VHF (Antenna) or CATV cable to the TV IN jack (UHF/VHF IN jack) on the back of the TV.
2. Connect the other end of the UHF/VHF (Antenna) or the CATV cable to the Antenna or CATV socket.


### Connecting to VCR, VCD or DVD Player

The illustrations below show you how to connect your TV to a VCR, VCD or a DVD player.


#### With RCA AV cable




#### With S-Video cable

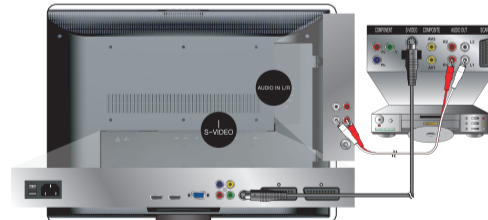

#### With YPbPr cable

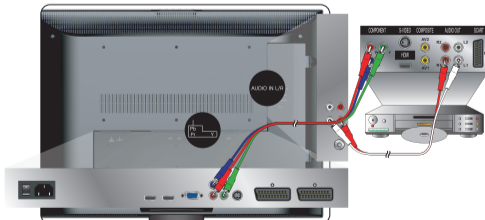

#### With SCART1

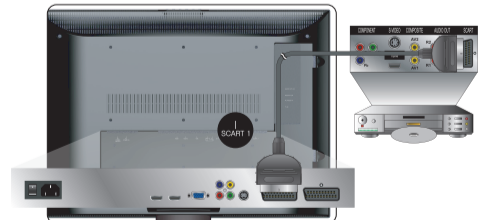

### Connecting the Power Cord




1. Plug the power connector into the AC-IN input jack on the rear cover of the TV-set.
2. Insert the three-pronged plug at the other end of the power cord into a power outlet.
3. Turn the main power switch on to supply power to the TV.

## Getting Started

### Selecting Input Source

1. Make sure your TV is turned on and a device such as a DVD player is connected.
2. Press the **SOURCE** button on the remote control and use the **◀ / ▶** button to select the required input source between PC, HDMI1, HDMI2, TV, YPbPr, AV, SVIDEO, SCART1, SCART2, and SCART2-SV.
3. Press **ENTER** to confirm your selection.

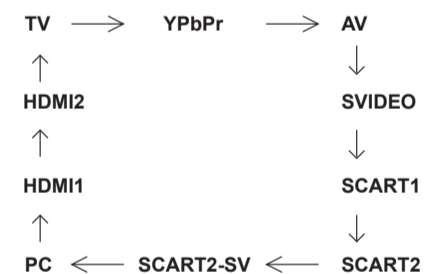

### Auto Channel Scan

Follow the instructions below to automatically preset the channels for your TV before watching it for the first time.

1. Press the **"MENU"** button on your remote control or the control panel.
2. Use the **▲ / ▼** button to select Channel Menu.
3. Press the **◀ / ▶** button to select country.
4. Press the **"ENTER"** button to start Auto Scan.

**Note:** After performing Auto Scan, you need not do it again when turning on your TV next time.

#### Auto Scan

