


Includes 3 X 1.5V "AA" /LR6 batteries. Phillips/cross-head screwdriver (not included) required to replace batteries.

**TO REPLACE BATTERIES:**

Open seam at back of toy to access battery compartment. Use a Phillips/cross-head screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door and discard batteries. Insert 3 "AA"/LR6 (1.5V) alkaline batteries. Replace door and tighten screw. Close seam.

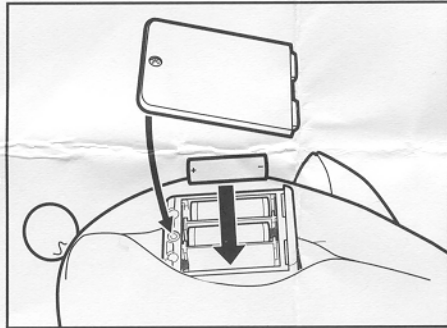

**! CAUTION: TO AVOID BATTERY LEAKAGE**

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

**IMPORTANT: BATTERY INFORMATION**

Please retain this information for future reference.

Batteries should be replaced by an adult.

- 1) Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- 2) Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
- 3) Remove exhausted or dead batteries from the product.
- 4) Remove batteries if product is not to be played with for a long time.
- 5) Do not short-circuit the supply terminals.
- 6) Should this product cause, or be affected by, local electrical interference, move it away from the other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7) **RECHARGEABLE BATTERIES.** Always remove from the product before recharging. Recharge batteries under adult supervision: **DO NOT MIX WITH OTHER TYPES OF BATTERIES.**

**FCC STATEMENT:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.



Questions? Call: 1-800-327-8264

SURFACE WASHABLE

© Disney  
®\* and/or ™\* & © 2002 Hasbro. All Rights Reserved.  
® denotes Reg. U.S. Pat. & TM Office.  
7407 PN 6193030000