

SECTION 4. TROUBLESHOOTING

4-1. TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	CORRECTION
Product not holding temperature	<ul style="list-style-type: none"> • Cold well or hot well not plugged-in • Product held too long • Cold well setting turned • Compressor overheated • Product not a proper temperature when placed into unit • Defective fuse for refrigeration unit 	<ul style="list-style-type: none"> • Check plugs under table-top on french fry end of HDS-300 • Only hold product for recommended times • Turn control setting to about 6 • Clean condenser coil • Be sure product is at proper temperature • Replace 15 amp fuse
Refrigeration unit runs constantly	<ul style="list-style-type: none"> • Frost build-up • Condensor coil dirty 	<ul style="list-style-type: none"> • Defrost unit • Clean condenser coil
Power switch on but no power to unit	<ul style="list-style-type: none"> • Open Circuit 	<ul style="list-style-type: none"> • Plug unit in • Check circuit breaker • Check 15 amp fuses • Check cord and plug for loose connection
Not all lights on	<ul style="list-style-type: none"> • Faulty light bulbs 	<ul style="list-style-type: none"> • Replace with new bulb, per Light Bulb Replacement Section
Lights will not turn on	<ul style="list-style-type: none"> • Defective fuse 	<ul style="list-style-type: none"> • Replace 15 amp fuse