
## Flat-screen television stand

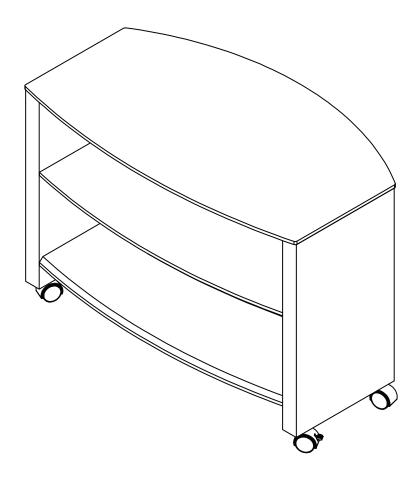

Instruction manual

John Lewis


Thank you for purchasing this flat-screen television stand. Please read the instructions carefully to ensure safe and satisfactory operation of this product. Retain this information for future reference.


## **WARNING!**

- · Before starting this assembly please take time to familiarise yourself with the components listed below.
- Do not place very hot or very cold items against or in close proximity to glass surfaces unless an adequately thick insulating material is used to prevent such items coming into contact with the glass.
- · Do not strike the glass with hard or pointed items.
- When cleaning glass panels use a damp cloth or leather with washing up liquid or soft soap if necessary; do not use washing powders or any other substance containing abrasives as these substances scratch glass.
- · Do not sit or stand upon horizontal glass surfaces.
- Maximum safe load for top glass shelf is JL3/80-W: 70kg, JL3/110-W: 50kg
- · Maximum safe load for lower shelves is 20kg.

Component		Description	Qty	Packed by
	a	Left hand leg	I	
	b	Right hand leg	I	
	С	Bottom shelf	I	
	d	Middle shelf	I	
	e	Top glass shelf	I	
	f	Back panel	I	
000	g	Rear leg	1	
	h	Metal dowel	8	
	j	Metal Cam	8	

Component		Description	Qty	Packed by
	k	Fixing screw	5	
B	m	Short fixing bolt	4	
	n	Long fixing bolt	2	
	0	Swivel castor (braked)	2	
	р	Swivel castor	3	
	q	Self adhesive pads	5	
	r	Spanner	I	
	S	Allen key	I	

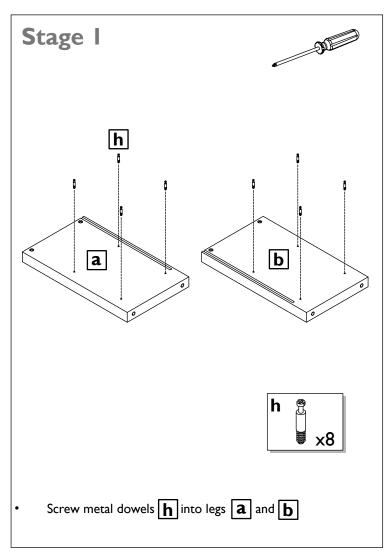


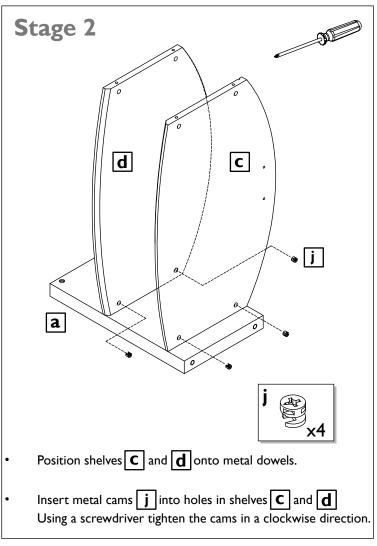

Stage 4

b

Turn the stand over as shown

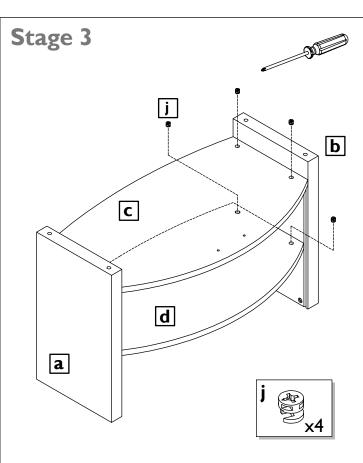

Position shelves **C** and **d** onto metal dowels.

Insert metal cams | j | into holes in shelves | C | and | d |

Using a screwdriver tighten the cams in a clockwise direction.



a

Secure the back panel in position with fixing screws

f

