

303 Messner Dr. • Wheeling, IL • 60090 847-459-1469 • FAX 847-459-1569 www.Lund-Industries.com

MW-520 Keyboard and Display Mount

- 1. Bolt the MW-520 Keyboard and Display mount to console adapter bracket using the supplied 1/4" hardware. Adjust tension on swivel assembly by tightening or loosening 1/4" swivel bolts.
- 2. Screw flat monitor screen to the top section of mount using factory supplied screws and washers. Be sure to center monitor screen so that it doesn't rub the mount sides when opening and closing.
- 3. Connect the display cable to the monitor screen. When connecting cable to the CPU be careful to allow enough slack to operate the Tilt/Swivel without straining the cable.
- 4. Mount keyboard by sliding unit backward onto mount tabs and the downwards over spring clip. Or if locking clip is used tighten screws until keyboard is secure.
- 5. Use the side handle to adjust tension or "Lock" the monitor. **DO NOT OVER TIGHTEN** - The monitor should not be so tight that it can't move up or down with reasonable force.
- 6. The mount can be swiveled by grasping the keyboard plate and moving from side to side. Tilt adjustment is a knurled knob under the right side of the keyboard plate. Loosen the knob and position the mount, then tighten the knob to lock the mount in position.

CAUTION

When driving, the monitor should be down to keep it out of the airbag zone. If left up the monitor should be close to the dashboard and **NOT** in the airbag deployment zone. **Note: Most vehicles have an area just off the center of the dashboard that is not in the air bag deployment zone**.

Replacement bushing kits (P/N # 520-NY-W2) are available for the side handle knob. Tightening the knob without nylon washers in place will cause excessive wear on the bearing assembly.