

Manitowoc SN12/SN20 Model Nugget Ice Machines

Cutter Head Replacement Instructions


- 1. Disconnect water supply.
- 2. Remove front panel.
- 3. Move toggle switch to CLEAN position after the 5 minute delay expires. The evaporator and float chamber will drain.
- 4. Disconnect power at electrical disconnect.

A WARNING

Disconnect power to the ice machine at the electrical disconnect, moving the toggle switch to the off position will not disconnect line voltage.

- 5. Remove top, left and right side panels.
- 6. Remove ice chute assembly.


NOTE; if the ice wiper can not be hand removed; place the handle end of a screwdriver against the ice wiper, then tap the screwdriver (counterclockwise) with a hammer to loosen the ice wiper from the auger.

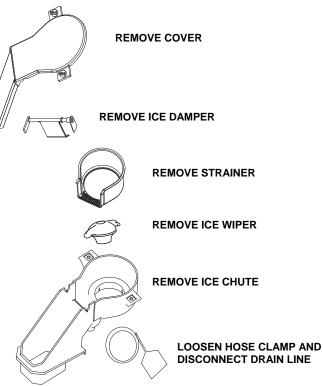

7. Peel evaporator insulation down to expose 3 bolts securing top cutter head - remove 3 bolts.



7. Use puller to remove cutter head from auger shaft. NOTE: If the bearing is destroyed or the auger heavily damaged from bearing wear contact the Manitowoc service department @ 1-800-545-5720.

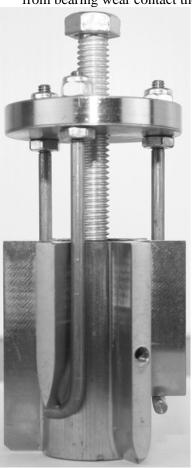

- 8. Install new cutter head and secure with three bolts removed in step 7. Use removable loctite on bolt threads.
- 9. Reassemble chute assembly and test run ice machine.