



FHX-8100

Eight-Port
Fast Ethernet Hub

User's Guide

Contents

Section 1	Introduction	1
Section 2	Installation	1
Section 3	LED indicators	2
Section 4	Troubleshooting	2
Section 5	Specifications	3
Section 6	100 Base-TX Cable Requirements	3
Section 7	Technical Support	4
Appendix A	Daisy-Chain Cable Length	4
Appendix B	Two Year Limited Warranty	4
Appendix C	FCC Notice	5

The information contained in this manual has been validated at the time of this manual's production. The manufacturer reserves the right to make any changes and improvements in the product described in this manual at any time and without notice. Consequently the manufacturer assumes no liability for damages incurred directly or indirectly from errors, omissions or discrepancies between the product and the manual.

All registered trademarks are the property of their respective owners.

Copyright © 1996 MaxTech. All rights reserved. No reproduction of this document in any form is allowed without written permission from MaxTech.

Section 1 - Introduction

The MaxTech FHX-8100 is an 8-port hub compliant with the IEEE 802.3u 100Base-TX fast ethernet standard. The eight RJ-45 ports connect workstations or other devices together on a 100Base-TX fast ethernet network using twisted-pair cable. An additional crossover port connects this hub to a second hub using a standard (straight-through) network cable for easy network expansion. A full set of LED indicators assist in network troubleshooting.


The package contains the following items:

- Hub
- Power cord
- User's Guide

Section 2 - Installation

1. **Locating the Hub** - Place the hub in a location central to your networked computers, or within the maximum cable length (328 ft.) to the farthest computer.
2. **Connecting the Power cord** - Insert the power cord into the hub's **power** connector (See Figure 1). Plug the other end of the power cord into an AC power outlet. The hub is powered on when this connection is made. The power switch has been eliminated to reduce the chance that the hub will be accidentally turned off.

Figure 1 Hub connections

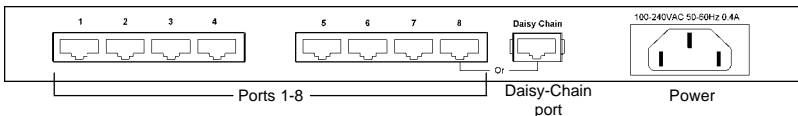

3. **Connecting Workstations** - Connect one end of a Category 5 twisted-pair cable into an open port (1 through 8, except the Daisy-Chain port) on the hub (See Figure 1). Connect the other end of the cable to the computer to be networked. The length of the cable must be less than 328 feet (100 meters).

2.1 Connecting Hub to Hub


The network can be expanded beyond eight workstations by daisy-chaining two or more hubs together. The hub's eighth port features an additional cross-over connection to facilitate daisy-chaining hubs using standard cable. Plug one end of a standard straight-through cable into the Daisy-Chain port and the other end into a regular port (1 through 8) of a second hub. Refer to Appendix A for more information on daisy-chaining hubs.

Note: The Daisy-Chain port *is* port number 8 with a reversed pin-out. The daisy-chain port and port 8 cannot be used simultaneously.

Section 3 - LED indicators

The front-panel LEDs (see Figure 2) show the status of the hub and the network connections.

Figure 2 Hub LEDs

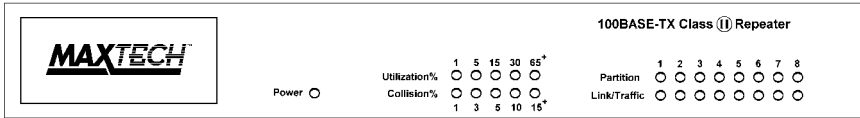

LED	Function	
POWER	On	Hub is powered on
	Off	Hub is powered off
UTILIZATION	Green	Traffic is 1% to 30% of maximum bandwidth
	Yellow	Traffic is 30% to 65%
	Red	Traffic is 65% or higher
COLLISION	Green	Collision rate is 1% to 10%
	Yellow	Collision rate is 10% to 15%
	Red	Collision rate is 15% or higher
PARTITION (1 through 8)	Off	Port is operating normally
	On	The port has been disconnected from the network due to excessive collisions caused by the attached computer
LINK/TRAFFIC (1 through 8)	On	A network link is established
	Blink	Data is being transmitted

Section 4 - Troubleshooting

Symptom: *Partition indicator lights up.*

Causes: Hub has partitioned the 100BASE-TX (RJ-45) port due to excessive collisions.

Solution: If port partitioning has occurred, the hub will automatically enable the port when the faulty condition disappears.

Symptom: *Link/Traffic indicator remains unlit.*

Causes: The workstation's network adapter, cable or the hub port is defective.

Solution: The most common cause is a defective network adapter or cable connection. Check the corresponding cable connections, or the workstation's network adapter for possible defects. Verify that the correct cable type (straight or crossover) is being used. Replace the defective cable or adapter.

Symptom: *Port 8 and Daisy-Chain port do not work simultaneously.*

Causes: Both ports are physically the same port.

Solution: Use either Port 8 or the Daisy-chain port.


Section 5 - Specifications

Network Standard:	IEEE 802.3u Ethernet 100Base-TX Class II Repeater
Transfer rate:	100 Mbps
Topology:	Tree/Star
Access Method:	CSMA/CD, 100 Mbps
Media:	Category 5, 2 pair, UTP or STP
Max. cable length:	328 ft. (100 meters)
Ports:	8 RJ-45 jacks
Crossover connector:	1 (port 8)
Auto-partition:	Yes
Dimensions:	10.75" x 6.54" x 1.69"
Certification:	FCC Part 15 Class A
Temperature:	0° C to 40° C (operating)
Humidity:	5% to 95% (operating, non-condensing)
Power:	100-240VAC, 0.4 Amp max., 50/60 Hz

Section 6 - 100 Base-TX Cable Requirements

100Base-TX networks use unshielded or shielded twisted-pair cable and 8-pin RJ-45 modular connectors. Use 22-26 AWG, 2- or 4-pair, 100 ohm/ft, solid conductor Category 5 cable. Maximum cable length from hub to workstation is 328' (100 m).


Figure 3 Hub's RJ-45 Pin Assignments

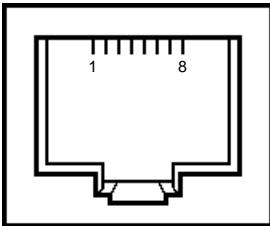


Pin	Assignment (MDI-X Port 1 - 8)	Assignment (MDI Daisy-Chain Port)
1	Input Receive Data +	Output Transmit Data +
2	Input Receive Data -	Output Transmit Data -
3	Output Transmit Data +	Input Receive Data +
6	Output Transmit Data -	Input Receive Data -
4,5,7,8	Not Used	Not Used

Schematics for both straight and crossover twisted-pair cable are shown below.

Straight-Through

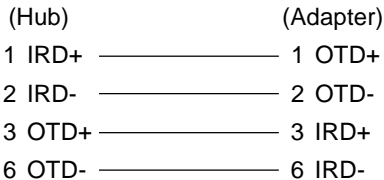

Crossover

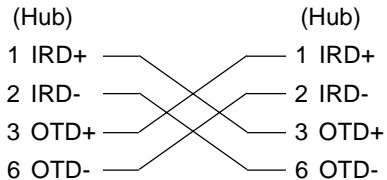

Note: A crossover cable is only necessary if you are connecting two hubs which do not have a daisy-chain port available.

Section 7 - Technical Support

In the unlikely event you experience difficulty in the use of the product, or if it does not operate as described, we suggest you: (1) consult the Troubleshooting section of this guide and (2) consult with your dealer.

If you still cannot resolve the problem, call the MaxTech Service Center at (201) 586-8686 between 8:00 a.m. and 8:00 p.m. (EST Monday through Friday). ***If the nature of your question is related to the network operating system that you are using, refer to its manual.*** Calling the Service Center without complete and accurate information concerning the **nature of the problem** will be both time-consuming and frustrating for you.

You may also reach us through:

24 hour BBS - (201) 586-8866

Compuserve ID - 71333,44

Prodigy - *Jump*: Manufacturers BB

Email - support@maxcorp.com

24 hour Faxback - (201) 586-8761

America Online - *Keyword*: Maxtech

World Wide Web - www.maxcorp.com

FTP - ftp.maxcorp.com

Appendix A - Daisy-Chain Cable Length

When daisy-chaining, the overall length between any two nodes should not exceed the limits outlined in the IEEE 802.3u standard.

The maximum length from node to node = $367\text{m} - s(\text{Repeater Equivalent Length @ CAT-5})$, or $367\text{m} - s(\text{REL@5})$. The FHX-8100 has an inherent repeater delay of 80BT or 72 meters (REL@5). Taking a daisy-chain of two hubs for an example, the maximum cable length from node to node is: $367\text{m} - (2 \times 72\text{m}) = 223\text{m}$. If node A and B are attached to separate hubs in a two hub system, each using the maximum of 100 meters of cable to connect to their respective hub, then the cable between hubs is limited to 23 meters (i.e., $223\text{m} - (2 \times 100\text{m}) = 23\text{m}$).

To limit the number of hubs in a path (when daisy-chaining more than two hubs), link several hubs to one central hub. Use the above formula to determine maximum cable lengths. *Make sure there is only one path between any two stations on the network.*

Appendix B - Two Year Limited Warranty

MaxTech warrants to the original buyer of this product against defects in material and workmanship for two years from the date of purchase. During the warranty period, MaxTech will repair (or at its option, replace) the product that proves to be defective, provided the product has not been abused, misused, modified, or repaired by an unauthorized center.

In the event the product requires service, follow the procedure outlined in **Technical Support**. When you are instructed by the Technical Support Representative to return the product to MaxTech for repair, you will be given an RMA (Return Merchandise Authorization) number. You **must have an RMA Number to return the product for service**. Use the following procedure to return the product to MaxTech:

1. Return the product in its original package and packing (if possible), and put

it in a sturdy corrugated box.

2. Be sure to include your name, address, day-time telephone number, RMA number, and a brief description of the problem (also enclose a check for out-of-warranty repair). Enclose your check or Postal Money Order for \$7.50 to cover the cost of return shipping/handling. Please do not send cash or stamps.
4. After wrapping the package securely for shipping, print your name, return address and the RMA # **clearly** on the outside of your package.
5. Ship the unit prepaid via UPS or the U.S. Postal Service to the address provided by the technician when you call. We recommend that the unit be insured.

This warranty is valid for products sold in North America only. Contact your local authorized distributor or dealer for the warranty offered in other areas.

All warranty services must be performed by Authorized Service Centers. There are no user serviceable parts inside the unit. Do not remove any components or attempt to service the unit by any unauthorized service center. This warranty is voided if the product has been abused, misused, modified, or repaired by an unauthorized service center.

Appendix C - FCC Notice

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

First Edition

GZ/DR - Version 1.0