

# MLi-421

## 2-Piece Powered Speaker System

---

---

### User's Manual

Before operating the system, please read this manual thoroughly and retain it for future reference.

Version 1.0

MLi<sup>®</sup> is a registered trademark of MidiLand, Inc. U.S.A.  
© Copyright 2001 MidiLand, Inc. All Rights Reserved.

## Safety Instructions

### Outdoor Use - Warning

To reduce the risk of fire or electric shock, do not expose this system to rain or moisture.

### Ventilation

This system should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.

### Servicing

The user should not attempt to service the system. Servicing should be referred to a qualified service personnel or returned to the dealer.

### Power Sources

This system should be connected to a power supply only of the type described in the operating instructions or as marked on the system package.

### Cleaning

The system should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzine, insecticides or other volatile liquids since they may corrode the cabinet.

### Period of Non-use

The power cord of the system should be unplugged from the wall outlet when left unused for a long period of time.

## Package Contents

- One pair (2) of MLI-421 speakers
- One (1) AC adapter
- User's manual

## Features

Power Control  
Volume Control  
Ultra Slick Design  
Magnetically Shielded

## Specifications

Driver Units:	3" x 2" full range
Output Power (rms):	7W + 7W
Total Power (rms):	14W
P.M.P.O.:	180 Watts
Frequency Response:	100Hz - 20kHz $\pm$ 3dB
S/N Ratio:	60dB
Input Sensitivity:	300mV
Controls:	Power, volume control
Power Supply:	AC adapter
Dimensions (WxHxD):	3.2" x 10.7" x 2.8"

# Installation

## Back View

① To Sound Source

② To Wall Outlet



## Troubleshooting

Problem	Possible Solution
No sound from the speakers	Verify that the AC adapter is plugged into the wall securely and the system is turned on Turn up the volume output level from your sound source Verify that your sound source is working properly
Sound is unclear or has lots of static	Check and connect each cable securely Place the satellite speaker apart from the computer or other electrical housewares that may cause interference
Humming sound from speaker	Make sure the input cable is securely plugged into the sound source

For further information or support, email us at [tech@midiland.com](mailto:tech@midiland.com) or call Customer Service at (888)592-1168.

## Warranty

### one year limited warranty

MidiLand Inc., warrants to the end user that all of its computer speakers are free from defects in materials and workmanship in the course of normal and reasonable use for a term of three (3) years from the date of purchase.

This warranty is the exclusive and only warranty in effect relative to MidiLand Inc., computer speaker systems and any other warranties, either expressed or implied, are invalid. Neither MidiLand Inc., or any authorized MidiLand Inc., reseller is responsible for any incidental damages incurred in the use of the speakers. (This limitation of incidental or consequential damage is not applicable where prohibited)

MidiLand Inc.'s obligation under this warranty does not apply to any defect, malfunction or failure as a result of misuse, abuse, improper installation, use with faulty or improper equipment or the use of the computer speaker systems with any equipment for which they are not intended. MidiLand Inc., provides the above limited warranty only to the original purchaser and not to a secondary purchaser, transferee or assignee.

Under the terms of the warranty, the original consumer purchaser has certain legal rights and may have other rights which vary worldwide.