 




ACTIVE 5.1 HOME THEATER SURROUND SYSTEM

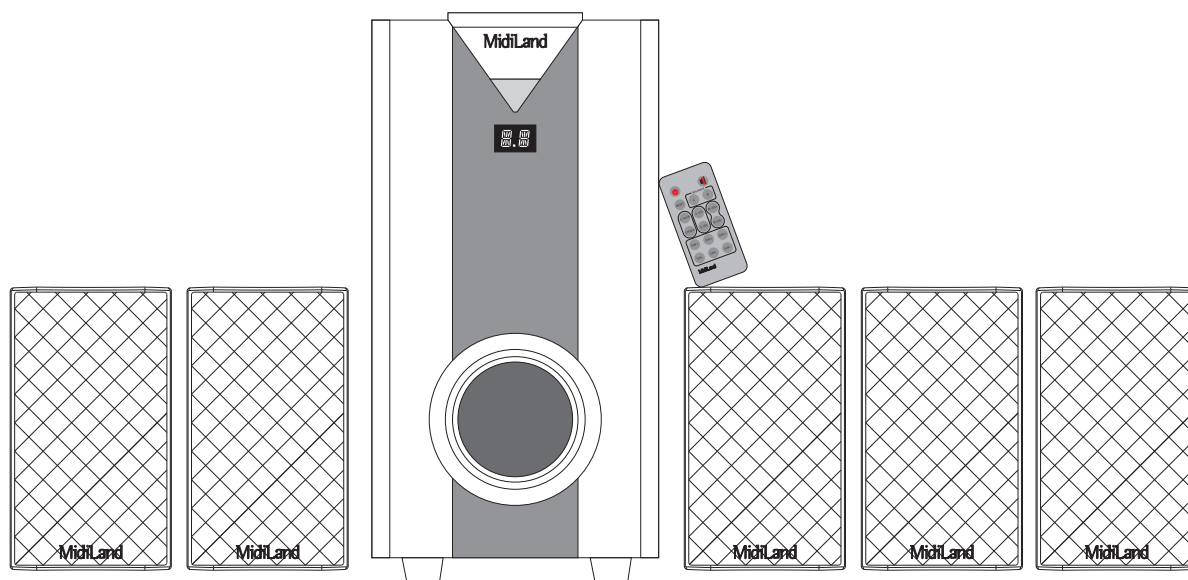


MLi-750

Owner's Manual

CONTENTS

SAFETY PRECAUTIONS	3~4
PACKAGE CONTENTS	5
DESCRIPTION OF THE FRONT PANEL	6
DESCRIPTION OF THE REAR PANEL	7
DESCRIPTION OF THE REMOTE CONTROL	8
CONNECTIONS	9
SPEAKER PLACEMENT	10
OPERATING INSTRUCTIONS	11
TROUBLESHOOTING	12
SPECIFICATIONS	13
WARRANTY	13

 
SAFETY PRECAUTIONS

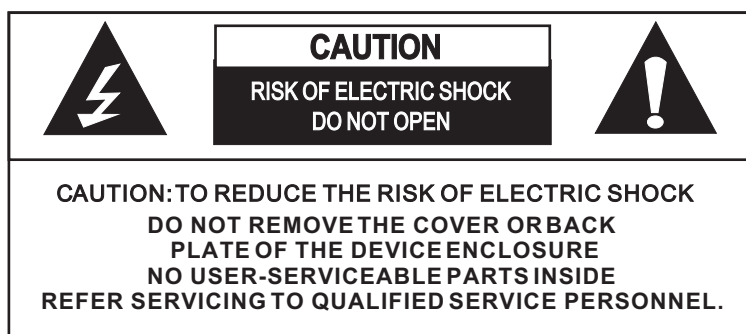

WARNING: To prevent fire or shock hazard, do not expose the unit to rain or moisture.


The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated Dangerous Voltage — within the device enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

 
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

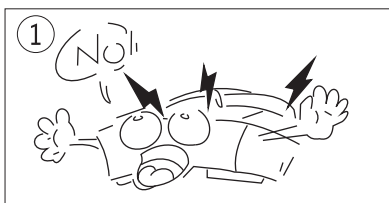

1. To avoid shock hazard or damage to the unit, do not attempt to remove the cover or the rear panel. All servicing should be referred to qualified service personnel.



2. To avoid high heat, do not place the unit directly under the sun, and stay away from any heat source.

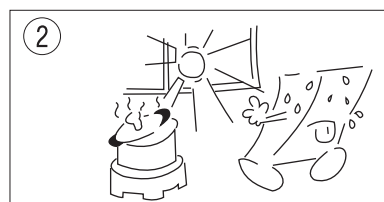

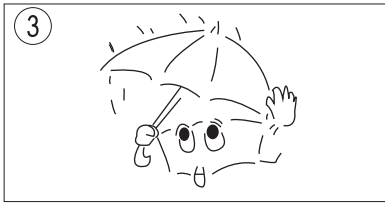


3. Do not expose the unit to the rain or moisture, avoid placing container with water on top of the system.

4. Please turn off the power and unplug the plug when the unit is not in use.

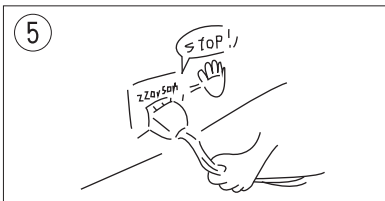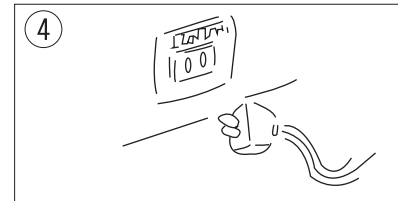


5. To disconnect the main plug, pull the power plug. Do not pull the power cord.

6. Avoid any loose item drop in to the subwoofer through its ventilator.

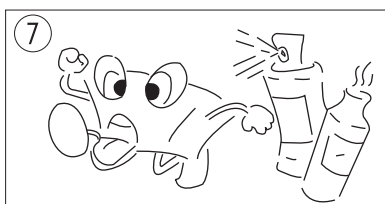

7. Do not use harsh abrasives or chemicals to clean the unit, as it will damage the surface finish, use only a soft and damp cloth.

8. Place the unit far enough from other equipments for good heat dissipation.

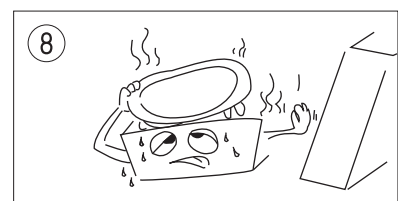


PACKAGE CONTENTS

Please unwrap the packing carefully, and save the packing materials for future usage. Please locate all of the parts below before you begin.


SPEAKERS

One (1) Subwoofer with built-in amplifier
Two (2) Front Speakers
Two (2) Rear Speakers
One (1) Center Speaker

SPEAKER CABLES

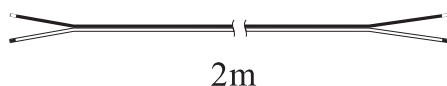


Three (3) 2- meter speaker cables are for the connection from Subwoofer to the Front Speakers, and Subwoofer to the Center Speaker.

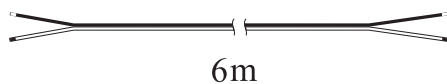

Two (2) 6- meter speaker cables are for the connection from Subwoofer to the Rear Speakers.

 REMOTE CONTROL

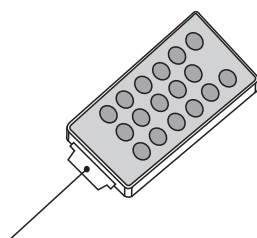


One (1) full-functioned slim remote control, a button-type battery is included.

Remove the isolated slip before using

DESCRIPTION OF THE FRONT PANEL

 
FRONT PANEL

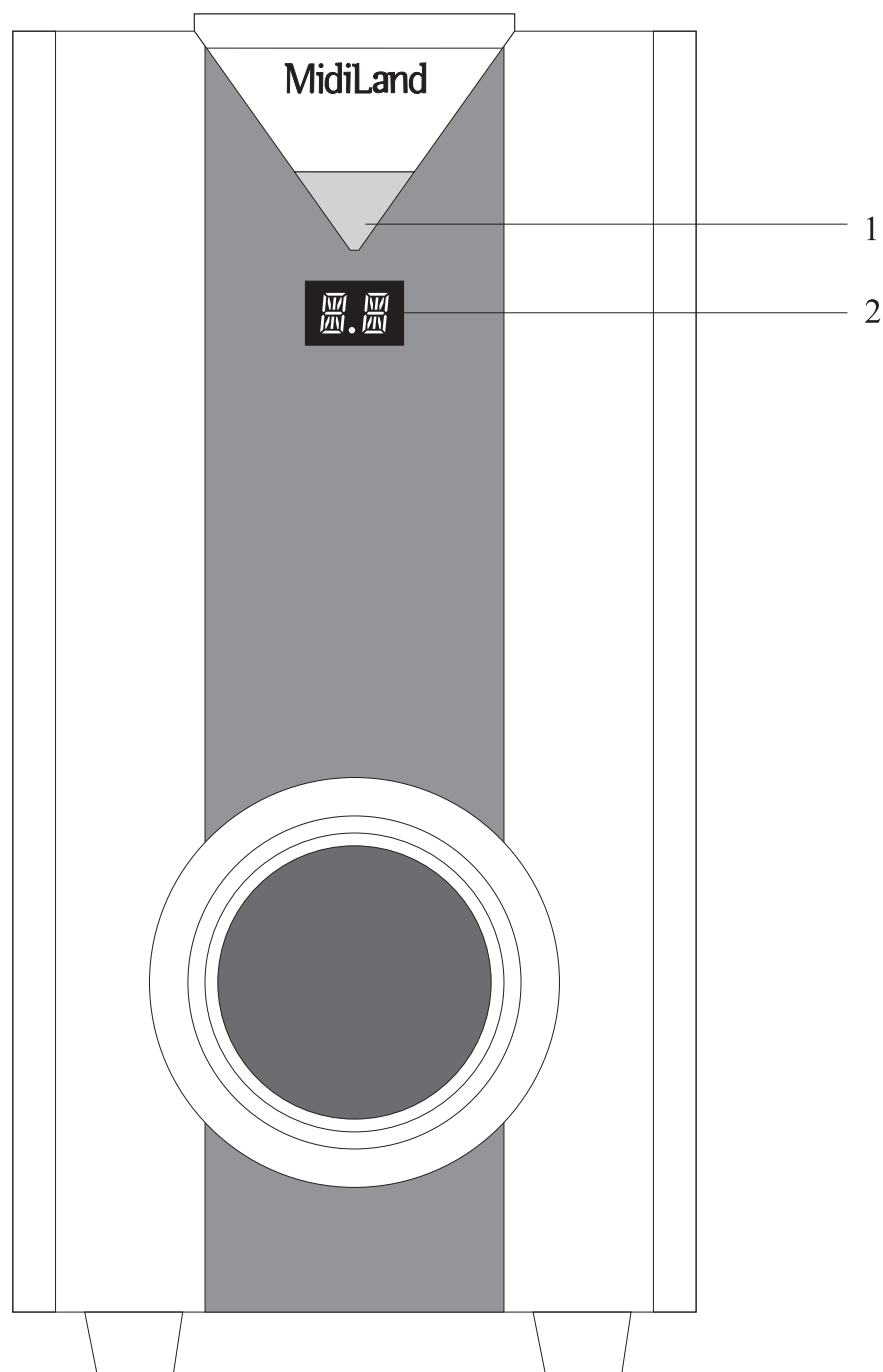

- 1、 Power Indicator
- 2、 Display Panel

DESCRIPTION OF THE REAR PANEL

 REAR PANEL

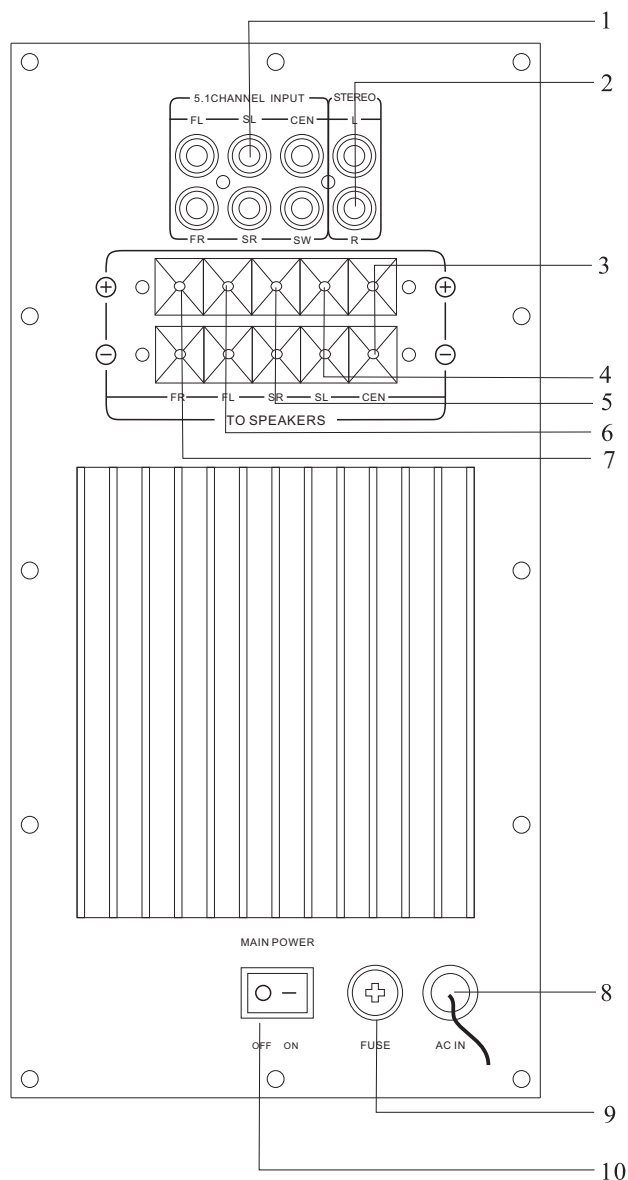

1. DVD/5.1 Input Connectors

2. Stereo Input Connectors

3. Center Channel Output Connectors

4. Rear-Left Channel Output Connectors

5. Rear-Right Channel Output Connectors

6. Front-Left Channel Output Connectors

7. Front-Right Channel Output Connectors

 
8. AC Power Cord

9. Fuse

10. Main Power Switch


DESCRIPTION OF THE REMOTE CONTROL

REMOTE CONTROL

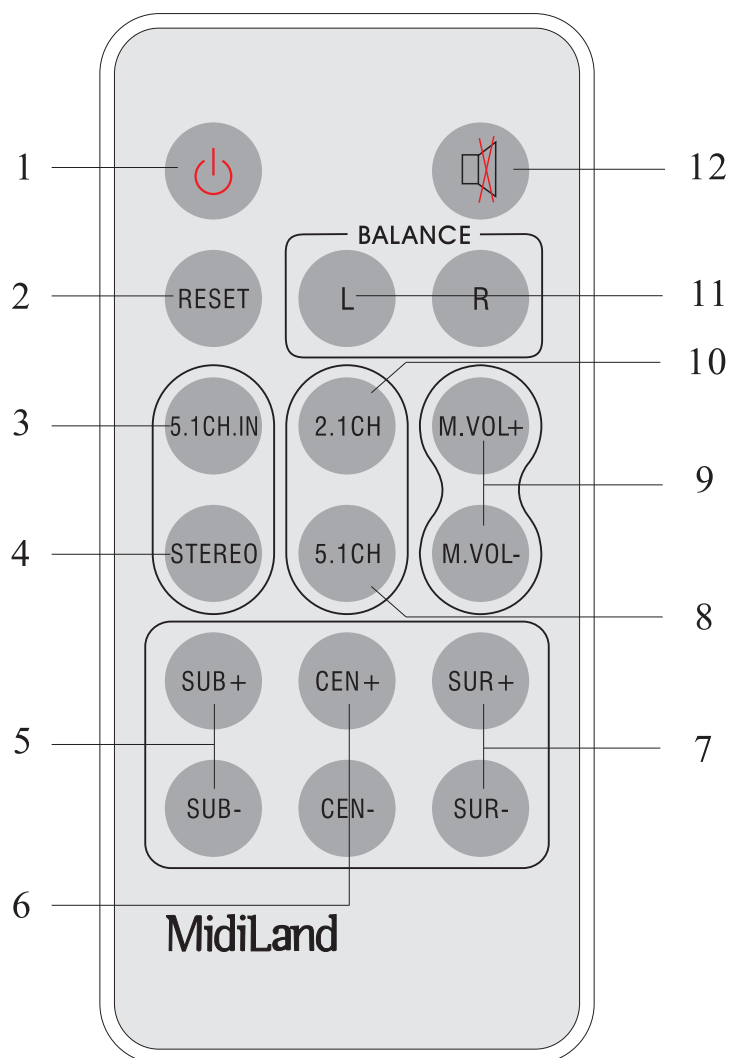


- | | |
|---------------------------------|--|
| 1. ON/STANDBY | 7. Surround Volume Fine Tuning |
| 2. Reset | 8. 5.1 CH Mode Output |
| 3. DVD/5.1 Input Select | 9. Master Volume Control |
| 4. STEREO Input Select | 10. 2.1 CH Mode Output |
| 5. Subwoofer Volume Fine Tuning | 11. Front Speaker L/R Balance Adjustment |
| 6. Center Volume Fine Tuning | 12. Mute |

 CONNECTIONS

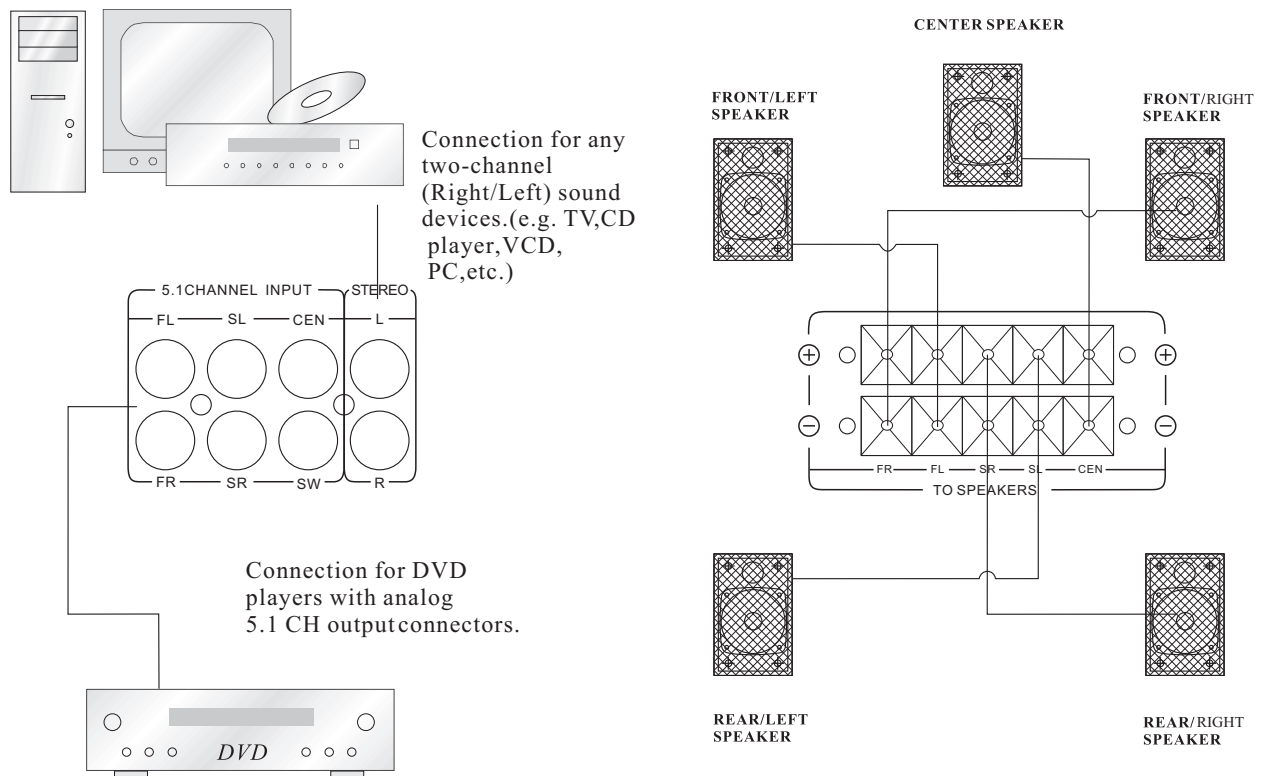

WARNING: Do not connect the power cord into an AC outlet until all connections are made and are correct. Turn off the audio source (i.e. your DVD player, game console, MP3 player, PC etc), before making the connections.

 1. Cut off the cable coating and twist the wire as shown in the diagram below.

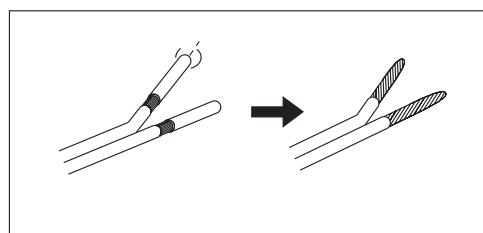


2. Connect Front-Right satellite speaker to the Front-Right Output connectors at the back of the subwoofer.

3. Connect Front-Left satellite speaker to the Front-Left Output connectors at the back of the subwoofer.
4. Connect Rear-Right satellite speaker to the Rear-Right Output connectors at the back of the subwoofer.
5. Connect Rear-left satellite speaker to the Rear-Left Output connectors at the back of the subwoofer.
6. Connect Center satellite speaker to the Center Output connectors at the back of the subwoofer.
7. Make sure only the bare wire leads are connected, and the leads are connected to the correct terminals "-" and "+" for the best sound quality.

SPEAKER PLACEMENT

For the best 5.1 surround sound effect, please refer to the diagram below:

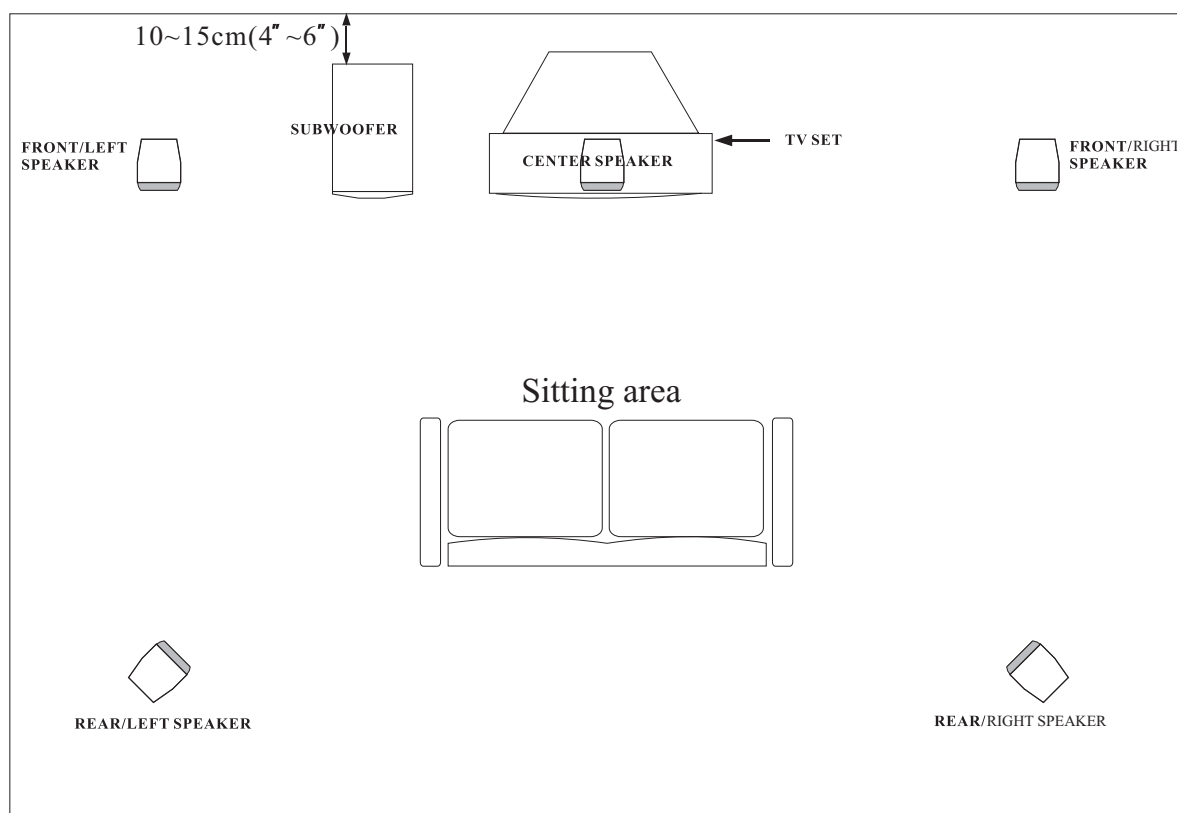

Note: Normally, audio devices like CD players, VCD players, MP3 players, etc. are unable to decode 5.1 CH for multi-channel surround sound effect. It is recommended to select "stereo" or "2.1 CH" input mode.

OPERATING INSTRUCTIONS

1. ON/OFF

Plug in the power cord to the AC power outlet.

Turn on the main power switch located on the back of the subwoofer. When the Power indicator on the front panel turns to red, the system is on the STANDBY mode. Press the POWER button located on the front panel of the subwoofer or the STANDBY button located on the remote control to turn on the system. The Power indicator is in blue color when the system is on.

2. INPUT SELECT

Press the buttons (DVD/5.1, STEREO, AUX1, AUX2) located on the remote control to select audio source. The selected audio source will be shown on the LED display.

Note: For the best sound quality, it is recommended to select 2-channel input STEREO if your audio source is CD, MP3 or VCD.

3. OUTPUT SELECT

Press the buttons (2.1CH or 5.1CH) for the music preference.

4. VOLUME AND FINE TUNING

The main volume can be adjusted by the MASTER VOL. located the remote control. Press "-" and "+" of CEN., SUR. and SW to adjust volume level for Center Speaker, Surround Speakers and Subwoofer.

5. MUTE

Press the MUTE button on the remote control, the system goes into mute mode with the MUTE indicator shown on the LED display. Press the MUTE button again to disable the mute mode.

6. RESET

Press the RESET button on the remote control, the system will be reset to factory's default setting.

7. BALANCE:

Press the L and R buttons on the remote control to adjust the balance level between the left and right channel.

TROUBLESHOOTING

SYMPTOM	POSSIBLE PROBLEM	SOLUTION
No sound output.	1. System is not connected to the wall outlet. 2. The speaker cables are not connected with the output connectors. 3. The power is not turned ON.	1. Check with the power plug. 2. Check the speaker cables. 3. Make sure the power switch located on the rear panel is on.
No surround sound effect when choosing DVD/5.1 output mode.	The audio setting of the DVD player.	Make sure that the audio setting of the DVD player is 5.1 CH.
Distortion occurred when in high volume.	The sound device has high level signal output.	1. Turn down the master volume of the system. 2. Turn down audio device's overall volume.

For further information or support, email us at tech@midiland.com or visit our FAQ page at www.midiland.com.

Note:

- 1) Some DVD players have high level signal output . When the Master Volume is too high and the distortion occurs, please turn down the Master Volume to prevent damage to the speaker unit and amplifier.
- 2) You may not be able to enjoy 5.1 CH sound effect with this MLi-750 5.1 Home Theater Surround System if your DVD player does not come with analog 5.1 CH output terminals.

SPECIFICATIONS

Output Power (RMS): Total 100W
Satellite: 12W per speaker
Center: 12W
Subwoofer: 40W

Frequency Response:
Satellite: 200Hz ~ 20kHz \pm 3dB
Subwoofer: 40Hz ~ 300Hz \pm 3dB

Speaker Unit
Subwoofer: 5 $\frac{1}{4}$ " woofer
Front: 3" full range
Rear: 3" full range
Center: 3" full range

Power Supply: Built-in transformer

Separation: \geq 90dB

S/N Ratio: \geq 85dB

Function Controls:

Subwoofer: power, LED display

Full functional remote control: power, master volume, bass volume, center volume, surround volume, balance, mute, input selection, and output selection.

Dimensions(W x H x D):

Satellite: 3.54" x 6.22" x 4.13" (90mm x 158mm x 105mm)
Center: 3.54" x 6.22" x 4.13" (90mm x 158mm x 105mm)
Subwoofer: 6.30" x 11.81" x 13.78" (160mm x 300mm x 350mm)

Features and specifications are subject to change without notice.

WARRANTY

One Year Limited Warranty

MidiLand, Inc. warrants to the end user that the MLi-750 is free from defects in materials and workmanship in the course of normal and reasonable use for a term of One (1) year from the date of purchase.

This warranty is the exclusive and only warranty in effect relative to MidiLand, Inc. MLi-750 and any other warranties, either expressed or implied, are invalid. Neither MidiLand Inc., nor any authorized MidiLand, Inc. reseller is responsible for any incidental damages incurred in the use of the MLi-750. (This limitation of incidental or consequential damage is not applicable where prohibited).

MidiLand, Inc.'s obligation under this warranty does not apply to any defect, malfunction or failure as a result of misuse, abuse, improper installation, use with faulty or improper equipment of the use of the MLi-750 with any equipment for which it is not intended.

The terms of this warranty applies only to the MLi-750 when such product is returned to the respective authorized MidiLand, Inc. reseller where purchased. Under the terms of the warranty the original consumer purchaser has certain legal rights and may have other rights which vary worldwide.