

MINOLTA READER/PRINTERS



**MOUNTING
INSTRUCTIONS
& USER'S MANUAL**

**For UC-6
Universal
Carrier**


Step 1

**First, remove
the zoom
lens from
the unit.**




Step 2

Rotate the carrier base mount 90 degrees as shown in photo at right.

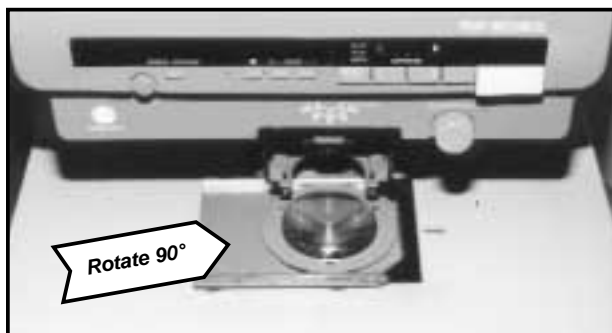

Step 3


Position the UC-6 Carrier as shown. Pull out the lower base plate of the UC-6 Carrier and pull handle to open glass flat.

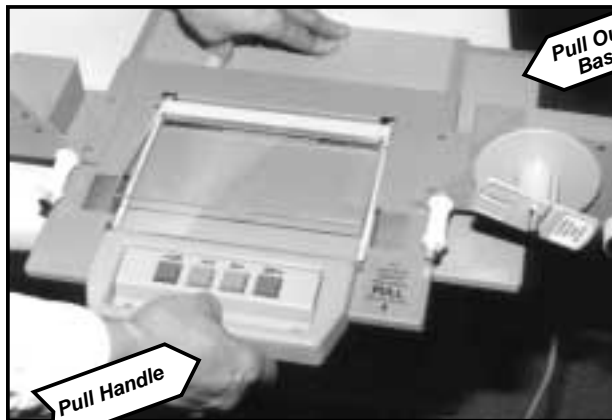

Pull Out Lower Base Plate

Step 4

Next, guide the UC-6 Carrier onto the base mount of the reader/printer by sliding the lower plate onto the carrier base mount.

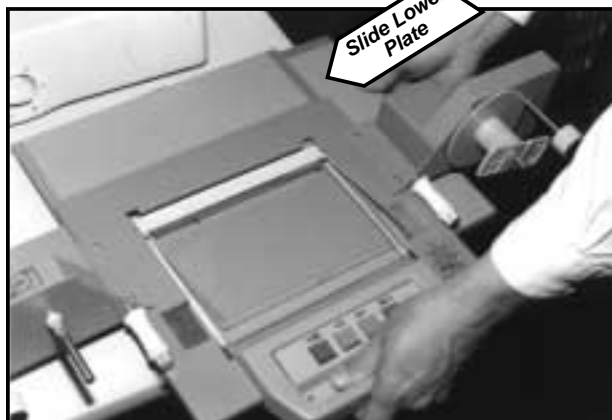

Slide Lower Plate

Step 1

① Speed Control Pad

3 SPEEDS:

Slow/Medium/High

GREY BUTTONS

Slow Speed

RED BUTTONS

Medium Speed &


**High Speed*



*Hold down RED BUTTON and pull handle out to open glass flats to engage High Speed.

Step 2


② Press down on GREY BUTTON to SLOWLY advance or rewind film.

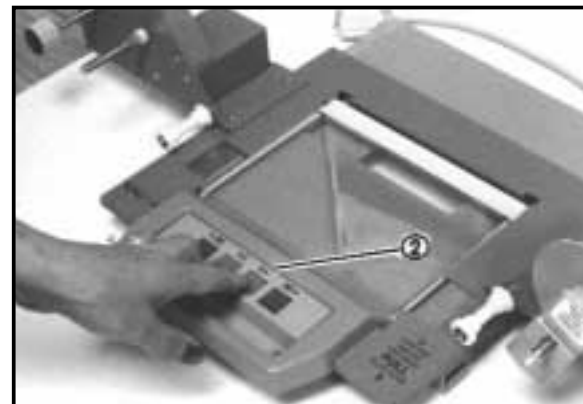

Step 3

Press down RED BUTTON for MEDIUM Speed.

To increase speed, hold down button and pull handle out to open glass flats to engage HIGH Speed.

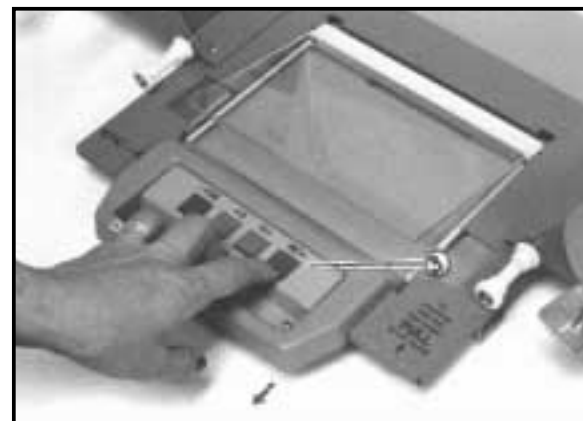


Step 5



Thread film under the white guide rollers, between the glass flats to the quick take up reel.

Step 6

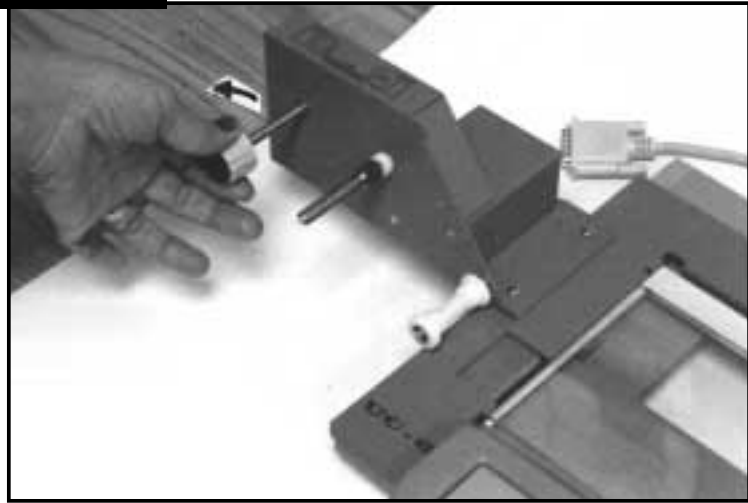

The Carrier has two manual knobs which are used to manually advance or rewind the film.

Step 5



After lower plate of UC-6 Carrier is in position on the base mount, push the lower plate until it stops.

Step 6




Once the UC-6 Carrier is securely attached to the base mount, install zoom lens and plug carrier into unit.

Step 1

Adjustable Film Guides

PULL OUT for 35mm Setting

35mm setting shown

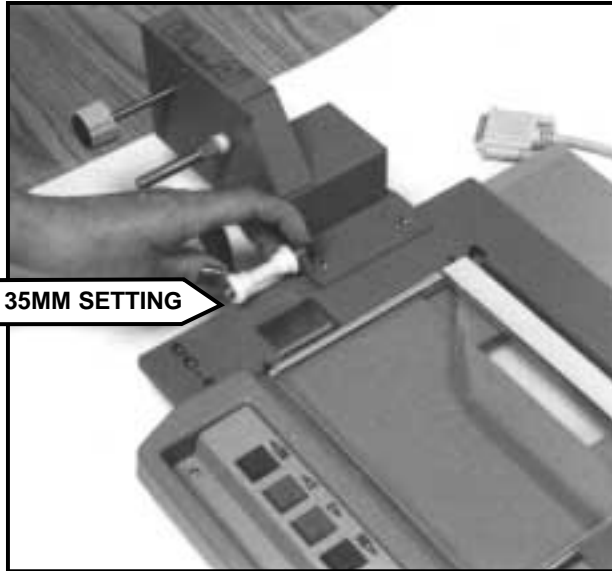


Step 2

Adjustable Film Guides

PUSH IN for 16mm Setting

16mm setting shown

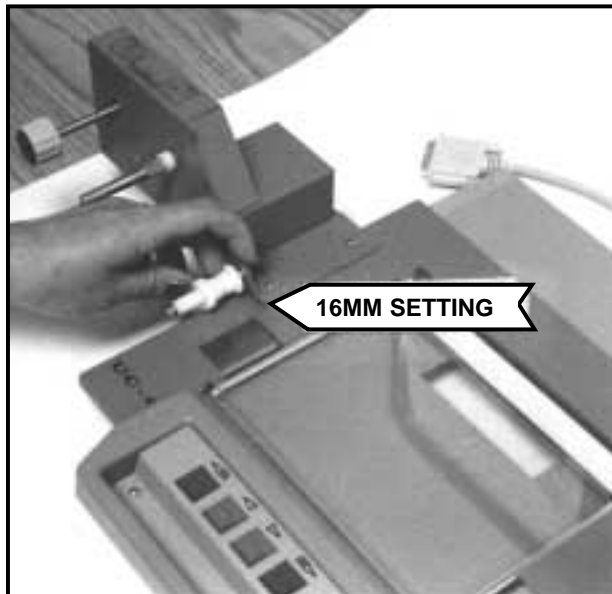


Step 3



TO THREAD FILM:

Pull handle to open top glass.

Step 4

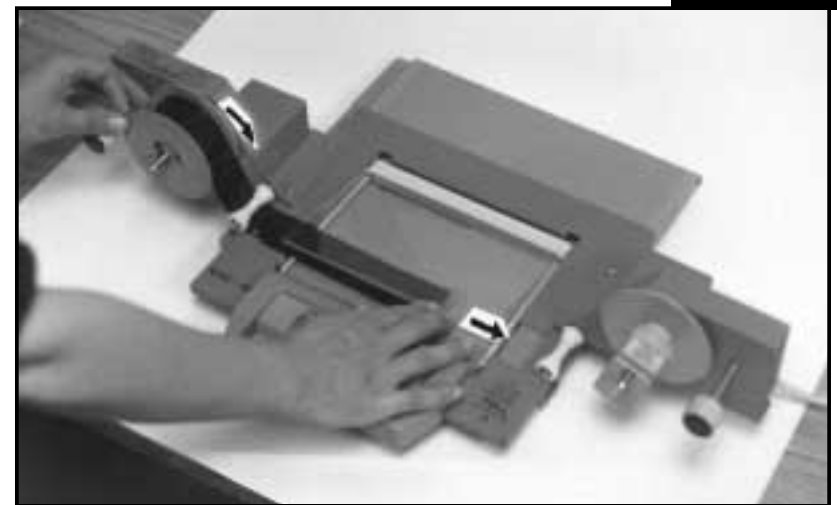

LOAD FILM ON LEFT SPINDLE:

Feed film from over the top of reel.