

# Universal

SBC RU 760/00

6

Instructions for use  
**English** 3

Mode d'emploi  
**Français** 15

Bedienungsanleitung  
**Deutsch** 27

Gebruiksaanwijzing  
**Nederlands** 39

Instruzioni per l'uso  
**Italiano** 51

Instrucciones de manejo  
**Español** 63

Manual de utilização  
**Português** 75

Brugsanvisning  
**Dansk** 87


Bruksanvisning  
**Svenska** 99

Bruksanvisning  
**Norsk** 111

Käyttöohje  
**Suomi** 123



**PHILIPS**

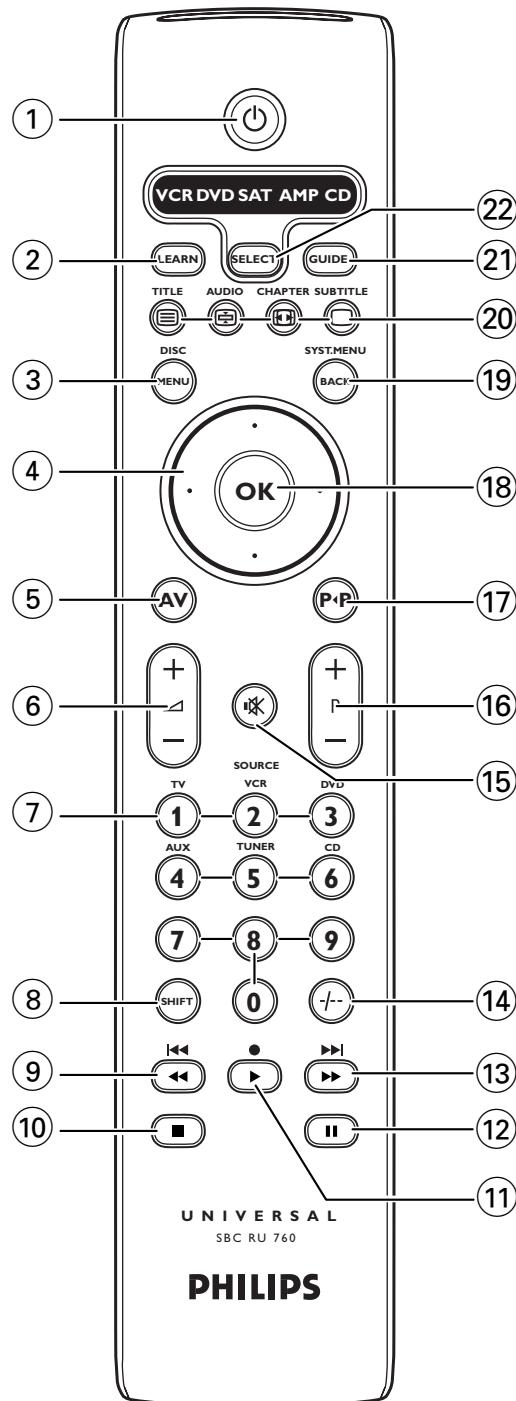

**Instructions for use**

English

**Contents**

<b>1. Introduction</b>	3
<b>2. Installing the remote control</b>	4-6
Inserting the batteries	4
Testing the remote control	4
Setting the remote control	5
Automatically setting the remote control	6
<b>3. Keys and functions</b>	7
<b>4. Extra possibilities</b>	8-13
Programming Macros	8
Learn a key	9
Switching backlighting on or off	10
Reset a key	10
Copy a device mode	11
Reset all functions in a device mode	11-12
Assign Volume control to another mode	12-13
Add a specific function to your remote control	13
Restoring all original functions	13
<b>5. Troubleshooting</b>	14
<b>6. Need help?</b>	14
Code list of all brands / equipment	134-142

**1. Introduction**

Congratulations on your purchase of the Philips SBC RU760 universal remote control. After installing the remote control you can operate a maximum of 6 different appliances with it:

TV,VCR, DVD, satellite tuner/cable decoder, CD player and amplifier/receiver.  
You can find information about how to prepare this remote control for use in the chapter 'Installing the remote control'.

## Instructions for use

### 2. Installing the remote control

#### Inserting the batteries

- 1 Press the cover inwards and slide it in the direction of the arrow.
- 2 Place two R6 AA type batteries into the battery compartment, as shown.
- 3 Slide the cover back and click it firmly into place.

#### Testing the remote control

The remote control has been programmed to operate most Philips appliances. Because the RU760 may use different signals for each brand and even for different models of the same brand, it is advisable to test whether your appliance responds to the RU760.

The example below (TV) instructs you how to do this.

You can repeat the same steps for other appliances (DVD,VCR, etc.) which you want to operate using the RU760.

##### *Example of TV:*

- 1 Turn your TV on manually or use the original remote control.


Tune to channel 1.

- 2 Use the RU760's mode selector to select TV.

Press the SELECT key until the green light around the Standby key lights up.

To select the other devices press the SELECT key several times until the label of the device you want to operate, lights up.


If neither the Standby key nor one of the labels light up, check whether the batteries are properly inserted (see 'Inserting the batteries').

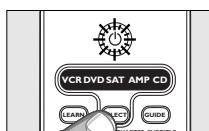

- 3 Check whether all the keys are working.

For an overview of the keys and their functions see '3. Keys and functions'.

- If the TV responds as it should to all of the key commands the RU760 is ready for use.

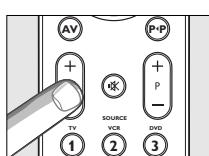

- **If the device does not respond at all or not to all of the key commands, follow the instructions under 'Setting the remote control'.**

## Instructions for use


English

### Setting the remote control

This is only necessary if your appliance does not respond to the RU760.  
 If that is the case, the RU760 does not recognize the brand and/or model of your appliance and you need to program the remote control to do so.  
 The example below (TV) instructs you how to do this.  
 You can repeat the same steps for other appliances (DVD,VCR, etc.) which you want to operate using the RU760.

#### *Example of TV:*

- 1 Turn on the TV manually or use the original remote control.  
 Tune in to channel 1.
- 2 Look up the brand of your TV in the code list at the back of this manual. One or more four-figure codes are shown for each brand. Note the first code.  
*Be careful! There are separate tables for TV, VCR, DVD, etc.  
 Make sure you use the codes from the correct table.*
- 3 Select TV with the mode selector  
 (See 'Testing the remote control').

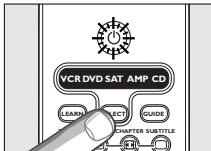

- 4 Keep the LEARN key **pressed for 5 seconds** until the green light around the Standby key blinks twice and then remains lit.
- 5 Enter the code noted in step 2, using the digit keys.  
 – The green light will now blink twice.  
 If the light blinks once for an extended period, the code has not been entered properly or the wrong code has been entered.  
 Start again from step 2.
- 6 Point the RU760 at the TV and check that it responds as it should.  
 – If the TV responds to all of the key commands, the RU760 is ready for use. Do not forget to note your code.  
**• If the device does not respond at all, or not to all of the key commands, start again from step 2 and try the next code from the list.**

## Instructions for use


### Automatically setting the remote control

If you cannot find the right code for your brand device, the remote control can automatically search for the right code.


#### Example of TV:

- 1 Make sure the TV is switched on and select a channel using the original remote control or the keys on the TV (for example channel 1). The RU760 emits the 'switch off TV' signal for all models of TV that are stored in the memory.
- If the device is a DVD-player or VCR, insert a disk or tape and start playback.


- 2 Keep the LEARN key **pressed for 5 seconds**, until the green light around the Standby key blinks twice and then remains lit.

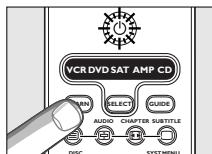


- 3 Press the Standby key of the RU760 briefly.

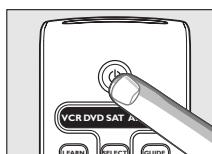

- The RU760 now starts emitting all known 'TV off' signals, one by one. Each time a code is sent, the green light around the Standby key lights up.

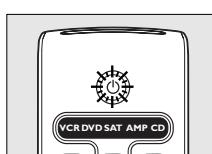

- 4 When your TV switches off (standby), press the Standby key of the RU760 immediately to confirm.
- The RU760 has now found a code that works on your TV.

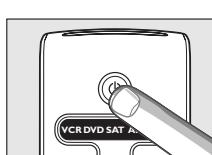

- 5 Check if you can operate all functions on your TV with the RU760.

- ***If this is not the case, you can redo the automatic setting. The RU760 will then search for a code that perhaps works better.***
- After the RU760 has run through all the known codes, the search will stop automatically and the green light will stop blinking.
- Automatic programming of a TV takes a maximum of 3 minutes.

## Instructions for use

English

### 3. Keys and functions

The illustration on page 3 gives an overview of all keys and their functions.

- ① ⌂ **Standby** ..... switches TV,VCR, SAT,AMP,DVD or CD mode on or off.
- ② **LEARN** ..... switches the RU760 in programming or learning mode.
- ③ **MENU** ..... turns the menu on and off.
- ④ **Cursor ring** ..... cursor up, down, left and right in a menu.
- ⑤ **AV** ..... selects external Audio/video input(s).
- ⑥ - ▲ + ..... Volume up / down of TV or Amplifier.
- ⑦ **Digit keys** ..... direct choice of channels and other functions.
- ⑧ **SHIFT** ..... for extra functions. When pressed at the same time as a second key, the second key will get another function. For example:  
**SHIFT + ►:** Record  
**SHIFT + <<:** Previous track  
**SHIFT + ►►:** Next track  
**SHIFT + BACK:** System menu (DVD)
- 
- Try out other combinations with the Shift-key on your appliance in order to find out which functions are available. Only functions featured on the original remote control are available.
- ⑨ ◀◀ ..... VCR/CD/DVD: Rewinds the tape or disc  
TV/SAT/CBL: Red fasttext key
- ⑩ ■ ..... VCR/CD/DVD: Stops the tape or disc  
TV/SAT/CBL: Green fasttext key
- ⑪ ◀ ..... VCR/CD/DVD: Play tape or disc  
Shift+Play: Record  
TV/SAT/CBL: White fasttext key
- ⑫ II ..... VCR/CD/DVD: Pause  
TV/SAT/CBL: Yellow fasttext key
- ⑬ ►► ..... VCR/CD/DVD: Winds the tape or disc  
TV/SAT/CBL: Blue fasttext key
- ⑭ -/- ..... selects between one- and two-figure channel numbers.
- ⑮ MUTE ..... mutes the sound of the TV or Amplifier.
- ⑯ - P + ..... Program up/down, Channel up/down,  
Next/previous.
- ⑰ P◀P ..... Previous program/channel.
- ⑱ OK ..... OK, Enter; Acknowledge.
- ⑲ BACK ..... jumps back one level in the Menu, or turn off  
Menu.
- ⑳ T E S I ..... TV: teletext on/off, hold, movie expand  
VCR: timer, Showview  
SAT/CBL: teletext, Info, Guide, Subtitle  
DVD: title, audio chapter, subtitle  
AMP: Surround mode  
CD: Shuffle
- ㉑ GUIDE ..... Guide, info or white
- ㉒ SELECT ..... selects the device you want to operate:  
TV,VCR, SAT (satellite/cable),AMP,DVD or CD.

If you use the (⊖) 'memory off' key to get to the next teletext page on your Philips TV, you can press the Subtitle key for this. See also 'Troubleshooting'.

**If the device does not respond at all, or not to all of the key commands, follow the instructions under 'Setting the remote control'. It is possible that you must enter another code for the device.**

## Instructions for use


### 4. Extra possibilities

#### Programming Macros


A macro allows you to automate actions you have to do frequently with your remote control. Eg. if you want to watch a DVD, you have to turn on the DVD, turn on the TV, turn on the receiver/amplifier, select the DVD input channel on your amplifier and start playing the DVD. The different keys you have to press to do this, can be stored under one single key. So you only have to press one button to start up your system for watching a DVD.

##### *Example 'Watching DVD' macro:*


- 1 Select the required mode with the SELECT key, e.g. DVD mode.

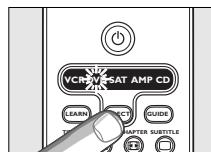

- 2 Press keys 1 and 6 of the RU760 simultaneously for 5 seconds until the DVD label blinks twice and then remains lit.

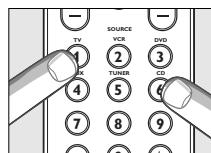

- 3 Press keys 9, 9 and 1, in that order.

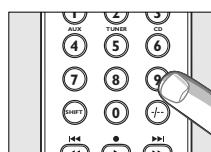

- 4 Press the key under which you want to store the macro, e.g. the P◀P key.

Notes:

- Once a macro is stored under a key, the original function of the key can not be used anymore.
- You can also store the macro by pressing Shift in combination with a target key (the target key keeps its original function).
- You cannot store a macro under the SELECT, LEARN or SHIFT key.


- 5 Enter the sequence of keys to be stored, e.g.:

- Select DVD mode with SELECT key and press the Standby key.
- Select TV mode with SELECT key and press 1.
- Select AMP mode with SELECT key and press the Standby key.
- Select DVD mode with SELECT key and press ▲.

- 6 To close the macro press the LEARN key.

- The DVD label blinks twice to confirm.

- If you now select DVD mode and press the P◀P key, the remote will switch on the DVD, the TV and the AMP and starts playing the disc.

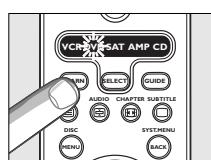

## Instructions for use

English


### Learn a key

If you miss certain functions from your original remote control of the RU760, the RU760 can learn these functions from the original remote. You can store a function under any of the available keys of the RU760, except LEARN, SELECT and SHIFT. Please, note that any function already stored under a key will be deleted.


#### *Example for VCR:*

Make sure you have the original VCR remote control at hand.


- 1 Select the device mode VCR, with the SELECT key.

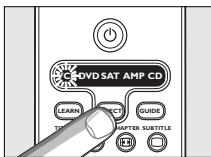

- 2 Press the LEARN key and the target key on the RU760 **simultaneously for 5 seconds**, until the VCR label blinks twice and remains lit.

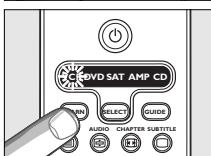

- 3 Place both remote controls on a flat surface (like a coffee table) and aim them head-to-head with about 10cm in between.

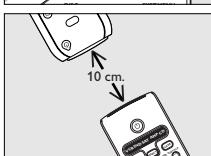

- 4 Press the button you want to copy on the original remote control.

- If the RU760 has learned the code, the VCR label will blink twice to confirm the signal is stored.
- If the VCR light blinks once for a longer period, the IR signal is not learned by the RU760. Please, try a few times and make sure the remotes are aligned as described in step 3.

If the RU760 cannot learn the code after several times trying, it is possible that:

- The IR signal of your original device is out of range (the RU760 can only learn IR signals with a carrier signal of 30-60kHz).
- The memory of the RU760 is full.
- The RU760 stopped the learning process after 20 seconds if no IR signals are found. Check if your original remote control is working correctly.

## Instructions for use

### Switch backlighting on or off

With the backlighting of the RU760 you can find the right key on your remote, even in a dimly lit room. As the backlighting consumes additional power, the battery lifetime will reduce when the backlighting is used frequently. Therefore it is possible to switch this function off.

*Turn on the backlighting:*

- Press keys 7 and 9 simultaneously for 5 seconds.
- The Standby light will blink twice to confirm the backlighting is enabled.
- Everytime you press a key on the remote the backlighting will switch on. After 5 seconds it will switch off automatically



*Turn off the backlighting:*


- Press keys 1 and 9 simultaneously for 5 seconds.
- The Standby light will blink twice to confirm the backlighting is disabled.
- The backlighting will not switch on anymore when you press a key.



### Reset a key

To delete a learned function or a macro from a key and restore the original function, do the following:


- 1 Select the correct device mode in which you want to restore a key.

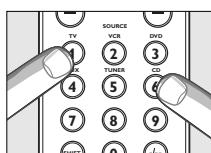

- 2 Press the keys 1 and 6 simultaneously for 5 seconds until the label of the selected mode blinks twice and remains lit.



- 3 Press keys 9, 9 and 6, in that order.

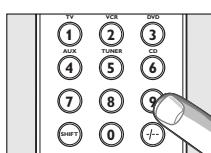

- 4 Press the key you want to reset twice.

- The label of the selected mode blinks twice to confirm that the learned code or macro is deleted and the original function is restored.

## Instructions for use


English

### Copy a device mode

In case you have two TV's, you can change any of the other device modes of the RU760 into a second TV mode for controlling that second TV.

*Example: You have two TVs, but no satellite or cable box.*

- 1 Select the target mode SAT with the SELECT key.

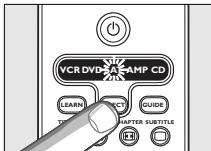


- 2 Press keys 1 and 6 simultaneously for 5 seconds until the label of the selected mode blinks twice.




- 3 Press keys 9, 9 and 2, in that order.



- 4 Select the source mode (TV) you want to copy.

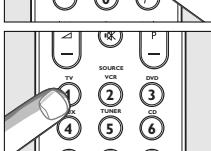


- 5 Press key 1.
  - The SAT mode label will blink twice to confirm. You can now program the SAT mode for operating a second TV. Please read chapter 2 'Installing the remote' how to do this.
  - Any satellite device, learned keys or macros stored in the SAT mode will be deleted.
  - If the mode light blinks once for a longer time, the copying failed. Try again from step 1.

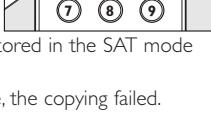


### Reset all functions in a device mode

To reset a copied device mode to the original mode or to delete all learned keys or macros stored in a mode, you can reset this mode to the default factory settings.

- 1 Select the mode to be reset with the SELECT key.

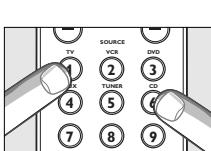


- 2 Press keys 1 and 6 simultaneously for 5 seconds until the label of the selected mode blinks twice.

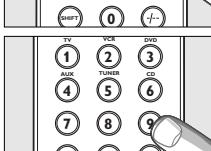

- 3 Press keys 9, 9 and 6, in that order.

## Instructions for use

- 4** Press the SELECT key twice to confirm  
 – The mode light will blink twice to confirm  
 the selected mode is reset to default settings.  
 • If the mode light blinks once for a longer  
 time, the reset failed. Try again from step 1.

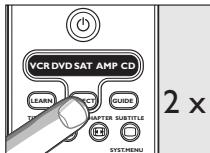

## Assign Volume control to another mode


The volume controls (Volume up, Volume down and Mute) on the RU760 are assigned to either your TV or your amplifier/receiver, depending on the device you have selected;

MODE	VOLUME CONTROLS
TV mode selected .....	Volume controls work with TV
VCR mode selected.....	Volume controls work with amplifier/ receiver
DVD mode selected .....	Volume controls work with amplifier/ receiver
SAT mode selected.....	Volume controls work with TV
Receiver mode selected.....	Volume controls work with amplifier/ receiver
CD mode selected.....	Volume controls work with amplifier/ receiver


If you want a different setup, the volume control assignment can be changed.

*Example: In VCR mode you want to operate the TV volume control*

- 1** Select the VCR mode with the SELECT key.

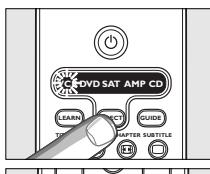

- 2** Press keys 1 and 6 simultaneously for 5 seconds until the label of the selected mode blinks twice and remains lit.

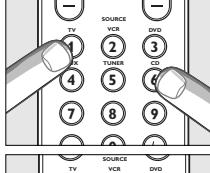

- 3** Press keys 9, 9 and 3, in that order.



- 4** Select the TV mode with the SELECT key.



## Instructions for use

English

- 5** Press key 1.  
 - The mode light will blink twice to confirm that the VCR volume controls are assigned to TV.  
 • If the mode light blinks once for a longer time, the volume assignment failed. Try again from step 1.




### Add a specific function to your remote control


In case you miss a specific function on the remote control and you can not learn the function from your original remote control, you can contact our Helpline to ask for a 5 digit code to add the missing function to the RU760. (You can find the telephone number on page 145).

- 1** Select the required mode with the SELECT key.

- 2** Press keys 1 and 6 of the RU760 **simultaneously for 5 seconds** until the label of the selected mode blinks twice and then remains lit.

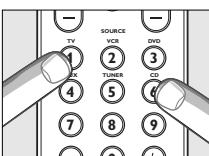


- 3** Press keys 9, 9 and 4, in that order.

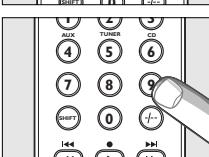

- 4** Enter the 5-digit code you have received from our helpdesk.

 
- 5** Press the key under which you want to store the new function.  
 - The label of the selected mode blinks twice to confirm that the function is stored.  
 • If you store the function on a key that already had a function, the original function will be lost. You can reset the original function with 'Reset a key' as described on page 11.



### Restoring all original functions

To revert the RU760 back to the factory default settings, do the following:

- 1** Press keys 1 and 6 **simultaneously for 5 seconds** until the label of the selected mode blinks twice and remains lit.

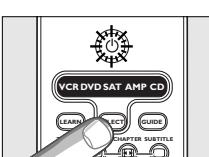

- 2** Press keys 9, 8 and 1, in that order.

- The mode light will blink twice to confirm a successful reset. Your remote is now reverted to the state it was when you first took it out of the packaging.



## Instructions for use

### 5. Troubleshooting

- Problem
- Solution
- The device you want to operate does not respond and the device label does not blink when you press a key.
- Replace the old batteries with two new 1.5 Volt, R03, UM4 or AAA batteries.
- The device you want to operate does not respond but the device label does blink when a key is pressed.
- Point the RU760 at the device and make sure that there are no obstructions between the RU760 and the device.
- The RU760 does not respond properly to commands.
- Maybe you are using the wrong code. Try programming the RU760 again using another code, which is mentioned under the brand of your device, or reset for automatic search to find the right code.  
If the device still does not respond, call our helpline.
- You cannot get the Teletext pages on your screen, while you are used to use the (↔) button for this.
- Follow the instructions under 'Installing the remote control' and at step 5 press keys 0, 0, 6 and 4.  
Press the subtitling-key to get Teletext pages on your screen.
- The Teletext keys do not work.
- Find out whether your TV is equipped with Teletext.
- You cannot switch off Teletext.
- Press the key for subtitling to switch off Teletext.
- You have difficulties operating all of the functions on your device.
- Maybe the RU760 has to be adapted to the model of the device.  
Call our helpline for details.
- Your brand of device is not in the code list.
- Try to set the RU760 automatically.  
See 'Automatically setting the remote control'.
- None of the codes works during manual setting of the remote control.
- If that is the case, follow the instructions under 'Automatically setting the remote control'.

### 6. Need help?

If you have any questions about the RU760, call our special helpline. You will find the telephone number after the code list at the back of this manual.

Read this manual carefully before you make a call. You can solve most of the problems yourself. If you cannot find any answers to your problems, write down the details of your device shown in the code list at the back of this manual. This will help our operators to assist you better and more quickly. Look up the numbers of the models in the instructions accompanying the device or on the back of your device. When you call our helpline, make sure the device is to hand so that our operators can help you determine whether your remote control is working properly.

The model number of your Philips universal remote control is  
SBC RU760/00.

Date of purchase: ...../...../.....  
(day/month/year)

**Codes****TV****SETUP CODES FOR TV**

A.R.Systems .0001  
 Accent .0001  
 Accuphase .0001  
 Acura .0190, 0114  
 Admiral .0244  
 Adyson .0001  
 Aim .0001  
 Aiwa .0728  
 Akai .0388, 0245, 0475, 0036,  
       .0001, 0378, 0057, 0729, 0839  
 Akiba .0245, 0001  
 Akito .0001  
 Akura .0245, 0001  
 Alba .0695, 0245, 0063,  
       .0398, 0036, 0262  
 Allorgan .0321  
 Allstar .0001  
 Amplivision .0244, 0427  
 Amstrad .0389, 0204, 0036, 0398, 0001  
 Anitech .0036, 0001  
 Ansonic .0001, 0397, 0129  
 AOC .0057  
 Arc En Ciel .0528, 0595  
 Arcam .0244, 0243  
 Aristona .0001  
 ASA .0131, 0114  
 Asberg .0001  
 Asuka .0245, 0244, 0243  
 Atlantic .0233, 0001, 0243, 0347  
 Audiosonic .0136, 0001, 0036,  
       .0244, 0397, 0401  
 Audioton .0244, 0397, 0513  
 Autovox .0114, 0264, 0233, 0244, 0274  
 Awa .0036, 0401, 0001,  
       .0038, 0244, 0243  
 Axxent .0036  
 Ayomi .0265  
 Baird .0136, 0370, 0220, 0244  
 Bang & Olufsen .0592, 0114  
 Barco .0579, 0190  
 Basic Line .0245, 0036,  
       .0001, 0401, 0190  
 Bastide .0244  
 Baur .0388, 0037, 0001, 0532,  
       .0581, 0562, 0376, 0539  
 Bazin .0244  
 Beko .0741, 0513, 0742,  
       .0397, 0001, 0455  
 Beon .0001, 0445  
 Best .0397, 0448  
 Bestar .0001, 0397, 0401  
 Binatone .0244  
 Blaupunkt .0222, 0218,  
       .0581, 0562, 0482  
 Blue Sky .0001, 0695, 0245, 0741  
 Blue Star .0309  
 Bondstec .0274  
 Boots .0244, 0036  
 BPL .0309  
 Brandt .0652, 0528, 0264, 0136,  
       .0426, 0362, 0360, 0223  
 Brandt Electronic .0528, 0595,  
       .0314, 0362  
 Brinkmann .0001, 0445, 0695  
 Brionvega .0001, 0389, 0114  
 Britannia .0243, 0244  
 Bruns .0114, 0455  
 BSR .0321  
 BTC .0245  
 Bush .0695, 0001, 0725, 0245,  
       .0063, 0579, 0321, 0401,  
       .0036, 0309, 0398, 0376

Candle .0057  
 Canton .0245  
 Carad .0001, 0637  
 Carrefour .0001, 0063  
 Carnivale .0057  
 Cascade .0036, 0001  
 Casio .0001, 0190  
 Cathay .0001  
 CCE .0001, 0244  
 Centurion .0001  
 Century .0114, 0274, 0265  
 CGE .0274, 0579, 0397, 0190, 0303  
 Cimline .0036, 0245  
 Citizen .0057  
 City .0036  
 Clarivox .0001  
 Clatronic .0245, 0244, 0398, 0741  
 Condor .0397, 0001, 0347,  
       .0274, 0243, 0036  
 Conrac .0835  
 Conrad .0001  
 Contec .0063, 0243, 0036  
 Continental Edison .0426, 0360,  
       .0595, 0223, 0528  
 Cosmel .0001, 0036  
 Crosley .0114, 0374  
 Crown .0397, 0036, 0445,  
       .0001, 0448, 0741  
 Crystal .0458  
 CS Electronics .0243  
 CTC .0274  
 Curtis Mathes .0057, 0729  
 Cybertron .0245  
 D-Vision .0001  
 Daewoo .0661, 0401, 0001,  
       .0036, 0526, 0057, 1164  
 Dainichi .0245  
 Dansai .0001, 0243  
 Dantax .0397, 0513, 0741, 0742  
 Dawa .0001  
 Dayton .0001, 0036, 0401  
 De Graaf .0575, 0190  
 Decca .0099, 0001, 1164  
 Deitron .0001, 0401, 0245  
 Desmet .0001, 0036  
 Diamant .0001  
 Digiline .0001  
 Digitor .0001  
 Dixi .0036, 0001, 0274, 0244  
 Dual .0481, 0379, 0001, 0244  
 Dual Tec .0244, 0286  
 Dumont .0374, 0114, 0133, 0244  
 Dux .0001  
 Dynatron .0001  
 Elbe .0286, 0397, 0001,  
       .0462, 0265, 0319, 0190  
 Elektra .0001, 0036  
 ELG .0001  
 Elin .0575, 0243, 0001, 0132, 0131  
 Elite .0245, 0347, 0001  
 Elta .0036, 0243  
 Emco .0274  
 Emerson .0388, 0114, 0001,  
       .0240, 0204, 0274, 0397  
 Emperor .0309  
 Erres .0001  
 Ether .0057  
 Etron .0036, 0001  
 Euromann .0243, 0244,  
       .0397, 0448, 0001  
 Expert .0233  
 Exquisit .0001, 0274  
 Fenner .0401, 0036

**Codes****TV**

Ferguson	.0587, 0136, 0314, 0100, .0265, 0001, 0370, 0220, 0362	Interbuy	.0036, 0274, 0001
Fidelity	.0388, 0243, 0220, .0001, 0190, 0549	Interfunk	.0388, 0539, 0190, 0528, .0595, 0274, 0397, 0001
Finlandia	.0373, 0386, 0575, 0388, 0190	Internal	.0401, 0001
Finlux	.0114, 0373, 0001, 0741, .0132, 0131, 0374, 0099, 0742	Intervision	.0244, 0129, 0309, 0482, .0245, 0190, 0274, 0001
Firstline	.0695, 0243, 0321, 0036, 0274, .0244, 0695, 0190, 0401	IR	.0190, 0001
Fisher	.0397, 0244, 0131, 0582, .0695, 0741, 0190, 0114, 0099	Irradio	.0036, 0245, 0274, 0398
Flint	.0001, 0482, 0637	Isukai	.0245, 0309, 0001
Forgestone	.0220	ITC	.0579, 0244
Formenti	.0374, 0347, 0114, .0001, 0190, 0579, 0243	ITS	.0398, 0245, 0243, 0036, 0001
Fortress	.0114, 0120	ITT	.0575, 0388, 0378, 0374, 0190
Fraba	.0397, 0001	ITV	.0274, 0401, 0001
Friac	.0397, 0036, 0001	JMB	.0661, 0401, 0001
Frontech	.0274, 0190, 0475, 0458	Jubilee	.0001
Fujitsu	.0099, 0233, 0001, 0244, 0036	JVC	.0633, 0063, 0680, .0398, 0220, 0445
Funai	.0321, 0291, 0695	Kaisui	.0245, 0036, 0244, .0233, 0190, 0131, 0388
GBC	.0579, 0190, 0036	Kapsch	.0245, 0309, 0482, 0001
Galaxi	.0001, 0388, 0190	Karcher	.0637, 0448, 0397, 0309, 0001
Galaxis	.0397, 0001, 0445	Kathrein	.0001
GE	.0587, 0057	Kawa	.0398
GEC	.0244, 0099, 0001, 0190, 0388	Kendo	.0389, 0262, 0637, 0274, .0190, 0397, 0455, 0001
Geloso	.0036, 0374, 0401, 0190	Kennedy	.0579, 0190
Genexxa	.0245, 0190, 0001	Kenwood	.0057
Gibralter	.0001	KTV	.0057
GoldStar	.0001, 0397, 0317, .0244, 0136, 0057	Kingsley	.0243
Goodmans	.0661, 0063, 0401, 0001, .0244, 0398, 0099, 0370, 0526	Kiton	.0001
Gorenje	.0397, 0448	Kneissel	.0286, 0462, 0397, .0637, 0401, 0001
GPM	.0245	Kolster	.0001
Graetz	.0388, 0374, 0190, 0001	Konka	.0398, 0741, 0245, 0001
Granada	.0001, 0244, 0386, .0253, 0099, 0378, 0366	Korpel	.0001
Grandin	.0637, 0309, 0001, 0427, .0245, 0036, 0190, 0741	Korting	.0114, 0397, 0347, 0448
Grundig	.0222, 0514, 0614, 0562, .0218, 0264, 0581, 0001	Kosmos	.0001
Hankook	.0057	Koyoda	.0036
Hanseatic	.0388, 0347, .0455, 0190, 0001	Kraking	.0265
Hantarex	.0036, 0001	Kuba	.0190
Hantor	.0001	Kyoshu	.0445
Harwood	.0001, 0036	Kyoto	.0190, 0243, 0244
Hauppauge	.0001	L&S Electronic	.0835
Havermey	.0120	LaSat	.0513, 0397
HCM	.0309, 0036, 0001	Leader	.0036
Hema	.0036, 0244, 0136	Lecson	.0001
Hifivox	.0528, 0595	Lenco	.0190, 0401, 0001, 0131
Hiline	.0001	Lenoir	.0036
Hinari	.0245, 0063, 0036, 0001	Lesa	.0274
Hisawa	.0482, 0427, 0309, 0245	Levis Austria	.0001
Hitachi	.0575, 0063, 0252, 0136, .0244, 0376, 0132, 0223, .0374, 0190, 0383, 0057, 0001	Leyco	.0321, 0099, 0001
Hornynphon	.0001	LG	.0741, 0057, 0244, 0274, 0317, .0397, 0388, 0190, 0243, 0001, 0002
Huanyu	.0401, 0243	Liesenkotter	.0001
Hypson	.0309, 0244, 0741, .0742, 0309, 0001	Lifetec	.0036, 0401, 0695, .0539, 0245, 1164, 0001
Iberia	.0001	Loewe	.0539, 0114, 0397, .0319, 0001, 0002
ICE	.0398, 0244, 0243, .0245, 0036, 0001	Logik	.0038, 0220, 0398
ICeS	.0245, 0243	Luma	.0233, 0190, 0001, 0401
ICT	.0001	Lumatron	.0233, 0190, .0401, 0244, 0001
Imperial	.0397, 0274, 0579, 0445, 0190	Lux May	.0036, 0001
Indesit	.0264	Luxor	.0388, 0383, 0376, 0264, 0384
Ingelen	.0190, 0741, 0637, 0514, 0543	M Electronic	.0190, 0373, 0036, .0136, 0314, 0507, 0132, .0244, 0401, 0131, 0001
Inno Hit	.0099, 0244, 0245, 0036, 0001	Magnadyne	.0114, 0374, .0274, 0129, 0190
Innovation	.0001	Magnafon	.0129, 0190, 0274
Interactive	.0190, 0397, .0539, 0136, 0001	Magnavox	.0057, 0001
		Manesth	.0262, 0244, 0347, 0235, 0190
		Marantz	.0001, 0002, 0057
		Marelli	.0114
		Mark	.0244, 0243, 0401, 0036, 0001

**CODELIST**

**Codes****TV**

Matsui	.0514, 0063, 0038, 0204, .....0321, 0036, 0099, 0262, .....0244, 0398, 0190, 0001	Pathe Cinema	.0347, 0265, 0243, 0579
Mediator	.....0001	Pathe Marconi	.0528, 0360, 0223, 0595
Median	.0695, 0835, 1164, 0001, 0539	Pausa	.....0036
Megas	.....0637	Penney	.....0057
Memorex	.....0036	Perdio	.....0347
Memphis	.....0364, 0036	Perfekt	.....0001
Mercury	.....0036, 0001	Philco	.0579, 0274, 0114, 0057
Metronic	.....0652	Philex	.....0378
Metz	.0394, 0222, 0302, 0114, .....0218 0562, 0474, 0001	Philips	.0001, 0002, 0003, 0004, .....0220, 0114, 0581, 0401, 0057
Micromaxx	.0835, 0695, 0001	Phoenix	.....0114, 0347, 0001
Microstar	.....0835	Phonola	.....0114, 0220, 0001
Minato	.....0001	Pilot	.....0057
Minerva	0514, 0264, 0222, .....0218, 0581, 0562, 0135	Pioneer	.0370, 0388, 0397, .....0314, 0190, 0136, 0001
Minoka	.....0386, 0001	Profex	.....0388, 0036
Mitsubishi	.0063, 0135, 0264, 0562, .....0114, 0539, 0317, 0243, .....0636, 0319, 0057, 0220, 0001	Proline	.....0099, 0001
Mitsuri General	.....0190	Prosonic	.0243, 0397, 0401, 0001
Mivar	.0397, 0317, 0319, .....0243, 0636, 0244	Protech	.0695, 0036, 0274, 0458, 0244, .....0445, 0129, 0364, 0579, 0001
Monaco	.....0036	Proton	.....0057
Morgan's	.....0001	Quelle	.0388, 0532, 0579, 0037, 0562, .....0131, 0539, 0581, 0038, 0001
Motorola	.....0120	Questa	.....0063
MGA	.....0057	Radiola	.....0001
MTC	.0376, 0539, 0057, 0397, 0243	Radiomarelli	.....0114, 0274
Multitech	.....0129, 0036, .....0243, 0244, 0001	RadioShack	.....0057
Murphy	0133, 0190, 0243	RCA	.....0057, 1474
Musikland	0245, 0274, 0001	Rank Arena	.....0063
Myryad	.....0001	Realistic	.....0057
NAD	.....0388, 0190	Rediffusion	.....0388, 0378
Naiko	.....0001	Reoc	.....0741
Nakimura	.....0401, 0001	Revox	.....0397, 0001
National	.....0264, 0253	Rex	.....0233, 0190, 0286
NEC	.1731, 0057, 0063, 0347, .....0482, 0036, 0401, 0244, 0001	RFT	.....0455, 0114
Neckermann	.....0218, 0581, 0397, .....1532, 0114, 0532, 0376, .....0190, 0445, 0274, 0244	Roadstar	.....0245, 0036, 0445
NEI	.....0364, 0458, 0190, 0001	Rowa	.....0725
Nesco	.....0274	Runco	.....0057
Netsat	.....0001	Saba	.0652, 0190, 0362, 0528, 0136, .....0314, 0374, 0114, 0223, 0370, 0595
Neufunk	.....0036, 0637, 0245, 0309	Saccs	.....0265
Newtech	.....0036, 0244, 0370, 0001	Sagem	.....0637, 0309
Nikkai	.....0245, 0243, 0099, 0364	Saisho	.0036, 0262, 0204, .....0038, 0458, 0244, 0190
Nikko	.....0057	Saivod	.....0001
Noblako	.....0129, 0243	Sakai	.....0190
Nogamatic	.0595, 0528, 0426, 0223	Salora	.....0575, 0388, 0376, .....0190, 0386, 0383
Nokia	.....0190, 0575, 0633, 0388, .....0507, 0658, 0500, 0637	Sambers	.....0001
Nordmende	.....0587, 0223, 0528, .....0136, 0370, 0595, 0314	Samsung	.0397, 0614, 0036, .....0841, 0317, 0671, 0244, .....0001, 0057, 0729, 0839
Oceanic	.....0388, 0190, 0374	Sampo	.....0057
Okano	.....0397, 0001	Sandra	.....0243
Onwa	.....0398, 0129, 0245	Sanyo	.0063, 0099, 0366, 0038, 0131
Optimus	.....0677	SBR	.....0220, 0001
Orion	.....0204, 0347, 0321, .....0262, 0206, 0001	Schaub Lorenz	.....0388, 0374, 0741
Osaki	.....0245, 0244, 0099, 0001	Schneider	.0695, 1164, 0245, .....0398, 0379, 0274, 0001
Oso	.....0245	SEG	.0695, 0063, 0244, 0579, 0001
Osume	.....0099, 0245, 0063, 0001	SEI	.....0037, 0204, 0129, .....0374, 0114, 0321, 0001
Otto Versand	.....0063, 0532, 0347, .....0376, 0562, 0037, 1532, .....0244, 0374, 0539, 0581, .....0218, 0370, 0579, 0001	Seleco	.....0190, 0389, 0286, 0233
Palladium	.....0397, 0445, 0532, .....1532, 0244, 0190, 0001	Sharp	.....0063, 0120, 0057, 0321
Panama	.....0244, 0243, 0274, 0001	Shorai	.....0321
Panasonic	.....0677, 0253, 0190, 0267, .....0153, 0264, 0394, 0374	Siaremi	.....0114, 0374, 0129
Panavision	.....0001	Siemens	.0222, 0218, 0562, .....0374, 0581, 0001
		Silver	.....0063
		Singer	.....0114
		Sinudyne	.....0204, 0374, 0129, .....0321, 0114, 0262, 0037
		Skantic	.....0384, 0383
		Solavox	.....0190, 0378
		Sonoko	.....0036

**Codes****TV / VCR**

Sonor .0190  
 Sony .1532, 0063, 0532,  
       .1678, 0038, 0037  
 Soundwave .0445  
 Standard .0245, 0244, 0036  
 Stern .0286, 0233, 0190  
 Sunkai .0321  
 Susumu .0245  
 SVA .0614  
 Sylvania .0057  
 T + A .0474  
 Tandy .0245, 0303, 0120,  
       .0099, 0244, 0190  
 Tashiko .0063, 0386, 0244  
 Tatung .0244, 0099  
 TCM .0835  
 Teac .0695, 0725, 0482,  
       .0445, 0309, 0036  
 Tec .0579, 0274, 0244  
 Technema .0347  
 Technics .0677  
 Teleavia .0370, 0595, 0360, 0528, 0517  
 Telefunken .0652, 0595, 0362, 0504,  
       .0593, 0289, 0498, 0528,  
       .0136, 0370, 0525, 0729, 0001  
 Telemeister .0347  
 Teletech .0036  
 Teleton .0063, 0244, 0233, 0376  
 Tensai .0245, 0321, 0347  
 Tera .0057  
 Texet .0245, 0243  
 Thomson .0652, 0587, 0314, 0376,  
       .0528, 0264, 0370, 0517, 0595  
       .0223, 0360, 0426, 1474, 0136  
 Thorn .0388, 0526, 0562, 0131, 0539,  
       .0099, 0370, 0532, 0580, 0220  
 Thorn-Ferguson .0370  
 Tomashi .0309  
 Toshiba .0063, 0535, 0270, 1535, 0580  
 Towada .0579  
 Transonic .0725  
 Triumph .0270, 0204  
 Tuntek .0057  
 Uher .0233, 0347  
 Ultravox .0378, 0129  
 Universum .0397, 0373, 0519, 0132,  
       .0448, 0579, 0131, 0562  
 Vector Research .0057  
 Videosat .0274  
 Videotechnic .0244  
 Vision .0347  
 Voxson .0190, 0114  
 Waltham .0383, 0244  
 Wards .0057  
 Watson .0347  
 Watt Radio .0579, 0129  
 Wega .0063, 0114  
 White Westinghouse .0347, 0243  
 Yamaha .0057  
 Yoko .0458, 0244  
 Zanussi .0233

**SETUP CODES FOR VCR**

Aiwa .0375, 0027, 0334, 0379  
 Akai .0342, 0133, 0312, 0068  
 Akiba .0099  
 Alba .0305, 0099, 0379, 0342,  
       .0047, 0360, 0236, 0322  
 Ambassador .0047  
 Amstrad .0027, 0352  
 Anitech .0099  
 ASA .0108, 0064  
 Asuka .0064  
 Baird .0027, 0131, 0068  
 Basic Line .0305, 0099, 0047  
 Blaupunkt .0253, 0033, 0222,  
       .0030, 0189, 0254, 0181  
 Brandt .0347, 0214, 0520, 0348  
 Brandt Electronic .0068  
 Brionvega .0371  
 Bush .0305, 0099, 0379, 0236, 0360  
 Catron .0047  
 CGE .0027  
 Cimline .0099  
 Clatronic .0047  
 Combitech .0379  
 Condor .0047  
 Crown .0305, 0099, 0047  
 Curtis Mathes .1062  
 Cyrus .0108  
 Daewoo .0305, 0047  
 Dansai .0099  
 De Graaf .0069, 0193  
 Decca .0108, 0027  
 Denon .0069  
 Dual .0068  
 Dumont .0108, 0027, 0131  
 Elbe .0065  
 Elcotech .0099  
 ESC .0305, 0267  
 Ferguson .0347, 0348, 0068, 0520  
 Fidelity .0027  
 Finlandia .0108, 0131  
 Finlux .0108, 0027, 0131, 0069  
 Firstline .0064, 0099, 0072, 0070, 0236  
 Fisher .0131, 0074, 0073  
 Frontech .0047  
 Fujitsu .0027  
 Funai .0027  
 GE .1062  
 GEC .0108  
 General .0047  
 GoldHand .0099  
 GoldStar .0064, 0252  
 Goodmans .0305, 0064,  
       .0027, 0099, 0047  
 Graetz .0131, 0267, 0068, 0371  
 Granada .0108, 0131, 0073, 0312  
 Grandin .0064, 0027, 0099  
 Grundig .0108, 0099, 0253, 0033,  
       .0374, 0030, 0034, 0222, 0376  
 Hanseatic .0064  
 HCM .0099  
 Hinari .0099, 0379, 0267, 0235, 0031  
 Hitachi .0027, 0069, 0031,  
       .0193, 0312, 0068, 0267  
 Hypson .0099  
 Imperial .0027  
 Ingersol .0031  
 Interfunk .0108  
 ITT .0411, 0131, 0133,  
       .0371, 0073, 0267, 0068  
 ITV .0305, 0064  
 JVC .0411, 0094, 0068, 0233  
 Kaisui .0099  
 Kendo .0133, 0236

**CODELIST**

VCR

CODELIST

**Codes****VCR**

Kenwood	.0068	SEG	.0349, 0267
Korpel	.0099	SEI	.0108, 0031
Lenco	.0305	Seleco	.0068
Leyco	.0099	Sentra	.0047
Loewe	.0108, 0064, 0481, 0033, 0189, 0031	Sharp	.0075, 0834
Logik	.0267, 0031	Shintom	.0099, 0131
Luxor	.0131, 0075, 0070, 0183, 0073	Shorai	.0031
M Electronic	.0027, 0065	Siemens	.0108, 0064, 0131, .0222, 0173, 0033, 0030
Manesth	.0099, 0072	Silva	.0064
Marantz	.0108, 0033, 0322, 0030, 0173	Singer	.0072
Matsui	.0375, 0379, 0235, .0115, 0322, 0031, 0236	Sinudyne	.0108, 0031
Matsushita	.1189	Solavox	.0047
Median	.0375	Sonorol	.0073
Memorex	.0064, 0027, 0131, 0073	Sontec	.0064
Memphis	.0099	Sony	.0059, 0038, 1059, 0060
Metronic	.0108	Sunkai	.0375
Metz	.0064, 0481, 0030, 0189, .0374, 0254, 0033, 0222	Sunstar	.0027
Minerva	.0222, 0033	Suntronic	.0027
Mitsubishi	.0108, 0094, 0070	Tandy	.0027, 0131
Multitech	.0027, 0099	Tashiko	.0027
Murphy	.0027	Tatung	.0108, 0027, 0068
Myriad	.0108	Teac	.0305, 0027, 0334
NAD	.0131	Tec	.0047
NEC	.0131, 0094, 0068, 0065	Technics	.0253, 0189
Neckermann	.0108, 0371	Teleavia	.0520, 0068
Nesco	.0099	Telefunken	.0347, 0411, 0348, .0521, 0520, 0214, 0068
Nokia	.0131, 0133, 0073, .0267, 0068, 0374	Tenosal	.0099
Nordmende	.0347, 0411, .0521, 0068, 0348	Tensai	.0027, 0349
Oceanic	.0027, 0068	Thomson	.0347, 0411, 0094, 0555, .0087, 0348, 0521, 0068, 0520
Okano	.0375, 0342	Thorn	.0131, 0068
Optimus	.1189	Toshiba	.0108, 0411, 0072, 0070, 0068
Orion	.0375, 0379, 0115, 0322, .0031, 0236, 0235, 0360	Towada	.0349
Osaki	.0064, 0027, 0099	Triumph	.0235
Otto Versand	.0108	Uher	.0267, 0371
Palladium	.0064, 0099, 0068, 0033	Ultravox	.0371
Panasonic	.0253, 1189, 0189, .0481, 0254, 1062	Universum	.0108, 0064, 0027, 0133, .0352, 0267, 0222, 0033
Pathé Marconi	.0068	Videomagic	.0064
Pentax	.0069	Villain	.0027
Penney	.1062	White Westinghouse	.0371
Perdio	.0027	Yamishi	.0099
Philco	.0065	Yokan	.0099
Philips	.0001, 0002, 0108, 0411, 0173	Yoko	.0047, 0267
Phonola	.0108		
Pioneer	.0108, 0094		
Portland	.0047		
Profex	.0349		
Profitronic	.0267		
Proline	.0027		
Pye	.0108		
Quartz	.0073		
Quasar	.1189, 0162		
Quelle	.0108, 0371		
RCA	.1062		
Radiola	.0108		
Reoc	.0375		
Rex	.0411, 0068		
Roadstar	.0305, 0064, 0099, 0267		
Saba	.0347, 0411, 0233, .0068, 0348, 0521		
Saisho	.0115, 0031, 0236, 0235		
Salora	.0070, 0133, 0073		
Samsung	.0459, 0267		
Sansui	.0094, 0068		
Sanyo	.0131, 0073		
Saville	.0379		
SBR	.0108, 0173		
Schaub Lorenz	.0027, 0131, 0068, 0371		
Schneider	.0108, 0027, 0099		

**Codes****SETUP CODES FOR DVD**

3D Lab .0001  
 AEG .0815  
 Akai .0815  
 Alba .0744, 0726  
 Amstrad .0740  
 Apex Digital .0744  
 Atrend .0741  
 Black diamond .0740  
 Blaupunkt .0744  
 Blue Sky .0726, 0722  
 Brandt .0678  
 Bush .0740, 0717, 0726  
 Centrum .0740  
 CineUltra .0726  
 Clatronic .0815  
 Clayton .0740  
 CyberHome .0741  
 Daewoo .0797, 0732  
 Dansai .0797  
 Decca .0797  
 Denon .0517  
 Denver .0726  
 Denzel .0692  
 Diamond .0795, 0678  
 Digired .0744  
 DiViDo .0732  
 Dual .0692, 0678, 0740  
 Elta .0717  
 Emerson .0732, 0618  
 Enterprise .0618  
 Enzer .0692  
 Ferguson .0678  
 Finlux .0768, 0797  
 Fisher .0697  
 GoldStar .0768  
 Goodmans .0678, 0717  
 Gradiente .0678  
 Graetz .0692  
 Greenhill .0744  
 Grundig .0722, 0732, 0001, 0678  
 Grunkel .0797  
 Hanseatic .0768  
 HDT .0732  
 Hitachi .0692, 0600  
 ISP .0722  
 Jaton .0692  
 JMB .0722  
 JVC .0650, 0585, 0530, 0001  
 Kendo .0726  
 Kenwood .0517, 0561  
 Kiss .0692  
 KLH .0744  
 Koss .0678  
 Lawson .0732  
 Lenco .0726, 0678, 0797  
 Lexia .0726  
 LG .0768, 0618  
 Lifetec .0678  
 Limit .0795  
 Loewe .0001  
 Logix .0732  
 Lumatron .0732  
 Magnavox .0530  
 Marantz .0001, 0002  
 Matsui .0678, 0722  
 Medion .0678  
 Metronic .0717  
 Metz .0598, 0552, 0740  
 Micromedia .0503, 0001  
 Micromega .0001  
 Microsoft .0549  
 Mintek .0744  
 Mitsubishi .0548, 0740

**DVD**

Monyka .0692  
 NAD .0768  
 Naiko .0797  
 Nesa .0744  
 Neufunk .0692  
 Onkyo .0639, 0530  
 Optimus .0598, 0552  
 Orion .0722  
 Oritron .0678  
 Palladium .0722  
 Panasonic .0517, 0659, 1389  
 Philco .0717  
 Philips .0001, 0002, 0003,  
       0004, 1941, 0530  
 Phonotrend .0726  
 Pioneer .0598, 0552, 0659  
 Polk Audio .0001  
 Proline .0678  
 Proscan .0549  
 Prosonic .0726  
 Provision .0726  
 Raite .0692  
 RCA .0549, 0598  
 REC .0716, 0517  
 Red star .0797, 0815  
 Reoc .0795  
 Revoy .0726  
 Roadstar .0716, 0726, 0717  
 Rotel .0650  
 Saba .0678  
 Salora .0768  
 Samsung .0600  
 Sansui .0722, 0795  
 Sanyo .0697  
 Scan .0732  
 Schaub Lorenz .0815  
 Schneider .0678, 0732  
 Scientific Labs .0795  
 SEG .0692  
 Sharp .0657  
 Sherwood .0768  
 Shinco .0744  
 Shinsonic .0560  
 Silva .0815  
 Singer .0717  
 SM Electronic .0717, 0795  
 Sony .0560, 0600, 0891  
 Tatung .0797  
 Teac .0598, 0744  
 Technics .0517  
 Thomson .0578, 0549  
 Tokai .0692  
 Toshiba .0530  
 TredeX .0831  
 Umax .0717  
 Universum .0618  
 Wesder .0726  
 Xbox .0549  
 Yamaha .0517, 0001  
 Yamakawa .0692  
 Zenith .0530, 0618

**CODELIST**

**Codes****SAT****SETUP CODES FOR SAT**

ABsat	.0150, 0859	Hauppauge	.1325
Akai	.0542	Hinari	.0210
Alba	.0448, 0389, 0542, 0482	Hirschmann	.0200, 0360, 0528, 0825, .0424, 0600, 0423, 0529, 0909
Aldes	.0315	Hitachi	.0482
Allantide	.0360	Houston	.0695
Amstrad	.0874, 0372, 0279, 0528, 0488	Hughes Network Systems	.1169
Ankaro	.0315, 0740, 0247, .0546, 0244, 0396	Humax	.1203, 1075, 0890
Anttron	.0210, 0448	Huth	.0247, 0373, 0821, .0315, 0395, 0270, 0391
Arcon	.0861, 0395	Ikusi Allsat	.0395
Armstrong	.0270	Intervision	.0619
Asat	.0400	InVideo	.0898
AST	.0378	ITT	.0199, 0135
Astra	.0545, 0400, 0135, 0566	Johansson	.0359
Astro	.0200, 0385, 0547, 0528	JOK	.0737
Audioton	.0391	JSR	.0391
Avalon	.0423	JVC	.0598, 0542
Axis	.0861, 0396	Kathrein	.0200, 0358, 0469, .0649, 0421, 0531, 1084, .0150, 0385, 0507, 0685
Barcom	.0244	KeyWest	.0821
Bell ExpressVu	.1194	Kosmos	.0358
Best	.0396, 0244	Kreiselmeyer	.0200
Blaupunkt	.0200	Kyostar	.0448
Boca	.0856, 0540, 0270	Labgear	.1323
Brainwave	.0359	LaSAT	.0634, 0547, 0540
British Sky Broadcasting	.0874, 1202	Lenco	.0448, 0400
BT	.0737, 0695, 0542	Lennox	.0619
Cambridge	.0542	Lorenzen	.1321
Canal Digital	.0880	Lupus	.0396
Canal Satellite	.0880, 1366	Luxor	.0135, 0600, 0199
Canal Sat Pilotime	.0874, 1366	Macab	.0878, 0908
Canal+	.0880	Manhattan	.0619, 0547, 0482, 1110
Channel Master	.0389	Maspro	.0363, 0355, 0777
CityCom	.0421, 1203, 0845	Matsui	.0598
CNT	.0547	Mediamarkt	.0270
CommLink	.0315	MediaSat	.0880
Connexions	.0485, 0423	Metronic	.0740, 0111
Conrad	.0634	Minerva	.0598
Crown	.0270	Morgan's	.0159, 0856, 0540, 0270, 1130
D-box	.1154, 0750, 0900	Multichoice	.0906
Daewoo	.1323, 0400	Multistar	.0358
DDC	.0389	Navex	.0359
DirecTV	.1169	Netgem	.1349
Diskxpress	.0244	Neuhaus	.0247, 0528
Distratel	.0111, 0912	Neusat	.0861
DMT	.1102	Nikko	.0740
DNT	.0423, 0485	Nokia	.0778, 1154, 0750, 0900, 1337, .0355, 0600, 0848, 1365, 0199, .0482, 1050, 1338, 0135, 0424
Echostar	.0880, 0194, 0637, .0898, 0423, 0740	Nordmende	.0389
EIF	.0444	OctalTV	.1032
Elta	.0391	Orbitech	.0528
Emanon	.0448	Pace	.0874, 0914, 0747, 1202, .0482, 0822, 0210, 0363, .0818, 0894, 0355, 0268
Eurostar	.1053, 1052	Palladium	.0598
Eutra	.0825	Palsat	.0528
Ferguson	.0343, 0210	Panasat	.0906, 0642
Fidelity	.0279	Panasonic	.0874, 1331
Finlux	.0441, 0424, 0135, 0482	Panda	.0482
Foxtel	.0906	Philips	.0001, 0002, 0003, 0880, .0482, 0777, 0925, 0355, 0737, .1145, 0598, 0832, 1103, 1169
Fracarro	.0898	Phonetrend	.0315, 0815, 0619
Freecom	.0448, 0761	Pioneer	.0880
FTE	.0890, 0358	Pixx	.0579
Fuba	.0396, 0444, 0244, .0199, 0423, 0448	Polytron	.0421
G-Sat	.0210	Preisner	.0159, 0289, 0540
Galaxis	.1138, 0860, 0315, 0840, .0890, 0683, 0861, 0391	Premiere	.0001, 0880, 1154, 0750, 0900
Gardiner	.0845	Promax	.0482
GbSAT	.1241	Prosat	.0315
Gold Box	.0880	Pyxis	.0858
Gooding	.0598		
Grandin	.0872		
Grundig	.0874, 0200, 0777, .0598, 0355, 0832		
Hartung und Helling	.0360		

SAT

CODELIST

**Codes**

Quadral ..... 0546, 0389, 0655  
 Radix ..... 0909, 0423  
 Rebox ..... 1241  
 RFT ..... 0315, 0247  
 Saba ..... 0761, 0737, 0547, 0912, 0363  
 Sabre ..... 0482  
 Sagem ..... 0847, 1141  
 Salora ..... 0199, 0135  
 SAT ..... 0488, 0378  
 Satcom ..... 0373  
 Satec ..... 0355, 0210  
 Satmaster ..... 0373  
 SatPartner ..... 0547, 0529,  
               0448, 0761, 0359  
 Satstation ..... 1110  
 Schneider ..... 0832  
 Schwaiger ..... 1138, 0531,  
               0421, 0210, 0579  
 Seemann ..... 0423  
 SEG ..... 0545, 0448, 0769, 0396, 0566  
 Siemens ..... 0200  
 SKY ..... 0874, 0883, 0914, 1202  
 SKYTV ..... 0898, 0001, 0874  
 Skymaster ..... 0655, 0546,  
               0907, 0315, 0740  
 SM Electronic ..... 0184, 0740  
 Smart ..... 0159  
 Sony ..... 0874, 0482  
 Stream TV ..... 0871  
 Strong ..... 0906, 0159, 0899, 1132, 0152  
 STVI ..... 0444  
 Sunstar ..... 0540, 0821  
 Supernova ..... 0914  
 Tantec ..... 0363, 0482  
 Techniland ..... 0373  
 TechniSat ..... 0289, 0528, 0485  
 Teco ..... 0400  
 Telefunken ..... 0448  
 Teleka ..... 0825, 0270  
 Telestar ..... 0184, 0528  
 Tele+ ..... 0001  
 Thomson ..... 0880, 0482, 1073  
 Tivo ..... 1169  
 Tonna ..... 0695, 0373  
 TPS ..... 0847  
 Triad ..... 0378, 0360  
 Triasat ..... 0528, 0441  
 Triax ..... 0528, 0441  
 Uniden ..... 0221, 0858, 0819  
 Unitor ..... 0359, 0244  
 Universum ..... 0200, 0598  
 Vector ..... 0360, 0545  
 Vortec ..... 0448  
 VTech ..... 0378  
 Wevasat ..... 0360  
 Winersat ..... 0359  
 Wisi ..... 0200, 0482, 0423, 0378, 0665  
 Xcom Multimedia ..... 0916  
 Xsat ..... 0916, 0150  
 Yes ..... 0914  
 Zehnder ..... 0547, 1102, 0358, 0845, 0579  
 Zenith ..... 0883  
 Zodiac ..... 0423  
 Zvergnase ..... 0821

**SAT / CABLE / AMP / BOX****SETUP CODES FOR CABLE**

Birmingham Cable Communications ..... 0303  
 British Telecom ..... 0030  
 Cable & Wireless ..... 1095  
 Cabletime ..... 0298  
 Decsat ..... 0450  
 Filmnet ..... 0470  
 France Telecom ..... 0478  
 HyperVision ..... 0646  
 Jerrold ..... 0303, 0030  
 MNET ..... 0046, 0470  
 Nokia ..... 0708  
 Noos ..... 0844  
 NTL ..... 1095, 0001, 0880  
 Ono ..... 1095  
 Pace ..... 1095, 1087  
 Philips ..... 0646, 1087, 0001  
 PVP Stereo Visual Matrix ..... 0030  
 Sagem ..... 0844  
 Scientific Atlanta ..... 0304, 0035  
 Supercable ..... 0303  
 Tele+1 ..... 0470  
 Telewest ..... 1095  
 Tork ..... 0030  
 Tudi ..... 0313  
 United Cable ..... 0030

**SAT****CABLE****AMP****BOX****SETUP CODES FOR AUDIO AMPLIFIERS**

Aiwa ..... 0433  
 Arcam ..... 0296, 0003  
 Audiolab ..... 0296, 0003  
 Bush ..... 0448  
 Denon ..... 0187, 0299  
 Goodmans ..... 0448  
 Grundig ..... 0296, 0003  
 JVC ..... 0358  
 Marantz ..... 0296, 0003, 0004  
 Micromega ..... 0296, 0003  
 Myryad ..... 0296, 0003  
 Panasonic ..... 0335  
 Philips ..... 0004, 0296  
 Pioneer ..... 0040  
 Revox ..... 0296, 0003  
 Sony ..... 0247  
 Teac ..... 0448  
 Technics ..... 0335  
 Thorens ..... 0296, 0003  
 Victor ..... 0358  
 Yamaha ..... 0381

**CODELIST****SETUP CODES FOR TERRESTRIAL SETTOP-BOX**

Aiwa ..... 1323  
 Digitenne ..... 1325, 1331, 1241  
 Freeview ..... 1323, 1325, 1349, 1331, 1241  
 Hauppauge ..... 1325  
 Labgear ..... 1323  
 Netgem ..... 1349  
 Panasonic ..... 1331  
 Rebox ..... 1241, 1432

**Codes****CD / TUNER****SETUP CODES FOR CD PLAYER**

Aiwa ..... 0151  
 Alto ..... 0652  
 Arcam ..... 0184  
 Audio Research ..... 0184  
 Audiolab ..... 0184  
 Audiomeca ..... 0184  
 Audioton ..... 0184  
 Bang & Olufsen ..... 0239  
 California Audio Labs ..... 0056  
 Cairn ..... 0184  
 Cyrus ..... 0184  
 Denon ..... 0030, 0900  
 DMX Electronics ..... 0184  
 Eclipse ..... 0652  
 Fisher ..... 0206  
 Goodmans ..... 0652  
 Grundig ..... 0184  
 Harman/Kardon ..... 0200  
 HCM ..... 0652  
 Hiro ..... 0652  
 JVC ..... 0099  
 Kenwood ..... 0055, 0217, 0653, 0708  
 Linn ..... 0184  
 Marantz ..... 0184, 0056, 0001, 0002, 0003  
 Matsui ..... 0184  
 MCS ..... 0056  
 Meridian ..... 0184  
 Micromega ..... 0184  
 Miro ..... 0027  
 Myryad ..... 0184  
 NAD ..... 0027  
 Naim ..... 0184  
 Panasonic ..... 0330, 0056  
 Philips ..... 0001, 0002, 0003,  
               0301, 0184, 0653  
 Philips Streamium ..... 0004  
 Pioneer ..... 0059, 0495  
 Quad ..... 0184  
 Quasar ..... 0056  
 Radiotone ..... 0652  
 Revox ..... 0001, 0184  
 Rotel ..... 0001, 0184  
 Sansui ..... 0652  
 Sanyo ..... 0206  
 Sharp ..... 0064  
 Simaudio ..... 0001, 0184  
 Sony ..... 0027, 0517  
 SuperTech ..... 0652  
 TAG McLaren ..... 0001, 0184  
 Tandy ..... 0059  
 Teac ..... 0652, 0424  
 Technics ..... 0330, 0234, 0056  
 Thorens ..... 0001, 0184  
 Thule ..... 0001, 0184  
 Universum ..... 0001, 0184  
 YBA ..... 0652

CD

TUNER

CODELIST

**SETUP CODES FORTUNER**

Aiwa ..... 0148, 1432  
 Akai ..... 0373, 0467  
 Amstrad ..... 0771  
 Arcam ..... 0216, 0001  
 Audiolab ..... 1216, 0002  
 Audiotechnic ..... 1216, 0002  
 Bang & Olufsen ..... 0826  
 Bose ..... 1256  
 Bush ..... 0416  
 Cairn ..... 0216, 0001  
 Denon ..... 1387, 0300  
 eBench ..... 0771  
 Elta ..... 0771  
 Ferguson ..... 0558  
 Fine Arts ..... 1216, 0002  
 Fisher ..... 0069  
 GoldStar ..... 0308  
 Goodmans ..... 0636, 0467, 0373, 0771  
 Grundig ..... 1216, 0002, 0308,  
               0246, 0216, 0001  
 Harman/Kardon ..... 0137  
 Harwood ..... 0771  
 Intersound ..... 0771  
 JVC ..... 0101, 0558, 1401  
 Kenwood ..... 1340, 0340, 0054, 0341  
 Marantz ..... 1216, 0216, 0246, 0066  
 Matsui ..... 0771  
 MCS ..... 0066  
 Micromega ..... 1216, 0216  
 Mitsubishi ..... 0467  
 Mx Onda ..... 0771  
 Myryad ..... 1216, 0216, 0002, 0001  
 NAD ..... 0636  
 Okano ..... 0467  
 Onkyo ..... 0162, 0869, 1602  
 Panasonic ..... 0545, 0394, 0336, 0066  
 Philips ..... 0001, 0002, 1216, 0216  
 Pioneer ..... 0316, 1050, 0107,  
               0558, 0041, 0271, 1411  
 Quasar ..... 0066  
 RCA ..... 1281  
 Revox ..... 0001, 0216  
 Roadstar ..... 0373  
 Saba ..... 0558  
 Saisho ..... 0373  
 Sansui ..... 0636, 0373  
 Sanyo ..... 0069, 0771, 0246  
 Schneider ..... 0558  
 Sharp ..... 0213  
 Siemens ..... 0636  
 Sony ..... 1085, 1785, 0185, 0442  
 Soundwave ..... 0636  
 Stereophonics ..... 1050  
 Teac ..... 0771, 0636  
 Technics ..... 1545, 1335, 1336,  
               0235, 0545, 0336, 0066  
 Telefunken ..... 0558  
 Thomson ..... 1281  
 Thorens ..... 1216, 0216, 0002, 0001  
 Thorn ..... 0771  
 Uher ..... 0558, 0373  
 Universum ..... 0308, 0771, 0636  
 Wharfedale ..... 0467  
 Yamaha ..... 0203, 1203

**Note your codes!****TV**

Equipment

Brand

Model number

Number of original remote

Code

**VCR**

Equipment

Brand

Model number

Number of original remote

Code

**DVD**

Equipment

Brand

Model number

Number of original remote

Code

**SAT**

Equipment

Brand

Model number

Number of original remote

Code

**CABLE**

Equipment

Brand

Model number

Number of original remote

Code

**AMP**

Equipment

Brand

Model number

Number of original remote

Code

**BOX**

Equipment

Brand

Model number

Number of original remote

Code

**CD PLAYER**

Equipment

Brand

Model number

Number of original remote

Code

**TUNER**

Equipment

Brand

Model number

Number of original remote

Code

**Helpline**

België/Belgique	02 7172458	Nederland	053 4849106
Danmark	35258758	Norge	22 70 82 58
France	03 87 17 00 87	Östereich	01 546575609
Deutschland	0211 65791158	Portugal	0800 831 351
España	91 7456228	Suomi	09 22948258
Ελληνας	00800 3122 1219	Sverige	08 7505196
Ireland	01 6011158	Suisse/die Schweiz	01 2120045
Italia	02 48271158	United Kingdom	0207 7440344

HELP LINE

<b>Guarantee certificate</b>	<b>Garantieschein</b>	<b>Certificado de garantia</b>
<b>Certificat de garantie</b>	<b>Certificado de garantía</b>	<b>Garantibevis</b>
<b>Garantiebewijs</b>	<b>Certificato di garanzia</b>	<b>Takuutodistus</b>
<b>Záruční list</b>	<b>Karta gwarancyjna</b>	<b>Εγγύηση Гарантия</b>

2

year	warranty	anno	garanzia
année	garantie	ano	garantia
jaar	garantie	år	garanti
Jahr	Garantie	vuosi	takuu
año	garantía	χρόνος	εγγύηση
rok	gwarancyjna	год	гарантия

Type: \_\_\_\_\_

Serial nr.: \_\_\_\_\_

Date of purchase - Date d'achat - Koopdatum - Kaufdatum -  
 Fecha de compra - Data di acquisto - Data da compra - Inköpsdat -  
 Køpedatum - Kjøpedato - Ostorpäivä - Ημερομηνία αγοράς -  
 Datum nákupu - Data zakupu - Дата приобретения

20

Dealer's name, address and signature

Nom, adresse et signature du revendeur

Naam, adres en handtekening v.d. verkoper

Name, Anschrift und Unterschrift des Händlers

Nombre, dirección y firma del distribuidor

Nome, indirizzo e firma del fornitore

Nome, endereço e assinatura da loja

Återförsäljarens namn, adress och namnteckning

Forhandlerens navn, adresse og underskrift

Myyjän nimi, osoite ja allekirjoitus

Jméno prodejce, adresa a podpis

Nazwa, adres punktu sprzedawy i podpis sprzedawcy

Jméno prodejce, adresa a podpis

Ονοματεπώνυμο, διεύθυνση και υπογραφή του εμπ. προμηθευτή



**PHILIPS**