



# Explorer 725 / 705

VHF Marine Radio

Quickstart Guide

# **NORTHSTAR**

[www.northstarnav.com](http://www.northstarnav.com)

**This Quickstart Guide is to be used with the Northstar Explorer 721 VHF Radio Installation and Operation Manual. The Explorer 721 and Explorer 725 function identically except for where noted in this QSG. Consult the Installation and Operation Manual for further information on the options described in this Quickstart Guide, and for information on other options; including radio setup and different DSC call types and options, troubleshooting, and channel charts.**

## FCC Statement

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a normal installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an output on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.
- A shielded cable must be used when connecting a peripheral to the serial ports.

## Industry Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

It is the owner's sole responsibility to install and use the instrument in such a manner that will not cause accidents, personal injury or property damage.

**Navico Holding AS. and its subsidiaries, branches and affiliates disclaim all liability for any use of this product in a way that may cause accidents, damage or that may violate the law.**

Governing Language: This statement, any instruction manuals, user guides and other information relating to the product (Documentation) may be translated to, or has been translated from, another language (Translation). In the event of any conflict between any Translation of Documentation, the English language version of the Documentation will be the official version of the Documentation.

This manual represents the product at the time of printing. Navico Holding AS. and its subsidiaries, branches and affiliates reserve the right to make changes to specifications without notice.

Copyright © 2008 Navico Holding AS. Northstar™ is a registered trademark of Navico Holding AS.

## Check out your Explorer 725/705 model

There are slight variations in the keys between the Explorer 725US and 725EU models, and some features are not available on both models.

An optional handset can also be purchased and used with your Explorer 725. There are two versions - the Northstar 705US handset (for use with the Northstar 725US model) and the Northstar 705EU handset (for use with the Northstar 725EU model).

This Quickstart Guide covers BOTH models of the Explorer 725, with or without the optional handsets.



Northstar Explorer 725US pictured with 705US optional handset



Northstar Explorer 725EU pictured with 705EU optional handset

## Turn the unit ON/OFF and adjust the volume








Base Unit

- 1 To turn the base unit ON, turn the VOL knob clockwise. Turn counter-clockwise to turn the base OFF.
- 2 Continue to turn until a comfortable volume is reached on the base speaker.



Optional Handset

1. Ensure the handset is fully charged, and the base unit is turned ON.
2. To turn the handset ON, press and hold the  button. To turn the handset OFF, press and hold again until the unit turns off.
3. When turned on, the handset will search for the base unit and establish the wireless link. This should take only a few seconds.
4. Adjust the volume with the VOL  and  keys on the righthand side of the handset.  
Hold down VOL  or  to rapidly increase or decrease the volume or press quickly to step through the 8 different volume levels.  
This will not change the volume on the base unit speaker.

**NOTE:** The optional Handset functions with the base unit. It can not operate on it's own. Ensure the base unit is turned ON when using the handset.

**NOTE - FIRST TIME USE:** the handset must first be Subscribed to the 725 base unit - this function only needs to be performed once. See "Subscribing the Handset to the Base unit" section for details.



## Adjust the Squelch



Base Unit

- 1 Turn the SQL knob fully counterclockwise so that random noise is heard.
- 2 Turn SQL slowly clockwise until the random noise disappears.
- 3 Make another 1/4 turn clockwise for best reception in normal open sea conditions.

In areas of high noise (eg close to large cities) reception may improve if sensitivity is reduced. Try turning SQL slowly clockwise or use the LOCAL setting (see the Installation and Operation Manual).

 


Optional Handset

Adjust the squelch with the ◀ and ▶ keys on the handset.

Hold down ◀ or ▶ to rapidly increase or decrease the squelch or press quickly to step through the 8 different squelch levels. The squelch setting on the base unit will temporarily change to match.

When you put the handset back ON hook, the base unit squelch setting takes precedence again.



## Enter Data and Correct Errors



721US Base Unit and Microphone

Only 4 menu items can be displayed on the base unit LCD at any one time. Press CH + or CH - to scroll through a menu listing.

Press **ESC** to return to the previous menu screen without saving changes OR press the rotary knob to confirm changes.

To enter data, press CH + or CH - to step through the alphabet and numbers. Hold down CH + or CH - to scroll rapidly.

You can also use the rotary knob to step through the alphabet and numbers, then press the knob to confirm each selection.

To correct errors, press CH - then select the < backup character on the LCD. Press the rotary knob to backup one space at a time.



Optional Handset

Only 4 menu items can be displayed on the handset LCD at any one time. Press ▲ or ▼ to scroll through a menu listing.

Press **ESC** to return to the previous menu screen without saving changes OR press **ENT** to confirm changes.

Press ▲ or ▼ to step through the alphabet and numbers. Hold down ▲ or ▼ to scroll rapidly.

To correct errors, press ▼ then select the < backup character on the LCD. Press **ENT** to backup one space at a time.



721EU Base Unit and Microphone

 
Enter Data using Alpha-mic (721EU only): To enter data, use the alpha-numeric keypad on the microphone to enter the channel numbers and names directly. Each key has functionality shown below.

Use the **CLR** key to backup and the **ENT** key to confirm, or just wait for the cursor to advance automatically to the next position when entering data (similar to mobile phone operation).

To correct data errors, press CH then select the < backup character on the LCD. Press **ENT** to backup one space at a time.

705EU Microphone Key	0	1	2	3	4	5	6	7	8	9
Normal and Menu Mode	0	1	2	3	4	5	6	7	8	9
Edit Mode Push 1	0	1	2	3	4	5	6	7	8	9
Edit Mode Push 2	Space	-	A	D	G	J	M	P	T	W
Edit Mode Push 3	(	.	B	E	H	K	N	Q	U	X
Edit Mode Push 4	)	"	C	F	I	L	O	R	V	Y
Edit Mode Push 5	%	/	?	!	:	#	"	S	&	Z

### Select the Radio Menu or the DSC Call Menu



Base Unit and Optional Handset

PRESS **CALL MENU** to show the DSC CALL Menu.

HOLD DOWN **CALL MENU** to show the Radio Menu.

**CALL  
MENU**

## Set the Backlighting Levels



Base Unit

- 1 Hold down **CALL MENU** to show the Radio Menu.
- 2 Scroll through the menu listing to BACKLIGHT.
- 3 Press **ENT** or push the rotary knob.
- 4 Press **CH +** or **CH -** to select the desired backlight level. There are 8 levels.
- 5 Press **ENT** or push the rotary knob to store the setting.

**CALL  
MENU**



Optional Handset

- 1 Hold down **CALL MENU** to show the Radio Menu.
- 2 Scroll through the menu listing to BACKLIGHT.
- 3 Press **ENT**.
- 4 Press **▲** or **▼** to select the desired backlight level. There are 8 levels.
- 5 Press **ENT** to store the setting.

**MENU SELECT  
BUDDY LIST  
LOCAL/DIST  
>BACKLIGHT**

## Set the Contrast Levels



Base Unit

- 1 Hold down **CALL MENU** to show the Radio Menu.
- 2 Scroll through the menu listing to CONTRAST.
- 3 Press **ENT** or push the rotary knob.
- 4 Press **CH +** or **CH -** to select the desired contrast level. There are 8 levels.
- 5 Press **ENT** or push the rotary knob to store the setting.

**CALL  
MENU**



Optional Handset

 
- 1 Hold down **CALL MENU** to show the Radio Menu.
- 2 Scroll through the menu listing to CONTRAST.
- 3 Press **ENT**.
- 4 Press **▲** or **▼** to select the desired contrast level. There are 8 levels.
- 5 Press **ENT** to store the setting.

**MENU SELECT  
LOCAL/DIST  
BACKLIGHT  
>CONTRAST**



## How the microphone and optional handset work together

### Use the Intercom or Conference mode



Base Unit and Optional Handset

The Intercom mode works ONLY when one or two optional handset(s) are installed.

- 1 Hold down **WX** or **IC** or **H/L** to enter INTERCOM or CONFERENCE mode. Conference mode is only available when 2 handsets are connected, and is used to connect all 3 units together. This disables the radio receiver except for incoming DSC calls.
- 2 The intercom calls the other unit as detailed in the following table.
- 3 Press PTT when invited.
- 4 Press **ESC** to exit the INTERCOM mode, insert separate row for Handset Intercom mode.
- 5 For operation of the IC key see below.



### Using the IC key

 
The function of these modes will vary depending on the number of VHF705 handsets connected:

- If no Handsets are connected, pressing the IC key will generate an error beep.
- If one handset is connected, pressing the IC key will enter Intercom mode.
- If two handsets are connected pressing the IC key the operation will be as follows:

IC Key	1st press	2nd press	3rd press	4th press
Main unit (MU)	Intercom with HS1	Intercom with HS2	Conference	Repeat cycle
1st handset (HS1)	Intercom with MU	Intercom with HS2	Conference	Repeat cycle
2nd handset (HS2)	Intercom with MU	Intercom with HS1	Conference	Repeat cycle

**Note:** in this mode you must press ENT key to select the mode


## High and Low Power



Microphone and  
Optional Handset

- 1 Press or to toggle between HI (High) and LO (Low) (25W or 1W) transmission power for the entire channel bank. A beep sounds and the selection is shown on the LCD.
- 2 If HI power cannot be used with a particular channel, the annunciator automatically goes to LO power. If you press or again, an error beep sounds.

## Priority Channel

 


Base Unit, Microphone  
and Optional Handset

Channel 16 and HI power are automatically selected at power up.

- 1 If you're on a working channel and want to check the priority channel for traffic, just press or .
- 2 Press again to recall your working channel.

NOTE: On the 725US ONLY the priority channel can be set to Channel 09. To set this, just hold down until Channel 09 appears on the LCD.

## Channel Select

 

Base Unit and  
Microphone

The working channel is shown in BIG numbers on the LCD of the base unit.

To step through the channels one at a time, press CH or CH to display each channel.

To change channels rapidly, hold down CH or CH to scroll through the channels.

You can also use the rotary knob to select a channel.



Optional Handset


The working channel is shown in BIG numbers on the LCD of the optional handset.

To step through the channels one at a time, press or to display each channel.

To change channels rapidly, hold down or on the optional handset to scroll through the channels.



## Select a Favorite Channel

 


Base Unit and  
Optional Handset

- 1 Press **3CH** to toggle through each of the three favorite channels until the desired channel is shown.

**3CH**
 
## Store 3 Favorite Channels




Base Unit and  
Optional Handset

- 1 Select the channel.
- 2 Hold down **3CH** to store this channel as your first favorite channel, CH1.
- 3 Repeat to store your second favorite channel as CH2.
- 4 Repeat again to store your third favorite channel as CH3.

**3CH**
 
## Scan/Stop Scanning a Favorite Channel




Base Unit and  
Optional Handset

- 1 Select the favorite channel.
- 2 Press **3CH** then immediately press and release **SCAN**.
- 3 Press **SCAN** again to stop.

**3CH**

 **SCAN**

## Scan all 3 Favorite Channels




Base Unit and  
Optional Handset

- 1 Press **3CH** then immediately press and hold down **SCAN**.
- 2 Press **SCAN** again to stop.

**3CH**

 **SCAN**

## Delete a Favorite Channel




Base Unit and  
Optional Handset

- 1 Select the favorite channel.
- 2 Hold down **3CH** until a confirmation message appears on the LCD.
- 3 Select YES to delete.

**3CH**
 
## Select ALL SCAN mode




Base Unit and  
Optional Handset

- 1 Hold down **SCAN** to start scanning all channels (and the priority channel every 1.5 seconds).  
**NOTE:** In some European countries, scanning is not allowed.  
When a signal is received, scanning stops at that channel and BUSY appears on the LCD. Press **ENT** to skip over an 'always busy' channel and resume scanning.
- 2 Press **SCAN** to stop at the current channel.

**SCAN**
 
## Select the Channel Bank (725US ONLY)



Base Unit and  
Optional Handset

- 1 Hold down **CALL MENU** to show the Radio Menu.
- 2 Scroll through the menu listing to RADIO SETUP then press **ENT** or push the rotary knob.
- 3 The cursor is at UIC. Press **ENT** or push the rotary knob to display a choice of channel banks.
- 4 Press CH **+** or CH **-** to select the desired channel bank, then press **ENT** or push the rotary knob to confirm.

**CALL  
MENU**

RADIO SETUP  
>UIC  
CH NAME  
RING VOLUME

## Show the weather and fishing information



Base Unit

- 1 Press **Info**.
- 2 A histogram of the barometric pressure readings over the past 24 hours is shown on the base unit LCD, with a digital readout of the current temperature.  
The Happy Fish indicator bars show the likelihood of good fishing.  
The weather icon shows the weather forecast.

**Info**



 
Optional Handset

- 1 Hold down **CALL MENU** to show the Radio Menu.
- 2 The cursor is at INFO DATA. Press **ENT** to select this.
- 3 Select ON. Press **ENT**.
- 4 The current barometric pressure and temperature are shown as digital readouts.  
SNR is shown when handset is OFF HOOK  
The Happy Fish indicator bars, when triggered, show the likelihood of good fishing.  
The weather icon shows the weather forecast.

**CALL  
MENU**

MENU SELECT  
>INFO DATA  
BUDDY LIST  
LOCAL/DIST

## Make a call to an individual



Base Unit and  
Optional Handset

- 1 Press **CALL MENU** to show the DSC CALL Menu.
- 2 The cursor is at INDIVIDUAL. Press **ENT** or push the rotary knob.
- 3 Select either:  
MANUAL NEW to call someone who's not in your buddy list, then enter their MMSI and press **ENT** or push the rotary knob.  
or  
scroll through the buddy list to find name of the buddy you want to call, then press **ENT** or push the rotary knob.
- 4 Select the working channel and press **ENT** or push the rotary knob.
- 5 Press **ENT** or push the rotary knob again to send the call. The call will be acknowledged when it is received and the working channel is automatically selected.
- 6 Press PTT to talk; release PTT to receive a reply.

**NOTE:** DSC calling is disabled until you enter a legal USER MMSI number. This also applies to ATIS inland waterway operation in European countries. See the Installation and Operation Manual to perform this ONCE-ONLY setup.

**CALL  
MENU**

DSC CALL  
>INDIVIDUAL  
LAST CALL  
GROUP

INDIVIDUAL  
>MANUAL NEW  
BUDDY 1  
BUDDY 2

## Create your Buddy List



Base Unit and  
Optional Handset

You can store the names and MMSIs of 20 individuals in your buddy list.

- 1 Hold down **CALL MENU** to show the Radio Menu.
- 2 Scroll through the menu listing, if necessary, to BUDDY LIST.
- 3 Press **ENT** or push the rotary knob.
- 4 The cursor is at MANUAL NEW. Press **ENT** or push the rotary knob.
- 5 Enter the buddy name (maximum of 12 characters) and the MMSI.
- 6 Press **ENT** or push the rotary knob when you're finished, then press **ENT** or push the rotary knob again to store the new buddy name. The new buddy name appears immediately in your buddy list.
- 7 Repeat the procedure to store another buddy name.

 
**CALL  
MENU**

BUDDY LIST  
>MANUAL NEW

>ENTER NAME  
-----  
ENTER MMSI  
-----

NAME  
123456789  
>STORE?  
CANCEL

## Make a DSC Distress Call



Base Unit and  
Optional Handset

- 1 Open the red DISTRESS cover.  
*If time is available to specify the nature of the distress, **press and release** the DISTRESS key to show the categories. Scroll to your category then press **ENT** or push the rotary knob.*
- 2 Hold down the DISTRESS key for about 3 seconds until you see the message DISTRESS CALL SENT on the LCD.
- 3 The LCD flashes and loud beeps sound. The distress call is repeated automatically every few minutes until an acknowledgement is received or until you press **ESC** to cancel it.



>UNDEFINED  
FIRE  
FLOODING  
COLLISION  
GROUNDING  
LISTING  
SINKING  
ADRIFT  
ABANDONED  
PIRACY  
OVERBOARD

## Receiving a Distress Acknowledgement from a coast station

- 1 The radio automatically cancels your distress call and tunes to CH16.
- 2 Press PTT to talk with the Coast Guard.

## Receiving a Distress Call

An alert sounds and the Explorer 725 automatically tunes to CH16.

 
- 1 Press any key to stop the alert.
- 2 Make voice contact on CH16 and lend assistance if needed.

Position and time data and the vessel's MMSI are shown on the LCD, and the data is recorded in the DISTRESS CALL LOG.

## Receiving a Distress Relay

- 1 An alert sounds. Press any key to stop the alert.
- 2 Maintain a listening watch on CH16 and standby to lend assistance.

## Charging your 705 Handset

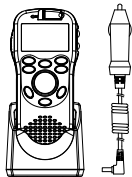

Optional Handset


### To charge the handset:

 1. Connect 12VDC source to the handset charger cradle
2. Place the handset into the charger cradle. The handset display will show the text: "POWER ON CONNECTING" and then "CHARGING"
3. Leave on charge for at least 3 hours.
4. When the battery is fully charged, the display text will change to "BATTERY FULL"
5. The handset can remain in the charger.

### To check the handset battery level:

1. Press and hold the ESC key
2. The LCD will display the battery level with 1 to 4 bars:  
1=Needs charging; 2-3=normal operation; 4=Fully charged.

## Subscribing the 705 handset to the 725 base unit



Base and Optional Handset

### Subscribing the Handset to the Base unit:

1. Ensure the handset is fully charged
2. Turn the base unit ON
3. Select "Subscribe" on the base unit Radio Setup menu
4. Turn the handset ON; you must be within operational range of the base unit
5. The handset will display "Success", and then operate normally with the base unit.

### To Un-Subscribe the Handset from the Base unit:

1. You may wish to un-subscribe a handset from your base unit to use on another base unit.
2. On the base unit, select "Handset", "Clear Code" and "Yes" from the setup menu.
3. After a few seconds, the handset will display "Search Host" and no longer be subscribed to the base unit.
4. The handset can be subscribed to another base unit if needed.

For further information on these and other options, including radio setup and different DSC call types and options, troubleshooting, and channel charts, refer to the Northstar Explorer 721 VHF Radio Installation and Operation Manual.

FOR FURTHER CONTACT DETAILS GO TO:

[www.navico.com](http://www.navico.com)

**NORTHSTAR** 



Industry  
Canada

Industrie  
Canada



1177 