
## OPERATING INSTRUCTIONS

The Monarch® 9465<sup>™</sup> Four-Station Battery Charger charges from one to four 7.4V lithium-ion batteries for the following printers:

- ◆ Sierra Sport2<sup>™</sup> 9460<sup>™</sup>
- Sierra Sport3™ 9433™
- Monarch® Pathfinder® Ultra® Silver 6032™
- ◆ Monarch® Pathfinder® Ultra® Gold 6037™
- ◆ Monarch® Pathfinder® Ultra® Platinum 6039™

**Note:** You must charge a battery before using it.

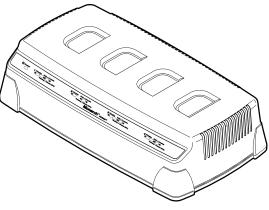


WARNINGS

- Use only a Monarch-qualified battery.
- The battery could be damaged or explode if placed on a different charger.
- Do not throw the battery in the trash. Dispose according to your local regulations.
- Do not disassemble, short-circuit, heat above 80°C, or incinerate the battery. It may explode.
- Follow the operating and storage limit specifications listed at the end of these instructions. Otherwise, the battery may permanently lose its charge capacity.


To connect the power supply:

- 1. Plug one end of the power supply into a wall electrical outlet.
- 2. Plug the other end of the power supply into the back of the charger.

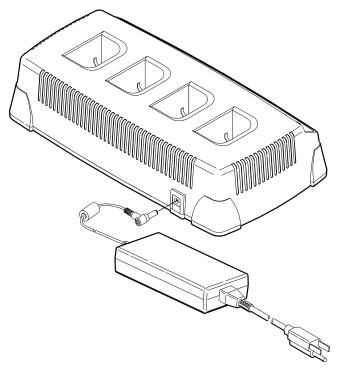


The Power LED is on when the charger is set up and plugged in.

To charge a battery, insert the battery into the charger as shown. Charging time can take up to three hours. It takes approximately two hours to reach the 80% level (where it is now usable). To reach 100%, it takes approximately one hour more.

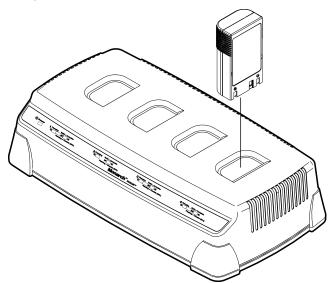

## **Reading the Display**

 Once the charger is plugged into an electrical outlet, the *Power LED* is on (solid). There are four charging stations and each has its own set of LEDs.



*Charging LED* – flashes when you insert the battery; is solid while charging; and is off when charging is complete.

Complete LED – flashes when the battery is 80% charged and is solid when the battery is 100% charged.

## Troubleshooting

When an error occurs, the Charging and Complete LEDs blink together. In this case, repeat the charging process. If the error still occurs, repeat the process with a new battery. If there is a problem after the second repeat charge, call Service.

In between charges, remove the battery, wait for the lights to stop flashing, then re-insert the battery.

## Specifications

<b>Operating Limits:</b>	
Temperature	32°F to 104°F (0°C to 40°C)
Humidity	5% to 90% non-condensing
Storage Limits:	
Temperature	-40°F to 158°F (-40°C to 70°C)
Humidity	5% to 90% non-condensing
Charger	
Length:	11.8" (300.0 mm)
Width:	6.25" (158.75 mm)
Height:	2.75" (70.0 mm)
Input:	12 to 16 VDC/50W
Weight:	4.55 lbs. (2.06 kg)
Power Supply	
Input:	Universal switching power supply, 85 to 264 VAC, 50/60 Hz.
Output:	12 VDC/80W max

Visit www.paxar.com for sales, service, supplies, information, and telephone numbers for our locations throughout the world.

Toll Free:

1-800-543-6650 (In the U.S.A.) 1-800-363-7525 (In Canada)

4 Operating Instructions