




DVDR3435V/37

PHILIPS



First connect ...

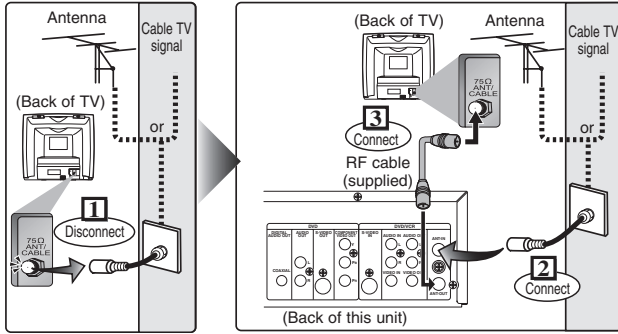


- 1 Remove the Antenna or Cable TV signal from your TV.
- 2 Connect it to the **ANT-IN** jack at the rear of the Recorder.
- 3 Connect the supplied RF coaxial cable to the **ANT-OUT** jack on the Recorder and to your TV's **ANTENNA IN** or **RF INPUT** jack.
- 4 Connect the Recorder's power cord to a power outlet.

Helpful Hint:

If your TV has different connectors, refer to the TV manual for connection options. Also refer to the Recorder's owner's manual, which details other TV connection possibilities.


Prepare the remote control

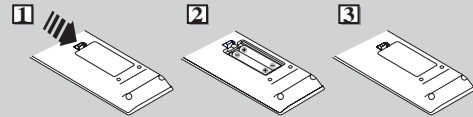


Complete Initial Setup

Turn on this unit for the first time, you need to follow these steps.


- 1 Press [Power].
- 2 Turn the TV on. Select the input to which the unit is connected. Refer to the table on page 15 in the User Manual. "Initial Setup" will automatically appear.

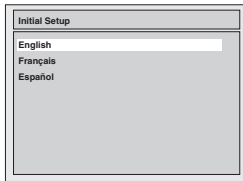


- 3 Using [Up] / [Down], select your desired language On Screen menu. Then press [OK] to set language. "Channel Preset" will automatically appear.

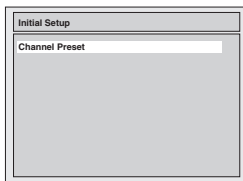


- 4 Press [OK] to start Channel Preset. The unit will start getting channels available in your area.

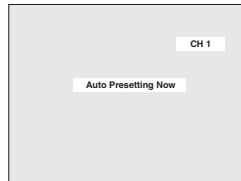

After channel setting is finished, "Clock Setting" will appear. Then press [OK].

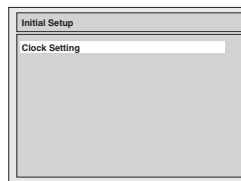



3-4

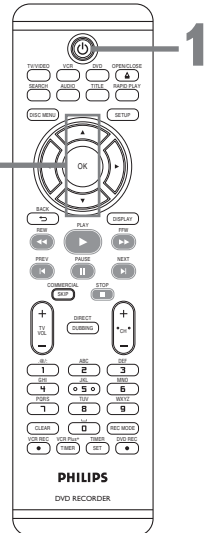

- 5 Proceed to the step 3 of "Manual Clock Setting" on page 26 in the User Manual.
 - If a Public Broadcasting Station (PBS) is available in your area, follow "Auto Clock Setting" on page 25 in the User Manual.

The Recorder is ready for use!

Quick Disc Recording

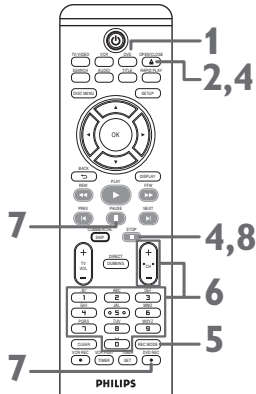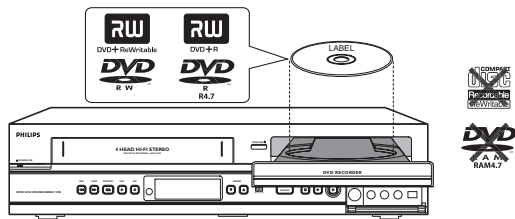

- 1 Press [DVD].
 - 2 Press [OPEN/CLOSE ▲].
The disc tray will open.
 - 3 Insert your disc with its label facing up. Align the disc to the disc tray guide.
 - 4 Press [OPEN/CLOSE ▲] to close the disc tray.
 - When inserting a brand-new DVD+RW/DVD-RW disc, the unit automatically starts to format.
 - If titles have been recorded on the disc, the title list is displayed. Press [STOP ■] to exit the title list.
- This operation may take a while to be recognized.**
- 5 Using [REC MODE], select a recording mode.
 - 6 Using [CH +/-] or the Number buttons, select a desired channel to record.
 - 7 Press [DVD REC ●] to start recording.
Press [PAUSE II] to pause recording. Press [PAUSE II] or [DVD REC ●] again to restart recording.
 - 8 Press [STOP ■] to stop recording.
 - Press [STOP ■] to exit the title list.



To play a DVD+R on other DVD Players, you must finalize it first.

- 1 Press [SETUP].
 - 2 Using [▲ / ▼], select "Disc Edit". Press [OK].
Disc menu will appear.
 - 3 Using [▲ / ▼], select "Finalize". Press [OK].
Confirmation window will appear.
 - 4 Using [▲ / ▼], select "Yes". Press [OK].
Finalizing will start.
- This operation may take a while to be completed.**
- 5 Finalizing is completed.



Detailed playback features and additional functions are described in the accompanying User Manual.

Quick Disc Play

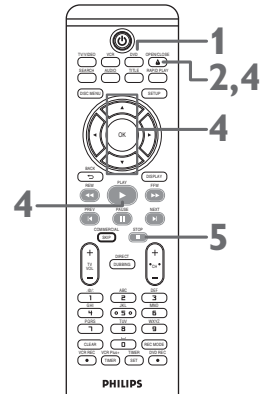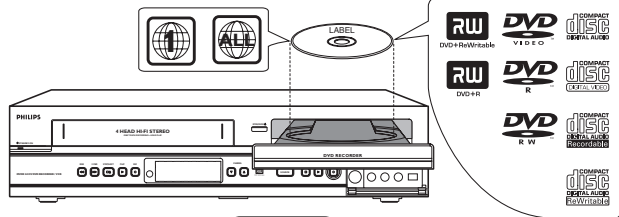

- 1 Press [DVD].
- 2 Press [OPEN/CLOSE ▲].
The disc tray will open.
- 3 Insert your disc with its label facing up. Align the disc to the disc tray guide.



- 4 Press [OPEN/CLOSE ▲] to close the disc tray.

This operation may take a while to be recognized.

Title list will appear automatically.
Using [▲ / ▼], select a desired title. Press [OK].
Pop-up window will appear.
Using [▲ / ▼], select "Play".
Press [OK].
Playback will start.



- 4 Press [PLAY ►] to start playback.
Playback will start.

- 5 Press [STOP ■] to stop playback.

Quick Videotape play

(not illustrated)

- 1 Press [VCR].
- 2 Insert a prerecorded videotape. Press [PLAY ►] to begin playback.
- 3 During playback, press [PAUSE II].
Playback will pause and sound will be muted.
- 4 Press [PLAY ►] to resume play.
- 5 Press [STOP ■] to stop playback.
- 6 Press [OPEN/CLOSE ▲] to eject the videotape.

Printed in China
8239 300 50721

1VMN22960/E9A90UD****