

Two-Way Speaker Selector Switch

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Two-Way Speaker Selector Switch is designed with non-shorting contacts to connect two pairs of stereo speaker systems. The switch lets you select one or both connected speaker systems, without overloading the transistor output stages.

Caution: This speaker selector switch is limited to a maximum of 10 watts/channel, continuous music power.

SELECTING A MOUNTING LOCATION

Select a location that is:

- within reach of the speaker wires
- convenient for switch operation
- suitable for mounting the selector switch using the supplied machine screws

MOUNTING

Position the speaker selector switch on the selected mounting location, then screw the four supplied machine screws into the selector's screw holes to secure it in place.

CONNECTIONS

You can connect the speaker selector switch between an amplifier's speaker output terminals and the speaker input terminals.

Note: Your local RadioShack store sells the necessary speaker wire.

To connect speaker wire to a speaker selector switch terminal, wrap the stripped end of

 
 
the wire around the terminal's screw stem (under the washer).

Caution: When using stranded wires, twist them so all strands contact only the appropriate terminals. If loose strands touch nearby terminals, the system might not operate properly.

Use a screwdriver to loosen and tighten the four **AMP** and eight **SPK A** and **SPK B** terminal screws.

Caution: Be sure to follow proper polarity (– to – and + to +) when making connections.

1. Connect the amplifier's left speaker output terminals to the **AMP L** (left) negative (–) and positive (+) terminals and tighten its screws.
2. Connect the amplifier's right speaker output terminals to the **AMP R** (right) negative (–) and positive (+) terminals and tighten its screws.
3. Connect the first speaker system's left and right negative (–) and positive (+) terminals to the corresponding **SPK A R** and **L** terminals on the speaker selector switch and tighten its screws.
4. Connect the second speaker system's left and right negative (–) and positive (+) terminals to the corresponding **SPK B R** and **L** terminals on the speaker selector switch and tighten its screws.



OPERATION

1. Turn on your stereo equipment.
2. To hear only one speaker system, rotate the selector knob to the corresponding speaker **A** or speaker **B** position.
3. To hear both speaker systems at the same time, rotate the selector knob to **A+B**.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack Corporation
Fort Worth, Texas 76102

40-132
12A00
Printed in Taiwan