


HR9000PKG

Two Vehicle Specific Headrests
With 7" LCD Monitors and Built-In
DVD Player for Rear Seat Entertainment

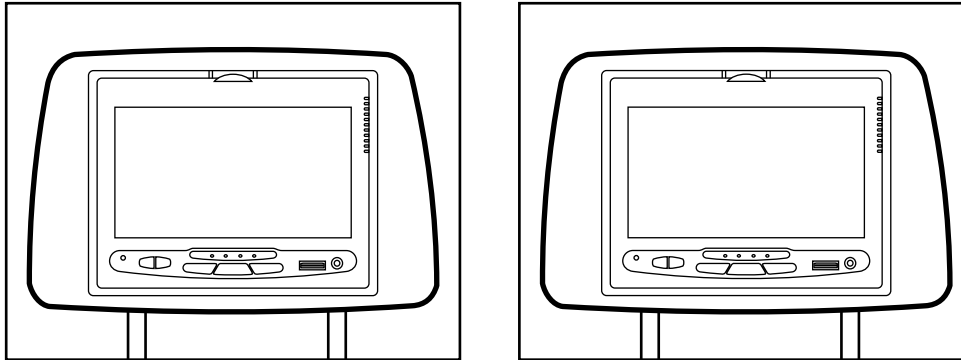

///ADVENT®

***Operation
Manual***

IMPORTANT

An LCD panel and/or video monitor may be installed in a motor vehicle and visible to the driver if the LCD panel or video monitor is used for vehicle information, system control, rear or side observation or navigation. If the LCD panel or video monitor is used for television reception, video or DVD play, the LCD panel or video monitor must be installed so that these features will only function when the vehicle is in 'park' or when the vehicle's parking brake is applied.

An LCD panel or video monitor used for television reception, video or DVD play that operates when the vehicle is in gear or when the parking brake is not applied, must be installed to the rear of the driver's seat where it will not be visible, directly or indirectly, to the operator of the motor vehicle.

HR9000PKG System

The HR9000PKG system contains two vehicle specific headrests. Each has a 7" Monitor and built-in DVD Player. This system allows the users to either watch individual DVD's or watch the same DVD on both monitors. Both users can also share an A/V source connected to either the AV2 or AUX inputs. The full function remote control can operate either unit by selecting M1 or M2 on the remote.


Quick Start Guide

1. Turn on the **M1 monitor**, tilt the screen forward using the center tab at the top of the screen.
2. Insert a DVD, CD or MP3 disc into the slot, disc label toward driver.
3. The disc will start playing.
4. Tilt the monitor to a comfortable viewing position (the headrest itself can be tilted forward to help achieve a comfortable viewing position).
5. Each wireless headphone has a CH A/CH B switch. When sitting in front of the M1 screen, use the CH A switch setting. When sitting sitting in front of the M2 screen, use the CH B switch setting. Set the headphone to the proper channel and press the Power On/Off switch. The power indicator will light up red. Turn the volume down to its lowest setting before putting them on your head.
6. When the DVD menu appears, select the menu item using the cursor keys and press the Enter or Play button.
7. If audio playback through the vehicle radio is preferred, use the FM transmitter On/Off button on the remote control. Set the vehicle radio to the channel selected on the M1 monitor. If interference with a local radio station occurs, set the FM modulator to one of the other four radio frequencies using the FM channel select button on the remote control.
8. Turn on the **M2 Monitor** using the power button on the front of the screen or remote control.
9. Tilt the screen to a comfortable viewing position (the headrest itself can be tilted forward to help achieve a comfortable viewing position).
10. Select AV1 using the source button on the front panel or remote control to view program material on M1 or select from the other available sources DVD, AV2 or AUX/GAME for M2 Monitor.

NOTE: To operate the M1 screen, press M1 on the remote control.
To operate the M2 screen, press M2 on the remote control.

CONTROLS AND INDICATORS DIAGRAM

Control Function Descriptions for M1 and M2 Monitor

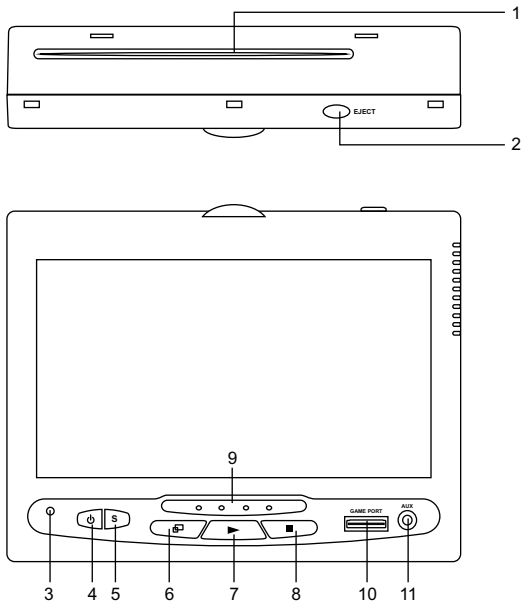

M1 / M2 Panel Control


1. DVD disc insertion slot
2. EJECT Button
3. Power Indicator LED
4. POWER Button
5. SOURCE Button
6. SCREEN MODE Button
7. PLAY Button
8. STOP Button
9. IR Transmitter LEDS
10. Game Port
11. AUX Input Jack (use with supplied AV adaptor)

HR9000PKG SYSTEM OVERVIEW


- 1) The HR9000PKG is a versatile audio / video system which includes two monitors with built-in DVD players. They can accept an Audio / Video input to either the AV2 or AUX inputs.
- 2) The M1 Monitor is comprised of a 7" TFT LCD monitor with built-in DVD player that allows the user to select from DVD, AV1, AV2, or AUX/GAME sources. The M1 monitor has a built-in infrared audio transmitter (CH A) for use with the supplied two-channel wireless headphones (CH A). The M1 monitor also has the ability to provide the audio source for output to the wireless FM Modulator to allow audio playback through the vehicle radio.
- 3) The M2 monitor is comprised of a 7" TFT LCD monitor with built-in DVD player that allows the user to select from DVD, AV1, AV2, or AUX/GAME sources. The M2 monitor has a built-in infrared audio transmitter (CH B) for use with the supplied two channel wireless headphones (CH B).
- 4) The monitors will show all of the functions including the FM selection (M1 only) with the comprehensive OSD. FM functions may also be turned off by pressing the FM ON / OFF button on the Remote Control.
- 5) The HR9000PKG System supplies two IR Headphone sets (P/N IR2CHS). The headsets have an A-B switch that allow the users to select the audio from either the M1 (CH A) or the M2 (CH B).
- 6) Using different IR codes, the M1 Monitor will only respond to the Remote Control unit when press Monitor Select (**M1**) button on remote control. And also the M2 Monitor will only respond to the Remote Control unit when press Monitor Select (**M2**) button on remote control.

- 7) The M1 and M2 Monitor will accept an audio / video input through either the AV2 input (located on the FMM inter-connect or the AUX (use with supplied AV adaptor) input located on the front of the unit. The audio / video device could be a video game system, video camera, or other input device.


Note: If the Game Controller is plugged in and an AUX source is plugged in to the AUX input, the AUX input will override the Game Controller. To use the Game Controller, unplug the AUX input.

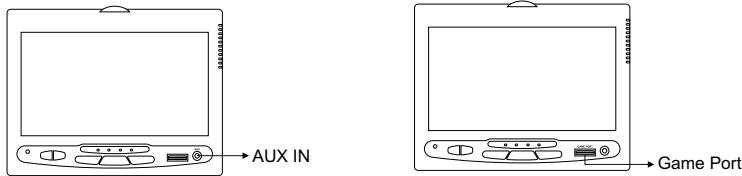


- 8) Pivot the screen until a comfortable viewing angle reached. The internal lock limits the screen to a maximum adjustment of 30 degrees from closed position, the headrest itself can be tilted forward to help achieve a comfortable viewing position.

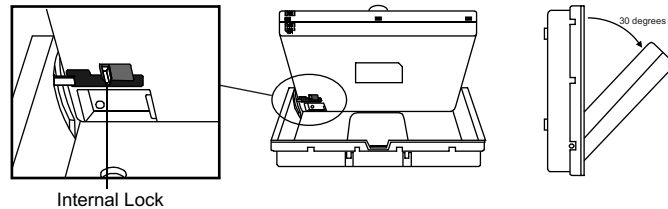


- 9) Insert disc

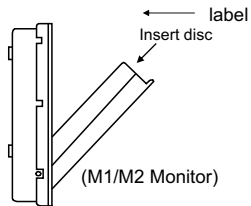

- 10) Eject disc

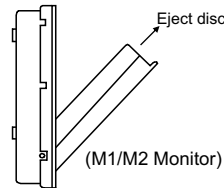


REMOTE CONTROL OPERATION

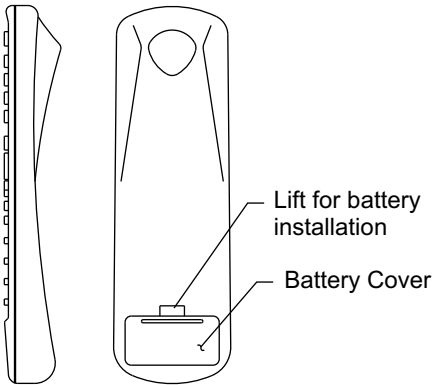

Battery Installation

Before attempting to operate your remote control, install the batteries as described below.

- 1) Turn the remote control face down. Using a fingernail, lift the battery cover off.
- 2) Install two "AAA" batteries. Make sure that proper polarity (+/-) is observed.
- 3) Align the cover tabs with the remote control and press down until the cover clicks.

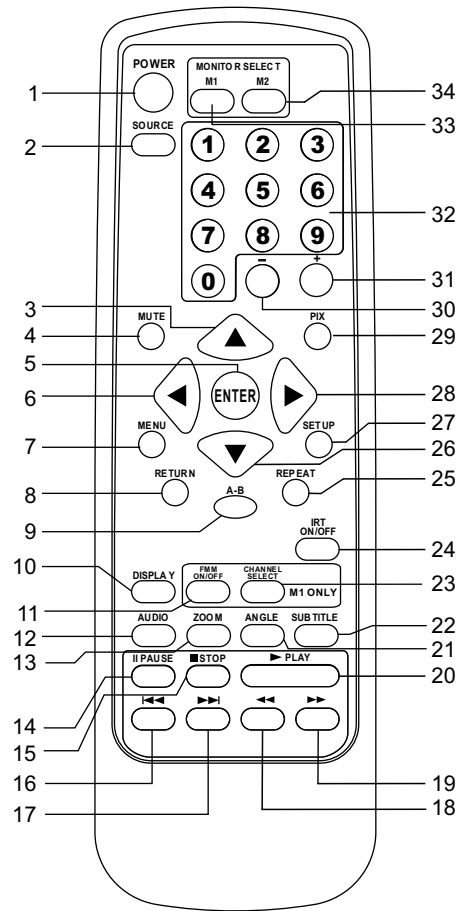

REMOTE CONTROL FUNCTION DESCRIPTIONS

* Function control is available on the unit and remote control.


NOTE: To control the individual units (M1 Monitor / M2 Monitor) press either M1 or M2 before pressing any other button. For example, to turn M1 Monitor ON, press M1 and then the power button.

1. **POWER Button*** – Press this button to turn M1 or M2 Monitor on. Press the button again to turn M1 or M2 Monitor OFF.
2. **SOURCE Button*** – Press this button to select the available sources. On the M1 monitor, the sources are DVD, AV1, AV2 & AUX/GAME.
On the M2 Monitor, the sources are DVD, AV1, AV2 & AUX/GAME.
NOTE: If AV1 is selected on both units at the same time, there will be no display.
3. **Up (▲) Button** – Use this button to scroll upward in menu options.
4. **MUTE Button** – Press this button to mute the audio. Pressing the button again restores the audio to the previously set level.
5. **ENTER Button** – Used to implement a selected setting.
6. **LEFT (◀) Button** – Use this button to shift left in the menu options.
7. **MENU Button** – Allows the user to access the DVD (DVD MODE) root menu.
8. **RETURN Button** – Not used on this model.
9. **A-B Button** – Allow user to repeat the playback from point A to point B.

<u>Press A-B button</u>	<u>On-Screen Display</u>	<u>DVD player</u>
Once	Repeat A-	Mark the beginning of the section to repeat (Set point A)
Twice	Repeat AB	Mark the end of the section to repeat (Set point B)
3 times	AB Off	Cancel the A-B repeat function

10. **DISPLAY Button** – Press to display the current disc information while the disc is playing. Press the cursor (▲▼◀▶) buttons to highlight the desired option. For title and chapter selection use the number buttons to enter the desired title or chapter number for angle, audio, and subtitle. Press the ENTER button repeatedly to change the item.

Title
Chapter
Angle
Audio
Subtitle

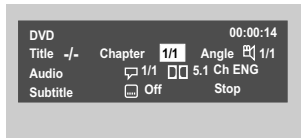


11. **FM ON/OFF Button** – Turns FM Modulator power ON/OFF (M1 Monitor Only).
12. **AUDIO Button** – Press to display and select the AUDIO language in DVD mode. Each time you press the button, the language changes. (**NOTE:** The languages for audio vary from disc to disc.)
13. **ZOOM Button** – Press this button to enlarge the picture when playing a DVD disc.
- | | |
|---------------------------------|--|
| <u>Press ZOOM button</u> | <u>DVD player perform</u> |
| Once | Enlarge the picture 2 times of the original size |
| Twice | Enlarge the picture 3 times of the original size |
| 3 times | Enlarge the picture 4 times of the original size |
| 4 times | Picture is returned to original size |
14. **PAUSE (II) Button** – Allows the user to pause the playback. Press the Play button to resume normal playback.
15. **STOP (■) Button*** – Press to stop playback.
16. **PREVIOUS (⏮) Button** – Press to return to the previous chapter or track.
17. **NEXT (⏭) Button** – Press to skip to the next chapter or track.

18. **SCAN BACKWARD (◀) Button** – Press to search in a backward direction. Press repeatedly to change the search speed from 2, 4, 8, 20 times the normal speed.
19. **SCAN FORWARD (▶) Button** – Press to search in a forward direction. Press repeatedly to change the search speed from 2, 4, 8, 20 times the normal speed.
20. **PLAY (▶) Button*** – Press to activate the play mode while a disc is loaded in the disc compartment.
21. **ANGLE Button** – Press to display and select different camera angles in DVD mode. Each time you press the button, the angle changes.
NOTE: The numbers of angles vary from disc to disc. Not all discs contain this option.
22. **SUBTITLE Button** – Press to display and select the subtitle language in DVD mode. Each time you press the button, the subtitle language changes.
NOTE: The type & number of language for subtitles vary from disc to disc.
23. **CHANNEL SELECT Button** – Selects the FM modulator Frequency (M1 only)
(Frequency 1: 88.3MHz, Frequency 2: 88.7MHz, Frequency 3: 89.1MHz, Frequency 4: 89.5MHz, Frequency 5: 89.9MHz).
24. **IRT ON/OFF Button** – Press this button to turn the selected unit (M1/M2) IR Transmitter ON/OFF.
25. **REPEAT Button** – Allows the user to repeat a selected Title, Chapter or Track of a DVD, CD or MP3.
26. **Down (▼) Button** – Use this button to scroll downward in the menu options.
27. **SETUP Button** – Press to display the Setup Menu which allows the user to change the DVD player options such as TV DISPLAY, OSD LANGUAGE, PARENTAL CONTROL etc.
Refer to the settings and Adjustments section for more information.

28. **RIGHT (▶) Button** – Use this button to shift right in the menu options.
29. **PIX Button (PICTURE SELECT)** – Each time this button is pressed, the on screen picture adjustment displays the “adjustment bar” for BRIGHTNESS, CONTRAST, COLOR or TINT. Once the desired adjustment bar is displayed, use the VOLUME(+)/ VOLUME(–) button to adjust the setting. The display will automatically turn off if no adjustments are made within 6 seconds, or is any other button is pressed.
30. **(–) Button** – This is used to make picture adjustments in picture select mode.
31. **(+) Button** – This is also to make picture adjustments in picture select mode.
32. **NUMBER Buttons** – Allows the user to enter the numbers 0 to 9 for selection of CD tracks, DVD chapters, and password setting.
33. **Monitor Select (M1)** – Change the Remote Control code to enable the control of M1 Monitor.
34. **Monitor Select (M2)** – Change the Remote Control code to enable the control of M2 Monitor.

OPERATION INSTRUCTION

Button Functions (M1/M2 Unit)

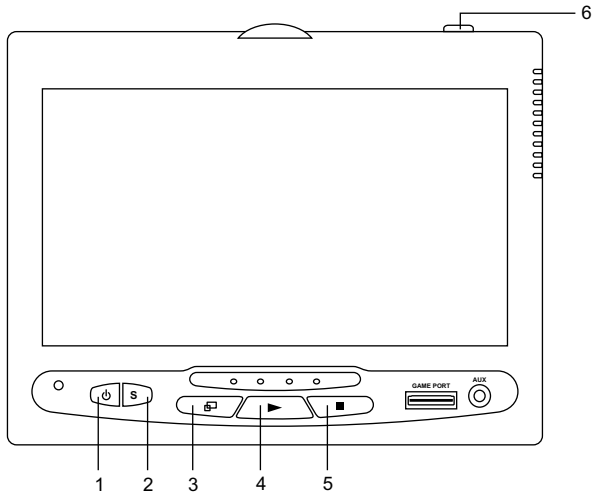

There are six (6) buttons on the front of the HR9000M1 M1 unit and HR9000M2 M2 unit as below.

1. **POWER Button** – To turn the unit ON/OFF.
2. **SOURCE Button** – Press this button will select between DVD, AV1, AV2 and AUX/GAME.
3. **SCREEN MODE Button** – Press this button will select between Wide(16:9), Normal(4:3) aspect ratio or screen off (display OFF).
4. **PLAY Button** – Press this button to start playback.
5. **STOP Button** – Press this button to stop playback.
6. **EJECT Button** – Press this button to eject the disc.


SETTINGS AND ADJUSTMENTS

The Setup Menu contains features and options that let you customize your DVD player. For example, you can set a language for the on-screen display, limit playback for children.

Using the Setup Menu

1. Press the SETUP button on the remote. The Setup Menu appears on the screen as shown per diagram.

Language	Language Setup
Video	Video Setup
Rating	Rating Setup

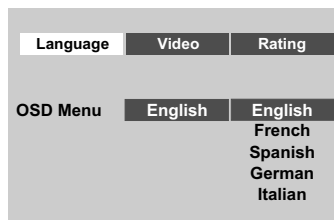

2. In order to Go to the desired page, move the highlight using the cursor button ◀ or ▶ to the icon indicated.
3. After entering the desired page, highlight the desired item using the cursor button ▲ or ▼.
4. Press ▶ to move the highlight to the different options for the selected item.
Press ▲ or ▼ to select the desired options, and then press ENTER to confirm the selection.
5. Repeat steps 3~4 to continue setting the items in the same Setup Page.
6. To change to another Setup page, press ◀ until the highlight moves back to the icon on the top part of the Setup Menu. Then, repeat steps 2~5.


Exiting the Setup Menu

Press the SETUP button again only.

LANGUAGE SETUP

Language for On-Screen Display

OSD MENU: The OSD MENU setup allows you to select the language for the on-screen display. The user can either select English, French, Spanish, German or Italian for the OSD language.

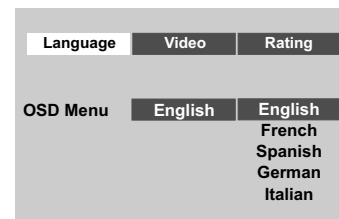

VIDEO SETUP

TV Display

The TV DISPLAY setup allows you to adjust screen setting (aspect ratio).

4:3 PS

This displays the wide picture on the screen with a portion of the left & right side removed.


4:3 LB

This displays the wide picture with black bands on the upper and lower portions of the screen.

16:9

This displays a wide picture with black bands on the upper and lower portion of the screen.

The bandwidth will vary, depending on the aspect ratio of the disc.

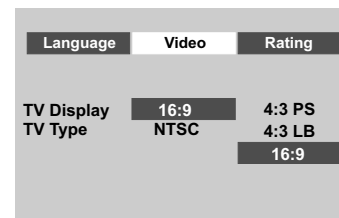


TV Type

The TV TYPE setup allows you to select the system to fit to the color system of the TV to be connected.

NTSC - Select this type for NTSC TV

PAL - Select this type for PAL TV

AUTO - Select this type for multi-system TV

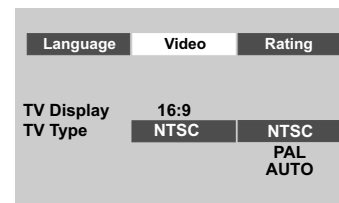

RATING SETUP

Rating

This item allows you to limit the content of movie playback from G to Adult. The lower the value, the more strict the control.

G
PG
PG – 13
R
NC – 17
Adult




The rating level can only be changed when the displayed lock is open. For first time use, key in the default password (3308) and press enter. To set a new password, key in a new four-digit password and press enter

Load Factory

The Load Factory — Reset allows you to reset all options to factory settings.

* This function will not affect the Rating control settings.

Note: *The Default Password is 3308. This password is always effective even after you have selected your own password and changed it. To avoid the possibility of others using the default password to set the parental level and change the password, you can record this default password in another area and delete it from this manual. Some discs can be limited depending on the age of users while some discs cannot.*

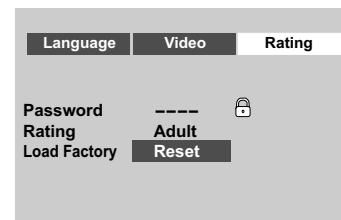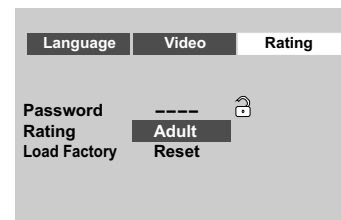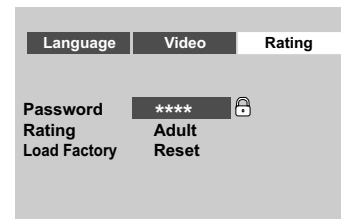

Playing Audio DVDs

1. When playing an audio CD, the DISPLAY banner appears automatically. It displays the track playing, the total tracks on the disc, and the elapsed time of the track playing.

2. Selecting a Track

You can skip to a specific track by using the numbers keys. Key in the desired track number and press ENTER.

3. Using the REPEAT feature

The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- SINGLE – repeat the track that is playing.
- ALL – repeat the entire disc that is playing.

As you toggle through the options, the repeat option changes at that time. The track, for example, repeats once that track has ended. The selected repeat option loops repeatedly until you turn it off.


Playing MP3 Discs

MP3 is a format for storing digital audio. An audio CD-quality song can be compressed into the MP3 format with very little loss of quality, while taking up much less space. CD-R discs that have been encoded in MP3 format can be played on your DVD player. The DVD player plays the songs in the order they were burned on to the disc.

Selecting Folders and Songs

When an MP3 is loaded in the player, the navigation menu appears automatically.

1. Press ▲ or ▼ to move the highlight to the desired folder and press ENTER to display the songs in the folder.
2. Press ▲ or ▼ to move the highlight to the desired song and press ENTER to begin playback of the highlighted song.

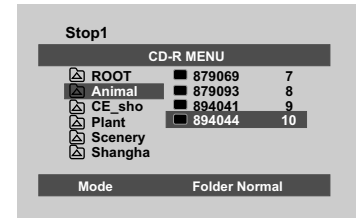

Skipping Songs

Use the Next (▶▶) button on the remote control to move to the next song. Use the Previous (◀◀) button to move to the previous song.

Selecting a Play Mode

You can choose what order the songs will play on a disc temporarily. The default play mode is FOLDER. Press REPEAT consecutively to choose the desired play mode. The play mode options are:

- FOLDER Plays the songs in a folder in the order they were recorded.
- SHUFFLE Plays the songs in a folder in random order (from within the selected folder).
- RANDOM Plays the songs in a folder in random order.
- SINGLE Plays a selected song.
- REPEAT ONE Repeat the song that is playing.
- REPEAT FOLDER Repeat the folder that is playing.

Program Play

To use the program play option, you must create a play list of songs in the order you want them to play.

NOTE: *Once you begin adding songs from a folder to create your play list, you cannot add songs from a different folder.*

1. Choose the PROG-PO option for the PLAY MODE.
2. Highlight and enter the folder you want to program.
3. Add songs to the program list by pressing ENTER once the song is highlighted. The song you have chosen and the number of songs you have chosen appear at the top of the screen. For example, if you choose the number five song within the folder and it is the first song you have chosen, PROGRAM P01:05 appears.
4. You can continue to add songs to the list from within the same folder by using the up or down arrow button and then pressing ENTER to add it to the list.
5. When you are done creating the list, press STOP to end the programming, PROG-END is displayed. Then press PLAY to begin the program play mode.

Deleting the Play list

To delete the entire play list, press STOP while the disc is playing and change to another play mode.

DVD Basics

To get the optimum use out of the DVD section, make sure you read this section completely.

Regional Coding

Both the DVD player and DVDs are coded by region. These regional codes must match in order for the disc to play. If the codes don't match, the disc won't play. This unit's code is region 1. Other regional codes cannot be played in this unit. The unit will display "WRONG REGION".

Types of Discs your DVD will play

- DVD* disc - DVD discs which contain video.
 - Audio discs - Audio CDs contain musical or sound content only.
 - MP3 discs - A disc that contains audio files (for example, a CD-R with downloaded MP3 files).
- * This system is capable of playing most recordable DVD formats. However, due to the variety of disc manufacturers and software, playback cannot be guaranteed.

Loading and Playing Discs

Before you load a disc, make sure that it is compatible with the player. Insert the disc with the label facing the driver.

Note: *the following Discs **CANNOT** be used with this player :*

- *MiniDisc*
- *Laserdisc*
- *CD-1, CD-ROM, DVD-ROM, Super Audio CD (SACD), DVD Audio*

To load and Play a Disc

Press the Power button to turn the unit ON. Select DVD mode and insert the disc (Label towards driver) into the disc compartment.

Audio / Video Inputs and Outputs

AV Output*

The AV output will provide the DVD signal from the M1 unit. This output can be connected to an additional monitor or video display.

* The AV output jack (P/N 112-3678) for the FMM interconnect box is supplied and used for connections.

Source Feature

M1 Sources:

DVD, AV1, AV2, AUX

DVD - Select DVD to view the internal DVD player.

AV1 - Select AV1 to view the source that is selected on the M2 satellite monitor.

AV2 - Select AV2 to view the source that is connected to the AV input on the FMM interconnect box.

AUX - Select AUX to view the source that is connected to the AUX input* on the front of the unit.

M2 Sources:

DVD, AV1, AV2, AUX

DVD - Select DVD to view the internal DVD player.


AV1 - Select AV1 to view the DVD player from the M1 monitor.

AV2 - Select AV2 to view the source that is connected to the AV input on the FMM interconnect Box.

AUX - Select AUX to view the source that is connected to the AUX input* on the front of the unit.

*The AUX input requires the use of the supplied AV adapter cable (1/8-to-RCA).


CONNECTING THE GAME CONTROLLER

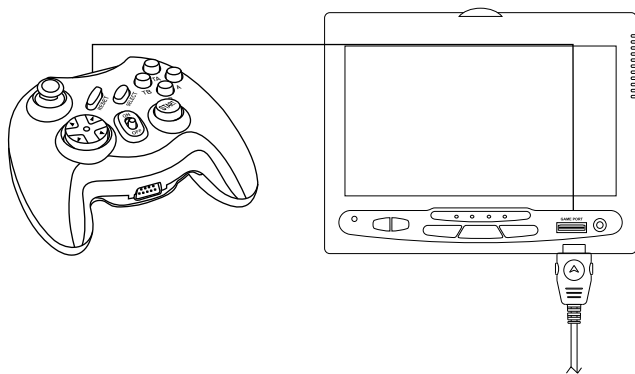

1. Plug the game controller (arrow facing up) into the game port on the front of the headrest monitor.
2. Press the source button(s) on the front panel or the source button on the remote until "GAME"* is displayed.

*NOTE: The AUX and the Game inputs are shared on the HR9000. When switching sources if the game controller is not plugged in the OSD will display "AUX" when the game controller is plugged in it will switch to "GAME".

GAME CONTROLLER FUNCTIONAL DESCRIPTION

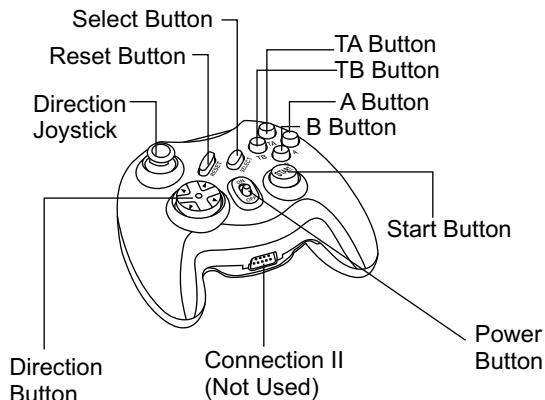

1. Slide the power switch to the ON position. A list of the first ten games will be displayed.
2. Use the A button (page up) or B button (page down) to display the three pages of games (1-10), 11-20, 21-30). Then use either the direction joystick or direction button to move the arrow to the desired game. Press Start to select the game.
3. Press Start to begin the game. Press start again at any time to pause the game.

TROUBLESHOOTING

PROBLEM	SOLUTION
Poor in vehicle radio reception	<ul style="list-style-type: none">• Check the condition of the vehicle's radio antenna.• Verify that the antenna is fully raised.• Verify that it that the FM Modulator is turned OFF by using the remote.
IR sensor inoperative	<ul style="list-style-type: none">• Verify that the batteries in the remote are fresh.• Verify that the remote sensor eye is not obstructed.• Verify that Master Monitor or Satellite Monitor has been selected correctly.
Disc won't play	<ul style="list-style-type: none">• Check the type of disc you put into disc tray. This DVD only plays DVDs, audio CDs and MP3s.• Both the unit and the disc are coded by region. If the regional codes don't match, the disc can't be played. This DVD player is set to Region Number 1.
Play starts, but then stops immediately	<ul style="list-style-type: none">• The disc is dirty. Clean it.• Condensation has formed. Allow player to dry out.
No sound or distorted sound	<ul style="list-style-type: none">• Make sure your DVD is connected properly. Make sure all cables are securely inserted into the appropriate jacks.• If you are using the IR headphones, make sure you turn on the IRT power.• Make sure the FM Modulator is ON and the proper Frequency has been selected.• Disc loaded backwards, turn disc around so that the disc label is facing towards the driver.
OSD Displays "Incorrect Disc Format"	<ul style="list-style-type: none">• Disc loaded backwards, turn disc around so that the disc label is facing towards the driver.



CAUTION

1. Keep the monitor clean and dry.
2. Always seek qualified personnel to perform repairs. Never attempt your own repairs.
3. Do not drop the monitor or expose to strong impacts.
4. Do not expose to direct sunlight for extended periods of time.

MONITOR SPECIFICATIONS

- | | | |
|----------------------------|---|------------------------------|
| 1. Type | : | TFT Active Matrix LCD |
| 2. Resolution | : | 1440 (W) x 234 (H) |
| 3. Pixels | : | 336,960 |
| 4. Back Light | : | Edge Light Tube |
| 5. Power Source | : | +12 VDC |
| 6. Power Consumption | : | 35W For 2 Monitors + 2 DVD |
| 7. Operating Temperature | : | 14°F ~ 125°F (-10°C ~ +52°C) |
| 8. Storage Temperature | : | -4°F ~ 176°F (-20°C ~ +80°C) |
| 9. Video Display System | : | NTSC/PAL |
| 10. Backlight life | : | 10,000 hours |
| 11. Headphone Audio Output | : | 0.03W @ 32 ohm |
| 12. Video Output | : | 1.0Vp-p @ 75 ohm |



ADVENT LIMITED WARRANTY

Applies to ADVENT Mobile Video Products



AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that, should this product or any part thereof (except game controllers), under normal use and conditions, be proven defective in material or workmanship within 36 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

If your new vehicle's radio, CD/DVD player is covered by the manufacturer's warranty for a period of 48 months as set forth in the OEM Warranty Booklet, the company will extend the Advent Mobile Video product warranty for the same period of time. This is not applicable to extended warranty purchases beyond the original manufacturer's warranty. A game controller, if supplied, is similarly warranted for ninety (90) days.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to digital memory cards, discs, speakers, accessories, or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITH IN A PERIOD NOT EXCEEDING 12 MONTHS AFTER EXPIRATION OF THE WARRANTY. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

U.S.A. : AUDIOVOX ELECTRONICS CORPORATION, 150 MARCUS BLVD., HAUPPAUGE, NEW YORK 11788 1-800-645-4994

CANADA: CALL 1-800-645-4994 FOR LOCATION OF WARRANTY STATION SERVING YOUR AREA

