



4 Bay eSATA RAID 0/1/10/5/JBOD SUB SYSTEM w/ 6G PCIe Card

RSV-S4-6G

Default Setting for Web GUI RAID Management Tools

Thank you for purchasing a quality Rosewill Product.
Please register your product at : www.rosewill.com for
complete warranty information and future support for your product.

Web GUI RAID Tools Instructions

After you install the Web GUI management tools, you can setup the RAID volume using any Web Browser.

The following is the default setting:

Web Address: <https://localhost:7402/>

Username: RAID

Password: hpt

For further instruction to setup the RAID, please visit the detailed manual.