

SHARP[®]

DIGITAL FULL COLOUR MULTIFUNCTIONAL SYSTEM
MX-4140N/MX-4141N/MX-5140N/MX-5141N

QUICK START GUIDE

Keep this manual close at hand for reference whenever needed.



For the users of the fax function

■ Important safety instructions

- If any of your telephone equipment is not operating properly, you should immediately remove it from your telephone line, as it may cause harm to the telephone network.
- Never install telephone wiring during a lightning storm.
- Never install telephone sockets in wet locations unless the socket is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use a telephone to report a gas leak in the vicinity of the leak.
- Do not install or use the machine near water, or when you are wet. Take care not to spill any liquids on the machine.
- Save these instructions.

■ Caution!

For complete electrical disconnection, pull out the main plug.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

Shielded interface cables must be used with this equipment to maintain compliance with EMC regulations.

The equipment should be installed near an accessible socket outlet for easy disconnection.

Each instruction also covers the optional units used with these products.

Notice for Users in Europe



Hereby, SHARP ELECTRONICS declares that this Digital Full Colour Multifunctional System MX-5141N/MX-5140N/MX-4141N/MX-4140N is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The declaration of conformity may be consulted at:

["http://www.sharp.de/doc/MX-5141N_MX-5140N_MX-4141N_MX-4140N.pdf"](http://www.sharp.de/doc/MX-5141N_MX-5140N_MX-4141N_MX-4140N.pdf)



FAX interface cable and Line cable

These special accessories must be used with the device.

The Declaration of Conformity is included in optional Facsimile expansion kit (MX-FX11).

Notice for users in the UK

MAINS PLUG WIRING INSTRUCTIONS

The mains lead of this equipment is already fitted with a mains plug which is either a non-rewireable (moulded) or a rewireable type. Should the fuse need to be replaced, a BSI or ASTA approved fuse to BS1362 marked  or  and of the same rating as the one removed from the plug must be used.

Always refit the fuse cover after replacing the fuse on the moulded plug. Never use the plug without the fuse cover fitted.

In the unlikely event of the socket outlet in your home not being compatible with the plug supplied either cut-off the moulded plug (if this type is fitted) or remove by undoing the screws if a rewireable plug is fitted and fit an appropriate type observing the wiring code below.


DANGER: The fuse should be removed from the cut-off plug and the plug destroyed immediately and disposed of in a safe manner. Under no circumstances should the cut-off plug be inserted elsewhere into a 13A socket outlet as a serious electric shock may occur.

To fit an appropriate plug to the mains lead, follow the instructions below:

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

GREEN-AND-YELLOW:	Earth
BLUE:	Neutral
BROWN:	Live

As the colours of the wires in this mains lead may not correspond with coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured **GREEN-AND-YELLOW** must be connected to the terminal in the plug which is marked with the letter **E**, or by the safety earth symbol , or coloured green or greenand-yellow.

The wire which is coloured **BLUE** must be connected to the terminal which is marked with the letter **N** or coloured black.

The wire which is coloured **BROWN** must be connected to the terminal which is marked with the letter **L** or coloured red.

If you have any doubt, consult a qualified electrician.

WARNING: THIS APPARATUS MUST BE EARTHED.

EMC (this machine and peripheral devices)

Warning:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

This machine contains the software having modules developed by Independent JPEG Group.

This product includes Adobe® Flash® technology of Adobe Systems Incorporated.

Copyright© 1995-2007 Adobe Macromedia Software LLC. All rights reserved.

This product includes the Adobe® PostScript®3™ of Adobe Systems Incorporated.

This product uses "InstantBoot" provided by IT Access Co., Ltd., Japan.

SOFTWARE LICENCE

The SOFTWARE LICENCE will appear when you install the software from the CD-ROM. By using all or any portion of the software on the CD-ROM or in the machine, you are agreeing to be bound by the terms of the SOFTWARE LICENCE.

The explanations in this manual are based on American English and the North American version of the software.

Software for other countries and regions may vary slightly from the North American version.

- The explanations in this manual assume that you have a working knowledge of your Windows or Macintosh computer.
 - For information on your operating system, please refer to your operating system manual or the online Help function.
 - The explanations of screens and procedures in this manual are primarily for Windows Vista® in Windows® environments. The screens may vary depending on the version of the operating system.
 - Considerable care has been taken in preparing this manual. If you have any comments or concerns about the manual, please contact your dealer or nearest authorised service representative.
 - This product has undergone strict quality control and inspection procedures. In the unlikely event that a defect or other problem is discovered, please contact your dealer or nearest authorised service representative.
 - Aside from instances provided for by law, SHARP is not responsible for failures occurring during the use of the product or its options, or failures due to incorrect operation of the product and its options, or other failures, or for any damage that occurs due to use of the product.
-



Products that have earned the ENERGY STAR® are designed to protect the environment through superior energy efficiency.
The products that meet the ENERGY STAR® guidelines carry the ENERGY STAR® logo.
The products without the logo may not meet the ENERGY STAR® guidelines.

■ Warranty

While every effort has been made to make this document as accurate and helpful as possible, SHARP Corporation makes no warranty of any kind with regard to its content. All information included herein is subject to change without notice. SHARP is not responsible for any loss or damages, direct or indirect, arising from or related to the use of this operation manual.

© Copyright SHARP Corporation 2012. All rights reserved. Reproduction, adaptation or translation without prior written permission is prohibited, except as allowed under copyright laws.

MATERIAL SAFETY DATA SHEET

The MSDS (Material Safety Data Sheet) can be viewed at the following URL address: <http://www.sharp-world.com/corporate/info/index.html>

Contents

OPERATION MANUALS AND HOW TO USE THEM	6	MAINTENANCE	16
CAUTIONS	7	SPECIFICATIONS	17
Symbols in this manual	7	SUPPLIES	23
Power notes	7	OTHERS	24
Installation notes	8	TO THE ADMINISTRATOR OF THE MACHINE	25
About consumables	9	TRADEMARK ACKNOWLEDGMENTS	26
Handling precautions	9	INFORMATION ON DISPOSAL	27
PART NAMES	11		
TURNING THE POWER ON AND OFF	12		
HOME SCREEN	13		
For operating the touch panel and functions the icon.			
OVERVIEW OF COPY OPERATION	14		
OVERVIEW OF OTHER OPERATIONS	15		
For functions other than copy.			

OPERATION MANUALS AND HOW TO USE THEM

Quick Start Guide (this document)


Features important safety notes, names of parts and components, information about the power-on procedure, operation overviews, information for people who manage the machine, and information about other aspects of this machine.

Read this section before using the machine for the first time.




User's Manual

Can be downloaded from the machine to a computer and viewed. Refer to this document to learn more about printer mode and settings mode, and to learn about the details of each type of mode.

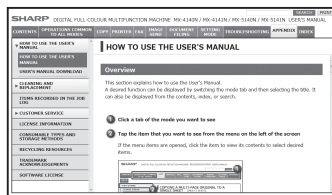


Software Setup Guide (CD-PDF)

Explains how to install the various drivers needed when using this machine as a printer, network scanner, or fax machine. Refer to this document when using this machine from a computer. The Software Setup Guide can be found on the "Software CD-ROM".

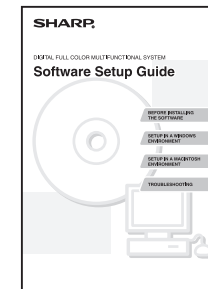

Operation Guide

Can be viewed by touching the operation guide icon on the machine's touch panel. When you are using this machine, use this document to see an overview of a particular mode or when you are having trouble operating the machine.

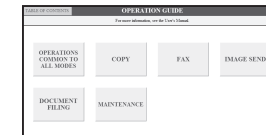

Downloading the User's Manual

You can download the [User's Manual] by following the procedures below while the machine is connected to the network.

1 Confirm the machine's IP address

First, tap the [Settings] key on the home screen, and then tap [System Settings] → [List Print (User)] in the left menu.
Next, tap the [Print] key in the [All Custom Setting List], and confirm the IP address in the printed list.

2 Insert the machine's IP address into the address bar of your web browser to access the machine.

<http://machine's IP address/>
User verification may be required depending on the machine's settings.
Please check with the machine's administrator to obtain the account information necessary for verification.



3 Download the [User's Manual]

Click [Operation Manual Download] on the displayed page. Next, select the desired language from the "Language to download" list, and then click the [Download] button.

4 Expand the downloaded "User's Manual".

When expansion is finished, the [User's Manual] folder is created.

5 View the downloaded [User's Manual].

Open the [User's Manual] folder and double-click "index.htm".



CAUTIONS

Symbols in this manual

To ensure safe use of the machine, this manual uses various safety symbols. The safety symbols are classified as explained below. Be sure you understand the meaning of the symbols when reading the manual.

 


Indicates a risk of death or serious injury.




Indicates a risk of human injury or property damage.

Meaning of the symbols




CAUTION!
HOT

 

PINCH
POINT
KEEP CLEAR



 PROHIBITED
ACTIONS



DO NOT
DISASSEMBLE



MANDATORY
ACTIONS

Power notes

WARNING



 
Be sure to connect the power cord only to a power outlet that meets the specified voltage and current requirements. Also make certain the outlet is properly grounded. Do not use an extension cord or adapter to connect other devices to the power outlet used by the machine. Using an improper power supply may cause fire or electrical shock.

* For the power supply requirements, see the name plate in the lower left corner of the left side of the machine.



Do not damage or modify the power cord.

Placing heavy objects on the power cord, pulling it, or forcibly bending it will damage the cord, resulting in fire or electrical shock.



Do not insert or remove the power plug with wet hands.

This may cause electrical shock.

CAUTION



When removing the power plug from the outlet, do not pull on the cord.

Pulling on the cord may cause damage such as wire exposure and breakage, and may result in fire or electrical shock.



If you will not use the machine for a long time, be sure to remove the power plug from the outlet for safety.



When moving the machine, switch off the main power and remove the power plug from the outlet before moving.

The cord may be damaged, creating a risk of fire or electrical shock.

Installation notes

⚠ CAUTION

- ⊘ **Do not install the machine on an unstable or slanted surface. Install the machine on a surface that can withstand the weight of the machine.**

Risk of injury due to the machine falling or toppling.
If peripheral devices are to be installed, do not install on an uneven floor, slanted surface, or otherwise unstable surface. Danger of slippage, falling, and toppling. Install the product on a flat, stable surface that can withstand the weight of the product.


- ⊘ **Do not install in a location with moisture or dust.**

Risk of fire and electrical shock.
If dust enters the machine, dirty output and machine failure may result.



- ⊘ **Locations that are excessively hot, cold, humid, or dry (near heaters, humidifiers, air conditioners, etc.)**

The paper will become damp and condensation may form inside the machine, causing misfeeds and dirty output.
☞ SPECIFICATIONS (page 18)
If the location has an ultrasonic humidifier, use pure water for humidifiers in the humidifier. If tap water is used, minerals and other impurities will be emitted, causing impurities to collect on the inside of the machine and create dirty output.

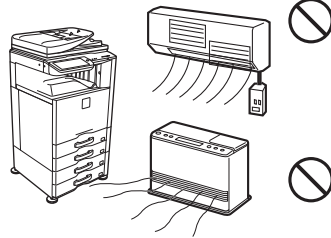


- ⚠ **When the machine is installed, the adjusters (4) must be lowered to the floor to secure the machine (prevent it from moving).**

Rotate the adjusters in the locking direction until they are in firm contact with the floor.


If you find it necessary to reposition the machine due to rearrangement of your office layout or other reason, retract the adjusters from the floor, turn off the power, and then move the machine.

 (After moving the machine, lower the adjusters again to secure the machine.)




- ⊘ **Locations exposed to direct sunlight**

Plastic parts may become deformed and dirty output may result.

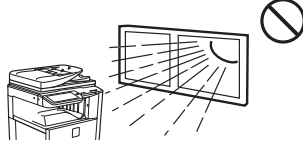


- ⊘ **Locations with ammonia gas**
Installing the machine next to a diazo copy machine may cause dirty output.

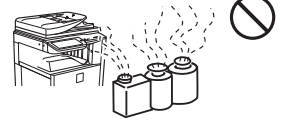


- ⊘ **Do not install the machine in a location with poor air circulation.**

A small amount of ozone is created inside the machine during printing. The amount of ozone created is not sufficient to be harmful; however, an unpleasant odor may be noticed during large copy runs, and thus the machine should be installed in a room with a ventilation fan or windows that provide sufficient air circulation. (The odor may occasionally cause headaches.)


* Install the machine so that people are not directly exposed to exhaust from the machine. If installed near a window, ensure that the machine is not exposed to direct sunlight.

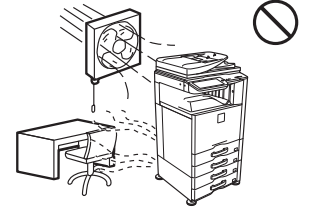

- ⊘ **Near a wall**
Be sure to allow the required space around the machine for servicing and proper ventilation. (The machine should be no closer than the distances indicated below from walls. The indicated distances are for the case when a saddle finisher and large capacity paper tray are not installed.)

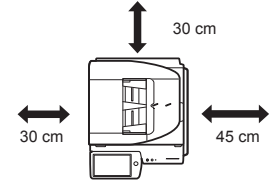

- ⊘ **Locations subject to vibration.**
Vibration may cause failure.

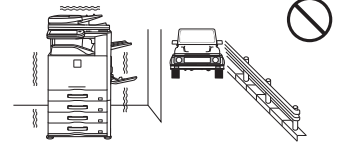

⚠ CAUTION


The machine includes a built-in hard drive. Do not subject the machine to shock or vibration. In particular, never move the machine while the power is on.

- The machine should be installed near an accessible power outlet for easy connection.
- Connect the machine to a power outlet which is not used for other electric appliances. If a lighting fixture is connected to the same outlet, the light may flicker.

CAUTIONS

About consumables


CAUTION

-  **Do not throw a toner cartridge into a fire.**
Toner may fly and cause burns.


-  **Store a toner cartridge out of the reach of children.**


Handling precautions


WARNING


-  **Do not place a container of water or other liquid, or a metal object that might fall inside, on the machine.**
If the liquid spills or the object falls into the machine, fire or electrical shock may result.




-  **Do not remove the machine casing.**
High-voltage parts inside the machine may cause electrical shock.


-  **Do not make any modifications to this machine.**
Doing so may result in personal injury or damage to the machine.

-  **Do not use a flammable spray to clean the machine.**
If gas from the spray comes in contact with hot electrical components or the fusing unit inside the machine, fire or electrical shock may result.


-  **If you notice smoke, a strange odor, or other abnormality, do not use the machine.**
If used in this condition, fire or electrical shock may result. Immediately switch off the main power and remove the power plug from the power outlet. Contact your dealer or nearest authorised service representative.





-  **If a thunder storm begins, switch off the main power and remove the power plug from the outlet to prevent electrical shock and fire due to lightning.**


-  **If a piece of metal or water enters the machine, switch off the main power and remove the power plug from the power outlet.**
Contact your dealer or nearest authorised service representative. Using the machine in this condition may result in electrical shock or fire.


! CAUTION


 **Do not look directly at the light source.**
Doing so may damage your eyes.

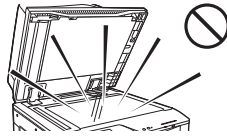


 **The fusing unit and paper exit area are hot. When removing a misfeed, do not touch the fusing unit and paper exit area. Take care not to burn yourself.**

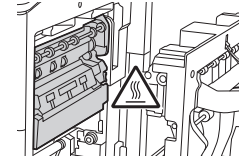

 **Do not block the ventilation ports on the machine. Do not install the machine in a location that will block the ventilation ports.**
Blocking the ventilation ports will cause heat to build up in the machine, creating a risk of fire.

 **When loading paper, removing a misfeed, performing maintenance, closing the front and side covers, and inserting and removing trays, take care that your fingers are not pinched.**

 

The machine includes the document filing function, which stores document image data on the machine's hard drive. Stored documents can be called up and printed or transmitted as needed. If a hard drive failure occurs, it will no longer be possible to call up the stored document data. To prevent the loss of important documents in the unlikely event of a hard drive failure, keep the originals of important documents or store the original data elsewhere. With the exception of instances provided for by law, Sharp Corporation bears no responsibility for any damages or loss due to the loss of stored document data.

Laser information


Wave length	790 nm ± 10 nm
Pulse times	MX-4140N/MX-4141N Normal paper mode (P/S = 178 mm/s) = 3.59 μs ± 0.014 μs / 7 mm Heavy paper mode (P/S = 190 mm/s) = 3.36 μs ± 0.013 μs / 7 mm MX-5140N/MX-5141N Normal paper mode (P/S = 225 mm/s) = 2.84 μs ± 0.011 μs / 7 mm Heavy paper mode (P/S = 190 mm/s) = 3.36 μs ± 0.013 μs / 7 mm
Output power	Max 0.672 mW (LD1+LD2)

■ Caution

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This Digital Equipment is CLASS 1 LASER PRODUCT (IEC 60825-1 Edition 2-2007)

PART NAMES

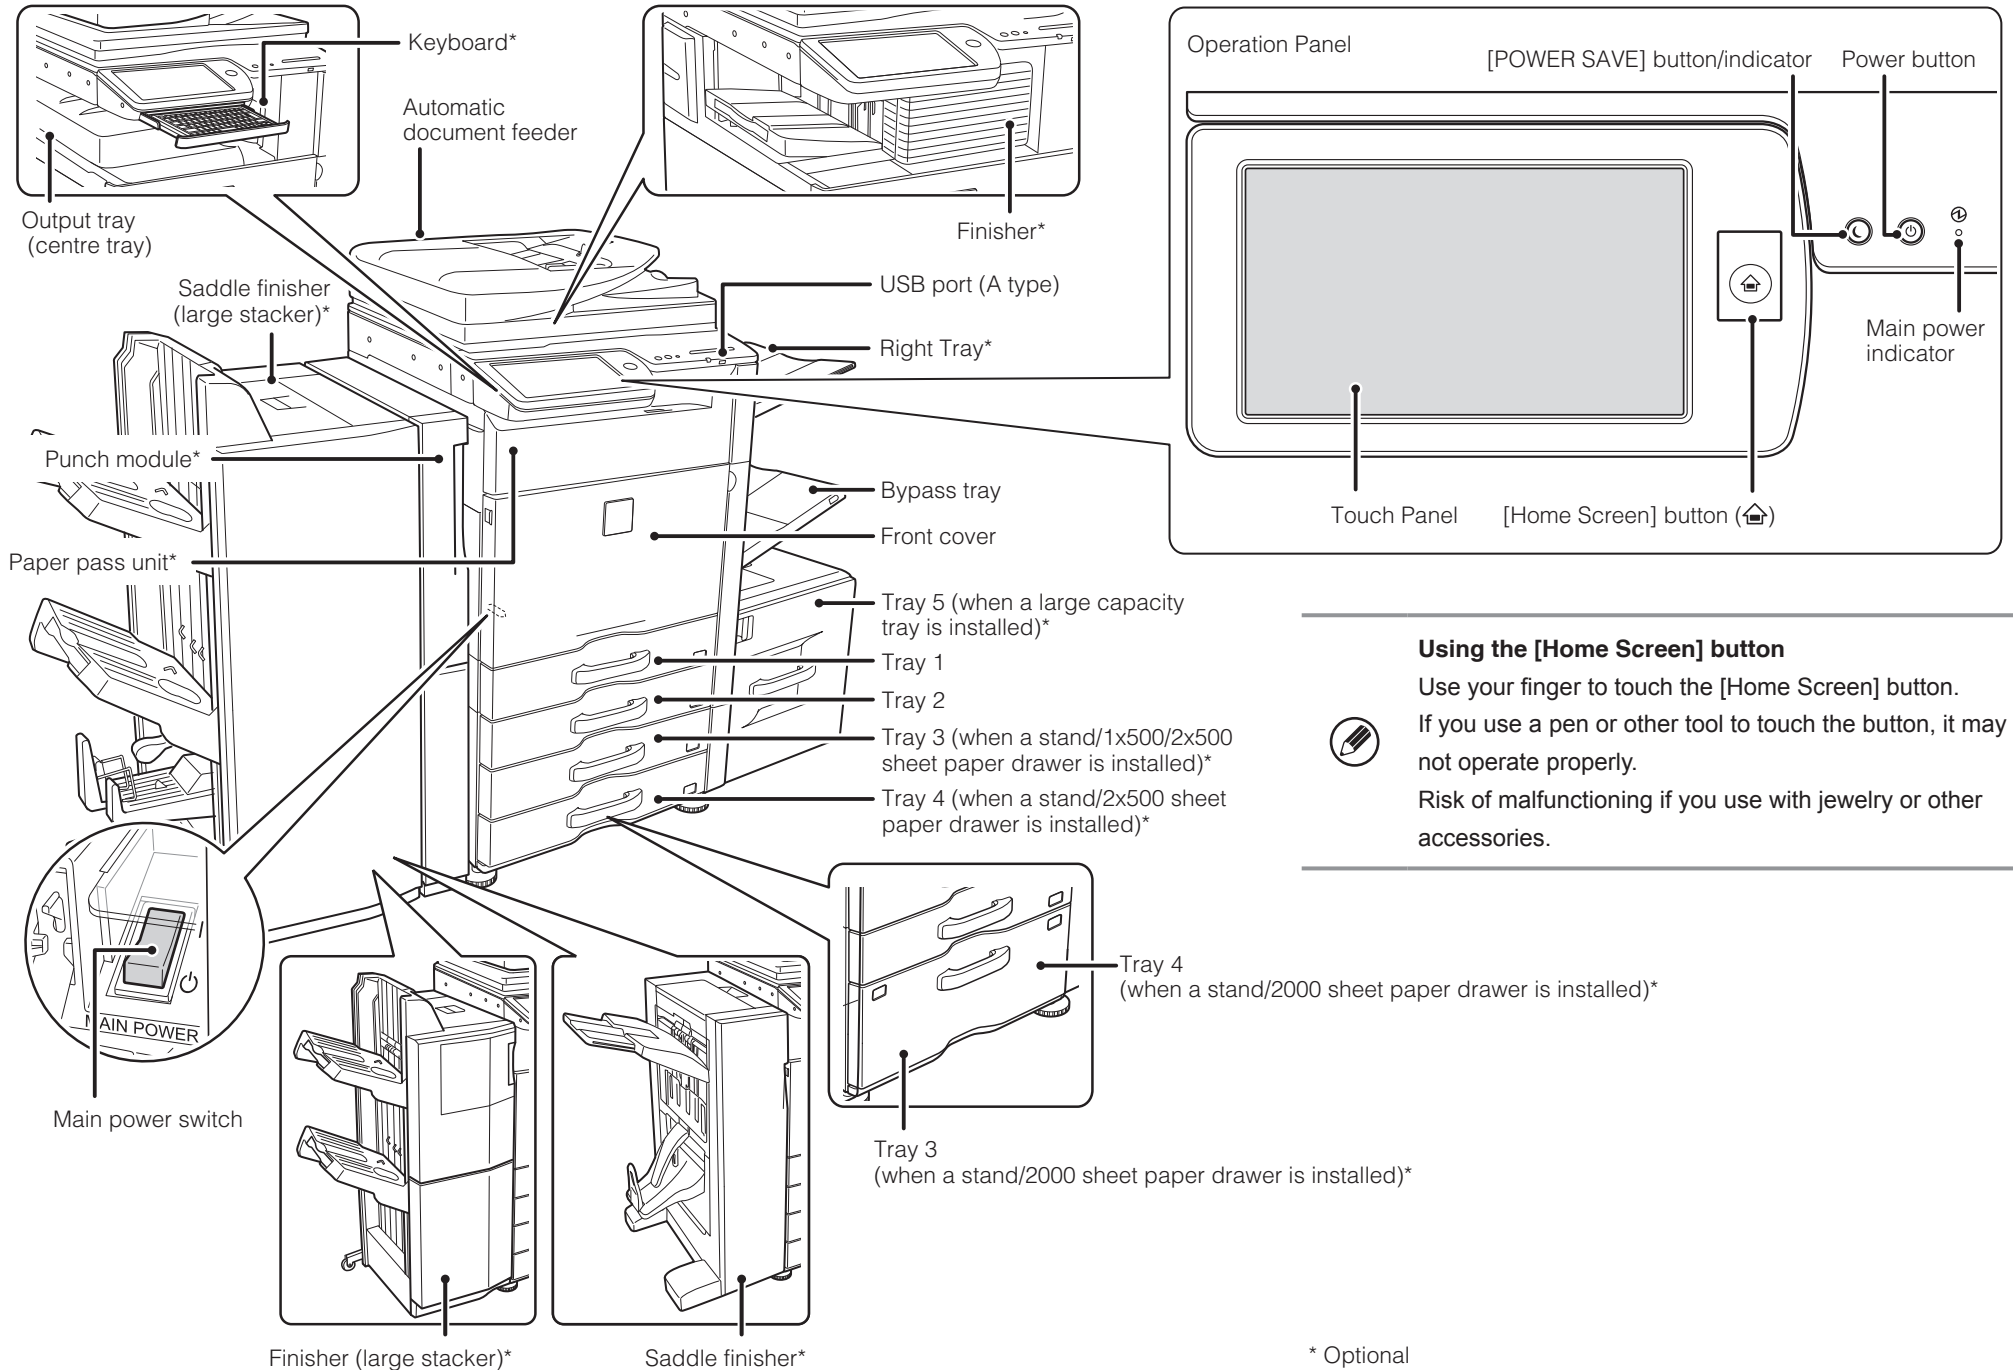

Using the [Home Screen] button

Use your finger to touch the [Home Screen] button.
 If you use a pen or other tool to touch the button, it may not operate properly.
 Risk of malfunctioning if you use with jewelry or other accessories.

* Optional

TURNING THE POWER ON AND OFF

This machine has a main power switch, found at the bottom left after the front cover is opened, and a power button (⏻), located on the operation panel.

Turning on the power

- Switch the main power switch to the “|” position.
- After the main power indicator lights in green, press the power button (⏻).

Turning off the power

- (1) Press the power button (⏻) to turn off the power.
- (2) Switch the main power switch to the “⏻” position.

Restarting the machine


In order for some settings to take effect, the machine must be restarted. If a message in the touch panel prompts you to restart the machine, press the power button (⏻) to turn off the power and then press the key again to turn the power back on.

CAUTION

- When turning off the power, make sure that the indicators on the operation panel turn off as well.
- If the machine suddenly turns off, such as in the event of a power failure, turn the machine on again, and then turn off the machine following the correct procedure for turning off the machine.

Switching off the main power switch or removing the power cord from the outlet while any of the indicators are lit or blinking may damage the hard drive and cause data to be lost.

- Switch off both the power button (⏻) and the main power switch and unplug the power cord if you suspect a machine failure, if there is a bad thunderstorm nearby, or when you are moving the machine.

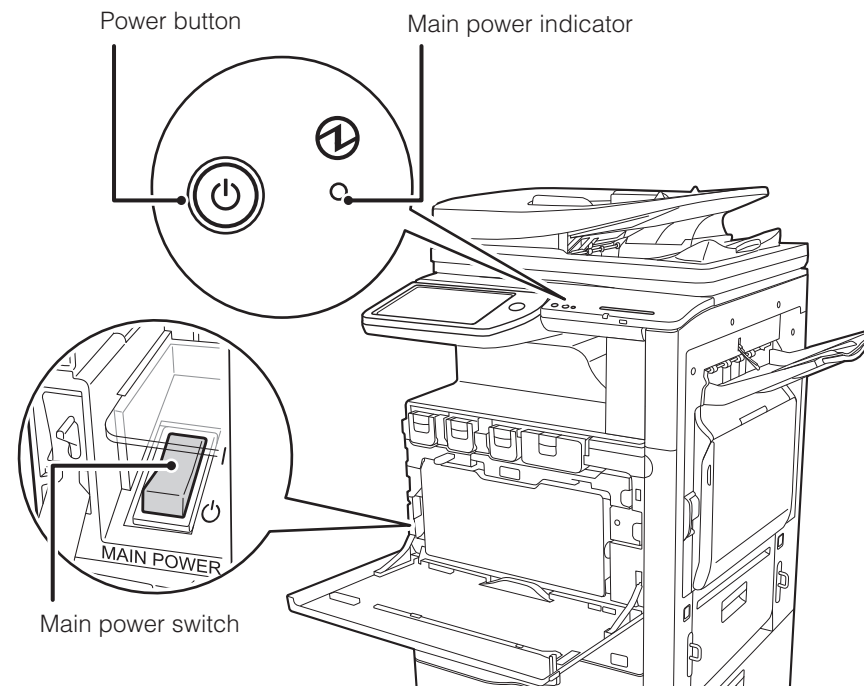


- When using the fax or Internet fax function, always keep the main power switch in the “|” position.



- In some states of the machine, pressing the power button (⏻) to restart will not make the settings take effect. In this case, use the main power switch to switch the power off and then on.

HOME SCREEN

The home screen is the first screen to be displayed. Touch an icon to display the corresponding screen. When the  button is touched on the operation panel, this home screen is displayed.

* The actual screen displayed may vary depending on the model or how the machine has been customized.

Copy

The scanned original is printed.

CLOUD PORTAL

This service may not be available in some regions.

Scroll area


Up to 12 icons are displayed. Icons that are not displayed can be displayed by scrolling horizontally.

Fixed area

Up to 10 icons are displayed.





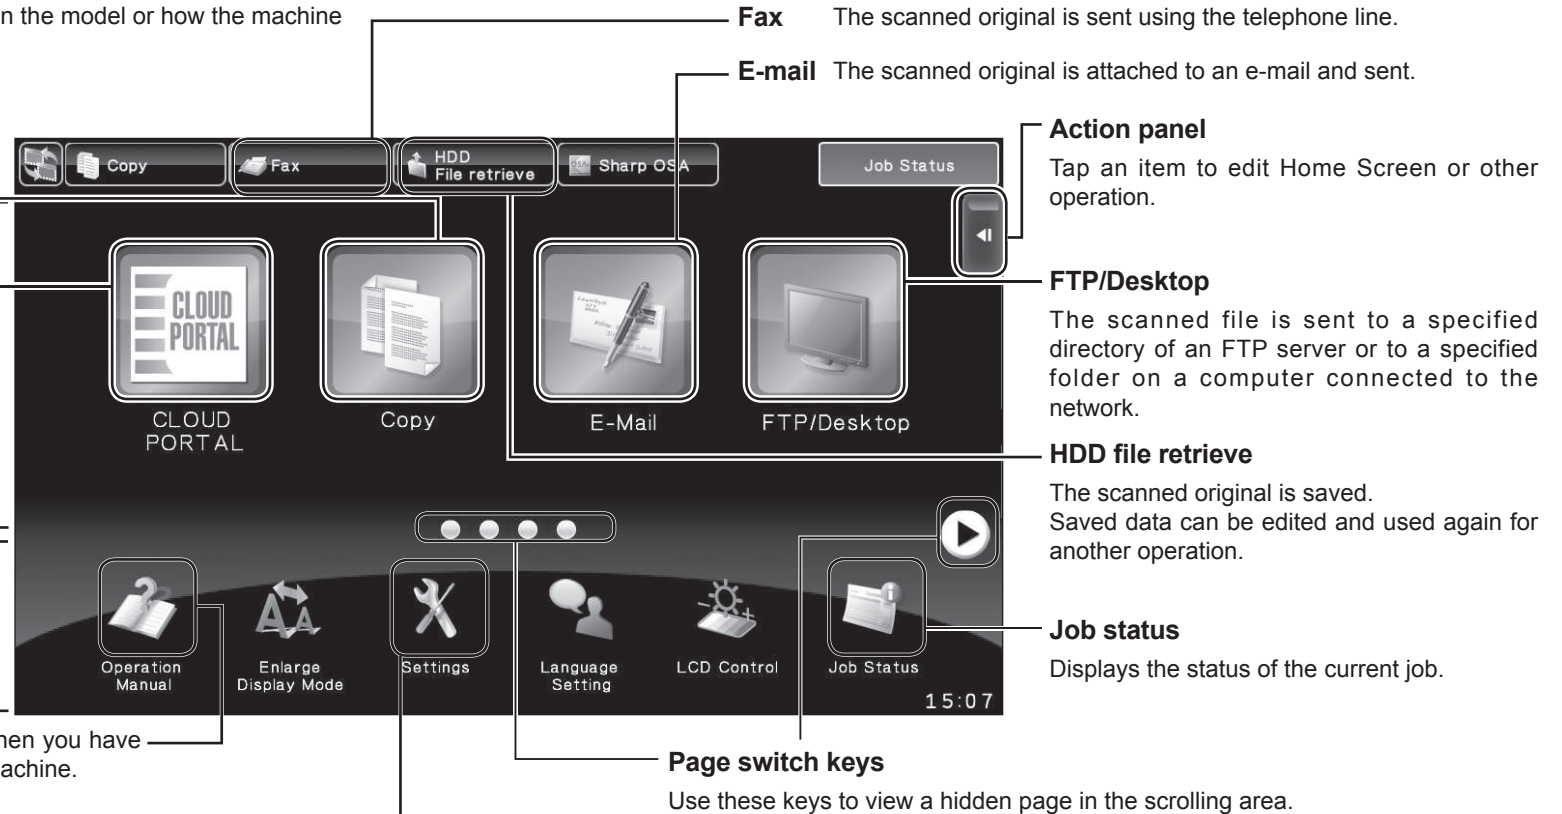



Operation Guide Refer to the Operation Guide when you have questions about operating the machine.

System settings Allows various settings to be adjusted according to how the machine will be used or its current state of use.



OPERATING THE TOUCH PANEL

In addition to the conventional "single tap" operation, you can also operate the touch panel using presses, flicks, and slides.

Tap 	Touch and then quickly release the finger. Used to select keys, tabs, checkboxes, etc.	Double tap 	Touch the screen twice. Use this operation to enlarge or reduce the image in the preview.	Drag 	Drag (slide the finger in the desired direction) to rotate or delete original pages displayed as a preview.	Pinch 	Touch the screen with two fingers and move them toward each other. This is used to reduce the browser and preview display.
Press 	Touch a key and keep the finger on the key for a short time.	Flick 	Flick (quickly swipe with the finger) to scroll the preview image.	Slide 	Slide the finger on the scroll bar to move up or down through a long list.	Spread 	Touch the screen with two fingers and move them away from each other. This is used to enlarge the browser and preview display.

OVERVIEW OF COPY OPERATION

Step 1 Select a function

Step 2 Place the original

Step 3 Scan


Step 4 Confirming while viewing the preview

Step 5 Start

Select the [Copy] key or Copy icon.

Confirm the results of the scan and any edits or settings.

Enter the number of prints and start printing.

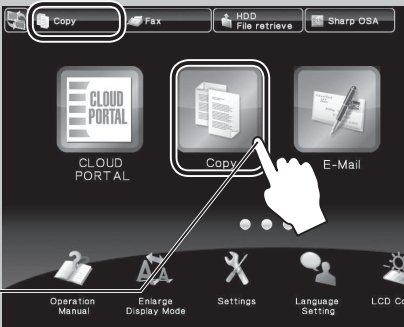


Tap

Place the original in the automatic document feeder


- Do not pass this line
- Insert all the way
- Align the edges
- Upward
- Adjust to original size

Place the original on the document glass

- Align to corner
- Placing a thick book
- Downward
- Lift open

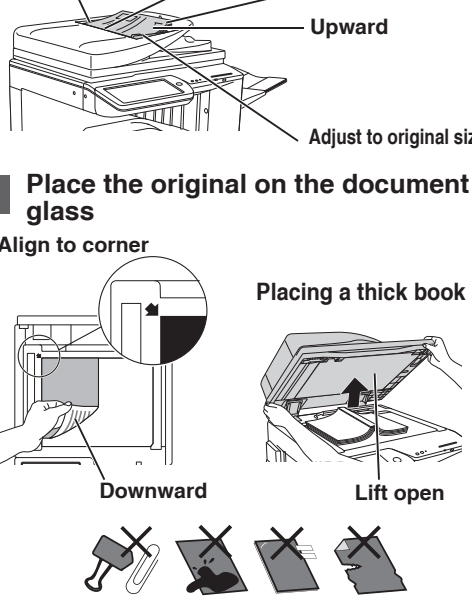


Scan the original

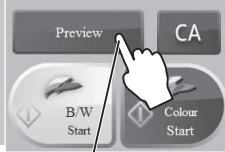


Tap

Scan another original

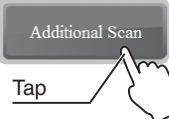


Tap

Print 1 set of copies




Tap

Confirmation
Face up/down, orientation, missing pages, folded pages




Editing Page editing, deleting, etc.

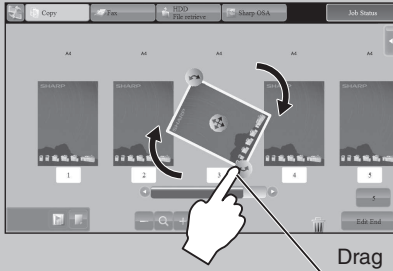

Drag

Output settings

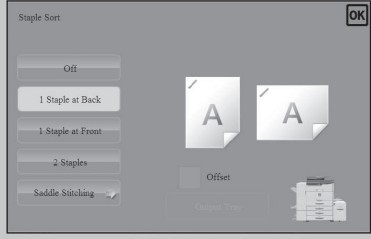


Tap

Print

Document filing
The scanned original and the settings are saved on the hard disk and can be used again.

OVERVIEW OF OTHER OPERATIONS For functions other than copy.


Step 1 Select a function

Step 2 Place the original






Step 3 Select the address

Step 4 Confirmation

Step 5 Start

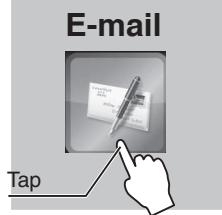

Scan and store the file

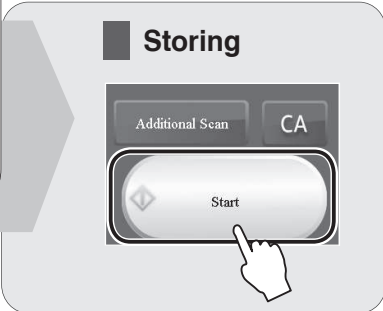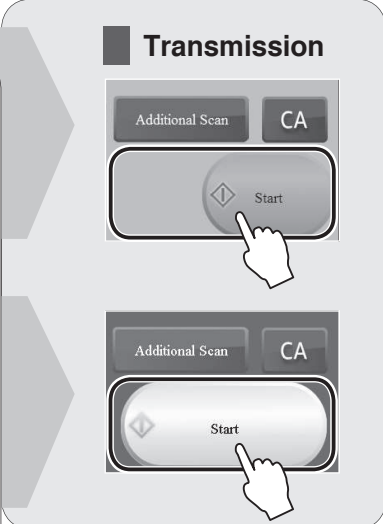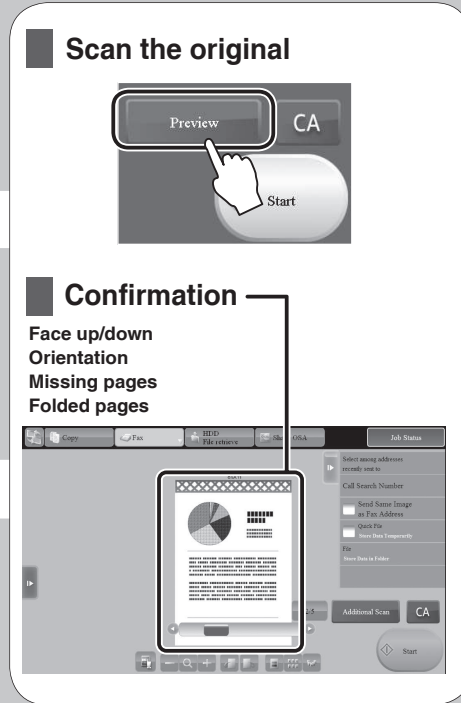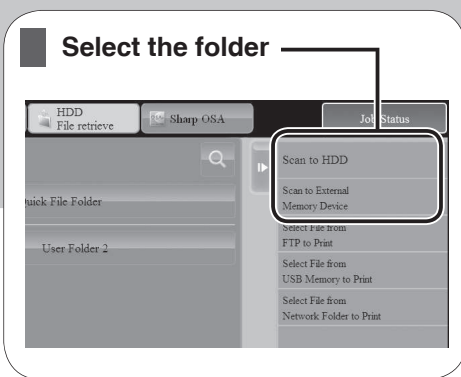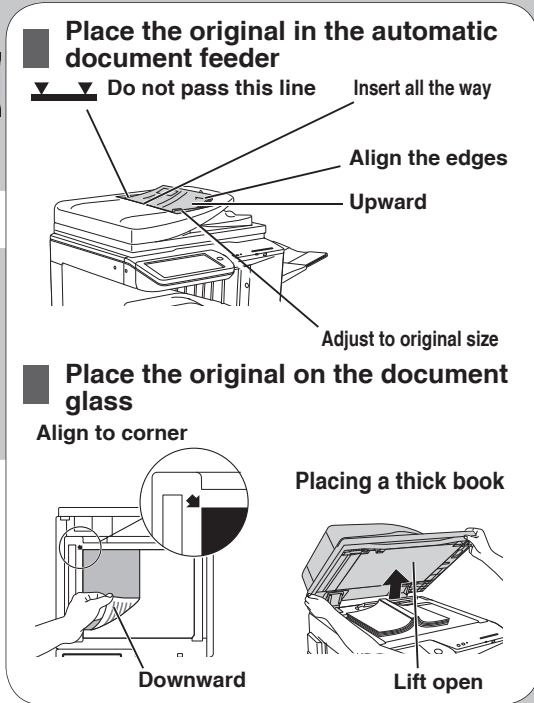

Replacing a toner cartridge


When toner runs low, the colour and the message “Prepare a new toner cartridge.” appears.

Prepare a new toner cartridge for the indicated colour.

When toner runs out, the colour and the message “Replace the toner cartridge.” appears.


Replace the toner cartridge for the indicated colour.

Example: Replacing the yellow toner cartridge

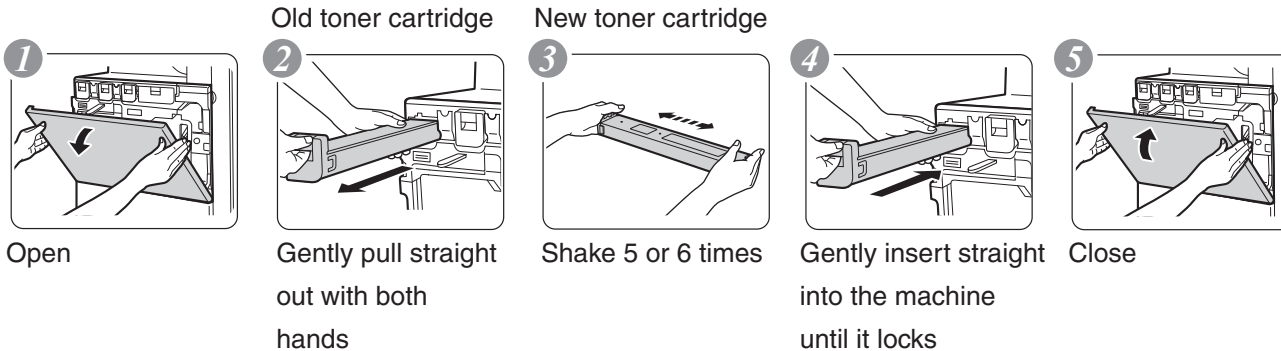

Caution

- Do not throw toner cartridges into a fire. Toner may fly and cause burns.
- Store toner cartridges out of the reach of small children.
- Always store toner cartridges on their sides. If toner cartridges are stored on end, the toner may harden and become unusable.
- Please use SHARP-recommended toner cartridges. If toner cartridges other than SHARP-recommended toner cartridges are used, the machine may not attain full quality and performance and there is a risk of damage to the machine.

- 
- Do not dispose of used toner cartridges. Place them in a plastic bag and keep them. The technician will collect the used toner cartridges when performing maintenance.
 - To view the approximate amount of toner remaining, continually touch the [Home Screen] key during printing or when the machine is idle. The percentage of toner remaining will appear in the display while the key is touched.
 - When the percentage falls to “25-0%”, obtain a new toner cartridge and keep it ready for replacement.
 - Depending on your conditions of use, the colour may become faint or the image blurred.

Removing misfeeds

When a paper misfeed occurs, the message “A misfeed has occurred.” will appear in the touch panel and printing and scanning will stop.


In this event, touch the [Check how to remove misfeeds] key in the touch panel.

When the key is touched, instructions for removing the misfeed will appear. Follow the instructions. When the misfeed is cleared, the message will automatically clear.



Caution

- The fusing unit and the output unit are hot.
- Take care not to touch the fusing unit when removing a misfeed.
- There is a risk of burning.

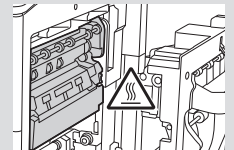

SPECIFICATIONS

Basic Specifications / Copier specifications

Name	MX-4140N/MX4141N/MX-5140N/MX-5141N		
Type	Desktop		
Colour	Full colour		
Copier system	Laser electrostatic copier		
Scanning resolution	Scan (B/W): 600 × 600 dpi, 600 × 400 dpi Scan (full colour): 600 × 600 dpi Print: 600 × 600 dpi, equivalent to 9,600 dpi × 600 dpi		
Gradation	Scan: equivalent to 256 levels / Print: equivalent to 256 levels		
Original paper sizes	Max. A3 (11" × 17") for sheets and bound documents		
Copy sizes	<p>A3 wide (12" × 18") to A5R (5-1/2" × 8-1/2"R), Transparency film, Heavy paper, Envelopes Tray 1-4*: A3, B4, A4, A4R, B5, B5R, A5R, 11" × 17", 8-1/2" × 14", 8-1/2" × 13-1/2", 8-1/2" × 13-2/5", 8-1/2" × 13", 8-1/2" × 11", 8-1/2" × 11"R, 7-1/4 × 10-1/2"R, 5-1/2" × 8-1/2"R</p> <p>Multi-bypass tray: A3 wide (12" × 18") to A5R (5-1/2" × 8-1/2"R), Transparency film, Heavy paper, Envelopes, Long size paper (90 to 297 mm × 433 to 1,200 mm (3-35/64" to 11-45/64" × 17-3/64" to 47-15/64"))</p> <p>Lost margin (leading edge): 4 mm (11/64") ± 1 mm (± 3/64") Lost margin (trailing edge): 2 mm (6/64") - 5 mm (- 13/64") Leading edge / trailing edge: total 8 mm (21/64") or less Near edge / far edge: total 4 mm (11/64") ± 2 mm (± 6/64") or less</p> <p>* When the Stand/2000 sheet paper drawer is installed, only A4 (8-1/2" × 11") can be used in trays 3 and 4.</p>		
Warm-up time	MX-4140N / MX-4141N 28 seconds	MX-5140N / MX-5141N 30 seconds	
	● This may vary depending on the ambient conditions.		
First-copy time	MX-4140N / MX-4141N Full colour: 6.7 seconds B/W: 4.7 seconds	MX-5140N / MX-5141N 5.7 seconds 4.1 seconds	
	● This may vary depending on the state of the machine.		
Continuous copying speeds* (when shifter is not in operation)	A4, 8-1/2" × 11" A4R, 8-1/2" × 11"R B4, 8-1/2" × 14" A3, 11" × 17"	B5, 7-1/4" × 10-1/2" B5R, 7-1/4" × 10-1/2"R	MX-4140N / MX-4141N 41 copies/min. 26 copies/min. 22 copies/min. 19 copies/min.
	MX-5140N / MX-5141N 51 copies/min. 31 copies/min. 26 copies/min. 23 copies/min.		
	* Continuous speed for same original source. Output may be temporarily interrupted to stabilize image quality.		

Copy ratios	Same size: 1:1 ± 0.8 % Enlarge: 115 %, 122 %, 141 %, 200 %, 400 % Reduce: 25 %, 50 %, 70 %, 81 %, 86 %, 100 %	
	Zoom range: 25 to 400 % (25 - 200 % using RSPF/DSPF) in 1 % increments, total 376 increments. Can calculate zoom rate when mm is specified.	
Paper feed / capacity	500 × 2 sheets in 2 trays plus 100-sheet multi-bypass tray ● Using 80 g/m ² (21 lbs. bond) weight paper	
Max. paper feed / max. capacity	6,600 sheets in 4 trays (500 × 2 + 1,150 + 850) plus 100-sheet multi-bypass tray plus 3,500 sheets in large capacity tray ● Using 80 g/m ² (21 lbs. bond) weight paper	
Continuous copy	Max. 999 copies	
Memory	Standard: 4 GB HDD: 320 GB ● 1 GB = One billion bytes when referring to hard drive capacity. Actual format capacity is less.	
Ambient environment	Operating environment	10 °C (54 °F) to 35 °C (91 °F) (20 % to 85 % RH) 590 - 1,013 hpa
	Standard environment	20 °C (68 °F) to 25 °C (77 °F) (65 ± 5 % RH)
Required power supply	Local voltage ± 10 % (For the power supply requirements, see the name plate in the lower corner of the left side of the machine.) Power consumption Max. 1.84 kW (including options such as the desk)	
Dimensions	MX-4140N / MX-5140N 648 mm (W) × 764 mm (D) × 954 mm (H) (25-33/64" (W) × 30-3/32" (D) × 37-9/16" (H))	MX-4141N / MX-5141N 648 mm (W) × 764 mm (D) × 960 mm (H) (25-33/64" (W) × 30-3/32" (D) × 37-51/64" (H))
Weight	MX-4140N / MX-5140N Approx. 119 kg (262 lbs.)	MX-4141N / MX-5141N Approx. 125 kg (276 lbs.) / Approx. 126 kg (278 lbs.)
Overall dimensions	With multi-bypass tray extended	987 mm (W) × 764 mm (D) (38-55/64" (W) × 30-3/32" (D))
	With right side exit tray extended	972 mm (W) × 764 mm (D) (38-9/32" (W) × 30-3/32" (D))

Automatic document feeder (Standard equipment)

Name	MX-4140N / MX-5140N	MX-4141N / MX-5141N
	Reversing Single Pass Feeder	Duplex Single Pass Feeder
Document feeder types	Reversing Single Pass Feeder (RSPF)	Duplex Single Pass Feeder (DSPF)
Original paper sizes	A3 (11" × 17") to A5 (5-1/2" × 8-1/2")	
Original paper types	Paper weight	Thin paper 35 g/m ² (9 lbs.) to 49 g/m ² (13 lbs.)
	Plain paper	50 g/m ² (13 lbs.) to 128 g/m ² (34 lbs.)
	Two-sided	50 g/m ² (13 lbs.) to 105 g/m ² (28 lbs.) 50 g/m ² (13 lbs.) to 128 g/m ² (34 lbs.)
Paper storage capacity		100 sheets (80 g/m ² (21 lbs.)) 150 sheets (80 g/m ² (21 lbs.))
		(or maximum stack height of 13 mm (1/2")) (or maximum stack height of 19.5 mm (50/64"))
	B/W	51 sheets/minute (600 × 600 dpi) 85 sheets/minute (600 × 400 dpi)
Scan speed (copy)	Colour	51 sheets/minute (600 × 600 dpi) 51 sheets/minute (600 × 600 dpi)
		● When scanning one-sided, A4 (8-1/2" × 11") horizontal documents

Tray

Name	Stand / 1 × 500 Sheet paper drawer (MX-DE22)	Stand / 2 × 500 Sheet paper drawer (MX-DE23)
Paper sizes	A3 (11" × 17") to A5R (5-1/2" × 8-1/2"R)	
Useable paper	60 g/m ² (16 lbs.) to 220 g/m ² (59 lbs.)	
Paper capacity	500 sheets / 500 × 2 sheets	
	MX-DE22 / MX-DE23	
Dimensions	615 mm (W) × 670 mm (D) × 272 mm (H)	
	(24-39/64" (W) × 26-52/64" (D) × 10-23/32" (H))	
Weight	Approx. 18.5 kg (40.8 lbs.)	Approx. 22.9 kg (50.5 lbs.)

Large capacity tray/ Stand/2000 sheet paper drawer

Name	Large capacity tray (MX-LC11)	Stand/2000 sheet paper drawer (MX-DE21)
Paper sizes	A4 (8-1/2" × 11")	Tray 3/4: A4 (8-1/2" × 11")
Useable paper	60 g/m ² (16 lbs.) to 105 g/m ² (28 lbs.)	Tray 3/4: 60 g/m ² (16 lbs. bond) to 105 g/m ² (28 lbs. bond)
		Tray 3: 1,150
Paper capacity	3,500	Tray 4: 850
Dimensions	370 mm (W) × 575 mm (D) × 520 mm (H)	615 mm (W) × 670 mm (D) × 272 mm (H)
	(14-9/16" (W) × 22-41/64" (D) × 20-15/32" (H))	(24-39/64" (W) × 26-52/64" (D) × 10-23/32" (H))
Weight	Approx. 29.2 kg (64.37 lbs.)	Approx. 26 kg (57.4 lbs.)

SPECIFICATIONS

Finisher

Name	Finisher (MX-FNX9)	
Paper sizes	Depends on feeder specifications	
Useable paper	Paper weight	55 g/m ² (13 lbs.) to 300 g/m ² (110 lbs. Cover)
No. of trays	1	
Tray capacity (80g/m ² (21 lbs.))	Non-stapled	A3 wide (12" × 18") / A3 (11" × 17") / B4 (8-1/2" × 14"): 250 sheets A4 (8-1/2" × 11") / A4R (8-1/2" × 11"R) / B5 / B5R (7-1/4" × 10-1/2"R) / A5R (5-1/2" × 8-1/2"R): 500 sheets
	Staple function	A3 (11" × 17") / B4 (8-1/2" × 14"): 30 units or 250 sheets A4 (8-1/2" × 11") / A4R (8-1/2" × 11"R) / B5 / 30 units or 500 sheets
		● Offset output is not available for A3 wide (12" × 18") / B5R (7-1/4" × 10-1/2"R) / A5R (5-1/2" × 8-1/2"R).
Max. no. of stapled sheets (90 g/m ² (24 lbs.))	Max. no. of 50 sheets (A4 (8-1/2" × 11"), A4R (8-1/2" × 11"R), B5) Max. no. of 30 sheets (A3 (11" × 17"), B4 (8-1/2" × 14"))	
Staple position	1 bottom, 1 top, 2 middle	
Required power supply	Supplied from this machine	
Weight	Approx. 12 kg (26.5 lbs.)	
Dimensions	When output paper tray is stored 428 mm (W) × 593 mm (D) × 198 mm (H) (16-55/64" (W) × 23-11/32" (D) × 7-51/64" (H))	
	When output paper tray is extended 623 mm (W) × 593 mm (D) × 198 mm (H) (24-17/32" (W) × 23-11/32" (D) × 7-51/64" (H))	

Saddle stitch finisher (large stacker)

MX-FN18		
Name	Saddle Stitch Finisher (large stacker)	
Paper sizes	Depends on feeder specifications	
Useable paper	Paper weight 55 g/m ² (13 lbs. bond) to 300 g/m ² (110 lbs. Cover)	
No. of trays	2	
Tray capacity (80 g/m ² (21 lbs.))	Upper tray	
	Non-stapled	A3 wide (12" × 18") / A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R) / B5R (7-1/4" × 10-1/2"R): 650 sheets A5R (5-1/2" × 8-1/2"R): A4 (8-1/2" × 11") / B5: 1,550 sheets
	Staple function	A4 (8-1/2" × 11") / B5: 100 units or 1,550 sheets A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R): 50 units or 650 sheets
Tray capacity (80 g/m ² (21 lbs.))	Lower tray	
	Non-stapled	A3 wide (12" × 18") / A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R) / B5R (7-1/4" × 10-1/2"R): 650 sheets A4 (8-1/2" × 11") / B5: 2,450 sheets A5R (5-1/2" × 8-1/2"R): 1,700 sheets
	Staple function	A4 (8-1/2" × 11") / B5: 100 units or 1,550 sheets A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R): 50 units or 650 sheets
Dimensions	Saddle stitch tray	10 units (11 to 15 sheets), 15 units (6 to 10 sheets), 25 units (1 to 5 sheets)
		● Offset output is not available for A3 wide (12" × 18") / B5R (7-1/4" × 10-1/2"R) / A5R (5-1/2" × 8-1/2"R).
	Required power supply	Supplied from this machine
Weight	Approx. 73 kg (160.9 lbs.)	
Dimensions	When output paper tray is stored 640 mm (W) × 641.5 mm (D) × 1100 mm (H) (24-39/64" (W) × 25-1/4" (D) × 43-19/64" (H))	
	When output paper tray is extended 753 mm (W) × 641.5 mm (D) × 1100 mm (H) (29-1/32" (W) × 25-1/4" (D) × 43-19/64" (H))	
Max. no. of stapled sheets (90 g/m ² (24 lbs.))	Max. no. of 50 sheets (A4 (8-1/2" × 11"), B5) Max. no. of 30 sheets (A3 (11" × 17"), B4 (8-1/2" × 14"), A4R (8-1/2" × 11"R))	
Staple position	1 bottom, 1 top, 2 middle	
Staple method (for saddle stitch)	Centred fold with stapling in 2 centre places	
Saddle stitch fold position	Centred fold	
Saddle usable sizes	A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R) / A3 wide (12" × 18") 60 g/m ² (16 lbs.) to 220 g/m ² (80 lbs. Cover)	
Saddle usable paper weight	Paper weighting 106 g/m ² (28 lbs.) to 220 g/m ² (80 lbs. Cover) is only able to be used in cover mode and for single sheet fold.	
Max. no. of saddle-stitched sheets	Max. no. of 15 sheets (80 g/m ² (21 lbs.)):	
	14 sheets (80 g/m ² (21 lbs.)) + 1 sheet (220 g/m ² (80 lbs. Cover))	
	Max. no. of 10 sheets (90 g/m ² (24 lbs.)): 9 sheets (90 g/m ² (24 lbs.)) + 1 sheet (220 g/m ² (80 lbs. Cover))	

Saddle stitch finisher

MX-FN10	
Name	Saddle Stitch Finisher
Paper sizes	Depends on feeder specifications
Useable paper	Paper weight 55 g/m ² (13 lbs.) to 300 g/m ² (110 lbs. Cover)
No. of trays	1
Tray capacity (80 g/m ² (21 lbs.))	Upper tray
	Non-stapled A3 wide (12" × 18") / A3 (11" × 17") / B4 (8-1/2" × 14") / A5R (5-1/2" × 8-1/2"R): 500 sheets A4 (8-1/2" × 11") / A4R (8-1/2" × 11"R) / B5 / B5R (7-1/4" × 10-1/2"R): 1,000 sheets
	Staple function A3 (11" × 17") / B4 (8-1/2" × 14"): 30 units or 500 sheets A4 (8-1/2" × 11") / A4R (8-1/2" × 11"R) / B5 / B5R: 30 units or 1,000 sheets (For A4 (8-1/2" × 11"), B5, 50 sets only when stapled in a single location on the far side)
	Saddle stitch tray 10 units (11 to 15 sheets), 15 units (6 to 10 sheets), 20 units (1 to 5 sheets) ● Offset output is not available for A3 wide (12" × 18") / A5R (5-1/2" × 8-1/2"R).
Required power supply	Supplied from this machine
Weight	Approx. 40 kg (88.2 lbs.)
Dimensions	When output paper tray is stored 497 mm (W) × 631 mm (D) × 988 mm (H) (19-9/16" (W) × 24-27/32" (D) × 38-57/64" (H))
	When output paper tray is extended 656 mm (W) × 631 mm (D) × 988 mm (H) (25-53/64" (W) × 24-27/32" (D) × 38-57/64" (H))
Max. no. of stapled sheets (90 g/m ² (24 lbs.))	Max. no. of 50 sheets (A4 (8-1/2" × 11"), A4R (8-1/2" × 11"R), B5, B5R) Max. no. of 25 sheets (A3 (11" × 17"), B4 (8-1/2" × 14"))
Staple position	1 bottom, 1 top, 2 middle
Staple method (for saddle stitch)	Centred fold with stapling in 2 centre places
Saddle stitch fold position	Centred fold
Saddle usable sizes	A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R)
Saddle usable paper weight	60 g/m ² (16 lbs.) to 220 g/m ² (80 lbs. Cover) Paper weighting 106 g/m ² (28 lbs.) to 220 g/m ² (80 lbs. Cover) is only able to be used in cover mode and for single sheet fold. Max. no. of 15 sheets (80 g/m ² (21 lbs.)):
Max. no. of saddle-stitched sheets	14 sheets (80 g/m ² (21 lbs.)) + 1 sheet (220 g/m ² (80 lbs. Cover))
	Max. no. of 10 sheets (90 g/m ² (24 lbs.)): 9 sheets (90 g/m ² (24 lbs.)) + 1 sheet (220 g/m ² (80 lbs. Cover))

Finisher (large stacker)

Name		Finisher (MX-FN11)	
Paper sizes		Depends on feeder specifications	
Useable paper		Paper weight 55 g/m ² (13 lbs.) to 300 g/m ² (110 lbs. Cover)	
No. of trays		2	
Tray capacity (80g/m ² (21 lbs. bond))	Upper tray	Non-stapled A3 wide (12" × 18") / A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R) / B5R (7-1/4" × 10-1/2"R): 650 sheets A5R (5-1/2" × 8-1/2"R): A4 (8-1/2" × 11") / B5: 1,550 sheets A4 (8-1/2" × 11") / B5: 100 units or 1,550 sheets A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R): 50 units or 650 sheets	
	Lower tray	Non-stapled A3 wide (12" × 18") / A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R) / B5R (7-1/4" × 10-1/2"R): 650 sheets A4 (8-1/2" × 11") / B5: 2,450 sheets A5R (5-1/2" × 8-1/2"R): 1,700 sheets Staple function A4 (8-1/2" × 11") / B5: 100 units or 1,550 sheets A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R): 50 units or 650 sheets ● Offset output is not available for A3 wide (12" × 18") / B5R (7-1/4" × 10-1/2"R) / A5R (5-1/2" × 8-1/2"R).	
	Required power supply	Supplied from this machine	
	Weight	Approx. 44 kg (97 lbs.)	
Dimensions	When output paper tray is stored	515 mm (W) × 645 mm (D) × 1100 mm (H) (20-9/32" (W) × 25-25/64" (D) × 43-19/64" (H))	
	When output paper tray is extended	645 mm (W) × 645 mm (D) × 1100 mm (H) (25-25/64" (W) × 25-25/64" (D) × 43-19/64" (H))	
Max. no. of stapled sheets (90 g/m ² (24 lbs.))	Max. no. of 50 sheets (A4 (8-1/2" × 11"), B5)	Max. no. of 30 sheets (A3 (11" × 17"), B4 (8-1/2" × 14"), A4R (8-1/2" × 11"R))	
Staple position	1 bottom, 1 top, 2 middle		

Punch module (for finisher)

Name	Punch module for MX-FNX9	Punch module for MX-FN11
	MX-PNX1A, MX-PNX1B, MX-PNX1C, MX-PNX1D	MX-PNX6A, MX-PNX6B, MX-PNX6C, MX-PNX6D
Paper size for punch module	A3 (11" × 17") to B5R (7-1/4" × 10-1/2"R)	
Holes	MX-PNX1A 2 holes, MX-PNX1B 3 holes MX-PNX1C 4 holes, MX-PNX1D 4 holes (wide)	MX-PNX6A 2 holes, MX-PNX6B 3 holes MX-PNX6C 4 holes, MX-PNX6D 4 holes (wide)
Required power supply	Supplied from Finisher	
Dimensions	98 mm (W) × 477 mm (D) × 137 mm (H)	115 mm (W) × 600 mm (D) × 995 mm (H)
	(3-55/64" (W) × 18-25/32" (D) × 5-13/32" (H))	(4-39/64" (W) × 24 (D) × 39-13/16" (H))
Weight	Approx. 3 kg (6.6 lbs.)	Approx. 8 kg (17.6 lbs.)

SPECIFICATIONS

Punch module (for saddle finisher)

	Punch module for MX-FN18	Punch module for MX-FN10
Name	MX-PNX6A, MX-PNX6B, MX-PNX6C, MX-PNX6D	MX-PNX5A, MX-PNX5B, MX-PNX5C, MX-PNX5D
Paper size for punch module	A3 (11" × 17") to A4 (8-1/2" × 11")	
Holes	MX-PNX6A 2 holes, MX-PNX6B 3 holes MX-PNX6C 4 holes, MX-PNX6D 4 holes (wide)	MX-PNX5A 2 holes, MX-PNX5B 3 holes MX-PNX5C 4 holes, MX-PNX5D 4 holes (wide)
Required power supply	Supplied from saddle finisher	
Dimensions	115 mm (W) × 600 mm (D) × 995 mm (H) (4-17/32" (W) × 23-5/8" (D) × 39-11/64" (H))	122 mm (W) × 604 mm (D) × 248 mm (H) (4-13/16" (W) × 23-25/32" (D) × 9-49/64" (H))
Weight	Approx. 8 kg (17.6 lbs.)	Approx. 3.5 kg (7.7 lbs. or less)

Fax Specifications

Name	Facsimile expansion kit (MX-FX11)	
Useable lines	General phone lines (PSTN), private branch exchange (PBX)	
Scanning line density	Normal characters:	8 dot/mm × 3.85 chars/mm
	Small characters:	8 dot/mm × 7.7 line/mm
	Fine characters:	8 dot/mm × 15.4 line/mm
	High-definition:	16 dot/mm × 15.4 line/mm
Connection speed	Super G3: 33.6 kbps, G3: 14.4 kbps	
Coding method	MH, MR, MMR, JBIG	
Connection mode	Super G3 / G3	
Original paper sizes for transmission	A3 (11" × 17") to A5 (5-1/2" × 8-1/2") (Paper with a max. length of 1,000 mm can be transmitted (one-sided and B/W only).)	
Registered paper size	A3 (11" × 17") to A5 (5-1/2" × 8-1/2")	
Transmission time	Approx. 2 seconds *1 (A4 (8-1/2" × 11") Sharp standard paper, normal characters, Super G3 (JBIG))	
	Approx. 6 seconds (G3 ECM)	
Memory	1 GB	
Notes	Touch dial memory	Max. of 2,000 entries (Including group dialling for fax, scanner, and Internet fax)
	Entries per group	Max. of 500 entries
	Mass transmissions	Max. of 500 recipients

*1 Complies with the 33.6 kbps transmission method for Super G3 facsimiles standardized by the International Telecommunications Union (ITU-T). This is the speed for when sending an A4 (8-1/2" × 11") size piece of paper of around 700 characters at standard image quality (8 × 3.85 chars/mm) in Hi-speed mode (33.6 kbps). This is the transmission speed for image information only and does not include time for transmission control. The actual time needed for a transmission depends on the content of the text, type of receiving fax machine, and telephone line conditions.

Network Printer Specifications

Type	Built-in type
Continuous print speed	Same as continuous copy speed
Resolution	Data processing: 600 × 600 dpi, 1,200 × 1,200 dpi Print: 600 × 600 dpi, equivalent to 9,600 dpi × 600 dpi, 1,200 × 1,200 dpi
Page description language	Standard: PCL6 emulation, Adobe® PostScript®3™, XPS*
Compatible protocols	TCP/IP (IPv4/IPv6), IPX/SPX, IPP, EtherTalk
Compatible OS	Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7, Windows 8, Windows Server 2012
	Macintosh (Mac OS X 10.4, 10.5, 10.6, 10.7, 10.8)*
Internal fonts	80 fonts for PCL, 136 fonts for Adobe® PostScript®3™
Memory	Machine system memory and hard disk
Interface	10BASE-T/100BASE-TX/1000BASE-T, USB 2.0 (high speed mode)

* XPS stands for XML Paper Specification. When equipped with the XPS expansion kit (MX-PUX1).

Network Scanner Specifications

Type	Colour scanner	
Scan resolution (main × vertical)	100 × 100 dpi, 150 × 150 dpi, 200 × 200 dpi, 300 × 300 dpi, 400 × 400 dpi, 600 × 600 dpi (push scan) 50 to 9,600 dpi *1 (pull scan)	
Scan speed (A4 (8-1/2" × 11"))	B/W:	Reversing Single Pass Feeder (RSPF) Duplex Single Pass Feeder (DSPF) 51 sheets/minute (one-sided) 85 sheets/minute (200 × 200 dpi) (one-sided)
	Colour:	51 sheets/minute (one-sided) 85 sheets/minute (200 × 200 dpi) (one-sided)
	● When in standard mode using Sharp standard paper (A4 (8-1/2" × 11") size with 6% coverage) and the auto colour detector is turned off. The speed varies depending on the data volume of the original.	
Interface	10BASE-T/100BASE-TX/1000BASE-T, USB 2.0 (when an external memory device is used)	
Compatible protocols	TCP/IP (IPv4)	
Compatible OS *2	Pull scan (TWAIN) Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7, Windows 8, Windows Server 2012	
Output format	(B/W) TIFF, PDF, PDF/A, encrypted PDF, XPS Compression method: decompression, G3 (MH), G4 (MMR)	
	(Grey scale/colour) TIFF, JPEG, PDF, PDF/A, encrypted PDF, high compression PDF*4, XPS*3 Compression method: JPEG (high, mid, and low compression, Emphasis black letter)	
Driver	TWAIN compliant	

*1: You must decrease the scan size when increasing the resolution.

*2: There are cases when a connection cannot be established. Please contact your local dealer for more information.

*3: XPS stands for XML Paper Specification.

*4: Optional Enhanced Compression kit (MX-EB11) is required for MX-4140N/MX-5140N.

Wireless LAN Specifications

Type	Built-in type
Compliance standards	ARIB STD-T66 (IEEE 802.11b/g) Low Power Data Communication System Standard Wireless LAN Standard Protocol IEEE802.11n/g/b
Transmission method	OFDM (IEEE 802.11n/g), DS-SS (IEEE 802.11b)
Transmission frequency range	IEEE802.11n/g/b:2.4GHz (1 - 13ch)
Transmission speed (value of standard) *1	IEEE802.11n max. 150 Mbps
	IEEE802.11g max. 54 Mbps
	IEEE802.11b max. 11 Mbps
Security	WEP, WPA-PSK, WPA-EAP*2, WPA2-PSK, WPA2-EAP*2

This function may not be available in some regions.



*1: The indicated values are maximum theoretical values for the Wireless LAN Standard. The values do not indicate actual data transmission speeds.

*2: Cannot be used in Access Point mode.

SUPPLIES

Standard supplies for this product that can be replaced by the user include paper, toner cartridges, and staple cartridges for the finisher.

Be sure to use only SHARP-specified products for the toner cartridges, finisher staple cartridge, and transparency film.



GENUINE SUPPLIES

For best copying results, be sure to use only Sharp Genuine Supplies which are designed, engineered, and tested to maximize the life and performance of Sharp products. Look for the Genuine Supplies label on the toner package.

Storage of supplies

■ Proper storage

1. Store the supplies in a location that is:
 - clean and dry,
 - at a stable temperature,
 - not exposed to direct sunlight.
2. Store paper in the wrapper and lying flat.
3. Paper stored in packages standing up or out of the wrapper may curl or become damp, resulting in paper misfeeds.

■ Storing toner cartridges

Store a new toner cartridge box horizontally with the top side up. Do not store a toner cartridge standing on end. If stored standing on end, the toner may not distribute well even after shaking the cartridge vigorously, and will remain inside the cartridge without flowing out.

■ Staple cartridge

The finisher and saddle finisher require the following staple cartridge:

MX-SCX1 (for finisher and saddle finisher)

Approx. 5000 per cartridge x 3 cartridges

AR-SC2 (for finisher (large stacker))

Approx. 5000 per cartridge x 3 cartridges

AR-SC3 (for saddle stitch of saddle stitch finisher and saddle stitch finisher (large stacker))

Approx. 2000 per cartridge x 3 cartridges

Supply of spare parts and consumables

The supply of spare parts for repair of the machine is guaranteed for at least 7 years following the termination of production. Spare parts are those parts of the machine which may break down within the scope of the ordinary use of the product, whereas those parts which normally exceed the life of the product are not to be considered as spare parts. Consumables too, are available for 7 years following the termination of production.

Noise emission

Noise emission values

The following shows noise emission values as measured according to ISO7779.

Sound power level $L_{WA,d}$

	MX-4140N	MX-4141N	MX-5140N	MX-5141N
Operating (continuous printing)	7.51 B	7.52 B	7.69 B	7.65 B
Standby (low power level mode)	-	-	-	-

Sound pressure level $L_{pA,m}$

		MX-4140N	MX-4141N	MX-5140N	MX-5141N
Operating (continuous printing)	Bystander positions	57 dB	58 dB	59 dB	58 dB
Standby (low power level mode)	Bystander positions	-	-	-	-



- Operating: With options MX-DE23, MX-FN11, MX-RB20.
- Standby: "-" = less than background noise.

TO THE ADMINISTRATOR OF THE MACHINE

Forwarding all transmitted and received data to the administrator (document administration function)

This function is used to forward all data transmitted and received by the machine to a specified destination (Scan to E-mail address, Scan to FTP destination, Scan to Network Folder destination, or Scan to Desktop destination).

This function can be used by the administrator of the machine to archive all transmitted and received data.

To configure the document administration settings, click [Application Settings] and then [Document Administration Function] in the [Settings mode] (Administrator-level access privileges are required.)

- The format, exposure, and resolution settings of transmitted and received data remain in effect when the data is forwarded.
- When forwarding is enabled for data sent in fax mode,
 - The [Direct TX] key does not appear in the touch panel.
 - Quick online transmission and dialling using the speaker cannot be used.



Settings mode password

The administrator password is required to change the machine's settings mode. Settings mode can be changed from either the operation panel or using a computer web browser. After setting up the machine, refer to [Settings mode] in the User's Manual to set a new password.


The same passwords are used for logging in from the operation panel and from a web browser. If the administrator changes a password, that password will be effective when logging in from both the operational panel and a web browser.



Password for logging in from a computer

There are three accounts that can log in from a web browser: "Administrator", "System Administrator" and "User". The factory default passwords for each account are shown on the below. Logging in as an "Administrator" or "System Administrator" will allow you to manage all the settings available via web browser.

(Cut along the dotted line and keep in a safe place.)



	Account	Password
User	users	users
Administrator	admin	admin
System Administrator	sysadmin	sysadmin



Please take care not to forget newly set administrator passwords.

TRADEMARK ACKNOWLEDGMENTS

The following trademarks and registered trademarks are used in conjunction with the machine and its peripheral devices and accessories.

- Microsoft®, Windows®, Windows® XP, Windows Server® 2003, Windows Vista®, Windows Server® 2008, Windows® 7 and Internet Explorer® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Intel® is a trademark of Intel Corporation in the U.S. and/or other countries.
- Adobe, the Adobe logo, PostScript, Acrobat, the Adobe PDF logo, Reader, and Flash are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- Macintosh, Mac OS, AppleTalk, EtherTalk and LaserWriter are registered trademarks of Apple Inc.
- Netscape Navigator is a trademark of Netscape Communications Corporation.
- Mozilla® and Firefox® are registered trademarks or trademarks of the Mozilla Foundation in the U.S.A. and other countries.
- PCL is a registered trademark of the Hewlett-Packard Company.
- IBM, PC/AT, and PowerPC are trademarks of International Business Machines Corporation.
- Sharpdesk is a trademark of Sharp Corporation.
- Sharp OSA is a trademark of Sharp Corporation.
- RealVNC is a trademark of RealVNC Limited.
- All other trademarks and copyrights are the property of their respective owners.

Candid and Taffy are trademarks of Monotype Imaging, Inc. registered in the United States Patent and Trademark Office and may be registered in certain jurisdictions. CG Omega, CG Times, Garamond Antiqua, Garamond Halbfett, Garamond Kursiv, Garamond and Halbfett Kursiv are trademarks of Monotype Imaging, Inc. and may be registered in certain jurisdictions. Albertus, Arial, Coronet, Gill Sans, Joanna and Times New Roman are trademarks of The Monotype Corporation registered in the United States Patent and Trademark Office and may be registered in certain jurisdictions. Avant Garde, ITC Bookman, Lubalin Graph, Mona Lisa, Zapf Chancery and Zapf Dingbats are trademarks of International Typeface Corporation registered in the United States Patent and Trademark Office and may be registered in certain jurisdictions. Clarendon, Eurostile, Helvetica, Optima, Palatino, Stempel Garamond, Times and Univers are trademarks of Heidelberger Druckmaschinen AG, which may be registered in certain jurisdictions, exclusively licenced through Linotype Library GmbH, a wholly owned subsidiary of Heidelberger Druckmaschinen AG. Apple Chancery, Chicago, Geneva, Monaco and New York are trademarks of Apple Inc. and may be registered in certain jurisdictions. HGGothicB, HGMinchoL, HGP GothicB and HGPMInchoL are trademarks of Ricoh Company, Ltd. and may be registered in some jurisdictions. Wingdings is a registered trademark of Microsoft Corporation in the United States and other countries. Marigold and Oxford are trademarks of Arthur Baker and may be registered in some jurisdictions. Antique Olive is

a trademark of Marcel Olive and may be registered in certain jurisdictions. Hoefler Text is a trademark of Johnathan Hoefler and may be registered in some jurisdictions. ITC is a trademark of International Typeface Corporation registered in the United States Patent and Trademark Office and may be registered in certain jurisdictions. Agfa is a trademark of the Agfa-Gevaert Group and may be registered in certain jurisdictions. Intellifont, MicroType and UFST are trademarks of Monotype Imaging, Inc. registered in the United States Patent and Trademark Office and may be registered in certain jurisdictions. Macintosh and TrueType are trademarks of Apple Inc. registered in the United States Patent and Trademark Office and other countries. PostScript is a trademark of Adobe Systems Incorporated and may be registered in some jurisdictions. HP, PCL, FontSmart and LaserJet are trademarks of Hewlett-Packard Company and may be registered in some jurisdictions. The Type 1 processor resident in Monotype Imaging's UFST product is under licence from Electronics For Imaging, Inc. All other trademarks are the property of their respective owners.

INFORMATION ON DISPOSAL

Information on Disposal for Users (private households)

■ In the European Union

Attention: If you want to dispose of this equipment, please do not use the ordinary dust bin! Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment. Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*. In some countries* your local retailer may also take back your old product free of charge if you purchase a similar new one.

*) Please contact your local authority for further details. If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements. By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

■ In other Countries outside the EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal. For Switzerland: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch or www.sens.ch.



Attention: Your product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

Information on Disposal for Business Users

■ In the European Union

If the product is used for business purposes and you want to discard it: Please contact your SHARP dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities. For Spain: Please contact the established collection system or your local authority for take-back of your used products.

■ In other Countries outside the EU

If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal.

MX-4140N/MX-4141N/MX-5140N/MX-5141N

QUICK START GUIDE

SHARP[®]

SHARP CORPORATION

PRINTED IN FRANCE
TINSE5177GHZZ

