

Congratulations on your purchase of the Sony Ericsson W760a. A slim and stylish phone with everything you need to enjoy your music wherever you go.

For additional phone content, go to www.sonyericsson.com/fun. Register now to get a suite of tools, free online storage, special offers, news and competitions at www.sonyericsson.com/myphone.

For product support, go to www.sonyericsson.com/support.

Accessories – More for your phone

Stereo Bluetooth™ Headset HBH-DS205

Enjoy wireless music without missing a call.



Active Speaker MAS-100

Share your music while protecting your phone.



Portable Bluetooth™ Speaker MBS-100

A wireless sphere of music.



These accessories can be purchased separately but may not be available in every market. To view the full range go to www.sonyericsson.com/accessories.

Contents

Getting started	5	Video Share	28
Assembly	5	More than one call	29
Turning on the phone	6	Showing or hiding your phone number 31	
Help	7	Messaging	31
Charging the battery	7	Text and multimedia messaging ...	31
Phone overview	9	Voice messages	33
Menu overview	11	Mobile Email	34
Navigation	13	Instant Messaging (IM)	34
Phone language	15	Imaging	36
Entering text	15	Camera and video recorder	36
Walkman® and music	16	Using the camera	36
Transferring content to and from a computer	16	Camera icons and settings	37
Stereo portable handsfree	18	Transferring pictures	37
AT&T Music	18	Pictures	38
Walkman® player	18	PhotoDJ™ and VideoDJ™	38
Calling	22	MEdia™ Net	39
Making and receiving calls	22	Internet security and certificates ..	40
Address book	23	GPS	41
Call list	26	Using the GPS	41
Speed dial	26	Entertainment	43
Voicemail	27	Video player	43
Voice control	27		

FM radio	43
Ringtones and melodies	43
MusicDJ™	44
Sound recorder	44
Games	44
Applications	45

Connectivity 46

Phone name	46
Bluetooth™ wireless technology ..	46
Using the USB cable	48
Synchronizing	50

More features 51

Flight mode	51
File manager	51
Alarms	52
Calendar	53
Notes	54
Tasks	54
Password saver	54
Profiles	56
Time and date	56
Theme	56
Main menu layout	56
Locks	57
Hearing Aid Compatibility	58

Troubleshooting 59

Common questions	59
Error messages	62

Important information 63

Guidelines for Safe and Efficient Use	65
End User License Agreement	69
Limited Warranty	70
FCC Statement	72
Industry Canada Statement	72
Declaration of Conformity for W760a	72

Index 74

Sony Ericsson W760a

UMTS HSDPA 850/1900/2100 GSM EDGE 850/900/1800/1900

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved.

©Sony Ericsson Mobile Communications AB, 2007

Publication number: 1208-0991.1 P1C

Please note:

Some of the services in this User guide are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the *Guidelines for safe and efficient use* and the *Limited warranty* chapters before you use your phone.

Your phone has the capability to download, store and forward additional content, for example, ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized.

Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any

other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Smart-Fit Rendering is a trademark or a registered trademark of ACCESS Co., Ltd.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

The Liquid Identity logo, SensMe, PlayNow, MusicDJ, PhotoDJ, TrackID and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

Lotus Notes is a trademark or a registered trademark of International Business Machines Corporation.

Sony, Memory Stick Micro™, M2™ and WALKMAN are trademarks or registered trademarks of Sony Corporation.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Adobe Photoshop Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

MEdia is a trademark or registered trademark of ATT Mobility.

Yahoo! Is a trademark or a registered trademark of Yahoo! Inc.

AOL and AIM are trademarks or registered trademarks of AOL LLC.

AT&T is a registered trademark of AT&T Corporation.

Microsoft, Windows, Outlook, and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. End-user license agreement for Sun™ Java™ J2ME™.

Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

Export Regulations: Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods;

or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders.

Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.


All illustrations are for illustration only and may not accurately depict the actual phone.


Instruction symbols

These symbols may appear in the User guide.

 Note

 Tip

 Warning

 A service or function is network- or subscription-dependent. Contact AT&T for details.

> Use a selection or navigation key to scroll and select. See *Navigation* on page 13.

Getting started

Assembly


Before you start using your phone, you need to insert a Subscriber Identity Module (SIM) card and the battery.

To remove the battery cover



- Use the slots to detach cover.


To insert the SIM card

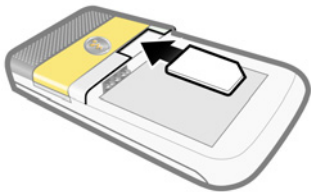

- 1 Remove the battery cover.

- 2 Slide the SIM card into its holder with the gold-colored contacts facing down. Always turn off your phone and detach the charger before you insert or remove the SIM card.

To insert the battery

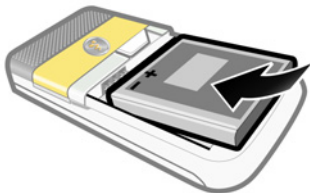

- 1 Insert the battery with the label side up and the connectors facing each other.
- 2 Slide the battery cover into place.

To attach the battery cover



- 1 Align the tabs on the back of the battery cover with the phone slots.
- 2 Snap the cover into place on both sides.


To remove the SIM card



 



- 1 Remove the battery cover.
- 2 Remove the SIM card from its holder.

Turning on the phone

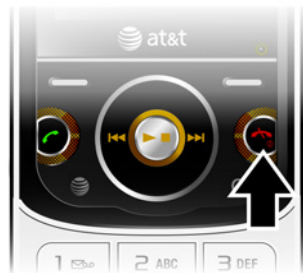To turn on the phone



- 1 Press and hold down .
 - 2 Enter your SIM card Personal Identification Number (PIN), if requested and select **OK**.
 - 3 Select a language.
 - 4 Follow the prompts.
-  *If you want to correct a mistake when you enter your PIN, press .*
-  *Before turning the phone off, you must return to standby.*

SIM card

The SIM card, which you get from AT&T, contains information about your subscription.

- You can save contacts on the SIM card before you remove it from your phone. See *To copy names and numbers to the SIM card on page 24*.

PIN

You may need a PIN to activate the services in your phone. Your PIN is supplied by AT&T. Each PIN digit appears as *, unless it starts with emergency number digits, for example, 911 or 112. You can see and call an emergency number without entering a PIN.

- ! If you enter the wrong PIN three times in a row, the SIM card is blocked. See *SIM card lock on page 57*.

Standby

After you have turned your phone on and entered your PIN, the name of the network operator appears. This view is called standby.

Help

In addition to this User guide, Getting started guides and more information are available at www.sonyericsson.com/support.

Help in your phone

Help and information are available in your phone. See *Navigation on page 13*.

To view tips and tricks

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Setup wizard**.
- 2 Select **Tips and tricks**.

To view information about functions

- Scroll to a function and select **Info**, if available. In some cases, **Info** appears under **Options**.


To view status information

- From standby select **Menu** > **Settings** > the **General** tab > **Phone status**.


Charging the battery

The phone battery is partly charged when you buy it.

To charge the battery

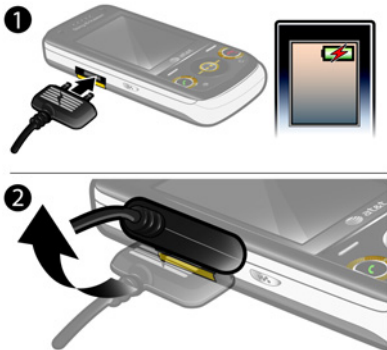

- 1 Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to view the screen.
- 2 Remove the charger by tilting the plug upwards.

 *You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery.*

Phone overview

- 1 Ear speaker
- 2 A/B gaming keys
- 3 Screen
- 4 Selection keys
- 5 Call key
- 6 MEdia™ Net key
- 7 Navigation key
- 8 Volume keys
- 9 Battery cover slot
- 10 End key, on/off key
- 11 C key (Clear)



- 12 Memory card slot
- 13 Charging indicator
- 14 Connector for charger, handsfree and USB cable
- 15 GPS antenna
- 16 Walkman® key
- 17 Strap holder



Menu overview



AT&T GPS

- AT&T Navigator
- Status info
- Settings



Messaging

- Write new
- Inbox
- Mobile Email
- IM*
- Call voicemail
- Outbox
- Drafts
- Sent messages
- Saved messages
- Templates
- Manage messages
- Settings



Yellowpages



MEdia Net



AT&T Mall

- Shop Tones
- Shop Games
- Shop Graphics
- Shop Multimedia
- Shop Applications
- Shop Videos
- MEdia Net



AT&T Music*

- WALKMAN
- Shop Music
- MusicID
- XM Radio
- Music Videos
- VIP Access
- Community
- Music Apps



My Stuff

- Camera album
- Music
- Pictures
- Videos
- Themes
- Web pages
- Games
- Applications
- Other



Address Book

- Myself
- New contact



Entertainment

- Photo
- Music
- Video
- Games
- Settings



Cellular Video



Tools & Apps

Applications
Tools
Organizer
Alarms
Camera
FM Radio
Record sound
Recent Calls



Settings**

General
Sounds & alerts
Display
Calls
Connectivity



Settings**



General

Profiles
Time & date
Language
Software Update***
Voice control
Shortcuts
Flight mode
Security
Setup wizard
Accessibility*
Phone status
Master reset



Sounds & alerts

Ring volume
Ringtone
Silent mode
Increasing ring
Vibrating alert
Message alert
Key sound



Display

Wallpaper
Main menu layout
Theme
Screen saver
Clock size
Brightness



Calls

Speed dial
Smart search
Forward calls
Manage calls
Video Share
Time & cost*
Show/hide my no.
Handsfree
Open to answer
Close to end call



Connectivity

Bluetooth
USB
Phone name
Network sharing
Mobile networks*
Data communication*
Internet settings
Streaming settings
Message settings*
SIP settings
IMS Settings
Accessories

* Some menus are operator-, network- and subscription-dependent.

** You can use the navigation key to scroll between tabs in submenus. For more information, see Navigation on page 13.

*** Menu only appears when a Software Update is available.

Navigation

The main menus are shown as icons. Some submenus include tabs.

To navigate the phone menus



- 1 From standby select **Menu**.
- 2 Use the navigation key to move through the menus.

To select actions on the screen

- Press the left or right selection key, or the center navigation key.

To view options for an item

- Select **Options** to, for example, edit.

To scroll between the tabs

- Scroll to a tab by pressing the navigation key left or right.

To return to standby

- Press .


To end a function

- Press .

To navigate your media

- 1 From standby select **Menu** > **Entertainment**.
- 2 Scroll to a menu item and press the navigation key right.
- 3 To go back, press the navigation key left.

To delete items

- Press  to delete items such as numbers, letters, pictures and sounds.

To send items

- 1 Scroll to an item such as a contact, a picture or a sound.
- 2 Select **Options** > **Send**.
- 3 Select a transfer method.

- ! *Make sure the receiving device supports the transfer method you select.*

Shortcuts

You can use keypad shortcuts to go directly to a menu. Menu numbering starts from the top left icon and moves across and then down row by row.

To go directly to a main menu

- From standby select **Menu** and press **(1)** - **(9)**, **(*)** or **(A)**, **(0)** + or **(#)**.

To use navigation key shortcuts

- From standby press **(M)**, **(D)**, **(L)** or **(R)** to go directly to a function.

- ! *The **Main menu layout** must be set to **Grid**. See *To change the main menu layout* on page 56.*

To edit a navigation key shortcut

- From standby select **Menu** > **Settings** > the **General** tab > **Shortcuts**.
- Scroll to an option and select **Edit**.
- Scroll to a menu option and select **Shortc..**

Memory card

- ! *You may have to purchase a memory card separately.*

Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.


You can use the file manager to move files between the memory card and the phone memory. See *To move a file in the file manager* on page 52.

To insert a memory card



- Open the cover and insert the memory card with the gold-colored contacts facing up until it clicks.

To remove a memory card

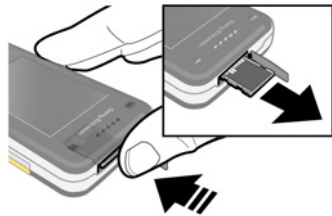

- Open the cover and press the edge of the memory card until it clicks to release and remove it.

To view memory card options

- From standby select **Menu** > **My Stuff** > the **On memory card** tab.

- 2 Select **Options**.

Phone language

You can select a language to use in your phone.

To change the phone language

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Language** > **Phone language**.
- 2 Select an option.

Entering text

You can use multitap text input or T9™ Text Input **T9** to enter text. The T9 Text Input method uses a built-in dictionary.

To change text input method

- When you enter text, press and hold down **(*) a/A**.

To shift between capitals and lower-case letters

- When you enter text, press **(*) a/A**.

To enter numbers

- When you enter text, press and hold down **(0 +)** – **(9)**.

To enter periods and commas

- When you enter text, press **(1)**.

To enter a symbol

 
- 1 When you enter text, select **Options** > **Add symbol**.
- 2 Scroll to a symbol and select **Insert**.

To enter text using T9™ Text Input

- 1 From standby select, for example, **Menu** > **Messaging** > **Write new** > **Messaging**.
- 2 If **T9** is not displayed, press and hold down **(*) a/A** to change to T9 Text Input.
- 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word “Jane”, press **(5)**, **(2)**, **(6)**, **(3)**. Write the whole word before looking at the suggestions.
- 4 Use **(↑)** or **(↓)** to view suggestions.
- 5 Press **(# → ?)** to accept a suggestion.

To enter text using multitap

- 1 From standby select, for example, **Menu** > **Messaging** > **Write new** > **Message**.
- 2 If **T9** is displayed, press and hold down **(*) a/A** to change to multitap text input.
- 3 Press **(2)** – **(9)** repeatedly until the desired letter appears. For example, to write the word “Jane”, press **(5)**, **(2)**, **(6)**, **(6)**, **(3)**.

- 4 When a word is written, press  to add a space.

To add words to the built-in dictionary

- 1 When you enter text using T9 Text Input, select **Options** > **Spell word**.
- 2 Write the word using multitap input and select **Insert**.

Walkman® and music

You can listen to music, audio books and podcasts. Use *Sony Ericsson Media Manager* to transfer content to your phone. For more information go to the Getting started section at www.sonyericsson.com/support.

- ! *Sony Ericsson Media Manager software is available for download at www.sonyericsson.com/support.*

Transferring content to and from a computer


With *Sony Ericsson Media Manager* or *Windows® Explorer*, you can transfer music from CDs, music on your computer, or music that you have purchased online to the phone memory or a memory card.

For more information on using the phone with a USB cable, see *Using the USB cable* on page 48.

To use the phone with Windows® Explorer

- 1 Connect a USB cable to the phone and the computer.
- 2 **On your phone:** Depending on the phone setup:

- The phone may switch to **Media transfer** and be ready to use.
- If prompted with a **USB mode** menu, select **Media transfer**.

 *Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card or the phone memory.*

3 On your computer:

- Wait until the phone memory and memory card appear as external disks in *Windows Explorer*.
- Drag and drop selected files between the phone and the computer.

Before using Media Manager

You need one of these operating systems to use *Media Manager* on your computer:

- Windows Vista™ (32 bit and 64 bit versions of: Ultimate, Enterprise, Business, Home Premium, Home Basic)
- Windows XP (Pro or Home)

 *Sony Ericsson Media Manager software is available for download at www.sonyericsson.com/support.*


To install Media Manager

- 1 Turn on your computer.

- 2 Download the Media Manager software from www.sonyericsson.com/support.
- 3 Follow the instructions on the Web site to install.
- 4 Select a language and click **OK**.
- 5 Click *Install Sony Ericsson Media Manager* and follow the instructions.

To use Media Manager

- 1 Connect a USB cable to the phone and the computer.
- 2 **On your phone:** Depending on the phone setup:
 - The phone may switch to **Media transfer**. If so, disconnect the cable and change the USB default mode to **Mass storage**. See *USB default mode* on page 49.
 - If prompted with a **USB mode** menu, select **Mass storage**. The phone will shut down in this mode but will restart again when it is disconnected from the USB cable.

 *Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card or the phone memory.*

- 3 **On your computer:** Drag and drop selected files between the phone and the computer.

- 4 For safe disconnection of the USB cable, see *Disconnect the USB* on page 49.
For details on transferring music, refer to *Media Manager Help*. Click (?) in the top right corner of the *Media Manager* window.

Stereo portable handsfree

To use the handsfree

- Connect the portable handsfree. Music stops when you receive a call and resumes when the call has ended.

! *If headphones are not included with the phone, you may purchase them separately.*

AT&T Music

Go to Music to access your Walkman® player, purchase ringtones or to access other music applications.

To access Music

From standby select **Menu > AT&T Music** and select an option:

- **WALKMAN** – a music and video player all in one.
- **Shop Music** – purchase music tones.

- **MusicID** – identify the song title, artist or album. Your phone records a few seconds of the song and sends to clip to the Internet for identification.
- **XM Radio** – use the Internet to stream the radio to the phone.
- **Music Videos** - access new videos, features and concert clips from today's artists.
- **VIP Access** – access music charts, news and reviews, to purchase music and to learn about upcoming concerts.
- **Community** – access a hot user community where you can chat with your friends about the latest music.
- **Music Apps** – purchase music related applications.

Walkman® player

To play music

- 1 From standby select **Menu > AT&T Music > WALKMAN**.
- 2 Scroll to a title and select **Play**.



To stop playing music

- Press the center navigation key.

To fast forward and rewind

- Press and hold down **▶** or **◀**.

To move between tracks


- Press  or .


To change the volume

- Press the volume keys up or down.

Shake control

 
To switch track

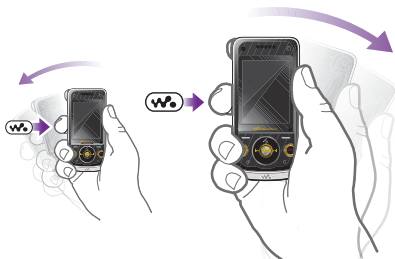


- When you listen to music, press and hold down  and move the phone to the right with a flick of your wrist to go to the next track. To go to the previous track, use the same action to the left.


To shuffle tracks



- When you listen to music, press and hold down  and shake your phone.

To change the volume

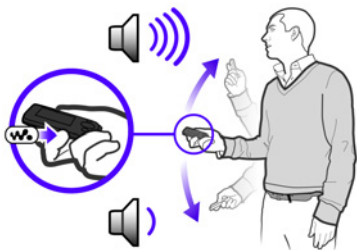

- When you listen to music, hold the phone out in front of you facing upwards. Press and hold down , and bend your arm upwards towards

you to increase the volume. To decrease the volume, repeat the action in the opposite direction.

Browsing files

Music is saved and categorized.

- [Artists](#) – list music by artist.
- [Albums](#) – list music by album.
- [Tracks](#) – list all music tracks.
- [Playlists](#) – create your own lists of tracks.
- [SensMe™](#) – list tracks by mood. For the SensMe™ function to work, the tracks need to be transferred using Media Manager.
- [Genre](#) – list music by genre.
- [Year](#) – list music by year.
- [Audio books](#) – list audio books you have transferred from your computer.
- [Podcasts](#) – list all podcasts.

Playlists


You can create playlists to organize music files. Files can be added to more than one playlist.

Deleting a playlist, or a file from a playlist, does not delete the file from the memory, just the reference to the file.

To create a playlist

- 1 From standby select [Menu](#) > [Entertainment](#) > [Music](#) > [Playlists](#).
- 2 Scroll to [New playlist](#) and select [Add](#).
- 3 Enter a name and select [OK](#).
- 4 For each track you want to add, scroll to the track and select [Mark](#).
- 5 Select [Add](#) to add the tracks to the playlist.

To create a playlist by mood

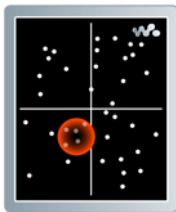

- ! To create playlists by mood, your music tracks must be transferred to your phone using Media Manager. For information on how to analyze your music, see Media Manager Help.

- 1 From standby select [Menu](#) > [Entertainment](#) > [Music](#) > [SensMe™](#) and select [Open](#).
- 2 Press the navigation [Up](#), [Down](#), [Left](#) or [Right](#) to preview different tracks.

- 3 Select **Add** > **Create** > **Options** > **Save playlist**.
- 4 Enter a name and select **OK**.

To add files to a playlist

- 1 From standby select **Menu** > **Entertainment** > **Music** > **Playlists**.
- 2 Select a playlist.
- 3 Scroll to **Add music** and select **Add**.
- 4 For each track you want to add, scroll to the track and select **Mark**.
- 5 Select **Add** to add the tracks to the playlist.

To remove tracks from a playlist

- 1 From standby select **Menu** > **Entertainment** > **Music** > **Playlists**.
- 2 Select a playlist.
- 3 Scroll to the track and press **(C)**.

To view information about a track

- Scroll to a track and select **Options** > **Information**.

Audio books

You can listen to audio books that you have transferred to your phone from a computer using Media Manager.

- ! *It may take a few minutes before a transferred audio book appears in the list of available audio books.*

To play audio books

- 1 From standby select **Menu** > **Entertainment** > **Music** > **Audio books**.
- 2 Select an audio book.
- 3 Scroll to a chapter and select **Play**.

- ! *Audio books in other formats than M4B or audio books that do not have ID3v2 chapter tags can be found in the **Tracks** folder.*

While listening to a song using the built-in FM radio, you can search for title, artist and album names using TrackID.

- ! *Data transmission charges may apply.*

- 💡 *For best results, use TrackID™ in a quiet environment.*

To search for song information


- When the radio is playing select **Options** > **TrackID™**.


Calling

Making and receiving calls

You need to turn on your phone and be within range of a network.

To make a call



- 1 From standby enter a phone number (with international country code and area code, if applicable).
- 2 Press .

 You can call numbers from your Address book and call list. See Address book on page 23, and Call list on page 26. You can also use your voice to make calls. See Voice control on page 27.

To end a call

- Press .

To make international calls

- 1 From standby press and hold down  until a “+” sign appears.
- 2 Enter the country code, area code (without the first zero) and phone number.
- 3 Press .

To answer a call


- Press .

To reject a call

- Press .

To redial a number

 

- When **Retry?** appears select **Yes**.

 Do not hold your phone to your ear when waiting. When the call connects, your phone gives a loud signal.

To change the ear speaker volume during a call


- Press the volume key up or down.

To mute the microphone during a call

- 1 Press and hold down .
- 2 Press and hold down  again to resume.

To turn the loudspeaker on during a call

- Select **SpkrOn**.

 Do not hold your phone to your ear when using the loudspeaker. This could damage your hearing.

To view previous calls from standby

- Press  to open the call list.

Networks


Your phone switches automatically between GSM and 3G (UMTS) networks depending on availability.

Emergency calls

Your phone supports international emergency numbers, for example, 911 or 112. These numbers can normally be used to make emergency calls in any country, with or without the SIM card inserted, if a 3G (UMTS) or GSM network is within range.

! *In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.*

To make an emergency call

- From standby enter 911 or 112 (the international emergency number) and press .

To view your local emergency numbers

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Special numbers](#) > [Emergency nos..](#)

Address book

You can save names, phone numbers and personal information in [Address Book](#). Information can be saved in the phone memory or on the SIM card.

Default contacts

You can choose which contact information is shown as default. If [Phone contacts](#) is selected as default, your contacts show all the information saved in [Address Book](#). If you select [SIM contacts](#) as default, your contacts show names and numbers saved on the SIM card.

To select default contacts

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Advanced](#) > [Default contacts](#).
- 3 Select an option.

Phone contacts

Phone contacts can contain names, phone numbers and personal information. They are saved in the phone memory.


To add a phone contact

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Add](#).
- 3 Enter the name and select [OK](#).
- 4 Scroll to [New number:](#) and select [Add](#).
- 5 Enter the number and select [OK](#).
- 6 Select a number type.



- 7 Scroll between tabs and select the fields to add information.
- 8 Select [Save](#).

Calling contacts




To call a phone contact

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to a contact and press .

To go directly to the contacts list

- From standby press and hold down  - .

To call with Smart search

- 1 From standby press  -  to enter a contact name or a phone number. All entries which match the sequence of digits or letters are shown in a list.
- 2 Scroll to a contact or a phone number and press .


To turn Smart search on or off

- 1 From standby select [Menu](#) > [Settings](#) > the [Calls](#) tab > [Smart search](#).
- 2 Select an option.

Editing contacts

To add information to a phone contact

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to a contact and select [Options](#) > [Edit contact](#).
- 3 Scroll between the tabs and select [Add](#) or [Edit](#).
- 4 Select an option and an item to add or edit.
- 5 Select [Save](#).

 *If your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones and pictures to contacts.*

To copy names and numbers to phone contacts

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Advanced](#) > [Copy from SIM](#).
- 3 Select an option.

To copy names and numbers to the SIM card

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Advanced](#) > [Copy to SIM](#).

- 3 Select an option.

! *When you copy all contacts from your phone to the SIM card, all existing SIM card information is replaced.*

To automatically save names and phone numbers on the SIM card

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Advanced](#) > [Auto save on SIM](#).
- 3 Select an option.

To save contacts on a memory card

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Advanced](#) > [Back up to m. card](#).

SIM contacts

SIM contacts can contain names and numbers only. They are saved on the SIM card.

To add a SIM contact

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Add](#).
- 3 Enter the name and select [OK](#).
- 4 Enter the number and select [OK](#).

- 5 Select a number option and add more information, if available.
- 6 Select [Save](#).

To call a SIM contact

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to a contact and press [↵](#).

Deleting contacts

To delete all contacts

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Advanced](#) > [Delete all contacts](#).
- 3 Select an option.

Memory status

The number of contacts you can save in your phone or on the SIM card depends on available memory.

To view memory status

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Advanced](#) > [Memory status](#).

Synchronizing contacts

The Sony Ericsson PC Suite is designed to work with the following programs:

- Windows® Contact (Vista Contacts Manager)
 - Windows Calendar (Vista Calendar)
 - Microsoft® Outlook 2007
 - Microsoft Outlook 2003
 - Microsoft Outlook 2002
 - Microsoft Outlook 2000
 - Lotus Notes™ 7
 - Lotus Notes 6.5
 - Lotus Notes 6
 - Lotus Notes 5
 - Windows Address Book (Outlook Express)
 - Sony Ericsson PC Suite proprietary contact & calendar manager
- For more information see *Synchronizing* on page 50.

Groups

You can create a group of phone numbers and email addresses from [Phone contacts](#) to send messages to. See *Messaging* on page 31. You can also use groups (with phone numbers) when you create accepted callers lists.

To create a group of numbers and email addresses



- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Groups](#).

- 3 Scroll to [New group](#) and select [Add](#).
- 4 Enter a name for the group and select [Cont.](#).
- 5 Scroll to [New](#) and select [Add](#).
- 6 For each contact phone number or email address you want to mark, scroll to it and select [Mark](#).
- 7 Select [Cont.](#) > [Done](#).


Call list

You can view information about recent calls.

To call a number from the call list

- 1 From standby press  and scroll to a tab.
- 2 Scroll to a name or a number and press .

To add a call list number to contacts

- 1 From standby press  and scroll to a tab.
- 2 Scroll to the number and select [Save](#).
- 3 Select [New contact](#) to create a new contact or select an existing contact to add the number to.


Speed dial

Speed dialing lets you select nine contacts that you can dial quickly. The contacts can be saved in positions 1-9.

To add contacts to speed dial numbers

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Speed dial**.
- 3 Scroll to a position number and select **Add**.
- 4 Select a contact.

To speed dial

- From standby enter the position number and press .

 
Voicemail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call.

To enter your voicemail number

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Voicemail number**.
- 2 Enter the number and select **OK**.

To call your voicemail service

- From standby press and hold down .

Voice control

By creating voice commands you can:

- Voice dial – call someone by saying their name
- Answer and reject calls when you use a handsfree

To record a voice command using voice dialing

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Voice control** > **Voice dialing** > **Activate**.
- 2 Select **Yes** > **New voice command** and select a contact. If the contact has more than one number, select the number to add the voice command to.
- 3 Record a voice command such as “John mobile”.
- 4 Follow the instructions that appear. Wait for the tone and say the command to record. The voice command is played back to you.
- 5 If the recording sounds **OK**, select **Yes**. If not, select **No** and repeat steps 3 and 4.

- ! *Voice commands are saved in the phone memory only. They cannot be used in another phone.*

Voice dialing

You can hear your recorded contact name when you receive a call from that contact.

To voice dial

- 1 From standby press and hold down a volume key.
- 2 Wait for the tone and say a recorded name, for example “John mobile”. The name is played back to you and the call is connected.

Voice answering

When you use a handsfree, you can answer or reject incoming calls with your voice.

To activate voice answering and record voice answer commands

- 1 From standby select [Menu](#) > [Settings](#) > the [General](#) tab > [Voice control](#) > [Voice answer](#) > [Activate](#).
- 2 Follow the instructions that appear and select [Cont.](#). Wait for the tone and say “Answer”, or another word.
- 3 Select [Yes](#) to accept or [No](#) for a new recording.
- 4 Follow the instructions that appear and select [Cont.](#). Wait for the tone and say “Busy”, or another word.
- 5 Select [Yes](#) to accept or [No](#) for a new recording.
- 6 Follow the instructions that appear and select [Cont.](#).
- 7 Select where your voice answering is to be activated.

To answer a call using voice commands

- Say “Answer”.

To reject a call using voice commands

- Say “Busy”.



Forwarding calls

You can forward calls, for example, to an answering service.

To forward calls

- 1 From standby select [Menu](#) > [Settings](#) > the [Calls](#) tab > [Forward calls](#).
- 2 Select a call type and a forward option.
- 3 Select [Activate](#).
- 4 Enter the number to forward calls to and select [OK](#).



Video Share

You can share experiences while on a call with friends and family when they happen or save them to share later.

When on a call, the person who initiates the Video Share session transmits the video. Only the person placing a Video Share call can save the Video Share session.

Before you begin

To use Video Share service, both parties on the call must have:

- Video share service activated on your account.
- 3G coverage.
- Video Share turned on.

❗ *The Video Share menu does not appear unless all requirements are met for both parties on the call.*

Types of Video Share calls

You can share information live or a pre-recorded session.

- **Live share** – streams live information as the camera captures it.
- **Pre-recorded** – allows you share a previously recorded Video Share session.

To turn on Video Share

- From standby select **Menu > Settings > the Calls tab > Video Share > Video Share.**

To initiate a Video Share session

- 1 While on a call, select **Share.**
- 2 Select an option.

To accept a Video Share session

- When you receive a Video Share call request, press **Yes.**

To end a Video Share session

- To continue the call, but end the Video Share session, press **Exit.**

To save Video Share sessions

- From standby select **Menu > Settings > the Calls tab > Video Share > Auto record.**

To share a previously recorded Video Share session

- 1 While on a call, select **Share.**
- 2 Select **Pre-recorded.**
- 3 Select the Video Share session that you want to share.



More than one call

You can handle more than one call at a time. For example, you can put an ongoing call on hold, while you make or answer a second call. You can also switch between the two calls. You cannot answer a third call without ending one of the first two calls.


Call waiting

When call waiting is used, you hear continuous beep if you receive a second call.


To activate call waiting

- From standby select **Menu** > **Settings** > the **Calls** tab > **Manage calls** > **Call waiting** > **Activate**.


To make a second call

- 1 During the call, select **Options** > **Hold call**. This puts the ongoing call on hold.
- 2 Select **Options** > **Add call**.
- 3 Enter the number to call and press .

To answer a second call

- During the call, press . This puts the ongoing call on hold.

To reject a second call

- During the call, press  and continue with the ongoing call.


To end an ongoing call and answer a second call

- During the call, select **Replace active call**.

Handling two voice calls

You can have calls ongoing and on hold at the same time.

To switch between two calls

- During the call, press .

To join two calls

- During the call, select **Options** > **Join calls**.



To connect two calls

During the call, select **Options** > **Transfer call**. You are disconnected from both calls.

To end an ongoing call and return to the call on hold


- First press  and then .



Conference calls

With a conference call, you can have a joint conversation with up to five people.

To add a new participant

- 1 During the call, select **Options** > **Hold call**. This puts the joined calls on hold.
- 2 Select **Options** > **Add call**.
- 3 Enter the number to call and press .
- 4 Select **Options** > **Join calls** to add the new participant.
- 5 Repeat this task to add more participants.

To release a participant

- 1 Select **Options** > **Release party**.
- 2 Select the participant to release.

To have a private conversation

- 1 During the call, select **Options** > **Talk to** and select the participant to talk to.
- 2 To resume the conference call, select **Options** > **Join calls**.

My numbers

You can view, add and edit your own phone numbers.

To check your phone numbers

- 1 From standby select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Special numbers](#) > [My numbers](#).
- 3 Select an option.



Showing or hiding your phone number

You can decide to show or hide your phone number when you make a call.

To hide your phone number

- 1 From standby select [Menu](#) > [Settings](#) > the [Recent Calls](#) tab > [Show/hide my no.](#)
- 2 Select [Hide number](#).

Messaging

Receiving and saving messages

You are notified when you receive a message. Messages are automatically saved in the phone memory. When the phone memory is full, you can delete messages or save them on a memory card or on the SIM card.

To save a message on a memory card

- From standby select [Menu](#) > [Messaging](#) > [Settings](#) > [Message settings](#) > [Save to](#) > [Memory card](#).

To save a message on the SIM card

- 1 From standby select [Menu](#) > [Messaging](#) and select a folder.
- 2 Scroll to a message and select [Options](#) > [Save message](#).


To view a message from the inbox

- 1 From standby select [Menu](#) > [Messaging](#) > [Inbox](#).
- 2 Scroll to the message and select [View](#).

Text and multimedia messaging

Text messages can contain pictures, sound effects, animations, and melodies. You can also create and use templates for your messages.




When sending messages, the phone selects the best method (as a text or picture message) for sending the message.

 If you send a message to a group, you will be charged for each member.

Writing and sending messages

For more information about entering letters see *Entering text* on page 15.

To write and send a message

- 1 From standby select **Menu** > **Messaging** > **Write new** > **Message**.
- 2 Enter text.
- 3 Scroll  to use toolbar options.
- 4 Scroll  or  to select an option.
- 5 When ready to send, select **Continue**.
- 6 Select an option:
 - **Enter email address** to send the message to an email address.
 - **Enter phone number** to send the message to a contact not in the Address Book.
 - **Addr. Book lookup** to send the message to an address.

To copy and paste text in a message

- 1 When writing your message, select **Options** > **Copy & paste**.
- 2 Select **Copy all** or **Mark & copy**.

- 3 Scroll to and mark the text in your message. > **Mark**, then highlight text using navigation keys.
- 4 To insert copied text, select **Options** > **Copy & paste** > **Paste**.

To set the message options

- 1 From standby select **Menu** > **Messaging** > **Settings** > the **Message settings** tab.
- 2 Scroll to and select an option.

Receiving messages

You are notified when you receive a message. Received messages are saved in the Inbox.

To view a message from standby

- If pop-up is set, follow the instructions on the screen. If not, you can locate the message **Menu** > **Messaging** > **Inbox**.

To call a number in a message

- Select the phone number displayed in the message and select **Call**.

Send Options

To select send options


- 1 When the message is ready and a recipient is selected, select **Options**:
 - **Add recipient** to add another recipient.

- [Edit recipients](#) to edit and add recipients.
 - [Advanced](#) for more send options.
- 2 Scroll to an option and select [Edit](#).

Templates for multimedia messages

Add a new template or use a pre-defined template.

To add a template

- 1 From standby select [Menu](#) > [Messaging](#) > [Templates](#) > [New template](#).
- 2 Select an option.
- 3 Insert text. Press  to add items.
- 4 Select [Save](#), enter a title and select [OK](#).

Saving and deleting messages

Received messages are saved in the phone memory. When the phone memory is full, delete messages or move them to the SIM card.

To save a message on the SIM card

- 1 From standby select [Menu](#) > [Messaging](#) and select a folder.
- 2 Scroll to a message and select [Options](#) > [Save message](#).

To save an item in a message

 
- 1 When reading a message, select the item.

- 2 Select an option.

To view a message from the inbox

- 1 From standby select [Menu](#) > [Messaging](#) > [Inbox](#).
- 2 Scroll to the message and select [View](#).

To delete a message

- 1 From standby select [Menu](#) > [Messaging](#).
- 2 Select a folder.
- 3 Select the message and press .

To delete several messages

- 1 From standby select [Menu](#) > [Messaging](#) and select a folder.
- 2 Scroll to and select a message.
- 3 Select [Options](#) > [Mark several](#).
- 4 Scroll to and select the messages.
- 5 Select [Options](#) > [Delete messages](#) to delete messages.



Voice messages

You can send and receive a sound recording as a voice message.



The sender and recipient must have a subscription supporting Multimedia Messaging.

To record and send a voice message

- 1 From standby select **Menu** > **Messaging** > **Write new** > **Voice message**.
- 2 Record the message and select **Stop** > **Send**.
- 3 Select an option.
- 4 Select a recipient and select **Send**.

Mobile Email

Check your Yahoo!™ Mail, AT&T Yahoo!™, Windows™ Live Mail, AOL™, AIM™ and BellSouth™ accounts quickly and easily.

Before using Mobile Email, make sure your AT&T account supports a data plan and that you have your email account settings available.

- 1 From standby select **Menu** > **Messaging** > **Mobile Email**.
- 2 Select the provider you want to use. Follow the prompts to enter your username and password.
- 3 Select Next to log into your account.

Instant Messaging (IM)

Connect and log into the IM server to communicate online with your family and friends. If your subscription supports instant messaging and

presence services, you can send and receive messages and see contact status when they are online.

! *Contact AT&T for more information.*

To choose your IM settings

- 1 From standby select **Menu** > **Messaging** > **IM**.
- 2 Select IM community, then the center selection key.
- 3 Enter your account name and password to configure the account.
- 4 Select the center selection key.

! *After signing into an IM community, its name replaces IM in the menu.*

To use IM

- 1 From standby select **Menu** > **Messaging**.
- 2 Select IM community, then the center selection key.
- 3 Enter your password, if needed.
- 4 Press the center selection key.

To add a contact to the list

- 1 From standby select **Menu** > **Messaging**.
- 2 Select your IM community > the **Buddies** tab > **Options** > **Add bookmark?**

- 3 Enter the contact's screen name.

! *The tab name varies depending on IM community chosen.*

To send an IM

- 1 From standby select [Menu](#) > [Messaging](#).
- 2 Select your IM community > the [Buddies](#) tab.
- 3 Select a buddy.
- 4 Select [Send IM](#).
- 5 Type your message and select [Send](#).

! *You can also continue a chat conversation from the [Conversations](#) tab.*

Status

Show your status to your contacts only or show it to all users on the IM server.

To set the status

- 1 From standby select [Menu](#) > [Messaging](#).
- 2 Select your IM community > [My status](#) tab.
- 3 Choose [Available](#) and select [Edit](#)
- 4 Select an option.

Save password

Prior to logging in, you can store the password for your community to avoid entering it at each sign on.

To save the password

- 1 From standby select [Menu](#) > [Messaging](#).
- 2 Select your IM community, then the left selection key.
- 3 Select [Save password](#):

Auto Sign in

You can automatically sign in to your IM community after turning on the phone or bypass the sign in screen when logging in.

To automatically sign in

- 1 Verify [Save password](#): is on. See [Save password](#) on page 35.
- 2 From standby select [Menu](#) > [Messaging](#).
- 3 Select your IM community > [Settings](#) > [Auto Sign In](#).

! *[Auto Sign In](#) menu name may vary by service.*

Imaging

Camera and video recorder

You can take pictures and record video clips to view, save or send. You find your saved pictures and video clips in [Entertainment > Photo > Camera album](#) or in [My Stuff](#).

Viewfinder and camera keys

- | | |
|---|----------------------------|
| 1 | Brightness |
| 2 | Take pictures/Record video |



Using the camera

To activate the camera

- From standby select [Menu > Tools & Apps > Camera](#).

To take a picture

- Activate the camera and press or to scroll to .
- Press the center navigation key to take a picture.
- The picture is automatically saved to the memory card.

Do not record with a strong light source in the background. Use a support or the self-timer to avoid a blurred picture.

To record a video clip

- Activate the camera and press or to scroll to .
- Press the center navigation key to start recording.

To stop recording

- Press the center navigation key.
- The video clip is automatically saved on the memory card.

To use zoom

- Press or zoom in or out.

When taking a picture, zoom is available in VGA mode only.

To adjust brightness

- Use the side volume keys to adjust the brightness.

To view pictures and video clips

- 1 Activate the camera.
- 2 Select [Options](#) > [View all pictures](#).
- 3 To view a video clip, press the center navigation key.

To improve a picture with Photo fix

- 1 Activate the camera and press or to scroll to .
- 2 Make sure [Review](#) is set to [On](#). Select [Options](#) and scroll to [Review](#) > [On](#).
- 3 Take a picture.
- 4 During review, select [Options](#) > [Photo fix](#).

You can also use Photo fix on pictures taken previously. When viewing a picture, select [Options](#) > [Photo fix](#).

Camera icons and settings

Icons on the screen inform what the current setting is. More camera settings are available in [Options](#).

To change settings

- Activate the camera and select [Options](#).

Camera shortcuts

Key	Shortcut
	Zoom
	Brightness
	Camera: Shoot mode Video: Video length
	Self-timer
	Night mode
	Camera key guide

Transferring pictures

Transfer to and from your computer

You can use Bluetooth™ wireless technology and the USB cable to transfer pictures and video clips between your computer and phone. See [Bluetooth™ wireless technology](#) on page 46 and [Transferring content to and from a computer](#) on page 16 for more information.

You can view, enhance and organize your pictures and video clips on your computer by installing the [Adobe™ Photoshop™ Album Starter Edition](#). It is available for download at www.sonyericsson.com/support.

Pictures

You can view and tag your pictures in [Entertainment](#).

To view pictures in a slide show

- 1 From standby select [Menu](#) > [Entertainment](#) > [Photo](#) > [Camera](#) album.
- 2 Scroll to a month and a picture. Select [View](#).
- 3 Select [Options](#) > [Slide show](#).
- 4 Select a mood.


To turn off location data for pictures



- From standby select [Menu](#) > [Tools & Apps](#) > [Camera](#) > [Options](#) > [Add position](#) > [Off](#).

Photo tags


You can tag pictures to categorize them. They are saved in [Photo tags](#).

To tag pictures

- 1 From standby select [Menu](#) > [Entertainment](#) > [Photo](#) > [Camera](#) album.
- 2 Scroll to a month and a picture. Select [View](#).
- 3 Press  and scroll to a tag.
- 4 Press the center navigation key.

- 5 For each picture you want to tag, use  or  to scroll to the picture and press the center navigation key.

To create a new photo tag

- 1 From standby select [Menu](#) > [Entertainment](#) > [Photo](#) > [Camera](#) album.
- 2 Scroll to a month and a picture. Select [View](#).
- 3 Press  and select [Options](#) > [New tag](#).
- 4 Enter a name and select [OK](#).
- 5 Select an icon.
- 6 Press the center navigation key to tag the picture.

Using pictures

You can add a picture to a contact or set it as a screen saver.

To use pictures

- 1 From standby select [Menu](#) > [Entertainment](#) > [Photo](#) > [Camera](#) album.
- 2 Scroll to a month and a picture. Select [View](#).
- 3 Select [Options](#) > [Use as](#).
- 4 Select an option.

PhotoDJ™ and VideoDJ™

You can edit pictures and video clips.

To edit and save a picture

- 1 From standby select [Menu](#) > [Entertainment](#) > [Photo](#) > [Camera album](#).
- 2 Scroll to a month and a picture. Select [View](#).
- 3 Select [Options](#) > [Edit in PhotoDJ™](#).
- 4 Edit the picture.
- 5 Select [Options](#) > [Save picture](#).

To edit and save a video clip

- 1 From standby select [Menu](#) > [Entertainment](#) > [Video](#).
- 2 Scroll to a video clip and select [Options](#) > [Edit in VideoDJ™](#).
- 3 Edit the video clip.
- 4 Select [Options](#) > [Save](#).

To trim a video clip


- 1 From standby select [Menu](#) > [Entertainment](#) > [Video](#).
- 2 Scroll to a video clip and select [Options](#) > [Edit in VideoDJ™](#) > [Edit](#) > [Trim](#).
- 3 Select [Set](#) to set the starting point and select [Start](#).
- 4 Select [Set](#) to set the ending point and select [End](#).
- 5 Select [Trim](#) > [Options](#) > [Save](#).

MEDIA™ Net

Setting up MEDIA Net

In order to use the Internet, it is best to subscribe to MEDIA Net with AT&T.

To start browsing

- 1 From standby select .
- 2 Select [Options](#) > [Go to](#).
- 3 Select an option.

To exit the browser

- When you browse the Internet, select [Options](#) > [Exit browser](#).


Bookmarks

You can create and edit bookmarks as quick links to your favorite Web pages.

To create a bookmark

- 1 When you browse the Internet, select [Options](#) > [Tools](#) > [Add bookmark](#).
- 2 Enter a title and an address. Select [Save](#).


To select a bookmark

- 1 From standby select .
- 2 Select [Options](#) > [Go to](#) > [Bookmarks](#).
- 3 Scroll to a bookmark and select [Go to](#).

 
 
History pages

You can view Web pages you have browsed.

To view history pages

- From standby select  > [Options](#) > [Go to](#) > [History](#).

To use pan and zoom on a Web page


- 1 When you browse the Internet, press .
- 2 Use the navigation key to move the frame.
- 3 Press [Zoom](#).
- 4 To switch back to pan, press .

- ! To use pan and zoom, you need to turn off Smart-fit: [Options](#) > [Advanced](#) > [Smart-Fit](#) > [Off](#).


Internet keypad shortcuts

You can use the keypad to go directly to an Internet browser function.

To select Internet keypad shortcuts

- 1 From standby select .
- 2 Select [Options](#) > [Advanced](#) > [Keypad mode](#) > [Shortcuts](#).

To make a call while browsing

- When you browse the Internet press .

To save a picture from a Web page

- 1 When you browse the Internet, select [Options](#) > [Tools](#) > [Save picture](#).
- 2 Select a picture.

To find text on a Web page

- 1 When you browse the Internet, select [Options](#) > [Tools](#) > [Find on page](#).
- 2 Enter text and press [Find](#).

To send a link

- 1 When you browse the Internet, select [Options](#) > [Tools](#) > [Send link](#).
- 2 Select a transfer method.

- ! Make sure the receiving device supports the transfer method you select.

Internet security and certificates

Your phone supports secure browsing. Certain Internet services, such as banking, require certificates in your phone. Your phone may already contain certificates when you buy it or you can download new certificates.

To view certificates in the phone

- From standby select [Menu](#) > [Settings](#) > the [General](#) tab > [Security](#) > [Certificates](#).

Podcasts

Podcasts are files, for example, radio programs or video content, that you can download and play.

To access audio podcasts

- From standby select **Menu** > **Media transfer** > **Music** > **Podcasts**.

To access video podcasts

- From standby select **Menu** > **Media transfer** > **Video** > **Podcasts**.

Photo feeds


You can subscribe to Photo feeds and download photos.

To access photo feeds

- From standby select **Menu** > **Media transfer** > **Photo** > **Photo feeds**.

GPS

Your phone is equipped with a GPS receiver that uses satellite signals to calculate your location.

 *Some GPS features use the Internet.*

Using the GPS

Make sure you have a clear view of the sky when using features that require the GPS receiver to find your location. If your location is not found after a few minutes, move to another location. To facilitate the search, stand still and do not cover the GPS antenna.





Assisted GPS

With Assisted GPS (A-GPS) it takes less time to calculate a location.



Contact AT&T for more information.

Status information

When your location is found you can view available satellites and get information about your current speed and altitude.

To view GPS status

- 1 From standby select [Menu](#) > [AT&T GPS](#) > [Status info](#).
- 2 Scroll between the tabs.

Location requests

External services may ask for your location.

To change permission for external services

- 1 From standby select [Menu](#) > [AT&T GPS](#) > [Settings](#) > [Privacy](#).
- 2 Select an option.

Turn off the GPS

The GPS receiver is automatically turned off when it is no longer used. You can also manually turn off the GPS receiver. This saves battery

power when using features that do not require the GPS receiver to find your location.

To turn the GPS on or off manually

- 1 From standby select [Menu](#) > [AT&T GPS](#) > [Settings](#).
- 2 Select an option.

Entertainment

Video player

To play videos

- 1 From standby select **Menu** > **Entertainment** > **Video**.
- 2 Scroll to a title and select **Play**.

To stop playing videos

- Press the center navigation key.

FM radio

- ! *Do not use your phone as a radio in places where this is prohibited.*

To listen to the radio

- 1 Connect the handsfree to the phone.
- 2 From standby select **Menu** > **Tools & Apps** > **FM Radio**.



To change the volume

- When the radio is playing, press the volume keys up or down.

To automatically search for channels

- When the radio is playing, select **Search**.

To manually search for channels

- When the radio is playing, press  or .

Saving channels

You can save up to 20 preset channels.



To save channels

- 1 When you have found a radio channel select **Options** > **Save**.
- 2 Scroll to a position and select **Insert**.

To select saved channels

- 1 From standby select **Menu** > **Tools & Apps** > **FM Radio** > **Options** > **Channels**.
- 2 Select a radio channel.

To switch between saved channels

- When the radio is playing, press  or .

Ringtones and melodies

 
To set a ringtone

- 1 From standby select **Menu** > **Settings** > the **Sounds & alerts** tab > **Ringtone**.
- 2 Find and select a ringtone.

To set the ringtone volume

- From standby, use the side volume keys to raise or lower the volume.

To turn the ringtone off

- From standby press and hold down .

! *All audio signals except the alarm signal are affected.*





To set the vibrating alert

- 1 From standby select **Menu** > **Settings** > the **Sounds & alerts** tab > **Vibrating alert**.
- 2 Select an option.

MusicDJ™

You can compose and edit your own melodies to use as ringtones. A melody consists of four types of tracks – **Drums**, **Basses**, **Chords** and **Accents**. A track contains a number of music blocks. The blocks consist of pre-arranged sounds with different characteristics. The blocks are grouped into **Intro**, **Verse**, **Chorus**, and **Break**. You compose a melody by adding music blocks to the tracks.

To compose a melody

- 1 From standby select **Menu** > **Tools & Apps** > **Tools** > **MusicDJ™**.
- 2 Select to **Insert**, **Copy** or **Paste** blocks.
- 3 Use , ,  or  to scroll between the blocks.
- 4 Select **Options** > **Save melody**.

Sound recorder

You can record a voice memo or a sound. Recorded sounds can also be set as ringtones.

To record a sound

- From standby select **Menu** > **Tools & Apps** > **Record sound** > **Record**.

To listen to a recording

- 1 From standby select **Menu** > **My Stuff**.
- 2 Scroll to **Music** and select **Open**.
- 3 Scroll to a recording and select **Play**.

Games

Your phone contains preloaded games. You can also download games. Help texts are available for most games.

To start a game

- 1 From standby select **Menu** > **Entertainment** > **Games**.
- 2 Select a game.

To end a game

- Press .

Applications

You can download and run Java™ applications. You can also view information or set different permissions.

To select a Java application

- 1 From standby select **Menu > Tools & Apps > Applications**.
- 2 Select an application.

To view information about a Java application

- 1 From standby select **Menu > Tools & Apps > Applications**.
- 2 Scroll to an application and select **Options > Information**.

To set permissions for a Java application

- 1 From standby select **Menu > Tools & Apps > Applications**.
- 2 Scroll to an application and select **Options > Permissions**.
- 3 Set permissions.

Java application screen size

Some Java applications are designed for a specific screen size. The screen size is 240x320 pixels. For more information, contact the application vendor.

To set the screen size for a Java application

- 1 From standby select **Menu > Tools & Apps > Applications**.
- 2 Scroll to an application and select **Options > Screen size**.
- 3 Select an option.

Internet profiles for Java applications

Some Java applications need to connect to the Internet to receive information. Most Java applications use the same Internet settings as your Web browser.

Connectivity

Phone name

You can enter a name for your phone that is shown to other devices when using, for example, Bluetooth™ wireless technology.


To enter a phone name

- 1 From standby select **Menu > Settings > the Connectivity tab > Phone name.**
- 2 Enter the phone name and select **OK.**

Bluetooth™ wireless technology

The Bluetooth function makes wireless connection to other Bluetooth devices possible. You can, for example:

- Connect to handsfree devices.
- Connect to several devices at the same time.
- Connect to computers and access the Internet.
- Exchange items and play multiplayer games.


 *We recommend a range within 10 metres (33 feet), with no solid objects in between, for Bluetooth communication.*

Before you use Bluetooth wireless technology

You must turn on the Bluetooth function to communicate with other devices. You may also have to pair your phone with other Bluetooth devices.

To turn the Bluetooth function on

- From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Turn on.**

 *Make sure that the device you want to pair your phone with has the Bluetooth function activated and Bluetooth visibility set to on.*

To receive an item

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Turn on.**
- 2 When you receive an item, follow the instructions that appear.

To pair the phone with a device

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > My devices.**
- 2 Scroll to **New device** and select **Add** to search for available devices.
- 3 Select a device.
- 4 Enter a passcode, if required.

To allow connection to the phone

- 1 From standby select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **My devices**.
- 2 Select a device from the list.
- 3 Select **Options** > **Allow connection**.
- 4 Select **Always ask** or **Always allow**.

! *This is only possible with devices that require access to a secure service.*

To pair the phone with a Bluetooth handsfree for the first time

- 1 From standby select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **Handsfree**.
- 2 Scroll to a device and select **Yes**.
- 3 Enter a passcode, if required.

To pair the phone with more than one Bluetooth handsfree

- 1 From standby select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **Handsfree** > **My handsfree** > **New handsfree**.
- 2 Select a device from the list.
- 3 Enter a passcode, if required.

Power saving

You can save battery power with the Power save function. You can only connect with one Bluetooth device at a time when using Power save. You

must turn this function off if you want to connect with more than one Bluetooth device at the same time.

To turn powersave on

- From standby select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **Powersave** > **On**.

Transferring sound to and from a Bluetooth handsfree

You can transfer the sound to and from a Bluetooth handsfree using a phone key or the handsfree key.

To transfer sound

- 1 From standby select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **Handsfree** > **Incoming call**.
- 2 Select an option. **In phone** transfers sound to the phone. **In handsfree** transfers sound to the handsfree.

To transfer sound during a call

- 1 During a call, select **Sound**.
- 2 Select from the list.

Using the USB cable

You can connect your phone to a computer with a USB cable to transfer files.



Before you use the USB cable

You need one of these operating systems on your computer to transfer files using a USB cable:

- Windows® 2000
- Windows XP (Pro and Home)

- Windows Vista (32 bit and 64 bit versions of: Ultimate, Enterprise, Business, Home Premium, Home Basic)

! *Only use a USB cable supported by your phone. Do not remove the USB cable from your phone or computer during file transfer as this may corrupt the phone memory or the memory card.*

PC software

You may use Windows® Explorer, Sony Ericsson PC Suite, or Sony Ericsson Media Manager with your phone. Sony Ericsson PC software is available from www.sonyericsson.com/support to use with your phone.

In the phone menu, you must select the USB mode based on how you plan to use the USB cable with your phone. The table lists the available computer applications and the corresponding USB mode for each.

USB mode	Purpose	Computer application
Show menu	Displays the USB menu when the USB cable is attached to the phone.	Any
Phone mode	Synchronize the phone with a computer.	Sony Ericsson PC Suite

USB mode	Purpose	Computer application
Media transfer	Transfer music, pictures, or other files between your phone and a computer. The phone appears as a media device on your computer. Sony Ericsson PC Suite cannot access your phone in this mode.	Microsoft® Windows® Explorer
Print	Print images from the Camera album.	
Mass storage	Transfer music, pictures or other files between your phone and a computer. The phone functions are turned off automatically. All functions except alarms and alerts are turned off in Mass storage mode. The phone shuts down, but restarts after removing the cable.	Microsoft® Windows® Explorer and Sony Ericsson Media Manager

USB default mode

You can select the USB mode the phone uses when a USB cable is attached.

To change the USB default mode

- 1 From standby select **Menu > Settings > the Connectivity tab > USB > USB default mode.**
- 2 Select an option.

Disconnect the USB

The correct method for disconnecting the USB cable depends on the USB mode.

To disconnect the USB cable safely in Mass storage or Phone mode

- 1 When the phone is in **Mass storage** or **Phone mode**, right-click the removable disk icon in *Windows Explorer*.
- 2 Select *Eject*.
- 3 When the message is shown, **Mass storage session ended. It is now safe to remove the USB cable.**, disconnect the USB cable.

To disconnect the USB cable safely in Media transfer or Printer mode

- Remove the USB cable.

Synchronizing

You can use the USB cable or Bluetooth wireless technology to synchronize phone contacts, appointments, bookmarks, tasks and notes with a computer program such as Microsoft Outlook. For more information go to the Getting started section at www.sonyericsson.com/support.

Synchronizing using a computer

Before synchronizing you need to install *the Sony Ericsson PC Suite*.

- *Sony Ericsson PC Suite software is available for download at www.sonyericsson.com/support.*

See *Before using Media Manager* on page 17.

To install the Sony Ericsson PC Suite

- 1 Turn on your computer.
- 2 Download the Media Manager software from www.sonyericsson.com/support.
- 3 Follow the instructions on the Web site to install.
- 4 Select a language and click **OK**.
- 5 Click *Install Sony Ericsson PC suite* and follow the instructions on the screen.

To synchronize using the PC Suite

- 1 **Computer:** Start *PC Suite* from *Start/Programs/Sony Ericsson/PC Suite*.
- 2 Follow the instructions in the *PC Suite* for how to connect.
- 3 **Phone:** Select **Phone mode**.
- 4 **Computer:** When you are notified that *the Sony Ericsson PC Suite* has found your phone, you can start synchronizing.



For usage details, see the Sony Ericsson PC Suite Help section once the software has been installed on your computer.

More features

Flight mode

In [Flight mode](#) the network and radio transceivers are turned off to prevent disturbance to sensitive equipment.

When the flight mode menu is activated you are asked to select a mode the next time you turn on your phone:

- [Normal mode](#) – full functionality
- [Flight mode](#) – limited functionality

 You can use the [Bluetooth™](#) function in [Flight mode](#).

To activate the flight mode menu

- From standby select [Menu](#) > [Settings](#) > the [General](#) tab > [Flight mode](#) > [Show at startup](#).

To select flight mode



- 1 When the flight mode menu is activated, turn off your phone.
- 2 Turn on your phone and select [Flight mode](#).

File manager

You can use the file manager to handle files saved in the phone memory or on a memory card.

Handling files

You can move and copy files between your phone, a computer and a memory card. See *Transferring content to and from a computer* on page 16. Files are saved on the memory card first and then in the phone memory. Unrecognized files are saved in the [Other](#) folder.

 You are not allowed to exchange some *copyright-protected material*. A protected file has a  icon.

You can create subfolders to move or copy files to. You can select more than one or all the files in a folder at the same time for all folders except [Games](#) and [Applications](#).

If the memory is full, delete some content to create space.

File manager tabs

The file manager is divided into three tabs, and icons indicate where the files are saved.

To view information about files

- 1 From standby select [Menu](#) > [My Stuff](#).
- 2 Find a file and select [Options](#) > [Information](#).

To move a file in the file manager

- 1 From standby select **Menu** > **My Stuff**.
- 2 Find a file and select **Options** > **Manage file** > **Move**.
- 3 Select **Memory card** or **Phone**.
- 4 Open a folder.
- 5 Select **Paste**.

To select more than one file in a folder

- 1 From standby select **Menu** > **My Stuff**.
- 2 Scroll to a folder and select **Open**.
- 3 Select **Options** > **Mark** > **Mark several**.
- 4 For each file you want to mark, scroll to the file and select **Mark**.

Alarms

You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off. When the alarm sounds you can silence it or turn it off.

To set the alarm

- 1 From standby select **Menu** > **Tools & Apps** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Time:** and select **Edit**.
- 4 Enter a time and select **OK** > **Save**.

To set the recurrent alarm

- 1 From standby select **Menu** > **Tools & Apps** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Recurrent:** and select **Edit**.
- 4 Scroll to a day and select **Mark**.
- 5 To select another day, scroll to the day and select **Mark**.
- 6 Select **Done** > **Save**.

To silence the alarm

- 1 When the alarm sounds, press any key.
- 2 To repeat the alarm, select **Snooze**.

To turn off the alarm

- When the alarm sounds, press any key and select **Turn off**.

To cancel the alarm


- 1 From standby select **Menu** > **Tools & Apps** > **Alarms**.
- 2 Scroll to an alarm and select **Turn off**.

The alarm in silent mode

You can set the alarm not to sound when the phone is in silent mode.

To set an alarm to sound or not in silent mode

- 1 From standby select **Menu** > **Tools & Apps** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.

- 3 Scroll to the  tab.
- 4 Scroll to [Silent mode](#) and select [Edit](#).
- 5 Select an option.

Calendar

The calendar can be synchronized with a computer calendar, with a calendar on the Web or with a Microsoft® Exchange Server (Microsoft® Outlook®).

For more information see *Synchronizing* on page 50.

Default view

You can choose whether month, week or day view will appear first when you open the calendar.

To set default view

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Calendar](#).
- 2 Select [Options](#) > [Advanced](#) > [Default view](#).
- 3 Select an option.

Appointments

You can add new appointments or reuse existing appointments.

To add an appointment

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Calendar](#).

- 2 Select a date.
- 3 Scroll to [New appointment](#) and select [Add](#).
- 4 Enter the information and confirm each entry.
- 5 Select [Save](#).

To view an appointment

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Calendar](#).
- 2 Select a date.
- 3 Scroll to an appointment and select [View](#).

To edit an appointment

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Calendar](#).
- 2 Select a date.
- 3 Scroll to an appointment and select [View](#).
- 4 Select [Options](#) > [Edit](#).
- 5 Edit the appointment and confirm each entry.
- 6 Select [Save](#).

To view a calendar week

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Calendar](#).
- 2 Select a date.
- 3 Select [Options](#) > [Change view to](#) > [Week](#).

To set when reminders should sound

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Calendar](#).
- 2 Select a date.
- 3 Select [Options](#) > [Advanced](#) > [Reminders](#).
- 4 Select an option.

- ! *A reminders option set in calendar affects a reminders option set in tasks.*

Notes

You can make notes and save them.
You can also show a note in standby.

To add a note

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Notes](#).
- 2 Scroll to [New note](#) and select [Add](#).
- 3 Write a note and select [Save](#).

To show a note in standby

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Notes](#).
- 2 Scroll to a note and select [Options](#) > [Show in standby](#).

To hide a note from standby

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Notes](#).
- 2 Scroll to a note and select [Options](#) > [Hide in standby](#).

Tasks

You can add new tasks or reuse existing tasks.

To add a task

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Tasks](#).
- 2 Select [New task](#) and select [Add](#).
- 3 Select an option.
- 4 Enter details and confirm each entry.

To view a task

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Tasks](#).
- 2 Scroll to a task and select [View](#).

To set when reminders should sound

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Tasks](#).
- 2 Scroll to a task and select [Options](#) > [Reminders](#).
- 3 Select an option.

- ! *A reminders option set in tasks affects a reminders option set in calendar.*

Password saver

You can save security codes, for example, for credit cards. You must set a passcode to open the Password saver.

Checkword

The checkword confirms that you have entered the correct passcode. If the passcode is correct, the correct codes are shown. If the passcode is incorrect, the checkword and the codes shown are also incorrect.

To open Password saver for the first time

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Password Saver](#).
- 2 Follow the instructions that appear and select [Continue](#).
- 3 Enter a passcode and select [Continue](#).
- 4 Confirm the passcode and select [Continue](#).
- 5 Enter a checkword and select [Done](#).

To add a code

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Password Saver](#).
- 2 Enter a passcode and select [Continue](#).
- 3 Scroll to [New code](#) and select [Add](#).
- 4 Enter a name associated with the code and select [Continue](#).
- 5 Enter the code and select [Done](#).

To change a passcode

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Password Saver](#).

- 2 Enter your passcode and select [Options](#) > [Change passcode](#).
- 3 Enter your new passcode and select [Continue](#).
- 4 Re-enter the new passcode and select [Continue](#).
- 5 Enter a checkword and select [Done](#).

Forget your passcode?

If you forget your passcode, you must reset the Password saver. This means that all entries in the Password saver are deleted. The next time you enter the Password saver, you must proceed as if you are opening it for the first time. See *To open Password saver for the first time* on page 55.

To reset Password saver

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Password Saver](#).
- 2 Enter any passcode to access the Password saver. The checkword and codes that are then shown are incorrect.
- 3 Select [Options](#) > [Reset](#).
- 4 [Reset Password Saver?](#) appears.
- 5 Select [Yes](#).

Profiles

You can change settings such as the ring volume and vibrating alert to suit different locations. You can reset all profiles to the phone's original settings.

To select a profile

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Profiles**.
- 2 Select a profile.

To view and edit a profile

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Profiles**.
- 2 Scroll to a profile and select **Options** > **View and edit**.

! You cannot rename the Normal profile.

Time and date

To set the time

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **Time**.
- 2 Enter the time and select **Save**.

To set the date

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **Date**.
- 2 Enter the date and select **Save**.

To set the time zone

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **My time zone**.
- 2 Select the time zone you are in.

! If you select a city, *My time zone* also updates the time when daylight saving time changes.

Theme

You can change the appearance of the screen through items such as colors and wallpaper. You can also create new themes and download them. For more information, go to www.sonyericsson.com/support.

To set a theme

- 1 From standby select **Menu** > **Settings** > the **Display** tab > **Theme**.
- 2 Scroll to a theme and select **Set**.

Main menu layout

You can change the layout of the icons in the main menu.

To change the main menu layout

- 1 From standby select **Menu** > **Options** > **Main menu layout**.
- 2 Select an option.

Locks

SIM card lock

This lock only protects your subscription. Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN (Personal Identity Number).

If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by AT&T.

To unblock the SIM card

- 1 When **PIN blocked** appears, enter your PUK and select **OK**.
- 2 Enter a new four-to-eight-digit PIN and select **OK**.
- 3 Re-enter the new PIN and select **OK**.

To edit the PIN

- 1 From standby select **Menu > Settings > the General tab > Security > Locks > SIM Protection > Change PIN**.
- 2 Enter your PIN and select **OK**.
- 3 Enter a new four-to-eight-digit PIN and select **OK**.

- 4 Re-enter the new PIN and select **OK**.

- ! *If **Codes do not match** appears, you entered the new PIN incorrectly. If **Wrong PIN** appears, followed by **Old PIN:**, you entered your old PIN incorrectly.*

To use the SIM card lock

- 1 From standby select **Menu > Settings > the General tab > Security > Locks > SIM Protection > Protection**.
- 2 Select an option.
- 3 Enter your PIN and select **OK**.

Phone lock

You can stop unauthorized use of your phone. Change the phone lock code (0000) to any four-to-eight-digit personal code.

- ! *It is important that you remember your new code. If you forget it, you have to take your phone to your local Sony Ericsson retailer.*

To use the phone lock

- 1 From standby select **Menu > Settings > the General tab > Security > Locks > Phone protection > Protection**.
- 2 Select an option.
- 3 Enter the phone lock code and select **OK**.

To unlock the phone

- Enter your code and select **OK**.

To change the phone lock code

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Security** > **Locks** > **Phone protection** > **Change code**.
- 2 Enter the old code and select **OK**.
- 3 Enter the new code and select **OK**.
- 4 Repeat the new code and select **OK**.

Keypad lock

You can set this lock to avoid accidental dialing. Incoming calls can be answered without unlocking the keypad.

- ! *Calls to the international emergency number 911 or 112 can still be made.*

To use the automatic key lock

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Security** > **Automatic key lock**.
- 2 Select an option.

To unlock the keypad manually

- From standby press any key and select **Unlock** > **OK**.

IMEI number

Keep a copy of your IMEI (International Mobile Equipment Identity) number in case your phone is stolen.

To view your IMEI number

- From standby press **(*) 0673**, **(#) 0673**, **(0) +**, **(6)**, **(#) 0673**.

Hearing Aid Compatibility

Your phone is designed for Hearing Aid Compatibility (HAC) and uses settings to optimize its use with hearing aids.

Hearing Aid Settings

You can choose the setting in the phone to match the setting in your hearing aid before making or receiving calls.

To select a phone setting for HAC

- From standby select **Menu** > **Settings** > the **General** tab > **Accessibility** > **Hearing aid** and choose an option:
 - **On** – Use when your hearing aid is set to T-coil mode.
 - **Off** – Use when your hearing aid is set to Microphone mode.

To make and receive calls

- Achieve optimal HAC performance of the phone by opening the phone to make or receive a call.

Troubleshooting

Some problems will require you to call AT&T.

For more support go to www.sonyericsson.com/support.

Common questions

Master reset

If you select [Reset settings](#), the changes that you have made to settings will be deleted.

If you select [Reset device](#), in addition to your changes to settings, all contacts, messages, personal data, and content that you have downloaded, received or edited will also be deleted.

To reset the phone

- 1 From standby select [Menu](#) > [Settings](#) > the [General](#) tab > [Master reset](#).
- 2 Select an option.
- 3 Follow the instructions that appear.

I cannot charge the phone or battery capacity is low

The charger is not properly connected or the battery connection is poor. Remove the battery and clean the connectors.

The battery is worn out and needs to be replaced. See *Charging the battery* on page 7.

No battery icon appears when I start charging the phone

It may take a few minutes before the battery icon appears on the screen.

Some menu options appear in grey

A service is not activated. Contact AT&T.

The phone does not ring or rings too softly

Make sure that **Silent mode** has not been set to **On**. See *To turn the ringtone off* on page 44.

Check the ringtone volume. See *To set the ringtone volume* on page 43.

Check the profile. See *To select a profile* on page 56.

Check the call forwarding options. See *To forward calls* on page 28.

The phone cannot be detected by other devices using Bluetooth wireless technology

You have not turned the Bluetooth function on. Make sure that the visibility is set to show phone. See *To turn the Bluetooth function on* on page 46.

I cannot synchronize or transfer data between my phone and my computer, when using the USB cable.

The cable or software that came with your phone has not been properly installed. Go to www.sonyericsson.com/support to read Getting started guides which contain detailed installation instructions and troubleshooting guides.

I have forgotten my Password saver passcode

If you forget your passcode, you must reset the Password saver. This means that all entries in the Password saver are deleted. The next time you enter the Password saver, you must proceed as if you are opening it for the first time.

To reset Password saver

See *To reset Password saver* on page 55.

When transferring Music files from an online music store, the PC shows a transfer error even though I still have space on the phone for the files

Your files are copy protected with Digital Rights Management (DRM). Each file requires a license. A transfer error indicates that your license database needs to be cleaned up. After cleaning up files please delete and an retransfer all your music.

- From standby select [Menu](#) > [My Stuff](#) > [Options](#) > [Memory status](#) > [Memory card](#) > [Options](#) > [Clean up licenses](#).

I did not download some of the titles in my music player. Where did they come from?

Some content is preloaded into your phone before purchase and may not display all of the artist information. For example, some ringtones that are preloaded in [My Stuff](#) > [Music](#) do not contain any artist information.

Where can I find the regulatory information such as my IMEI number if I cannot turn on my phone?



- 1 Remove the battery cover and the battery.
- 2 The IMEI number is located on the label.

Error messages

Insert SIM

There is no SIM card in your phone or you may have inserted it incorrectly.

See *To insert the SIM card* on page 5.

The SIM card connectors need cleaning. If the card is damaged, contact AT&T.

Insert correct SIM card

Your phone is set to work only with certain SIM cards. Check if you are using the correct operator SIM card.

Wrong PIN/Wrong PIN2

You have entered your PIN or PIN2 incorrectly.

Enter the correct PIN or PIN2 and select **Yes**. See *PIN* on page 7.

PIN blocked/PIN2 blocked

You have entered your PIN or PIN2 code incorrectly three times in a row.

To unblock, see *SIM card lock* on page 57.

Codes do not match

Codes that you have entered do not match. When you want to change a security code, for example your PIN, you have to confirm the new code. See *SIM card lock* on page 57.

No net. coverage

Your phone is in flight mode. See *Flight mode* on page 51.

Your phone is not receiving any network signal, or the received signal is too weak. Contact AT&T and make sure that the network has coverage where you are.

The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone

that is causing the problem. Please contact the nearest Sony Ericsson service location.

Emergency calls only

You are within range of a network, but you are not allowed to use it.

However, in an emergency, some network operators allow you to call the international emergency number 911 or 112. See *Emergency calls* on page 23.

PUK blocked. Contact provider.

You entered your personal unblocking key code (PUK) incorrectly 10 times in a row.

Important information

Sony Ericsson Consumer Web site

On www.sonyericsson.com/support is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Service and support

From now on you will have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support.
- A global network of Call Centers.
- An extensive network of Sony Ericsson service partners.
- A warranty period. Learn more about the warranty conditions in this User guide.

On www.sonyericsson.com, under the support section in the language of your choice, you will find the latest support tools and information, such as software updates, Knowledge base, phone setup and additional help when you require it.

For operator-specific services and features, please contact your network operator for more information.

You can also contact our Call Centers. Use the phone number for the nearest Call Center in the list below. If your country/region is not represented in the list, please contact your local dealer. (The phone numbers below were correct at the time of going to print. On www.sonyericsson.com you can always find the latest updates.)

In the unlikely event that your product needs service please contact the dealer from whom it was purchased, or one of our service partners. Save your original proof of purchase, you will need it if you need to claim warranty.

You will be charged for a call to one of our Call Centers according to national rates, including local taxes, unless the phone number is a toll-free number. Hearing Aid Compatibility Rating

This model handset was designed to comply with the requirements set forth in Section 20.19 of the Federal Communication Commission's (FCC) rules governing hearing aid compatibility (HAC), for the reduction of RF interference and magnetic coupling (T-coil) to hearing aids. The Microphone (M) rating and T-coil (T) rating is defined and labeled on the handset box. Devices meeting HAC compliance must have a minimum M3 and/or T3 rating or above

as defined by the FCC in accordance with the latest ANSI Standard C63.19. The (M) rating refers to lower RF emission levels of the handset. The (T) rating refers to the magnetic coupling between the handset and the T-coil compatible hearing aid. Some hearing aids are also provided an (M) rating, and are more immune than others to interference. To determine the (M) rating of your hearing aid, please contact your hearing health professional. More information about digital wireless devices and hearing aid compatibility can be found at www.sonyericsson-snc.com.

Support

Argentina	800-333-7427
Australia	1-300650-600
Belgique/België	02-7451611
Brasil	4001-04444
Canada	1-866-766-9374
Central Africa	+27 112589023
Chile	123-0020-0656
Colombia	18009122135
Česká republika	844550 055
Danmark	33 31 28 28
Deutschland	0180 534 2020
Ελλάδα	801-11-810-810 210-89 91 919
España	902 180 576
France	0 825 383 383
Hong Kong/香港	8203 8863
Hrvatska	062 000 000
India/भारत	39011111
Indonesia	021-2701388
Ireland	1850 545 888
Italia	06 48895206
Lietuva	8 70055030
Magyarország	+36 1 880 4747

questions.AR@support.sonyericsson.com
questions.AU@support.sonyericsson.com
questions.BE@support.sonyericsson.com
questions.BR@support.sonyericsson.com
questions.CA@support.sonyericsson.com
questions.CF@support.sonyericsson.com
questions.CL@support.sonyericsson.com
questions.CO@support.sonyericsson.com
questions.CZ@support.sonyericsson.com
questions.DK@support.sonyericsson.com
questions.DE@support.sonyericsson.com
questions.GR@support.sonyericsson.com
questions.ES@support.sonyericsson.com
questions.FR@support.sonyericsson.com
questions.HK@support.sonyericsson.com
questions.HR@support.sonyericsson.com
questions.IN@support.sonyericsson.com
questions.ID@support.sonyericsson.com
questions.IE@support.sonyericsson.com
questions.IT@support.sonyericsson.com
questions.LT@support.sonyericsson.com
questions.HU@support.sonyericsson.com

Malaysia	1-800-889900
México	01 800 000 4722
Nederland	0900 899 8318
New Zealand	0800-100150
Norge	815 00 840
Österreich	0810 200245
Pakistan	111 22 55 73 (92-21) 111 22 55 73
Philippines/Pilipinas	02-6351860
Polska	0 (prefiks) 22 6916200
Portugal	808 204 466
România	(+4021) 401 0401
Россия	8 (495) 787 0986
Schweiz/Suisse/Svizzera	0848 824 040
Singapore	67440733
Slovensko	02-5443 6443
South Africa	0861 6322222
Suomi	09-299 2000
Sverige	013-24 45 00
Türkiye	0212 473 77 71
Україна	(+0380) 44 590 1515
United Kingdom	08705 23 7237
United States	1-866-7669347
Venezuela	0-800-100-2250
الإمارات العربية المتحدة	43 919880
中国	4008100000
台灣	02-25625511
☎	02-2483030

questions.MY@support.sonyericsson.com
 questions.MX@support.sonyericsson.com
 questions.NL@support.sonyericsson.com
 questions.NZ@support.sonyericsson.com
 questions.NO@support.sonyericsson.com
 questions.AT@support.sonyericsson.com
 questions.PK@support.sonyericsson.com

questions.PH@support.sonyericsson.com
 questions.PL@support.sonyericsson.com
 questions.PT@support.sonyericsson.com
 questions.RO@support.sonyericsson.com
 questions.RU@support.sonyericsson.com
 questions.CH@support.sonyericsson.com
 questions.SG@support.sonyericsson.com
 questions.SK@support.sonyericsson.com
 questions.ZA@support.sonyericsson.com
 questions.FI@support.sonyericsson.com
 questions.SE@support.sonyericsson.com
 questions.TR@support.sonyericsson.com
 questions.UA@support.sonyericsson.com
 questions.GB@support.sonyericsson.com
 questions.US@support.sonyericsson.com
 questions.VE@support.sonyericsson.com
 questions.AE@support.sonyericsson.com
 questions.CN@support.sonyericsson.com
 questions.TW@support.sonyericsson.com
 questions.TH@support.sonyericsson.com

Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have



the product checked by a certified service partner before charging or using it.

Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.
- **Warning!** May explode if disposed of in fire.

- Do not expose your product to liquid or moisture or excess humidity.
- For optimum performance, your Sony Ericsson Product should not be operated in temperatures below -10°C (+14°F) or above +45°C (+113°F). Do not expose the battery to temperatures above +60°C (+140°F).



- Do not expose to flames or lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint or attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.
- Consult with authorized medical staff and the instructions of the medical device manufacturer before using your product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic devices or disable the radio transmitting functionality of the device where required or requested to do so.
- Do not use where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in your car.
- Caution: Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use your Bluetooth Headset in positions where it is uncomfortable or will be subject to pressure.



Children

Warning! Keep out of the reach of children. Do not allow children to play with mobile phones or accessories.



They could hurt themselves or others. Products may contain small parts that could become detached and create a choking hazard.

Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. If it does not fit into the outlet, have a proper outlet installed by an electrician. When power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged. Use of charging devices that are not Sony Ericsson branded may impose increased safety risks.

Battery

New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. Use for intended purpose only. Charge the battery in temperatures between +5°C (+41°F) and +45°C (+113°F). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before removing the battery. Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks. Replace the battery only with another Sony Ericsson battery that has been qualified with the product per the standard IEEE-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

Personal medical devices

Mobile phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 15 cm (6 inches) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

Driving

Some vehicle manufacturers forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with your vehicle manufacturer's representative to be sure that your mobile phone or Bluetooth handsfree will not affect the electronic systems in your vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided "As is" and "With all faults". Sony Ericsson does not make any representation or warranty as to the accuracy of such location information.

Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings.

Caution: Do not use GPS functionality in a manner which causes distraction from driving.

Emergency calls

Calls cannot be guaranteed under all conditions. Never rely solely upon mobile phones for essential communications. Calls may not be possible in all areas, on all networks, or when certain network services and/or phone features are used.

Antenna

Use of antenna devices not marketed by Sony Ericsson could damage your phone, reduce performance, and produce SAR levels above the established limits. Do not cover the antenna with your hand as this affects call quality, power levels and can shorten talk and standby times.

Radio frequency (RF) exposure and Specific Absorption Rate (SAR)

When your phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone has been tested when positioned a

minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body.

For more information about SAR and radio frequency exposure go to: www.sonyericsson.com/health.

Flight mode

Bluetooth and WLAN functionality, if available in your device, can be enabled in Flight mode but may be prohibited onboard aircraft or in other areas where radio transmissions are prohibited. In such environments, please seek proper authorization before enabling Bluetooth or WLAN functionality even in Flight mode.

Malware

Malware (short for malicious software) is software that can harm your mobile phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While your device does employ security measures to resist such efforts, Sony Ericsson does not warrant or represent that your device will be impervious to introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to your mobile phone from known, reliable sources.

Accessories

Use only Sony Ericsson branded original accessories and certified service partners. Sony Ericsson does not test third-party accessories. Accessories may influence RF Exposure, radio performance, sound loudness,

electric safety and other areas. Third-party accessories and parts may pose a risk to your health or safety or decrease performance.

Accessible Solutions/Special Needs

In the US, compatible Sony Ericsson phones may offer compatibility with TTY terminals (with use of necessary accessory). For more information call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or go to www.sonyericsson-snc.com.

Disposal of old electrical and electronic equipment

Electronic equipment and batteries should not be included as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human health. Check local regulations by contacting your local city office, your household waste disposal service, the shop where you purchased the product or calling a Sony Ericsson Call Center.



Disposing of the battery

Check local regulations or call a Sony Ericsson Call Center for information. Never use municipal waste.



Memory Card

If your product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If your product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

Warning!

If your device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on Memory Card Use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or

writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

Loudness warning!

Avoid volume levels that may be harmful to your hearing.

End User License Agreement

Software delivered with this device and its media is owned by Sony Ericsson Mobile Communications AB, and/or its affiliated companies and its suppliers and licensors.

Sony Ericsson grants you a non-exclusive limited license to use the Software solely in conjunction with the Device on which it is installed or delivered. Ownership of the Software is not sold, transferred or otherwise conveyed.

Do not use any means to discover the source code or any component of the Software, reproduce and distribute the Software, or modify the Software. You are entitled to transfer rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided the third party agrees in writing to be bound by the terms of this License.

This license exists throughout the useful life of this Device. It can be terminated by transferring your rights to the Device to a third party in writing. Failure to comply with any of these terms and conditions will terminate the license immediately.

Sony Ericsson and its third party suppliers and licensors retain all rights, title and interest in and to the Software. Sony Ericsson, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms.

This license is governed by the laws of Sweden. When applicable, the foregoing applies to statutory consumer rights.

In the event Software accompanying or provided in conjunction with your device is provided with additional terms and conditions, such provisions shall also govern your possession and usage of the Software.

Limited Warranty

Sony Ericsson Mobile Communications AB, SE-221 88 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty for your mobile phone, original accessory delivered with your mobile phone, and/or your mobile computing product (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit www.sonyericsson.com to get further information.

Our warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of one (1) year as from the original date of purchase of the Product.

What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorized distributors or service partners, in the country* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads and other information may be lost when your Sony Ericsson Product is repaired or replaced. At present Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

Conditions

- 1 This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony Ericsson authorized dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
- 2 If Sony Ericsson repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time

of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.

- 3 This warranty does not cover any failure of the Product due to normal tear and wear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid.

A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson.

Minor variations in display brightness and center may occur between the phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between phones. This is nothing uncommon and is not regarded as a defective camera module.

- 4 Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.
- 5 This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.

- 6 The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.

- 7 Tampering with any of the seals on the Product will void the warranty.

- 8 THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

***Geographical scope of the warranty**

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you

require servicing, provided that an identical Product is sold in such country by an authorised Sony Ericsson distributor. To find out if your Product is sold in the country you are in, please call the local Sony Ericsson Call Center. Please observe that certain services may not be possible elsewhere than in the country of original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products.

** In some countries/regions additional information (such as a valid warranty card) may be requested.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.



If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity for W760a

We, **Sony Ericsson Mobile Communications AB** of Nya Vattentorget SE-221 88 Lund, Sweden

declare under our sole responsibility that our product **Sony Ericsson type AAD-3252041-BV** and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 301 908-1:V2.2.1, EN 301 908-2:V2.2.1,

EN 300 328-V1.7.1, EN 300 440-1-V1.7.1,
EN300 440-2-V1.1.2, EN 301 489-3-V1.4.1,
EN 301 489-7-V1.3.1, EN301 489-17-V1.2.1,
EN 301 489-24-V1.3.1, EN 60 950-1:2006
following the provisions of, Radio Equipment and
Telecommunication Terminal Equipment directive
1999/5/EC.

Lund, December 2007

CE 0682



Shoji Nemoto,

Head of Product Business Group GSM/UMTS

We fulfill the requirements of the R&TTE Directive
(1999/5/EC).

Index

A

alarms	52
answering service	27
applications	45
appointments	53
assembly	5
AT&T Music	18
audio book	21

B

battery	
charging	8
inserting	5
use and care	66
Bluetooth™ visibility	46
Bluetooth™ wireless technology	46
bookmarks	

creating	39
select	39

C

calendar	53–54
call forwarding	28
call list	26
caller-specific ringtones	24
calls	
answering and rejecting	22
handling two calls	30

international	22
making and receiving	22
putting on hold	29
recording	44
camera	36–37
code memo	60
conference calls	30
contacts	
adding phone contacts	23
default contacts	23
groups	26
synchronizing	50

D

date	56
------------	----

E

Email See Mobile Email	
emergency numbers	23
entering text	15

F

file manager	51
flight mode	51
FM radio	43

G

games	44
-------------	----

GPS	41	keypad	58
groups	26	phone	57
H			
handsfree	18, 27	master reset	59
Bluetooth™ technology	47	Media Manager	16
help	7	memory card	14
hiding number	31	memory status	25
history		menu overview	11
Web pages	40	menus	13
I			
IMEI number	58	messages	
instant messaging (IM)	34	text and multimedia	31
Internet		voice	33
bookmarks	39	microphone	22
security and certificates	40	Mobile Email	34
J			
Java™	45	Music Apps	18
K			
keypad lock	58	Music Videos	18
automatic	58	MusicDJ™	44
keys	9	MusicID	18
L			
language	15	my numbers	31
location services	41	N	
lock		navigating menus	13
M			
pan and zoom			
			Web pages
			40
P			

password saver	54	on Web pages	40
PC Suite		selection keys	13
synchronizing	50	SensMe™	20
phone mode	50	settings	
phone name	46	Java™	45
photo feeds	41	shake control	19
photo fix	37	shortcuts	13
photo tags	38	SIM card	57
PhotoDJ™	38	copying to/from	24
photos		locking	57
improving	37	unlocking	57
photo fix	37	sound recorder	44
pictures	38	speed dial	26
editing	38	standby	7
improving	37	notes	54
photo fix	37	Streaming Music	18
PIN code		submenus	13
changing	57	synchronizing	50
unlocking	7		
playlists	20	T	
podcasts	40	T9™ Text Input	15
profiles	56	tasks	54
PUK	7, 57	templates	33
		add a template	33
R		text and multimedia messaging	31
ringtones	43	theme	56
		time	56
S		time zone	56
safety guidelines	65	transfer method	
search		Bluetooth™ technology	46

USB	48
transferring	
camera pictures	37
files	48
music	17
sound	47
turning on/off	
Bluetooth™ function	46
keypad lock	58
phone lock	57
SIM lock protection	57

V

video	
editing	38
video player	43
video recorder	36
Video Share	28
VideoDJ™	38
VIP Access	18
voice answering	28
voice commands	27
voice control	27
voice dialing	27
voice messages	33
voicemail	27
volume	
ear speaker	22
ringtone	43
volume control	19

W

Walkman® player	18
warranty	70
Web	
search	40
Web pages	
history	40
pan and zoom	40

Z

zoom	36
------------	----