TOPCOM XPLORER 871

QUICK INSTALLATION GUIDE GUIDE FÖR SNABBINSTALLATION

DECLARATION OF CONFORMITY

We, TMS Nv, Grauwmeer 17, 3001 Heverlee, Belgium, declare that our product :

Product name: TOPCOM

Model type: Xplorer 871

is in conformity with the essential requirements of the R&TTE directive 1999/5/EC and carries the CE mark accordingly.

Supplementary information:

The product complies with the requirements of:

Low Voltage Directive 73/23/EEC EMC Directive 89/336/EEC

Date:08/11/2002Place:Heverlee, BelgiumName:Verheyden GeertFunction:Technical Director

Signature:

European contact: TMS Nv, R&D department, Research Park, Grauwmeer 17, 3001 Heverlee, Belgium. Tel : +32 16 398920, Fax : +32 16 398939

SVENSKA - GARANTI

- På denna utrustning är det 2 års garanti. Garantin gäller vid uppvisande av originalfaktura eller kvitto, under förutsättning att inköpsdatum och maskintyp står angivet.
- Under garantitiden utför Topcom kostnadsfritt reparationer på apparater behäftade med fel som orsakats av material- eller tillverkningsfel. Topcom uppfyller efter eget godtycke skyldigheterna som omfattas av garantin genom att antingen reparera eller byta ut skadad utrustning.
- Garantin omfattar inte fel och skador som orsakats av köparen eller av okvalificerad reparatör.
- Garantin omfattar inte skador som orsakats av okvalificerad behandling, och skador som orsakats av att andra än originaldelar eller tillbehör används, som inte rekommenderats av Topcom.
- Garantin omfattar inte skador som orsakats av yttre faktorer, såsom blixtar, vatten och eldsvåda. Garantin gäller inte heller om enhetsnumret på utrustningen har ändrats, tagits bort eller blivit oläslig.

OBS! Glöm inte att bifoga ditt inköpskvitto om du returnerar utrustningen.

1. INTRODUKTION

1.1 LEVERANSINNEHÅLL

- 1. ADSL-modem
- 2. Ett ADSL-filter (gäller endast Sverige)
- 3. Ett telefonjack (gäller endast Sverige)
- 4. En CD-ROM skiva med USB-drivrutin och manual
- 5. En bruksanvisning
- 6. Två RJ-11 ADSL/telefonsladdar
- 7. En CAT-5 LAN övergångssladd
- 8. En USB-sladd
- 9. En nätströmsadapter

1.2 EGENSKAPER

ADSL Multi-Mode standard:

- nedströms upp till 8Mbps.
- uppströms upp till 1024Kbps.
- följer Multi-Mode standard (ANSI T1.413, version 2; G.dmt (G.992.1); G.lite (G992.2); G.hs (G994.1)).

Kopplingsprotokoll:

RFC 1483 Överbryggat läge LLC/SNAP

Virtuell krets :

- VPI : 8
- VCI : 35

2. ADSL-MODEMETS FUNKTION

2.1 DE ÖVERSTA LED-LAMPORNA



LED		Betyder	
1	SYS	Blinkar när routern fungerar riktigt.	
2	ADSL RXD	Blinkar när den tar emot data.	
3	ADSL TXD	Blinkar vid överföring av data.	
4	ADSL SYN	Lyser grönt när ADSL :ns fysiska skikt är anslutet.	
5	LAN LNK	Lyser grönt när LAN länken är uppe.	
6	LAN ACT	Blinkar när aktivitet förekommer på LAN-porten.	
7	PWR	Lyser grönt när nätströmsadaptern är ansluten.	

2.2 BE BAKRE PORTARNA



Nätström (jack)	Anslut den medföljande nätströmsadaptern till detta jack.
USB (USB-sladd)	Anslut den medföljande USB-sladden till denna port när du ansluter till PC :n.
LAN (RJ-45-sladd)	Anslut den medföljande övergångssladden till denna port när du ansluter till ett NIC (nätverkskort) i PC :n. Anslut en UTP Ethernet-sladd till denna port när du ansluter till ett LAN, t ex ett nätverk på jobbet eller hemma.
LINJE (RJ-11-sladd)	Anslut den medföljande RJ-11-sladden till denna port när du ansluter till ADSL.

2.3 KABELFÖRING

Genom Ethernet-porten

Apparatens LAN-port är kopplad precis som en nätverksadapter. Från apparaten direkt till en PC. Sladden ska vara en Ethernet övergångssladd.

Genom USB-porten

Apparaten kan användas som en nätverksadapter på din PC. Det innebär att du inte behöver installera en nätverksadaptor på din PC först, innan du ansluter din PC till ADSL-modemet. Anslut bara den medföljande USB-sladden till USB-porten på ADSL-modemet och anslut den andra änden till PC :n.

Kontrollera att både ADSL-modemet och PC :n är på. På apparatens framsida sitter en rad LED-lampor. Kontrollera först och främst att LED-lamporna PWR, LAN LNK och ADSL SYN lyser.

2.4 LINJEKOPPLING (GÄLLER BARA SVERIGE)



XPLORER 871

2.5 VANLIGA ANVÄNDNINGSOMRÅDEN



3. INSTALLATION OCH KONFIGURERING

3.1 INSTALLERA USB-DRIVRUTIN

!!! OBS!!! Du behöver bara installera USB-drivrutinerna om du vill använda modemet genom USB-porten och <u>inte</u> genom Ethernet-anslutningen .

Om du ansluter ADSL-modemet genom USB-porten första gången till PC :n, kommer Windows automatiskt att söka efter programvaran. Följ dessa steg för att installera USB-drivrutinen.

3.1.1 För Windows XP

 När Windows meddelar att ny programvara påträffats, väljer du "Installera från lista eller specifik plats" och klicka på "Nästa >".



 Sätt i installationsCD:n i CD-ROM enheten. Kontrollera "Sök borttagbara media" och klicka på "Nästa >". Därefter tar det bara några sekunder att söka och installera programvaran.

Fixed New Hardword Waterd	
Phase closes you much and a	
Distanti ku fan her ber dine trên te fin stadi inne din stêre infin eel men din stêre bê Ei haart men din serie Ei haart men din serie Ei haart men din serie	elsentes la congraetta detad analy, -tali intelacioni fan tali tali anti intelació Mego Callen (- sente
Citizet mark 1 of transmission Description where we do not be able produced with the	ina na dal Anto Anglia, Ingela, Anglia Anglia, Anglia, Ingela, Anglia,
	- fast Sect Cavar

3. När fönstret "Installation av maskinvara" eller "Installation av programvara" dyker upp, trycker du bara på "Fortsätt i alla fall" för att gå vidare.





4. Klicka därefter på "Avsluta".



 Efter en stund kommer Windows att visa att den nya maskinvaran, USB ADSL-adaptor, har påträffats. Välj "Installera från en lista eller specifik plats". Klicka på "Nästa >".



6. Klicka på "Nästa >"när följande bild dyker upp.



7. När fönstret "Installation av maskinvara" visas, trycker du på "Fortsätt ändå".



8. Klicka därefter på "Avsluta" för att avsluta installationen.



 När drivrutinen är installerad, bör du följa instruktionerna i avsnittet "3.2 Konfigurera nätverksinställningar" nedan för att ändra nätverksinställningarna på din PC.

3.1.2 För Windows 2000

1. När Windows meddelar att den nya maskinvaran påträffats, klickar du på "Nästa >" för att fortsätta.



 Välj "Sök efter lämplig drivrutin för min apparat". Klicka på "Nästa>". Sätt därefter i installationsCD:n i CD-ROM enheten.



3. Markera "CD-ROM drivenhet" i nästa fönster och klicka på "Nästa>".



4. Följ installationsguiden och klicka på knappen "Nästa >".



5. När fönstret "Hittar inte digital signatur" visas, tryck på "Ja" för att fortsätta installationen.



6. Tryck på "Avsluta".



7. Om följande fönster visas: "Hittar inte digital signatur", tryck på "Ja" för att avsluta installationen.



3.1.3 För Windows Me

 När Windows meddelar att ny maskinvara påträffats. Välj "Ange drivrutinens sökväg" och klicka på "Nästa >".



 Sätt i installationsCD :n i CD-ROM enheten och markera "Borttagbar media". Klicka "Nästa>" för att fortsätta.



3. Följ installationsguiden och klicka på knappen "Nästa >".



 Fortsätt följa installationsguiden. Windows kommer att börja kopiera filer till ditt system. Klicka sedan på "Avsluta".



3.1.4 För Windows 98

1. När Windows meddelar att ny maskinvara påträffats, klicka på "Nästa >".



2. Välj, i nästa fönster, "Sök efter bästa drivrutin för din apparat" och klicka på "Nästa >".



 Sätt i installationsCD :n i CD-ROM enheten och markera "Ange sökväg". Klicka på "Bläddra..." för att ange sökväg, t ex F:\Drivrutin\. Klicka på "OK" och sedan på "Nästa>" för att fortsätta.





4. Fortsätt igenom installationsguiden och klicka på knappen "Nästa >".



5. Windows kommer att börja kopiera filer till ditt system. Klicka därefter på "Avsluta".



 Ett nytt fönster dyker upp, där du ska ange sökvägen till Windows källfiler.. Ange sökväg. Klicka på "OK".

Country	F des	8
3	The file billpage of on Windows 58 Second Science CD FICH carries the Intend	DK I
	resent torisations (8) Second E Miles (2) (FIGH in the selected diver, and clock (3).	Cent
		- marie
	Copyline how	Cigene.
	2	

3.2 KONFIGURERA NÄTVERKSINSTÄLLNINGAR

I detta avsnitt beskrivs vilken konfigurering som krävs för LAN-anslutna PC som kommunicerar med ADSLmodem. Antingen för att konfigurera apparaten eller för tillgång till nätverket.

3.2.1 For Windows XP

 Gå till Start / Kontrollpanelen (i Classic View). Dubbelklicka på Nätverksanslutningar, i Kontrollpanelen.



2. Dubbelklicka på Lokal nätverksanslutning.

3. Klicka på Egenskaper i fönstret LAN nätverksanslutning.

Local Area Cores	ction Status	[
mmd [Support]		
Connectors		
Statur		Connected
Duaxien		08.05.24
Speed		00.0 Mbei
Ashiky		Received
	Calle	
Peperies	lede	1740
-		Que

4. Välj Internetprotokoll (TCP/IP) och klicka på Egenskaper.

E Local Area Connection Properties	.78
General Automosco Advanced	
Crivectuleg.	
D-Link DPE-6307X PCI Fast El-wood Adques (mv)	0
Contraction care to blowing long.	
I hand. I have a free of the second s	
Shawicon in sulfication area often connected	
	Canot

5. Välj Automatisk IP-adress och Automatisk DNS-serveradress radioknappar.

Dennik [Alternate Designation]		
Voccer pr Platting anipolitation through the operation of the second trans- te-approximation of second trans-	enally if you take if you seemed a	deers to
Contrast on of antice accounts of		
Cliebe Making Patters		
d'addea		
Tabas into 1		
Dellamo		
Anna and a second second		
Citizate Make NC area att		
Change and some		
	1	dilament.

6. Klicka på OK för att avsluta konfigurationen.

3.2.2 För Windows 2000

- 1. Gå till Start / Inställningar / Kontrollpanelen. Klicka på Nätverk och Uppringningsegenskaper.
- 2. Dubbelklicka på LAN nätverksanslutning.



3. I fönstret LAN nätverksanslutning, klicka på Egenskaper.

Local Area Colorecto	al Walde	21.5
Great		
Correction Notice		Corrected 00.64.77
Speed.		103 Mps
Antonio Practicani	5an 🐔	- Decement
	[ine	
		Que

4. Välj Internetprotokoll (TCP/IP) och klicka på Egenskaper.

ad leve Constitut 2 Property 1	21
General Huarg	
Downi unig	
Ap Product #1121282.0727 or Eliterative System	
Contas	•]
Componenti checked an sontigi (es sarenciar)	-
Of Y Add J. Fund	- 22
N.A. Brown Department of the	
1.	£
nea permit Present	2
Canopies	~
with any extend provid Rel provide communication	
area d'est dessantes dessant	
T they are reactive when present	
10.5	-
The constant of a second	-

5. Välj Automatisk IP-adress och Automatisk DNS-serveradress radioknappar...

Dena 1	date in the second	- 11
And the state of t	000000000000000	and the second
Paulopada Chever	particular in the part of the	d abarmen be
to specific a starty	and the second second second	
A. Draw or P adda	anna a	
Carlo Manager	addres.	
of states	Contract of the	1.2.1
الماد مادولا	1	
2 July comes	1	
~		
7 Ibellitare	alters admitted	
- Light Many 1	till person subfressed	
3400614 414		- 41
	- F	
		100000
		(Advance)
		Cane

6. Klicka på OK för att avsluta konfigurationen.

3.2.3 För Windows 95/98/Me

- Gå till Start / Inställningar / Kontrollpanelen. Dubbelklicka på Nätverk i Kontrollpanelen och välj fliken Konfiguration.
- 2. Välj TCP / IP -> NE2000 Kompatibel, eller namnet på vilket Nätverkskort (NIC) som helst i din PC.
- 3. Klicka på Egenskaper.

Returns Riff.
Congroup inentian inential
The later is a second sec
Brod with county and
The Bill + Det & Alame
TheRUX - HE200Carpathe
10-10-10-10-10-00-10-10-10-10-10-10-10-1
The and parties that gits Montesh Barrando
the second se
Panap Ranual Lugan
part of the second s
the and Park Drame.
Design contraction and the second second second
TEP (P v Re patient po one to remoti vitre Merall and mile execution) -
117 MR 011200
And the second s
COROL STREET
the second secon

 Välj fliken IP-adress. Välj, på denna sida, Automatisk IP-adress och Automatisk DNS-serveradress radioknappar.

10VP Posetiel			60
Entra Line	Manual Internet	1 1	-
		5000	-
President of the rate	darith and	out to make	Carlon and
To man helper	the set address.	and there is	and the second second
A Destant alles	Advertised		
A Sugar and antes			
Patient T	100.00	1.1251	Ĕ.
marker T		1127	6
and the second second		-	
ő	1.3	*	Crue
		×	2.000

- 5. Välj sedan fliken DNS-konfiguration.
- 6. Välj Avaktivera DNS radioknapp och klicka på "OK" för att avsluta konfigurationen.

10Pril? Proportion IEED
City Containing and Advanced Rooters
" Some Hill
The second secon
Dent Court

3.2.4 För Windows NT4.0

 Gå till Start / Inställningar / Kontrollpanelen. I Kontrollpanelen dubbelklickar man på Nätverk och välj fliken Protokoll. 2. Välj TCP/IP-protokoll och klicka på Egenskaper.



3. Välj Automatisk IP-adress från en DHCP-server radioknapp och klicka på OK.

Historoft TCP/IP Properties	1113
PANNE INC SHEAMER Friday	
$(n; \theta^{2})$ where the observation of a marginal built for a DFOP some θ^{2} processing the second secon	a DHEP carries. Their topic 4 in
Anges Description of a discourse of table and	-
C (perty or Fatters	
(Maria 1997)	
	Agreese
DE Canot	1 50

ENGLISH - WARRANTY

- This equipment comes with a 24-month warranty. The warranty will be honoured on presentation of the original bill or receipt, provided the date of purchase and the unit type are indicated.
- During the time of the warranty Topcom will repair free of charge any defects caused by material or manufacturing faults. Topcom will at its own discretion fulfil its warranty obligations by either repairing or exchanging the faulty equipment.
- Any warranty claims will be invalidated as a result of intervention by the buyer or unqualified third parties.
- Damage caused by inexpert treatment or operation, and damage resulting from the use of non-original
 parts or accessories not recommended by Topcom is not covered by the warranty.
- The warranty does not cover damage caused by outside factors, such as lightning, water and fire, nor
 does it apply if the unit numbers on the equipment have been changed, removed or rendered illegible.

Note: Please do not forget to enclose your receipt if you return the equipment.

1. INTRODUCTION

1.1 PACKAGE CONTENTS

- 1. ADSL Modem
- 2. One ADSL Filter (only for Sweden)
- 3. One Phone Plug (only for Sweden)
- 4. One CD-ROM containing the USB driver and manual
- 5. One User Guide
- 6. Two RJ-11 ADSL/telephone cable
- 7. One CAT-5 crossover LAN cable
- 8. One USB cable
- 9. One power adapter

1.2 FEATURES

ADSL Multi-Mode Standard:

- downstream up to 8Mbps.
- upstream up to 1024Kbps.
- compliant with Multi-Mode standard (ANSI T1.413, Issue 2; G.dmt (G.992.1); G.lite (G992.2); G.hs (G994.1)).

Connection Protocol:

RFC 1483 Bridged Mode LLC/SNAP

Virtual circuit :

- VPI:8
- VCI : 35

23

2. USING THE ADSL MODEM

2.1 THE TOP LEDS



	LED	Meaning	
1	SYS	Flashes when the router is working properly.	
2	ADSL RXD	Flashes when receiving data.	
3	ADSL TXD	Flashes when transmitting data.	
4	ADSL SYN	Lit green when ADSL physical layer is connected.	
5	LAN LNK	Lit green when the LAN link is up.	
6	LAN ACT	Flashes when there is activity on the LAN port.	
7	PWR	Lit green when power adapter is connected.	

2.2 THE REAR PORTS



Power (jack)	Connect the supplied power adapter to this jack.
USB (USB connector)	Connect the supplied USB cable to this port when connecting to the PC.
LAN (RJ-45 connector)	Connect the supplied crossover cable to this port when connecting to a NIC (Network Interface card) in PC. Connect an UTP Ethernet cable to this port when connecting to a LAN such as an office or home network.
LINE (RJ-11 connector)	Connect the supplied RJ-11 cable to this port when connecting to the ADSL.

2.3 CABLING

Through Ethernet Port

The product's LAN port is wired just like a Network Adapter's port. From the product directly to a PC, the cable should be an Ethernet crossover cable.

Through USB Port

The product can be used as a Network Adapter on your PC. That means you do not have to install a network adapter first on your PC before connecting the ADSL Modem. Just connect the supplied USB cable to the USB port of the ADSL Modem and connect the other end to the PC.

Make sure that your ADSL Modem and PC are turned on. On the front of the product is a bank of LEDs. As a first check, please verify that the PWR, LAN LNK and ADSL SYN LEDs are lit.

2.4 LINE CONNECTION (ONLY FOR SWEDEN)



XPLORER 871

2.5 TYPICAL APPLICATIONS



3. INSTALLATION AND CONFIGURATION

3.1 INSTALLING THE USB DRIVER

!!! NOTE !!! You only need to install the USB-drivers if you want to use the modem through your USB port and <u>not</u> through your Ethernet connection .

If you connect the ADSL Modem through the USB port for the first time to the PC, Windows will automatically detect the device. Follow the steps to install the USB driver.

3.1.1 For Windows XP

 When Windows tells you that the new device has been detected, select "Install from a list or specific location" and click "Next >".



 Insert the installation CD into the CD-ROM drive. Check "Search removable media" and click "Next >". Then, it takes seconds to search and install the software.

Fire of New Devices in Wassed	
Please choice year match and installation options.	De la como
② Taxati to the test size intervaluation the line check lines, between tritler or separatifies data over path and research result. The line lines faced within test Elitareth amount in social (Regs (2) 4004.) □ Include the logitimes the search	Planarana.
Clinit watt i di tanonin tina cond Branch adama da ba bar dati ba bi Mat	
- 1946	Hant Cavar

3. When windows titled "Hardware Installation" or "Software Installation" appear, press "Continue Anyway" to go on.





4. Then, click "Finish".



 After a few moments, Windows will show the new device, USB ADSL Adapter, has been detected. Select "Install from a list or specific location". Click "Next >".



6. Click "Next >" when the following figure appears.



7. When windows titled "Hardware Installation" appears, press "Continue Anyway".



8. Then, click "Finish" to end installation.



 After installing the driver, follow the section "3.2 Configuring the Network Properties" below to modify the network settings on your PC.

3.1.2 For Windows 2000

1. When Windows tells you that the new device has been detected, click "Next >" to continue.



 Select "Search for a suitable driver for my device". Click "Next>". Then, insert the installation CD into the CD-ROM drive.



3. In next window, check "CD-ROM drives" and click "Next>".



4. Continuing through the Wizard, click the "Next >" button.



5. When window titled "Digital Signature Not Found" appears, press "Yes" to continue the installation.



6. Press "Finish".



7. If the following window "Digital Signature Not Found" appears, press "Yes" to end the installation.



3.1.3 For Windows Me

 When Windows tells you that the new device has been detected. Select "Specify the location of the driver" and click "Next >".



 Insert the installation CD into the CD-ROM drive and check "Removable Media". Click "Next>" to continue.



3. Continuing through the Wizard, click the "Next >" button.



4. Continuing through the Wizard, Windows will start copying files to your system. Then, click "Finish".



3.1.4 For Windows 98

1. When Windows tells you that the new device has been detected, click "Next >".



2. In the next window, select "Search for the best driver for your device" and click "Next >".



 Insert the installation CD into the CD-ROM drive and check "Specify a location". Click "Browse..." to specify the driver directory such as F:\Driver\. Click "OK" and then "Next>" to continue.





4. Continuing through the Wizard, click the "Next >" button.



5. Windows will start copying files to your system. Then, click "Finish".



You will see the following screen prompting for the path of the Windows source files. Please specify a location. Click "OK".

Country	Film	1
3	The file lottpage of on Windows 18 Second Dillow CD FDM carried to Insect	DK.
	resent totisations 10 Second Edition CD-RDM in the selected drive, and click DR.	Cent
		park
	Digethei hos	1 Dealer
	2	

3.2 CONFIGURING THE NETWORK PROPERTIES

This section describes the configuration required by LAN-attached PCs that communicate with the ADSL Modem, either to configure the device, or for network access.

3.2.1 For Windows XP

1. Go to Start / Control Panel (in Classic View). In the Control Panel, double-click on Network Connections.



2. Double-click Local Area Connection.

3. In the LAN Area Connection Status window, click Properties.

Connected OIL05.24
Converted QEQ5.24
Connected OILOS:24
08.05.04
·
- Recoived

4. Select Internet Protocol (TCP/IP) and click Properties.

- Local Area Connection Properties	. 78
General Automotion Advanced	- 3
Crivectuling.	
D-Link DPE-6307X PCI Fast Directed Adapter (mv)	0
Contraction care for billioning interact Contraction of the contraction of the contraction Contraction of Prive Design for Marcall Releases Contraction of Contraction of the Contraction Contraction of Contraction of the Contraction Contraction of Contraction of the Contraction Contraction of Contraction of Contraction of of	
ketal Teconomic T	A 1.
0A	Canot

5. Select the Obtain an IP address automatically and the Obtain DNS server address automatically radio buttons.

Dennik Atlantik Enripsola	l	
Voccer get P setting unique the capability Observed, pilor the appropriate P setting.	d activity of any sector and your serve	R advertige for
Christe Father an	-	
of saldies	100	
Taken and		
Total generation		
Classic Dell area ables	e administ	
Patrick Coll and		
Address (11.0) on the	1.1	
		L Alland

6. Click OK to finish the configuration.

3.2.2 For Windows 2000

- 1. Go to Start / Settings / Control Panel. In the Control Panel, double-click on Network and Dial-up Connections.
- 2. Double-click LAN Area Connection.



3. In the LAN Area Connection Status window, click Properties.

Local Arrest Colorectore Works	113
Great	
Carrietter	
Direction .	Corrected 99/5427
Speed.	NO S Maps
Set)	Rested
Paten	an 1
Luca Luca	J
	Que

4. Select Internet Protocol (TCP/IP) and click Properties.

casal leves Connections 2 Properties	21×
General [Internal	
Dimari seg	
Ay Found 4112180.0127 or Elevel Adam	
S	Contant 1
Symposist designed as welly its consider	STORE OF
The Transford PL (0) - Reality (1) Comparison Transford Comparison Transford Comparison Transford Comparison Comparison Transford Comparison Co	and so the
< Y BOOM STREET, SALES	
1	an affil
nee 1 unes 1 C	tarne V.
Descriptor	1
Foregroups Cartal Photos Printed 7 August 1	te diad
service of east community fact already.	177
The design of the state of the second state of	
14:2	Dave
	-

5. Select the Obtain an IP address automatically and the Obtain DNS server address automatically radio buttons.

Advenuel Processed (COP) (#)	Transform .	.II.S
Gene		
You can get 7 offering along	and the second s	
In Appropriate Partners.		
A Draw or F addres a	eren di	
" Lipite Manager ad	Beat 1	1000
and support the second	11-1-1 E	- 18
a province of the	- E	- 15
Stat grows		- 10/11
The life was als	and addressing the	
-C Light Manager	terne addresses	1000
There is an	1	- 61
arm Firm	1	
	1.04	1
		- Income
		[Canel]

6. Click OK to finish the configuration.

3.2.3 For Windows 95/98/Me

- 1. Go to Start / Settings / Control Panel. In the Control Panel, double-click on Network and choose the Configuration tab.
- Select TCP / IP -> NE2000 Compatible, or the name of any Network Interface Card (NIC) in your PC.
- 3. Click Properties.

Reference of the second se	315
Congroup income income Long	
The left way send the provide an included	
Mint Shirk Country	10
TheilELA + Del-Q: Adame	20
T 10-92-1 Dia Lo Adulte	
LINA ALCANON LAND	48
	68
24 Parent Parente	
Panay Result (ages	~
Det to Hersel Askedis	저희
the and Pail Diserse	
Desette	211
127/37 of the probabilities are to commit to the behavior and the probability of the prob	-
	-
201	- 2
(1000) (1000) (1000)	eet 1
	-

4. Select the IP Address tab. In this page, click the Obtain an IP address automatically radio button.



- 5. Then select the DNS Configuration tab.
- 6. Select the Disable DNS radio button and click "OK" to finish the configuration.

Contraction Contraction	Lifewood Newton w Vetro Configuration # Addition
C Dote Int \	See 1
	inere i
(tonget),(t+)(tonget));	
	Canal Canal

3.2.4 For Windows NT4.0

1. Go to Start / Settings / Control Panel. In the Control Panel, double-click on Network and choose the Protocols tab. 2. Select TCP/IP Protocol and click Properties.



3. Select the Obtain an IP address from a DHCP server radio button and click OK.

Histord: TCP/IP Properties	110
PARTY DAT WELLARDS Party	
$(k+1)^{2}$ achieves non-line and model while everywell in this restricts for a CHOP convex. It produces that the second scalar	and and
engen Deuentenen bereinen Hann auf abbestimen biel Dassen	•••
C griefe or F attan	- 11
and the second s	
(WK) areas	
Agra	
DX. Canat	DAY 1



U8006023