



Operation

IMPORTANT TIPS

- The Start Mist button on the Control Panel turns Mist Cycle on and off.
- Mister Power Switch must be turned to ON position before Mist Cycle can be activated (located behind the locked Tank Access Door).
- Mist Cycle will not activate if Battery Charging Adapter is plugged into Mister.
- Avoid using the Mister during high winds (>10 mph), heavy rainfall, fog, or when outside air temperatures fall below 50 degrees Fahrenheit or other times when insects are typically not active.

ACTIVATING MIST CYCLE

WHEN TO ACTIVATE:

The ALLCLEAR Cordless Mosquito Mister PRO can be used any time of day to provide immediate and reliable control of mosquitoes, gnats, ticks, and other biting insects.* It is recommended that users activate Mist Cycle 10 to 15 minutes before spending time outdoors to allow for mist solution to take maximum effect (especially when mosquitoes are most active). See ALLCLEAR Concentrate label and/or go to www.allclearmister.com for additional application instructions.

WHAT TO EXPECT:


The ALLCLEAR Cordless Mosquito Mister PRO kills and repels mosquitoes and other biting insects with an ultra-fine mist solution of water and ALLCLEAR Mosquito Mister Concentrate. The mist solution is atomized out from Mister and carried by the wind into desired coverage area. The atomized mist appears like a light fog and is visible for the first 5-10 feet from the machine during the 3-minute Mist Cycle. Even when no longer visible, mist continues to move throughout coverage area to kill and repel mosquitoes and creates an invisible barrier from insects for hours. Users will experience immediate relief from biting insects. Best results are realized 10-15 minutes after misting. In areas of high mosquito populations or when there are a lot of people occupying an area, a second mist application may be necessary.

Depending on weather and wind conditions, mist may swirl high and low around Mister and/or it may move directly out from unit or drift behind Mister during Mist Cycle. This is normal operation. If mist moves toward an undesired area, stop Mist Cycle with Remote Control, allow mist to dissipate, and reposition Mister so mist is carried by wind into desired area. (See Page 9.)

ACTIVATING WITH REMOTE CONTROL

1. Turn Mister Power Switch to ON position.
2. Before misting and during the Mist Cycle make sure no people, pets, or food items are in the mist area.
3. Press the ON button on the Remote Control device for one second
4. After depressing ON button, there is a 12 second delay accompanied by an audible warning beep from the Mister before the Mist Cycle begins.
5. From a location outside the misting area, watch mist movement to ensure mist moves toward desired area.
6. If mist moves toward an undesired area (e.g., bodies of water, neighboring properties, etc.), stop Mist Cycle by pressing OFF once on Remote Control device. See 'To Stop Mist Cycle' on page 11 for more information.
7. Mist Cycle ends automatically after 3 minutes.
8. Re-enter area after mist has dissipated (usually 2-5 minutes).
9. If needed, move or reposition Mister (See 'Positioning the Mister' instructions on page 9).
10. Turn Main Power Switch to OFF position

CAUTION: Store Remote Control device in an area inaccessible to children.

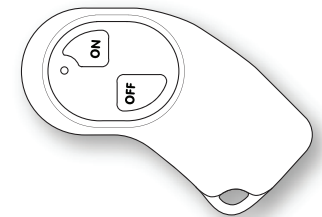

* When used with ALLCLEAR Concentrates. Other insects include: ticks, gnats, horse flies, stable flies, deer flies, face flies and others.