



Russell Hobbs

25 Litre Microwave Oven



User's Manual

Model number: RHM2505


Please read these instructions carefully and keep them for future reference.

MICROWAVE OVEN

User Instructions – Please keep for future reference

Model: RHM2505

Read these instructions carefully before using your microwave oven. By following these instructions carefully your oven will provide you with many years of excellent service.

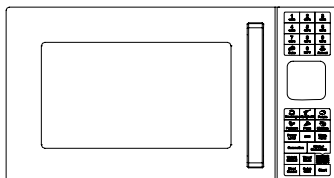

| Specifications | |
|----------------------------------|----------------|
| Model: | RHM2505 |
| Power Source: | 230V~240V/50Hz |
| Microwave Power Consumption: | 1400 Watt |
| Microwave Maximum Output: | 900 Watt |
| Grill Power input: | 1000 Watt |
| Convection Power input: | 1950 Watt |
| Oven Capacity: | 25 litres |
| Turntable Diameter: | Ø 270 mm |
| External Dimensions (L x W x H): | 281×483×415mm |
| Net Weight: | Approx. 16.0Kg |

IMPORTANT

- **WARNING:** if the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- **WARNING:** it is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy;
- **WARNING:** liquids and other food must not be heated in a sealed container since they are liable to explode;
- **WARNING:** only allow children to use the oven without supervision when adequate instruction have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- **WARNING:** accessible parts may become hot during use. Young children should be kept away.

CAREFULLY RETAIN THESE INSTRUCTIONS

SAFETY INSTRUCTIONS

1. The oven must be placed on a level surface.
2. The turntable and turntable ring assembly must always be used in the oven during cooking. Place the cookware gently on the turntable and handle it carefully to avoid possible breakage.
3. Incorrect use of dish for browning food may cause turntable to break.
4. Use only the specified bag size when using pre-prepared popcorn.
5. The oven has several built-in safety switches to ensure that the power remains off when the door is open. Do not tamper with these switches.
6. Do not operate the microwave oven when empty. Operating the oven with no food or food that is extremely low in moisture can cause fire, charring or sparking.
7. Do not cook bacon directly on the turntable. Excessive local heating of the turntable may cause the turntable to break.
8. Do not heat baby bottles or baby food in the microwave oven. Uneven heating may occur which could cause scalding when feeding the baby.
9. Do not heat narrow-necked containers, such as syrup or sauce bottles.
10. Do not attempt to deep-fry in your microwave oven.
11. Do not attempt home canning in this microwave oven as it is impossible to be sure all contents of the jar have reached boiling temperature.
12. Do not use this microwave oven for commercial purpose. This microwave oven is made for household use only.
13. To prevent delayed eruptive boiling of hot liquids and beverages or scalding yourself, stir liquid before placing the container in the oven and during heating.
14. Check the food in the microwave oven frequently to avoid burning due to overheating.
15. Failures to maintain the oven in a clean condition could lead to deterioration of the surface which could adversely affect the life of appliance and possibly result in a hazardous situations.
16. Stand at arm's length when opening the door to avoid scalding when steam or hot air is released.
17. ALWAYS allow an appropriate standing time after the oven has switched off according to the food being cooked to allow heat to distribute evenly throughout the food.
18. Use oven gloves when removing any cookware from oven to reduce chance of being burned or scalded.
19. Read and follow the specific: "recautions for avoiding possible exposure to excessive microwave energy".
20. As with most cooking appliances, close supervision is necessary to reduce the risk of a fire in the oven cavity. If a fire should start or smoke is observed:
 - a. Keep the oven door closed.
 - b. Turn the oven off and unplug the appliance.
21. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode.
22. Do not overcook food. Regularly observe the oven if paper, plastic, or other combustible materials are used in the oven.
23. Do not use the oven cavity for storage purposes. Do not store items such as bread, cookies, paper products, etc. inside the oven.
24. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
25. This oven must be earthed. Connect only to properly earthed outlet. See "earthing installation".
26. Install or locate this oven in accordance with the installation instructions provided.
27. Use this appliance only for its intended uses as described in the manual. Do not use corrosive chemicals or vapours in this appliance. This Oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.
28. Never allow children to use the oven without supervision unless adequate instructions have been given so that the children are able to use the oven in a safe way and understand the hazards of improper use.

29. If the supply cord or plug is damaged, or if the oven is not working properly or has been dropped it must be replaced or repaired by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
30. This appliance should be serviced only by qualified service technicians. Contact the nearest authorised service facility for examination, repair or adjustment.
31. Do not cover or block any vents on the oven.
32. Do not store or use this appliance outdoors.
33. Do not use this oven near water, near a kitchen sink, in a wet basement or near a swimming pool.
34. Do not immerse cord or plug in water.
35. Keep cord away from heated surfaces.
36. Do not let cord hang over edge of table or counter.
37. When cleaning door and oven surfaces use only mild, non-abrasive soaps or detergents applied with a sponge or soft cloth.
38. There must be more than 30cm free or open space above the top surface of the oven.
39. Do not attempt to repair the oven yourself, please consult an authorised service agent.
40. The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature should be carefully checked before consumption, in order to avoid burns.
41. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to try and override or tamper with the safety interlocks.
42. Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the, (1) door (i.e. door is not bent or dented), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
43. Utensils should be checked to ensure that they are suitable for use in microwave ovens.
44. The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.
45. The lampholder is installed in the oven that is non-user serviceable area.
46. The oven should be cleaned regularly and any food deposits removed.
47. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
48. Do not use steam cleaners inside the cavity.
49. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
50. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
51. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

CONTENTS

| | PAGE |
|--|------|
| Specifications | 1 |
| Safety Instructions | 2 |
| Contents | 4 |
| Materials You Can Use In Microwave Oven | 5 |
| Materials To Avoid Using In Microwave Oven | 5 |
| Utensils | 6 |
| Oven Components And Accessories | 6 |
| Turntable Installation | 7 |
| Installing Your Oven | 7 |
| Microwave Cooking Principles | 8 |
| Microwave Food Packaging Symbols | 8 |
| Operating Your Microwave Oven | 9 |
| Control Panel | 9 |
| Setting the Clock | 10 |
| Microwave Cooking | 10 |
| Microwave power chart | 11 |
| Weight defrost | 11 |
| Auto cook | 12 |
| Auto function cooking chart | 13 |
| Grill cooking | 13 |
| Micro + grill cooking | 14 |
| Convection cooking | 14 |
| Micro+ Convection cooking | 15 |
| Multi-stage cooking | 16 |
| Timer | 17 |
| Quick start | 17 |
| Child Lock | 17 |
| Automatic Protection Mechanism | 17 |
| Cooling feature | 18 |
| Warning up and heating | 18 |
| Cleaning Your Microwave Oven | 19 |
| Troubleshooting and Maintenance | 20 |
| Questions and Answers | 21 |
| Important Notes | 21 |
| Earthing Installation | 23 |
| Guarantee | 24 |

MATERIAL YOU CAN USE IN MICROWAVE OVEN

| Utensils | Remarks |
|--|---|
| Aluminum foil | Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking |
| Arcing can occur if foil is too close to oven walls. | The foil should be a least 1 inch (2.5cm) away from oven walls. |
| Browning dish | Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage cause the turntable to break |
| Dinnerware | Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes. |
| Glass jars | Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break |
| Glassware | Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. |
| Oven cooking bags | Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape. |
| Paper plates and cups | Use for short-term cooking/warming only. Do not leave oven unattended while cooking. |
| Paper towels | Use to cover food for reheating and absorbing fat. Use with supervision for short-term cooking only. |
| Parchment paper | Use as a cover to prevent splattering and retain moisture |
| Plastic | Microwave-safe only. Follow the manufacturer's instructions. Should be labelled "Microwave Safe". Some plastic containers soften as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. |
| Plastic wrap | Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. |
| Thermometers | Microwave-safe only (meat and sugar thermometers) |
| Wax paper | Use as a cover to prevent splattering or as a wrap during steaming. |

MATERIALS TO AVOID USING IN THE MICROWAVE OVEN

| Utensils | Remarks |
|---------------------------------|--|
| Aluminum tray | May cause arcing. Transfer food into microwave-safe dish. |
| Food carton with metal handle | May cause arcing. Transfer food into microwave-safe dish. |
| Metal or metal-trimmed utensils | Metal shields the food from microwave energy. Metal trim may cause arcing. |
| Metal twist ties | May cause arcing and could cause a fire in the oven. |
| Paper bags | May cause a fire in the oven |
| Plastic foam | Expanded polystyrene may melt or contaminate the liquid inside when exposed to high temperature. |
| Wood | Wood will dry out when used in the microwave oven and may split or crack. |

UTENSILS

CAUTION

Personal Injury Hazard

Tightly-closed containers could explode. Closed containers should be opened and plastic pouches pierced before cooking. See above for further instructions "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question by following the procedure below.

Utensil test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

SETTING UP YOUR OVEN


OVEN COMPONENTS AND ACCESSORIES

Remove the oven and all the material from the carton. Your oven comes with the following accessories:

Glass plate - 1

Instruction manual - 1

Turntable ring assembly - 1

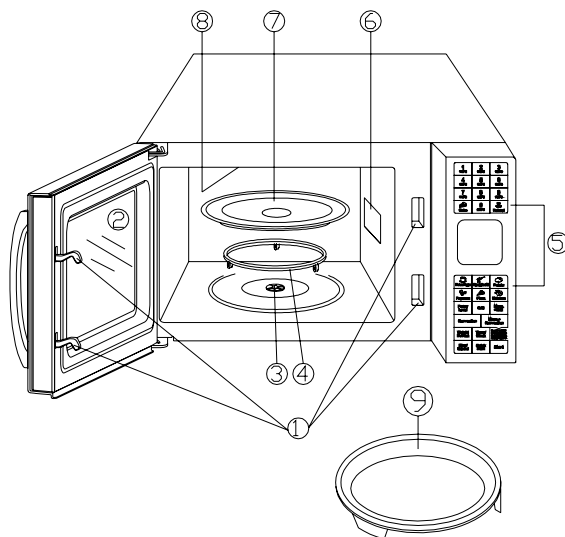


1. Door Safety Lock System
2. Oven Window
3. Shaft
4. Turntable Support
5. Control Panel
6. Oven Air Vent
7. Glass Tray
8. Grill Heater
9. Baking plate

TURNTABLE INSTALLATION

Glass turntable(7), to be placed on the turntable support ring

- a. Never place the glass turntable (7) upside down. The turntable should never be restricted in movement.
- b. Both glass turntable (7) and turntable support ring (4) must always be used during cooking.
- c. All food and containers of food should always be placed on the glass turntable for cooking.
- d. The glass turntable rotates clockwise or anti-clockwise randomly, this is normal.
- e. If glass turntable or turntable support ring cracks or breaks, contact your nearest authorized service centre.

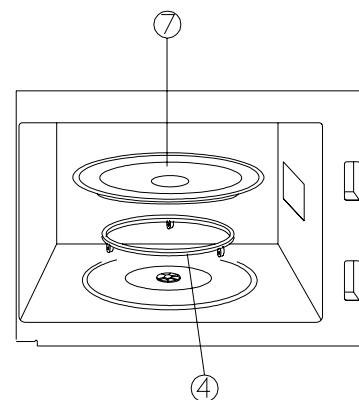

INSTALLING YOUR OVEN

Carefully remove all packaging materials and accessories.

Examine the oven for any damage such as dents or broken door.

Do not install if oven is damaged in any way.

Cabinet : Remove any protective film found on the outer surface.

Do not remove the light brown mica cover that is screwed onto the inner side of the microwave to protect the magnetron.

INSTALLATION


1. Select a level surface that provides enough clear space for the intake and / or outlet vents (see fig.3).

A minimum clearance of 3.0 inch (7.5cm) is required between the oven and any adjacent wall. One side must be clear.

1. Leave a minimum clearance of 12 inch (330) above the oven.

2. Do not remove the feet from the bottom of the oven.

3. Blocking the inside and/or outlet openings can damage the oven.

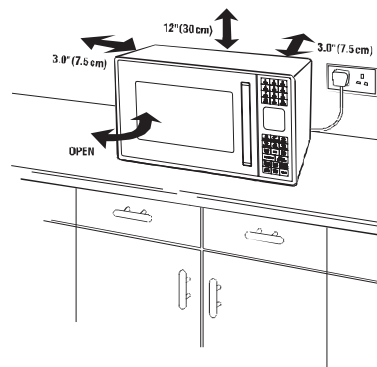

4. Place the oven as far away from radios and televisions as possible. Operation of microwave oven may cause interference to your radios and televisions as possible.

Operation of microwave oven may cause interference to your radio or televisions reception.

5. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

Warning : Do not install microwave oven over a range cooktop or other heat-producing appliance. If installed above a heat producing appliance the microwave oven could be damaged and the warranty would be void.

Warning : Do not install microwave oven in a cupboard.

MICROWAVE COOKING PRINCLIPES

1. The microwaves generated by the magnetron are evenly distributed through the food as the glass turntable revolves. This ensures that the food is cooked uniformly.
2. The microwaves are absorbed by the food up to a depth of approximately 1 inch (2.5cm). Cooking continues as the heat is dissipated through the food.
3. Cooking times will vary according to the recipe and the density, weight and water content of the food. The cooking time will also vary according to the temperature at the start of cooking, i.e. depending on whether the food is frozen or not.

MICROWAVE FOOD PACKAGING SYMBOLS


Microwave Symbols

On the front of your oven there is a microwave symbol, show as below. This symbol has been introduce for your benefit when cooking or reheating packing food.

Package food is also increasingly using a microwave symbol similar to the one below.

When you see this symbol on food packaging the cooking instructions are based on the either IEC power Output

Rating. On the reheating Categories A, B, C, D or E

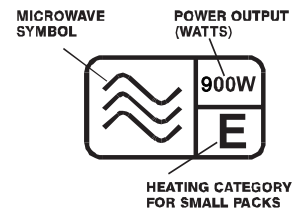



A, B, C, D or E


MORE HEATING TIME







LESS HEATING TIME

OPERATING YOUR MICROWAVE OVEN

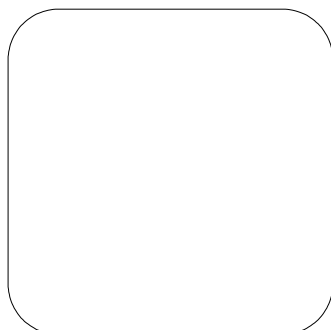CONTROL PANEL

| | | |
|---|------------|---|
| 1 110°C | 2 120°C | 3 130°C |
| 4 140°C | 5 150°C | 6 160°C |
| 7 170°C | 8 180°C | 9 190°C |
|  Cake | 0 200°C |  Reheat |



| | | |
|---|--|--|
|  Beverage |  Spaghetti |  Potato |
|  Popcorn |  Pizza |  Chicken |
| Power Level | Grill | Micro.+Grill |
| Convection | | Micro.+ Convection |
| Weight Defrost | Timer/Clock | Combi 1:110°C Combi 2:140°C Combi 3:170°C Combi 4:200°C |
| Stop/Cancel | Quick Start | Start |

DISPLAY WINDOW

Use to indicate clock, cooking time, etc.

NUMBER PADS

Use to enter clock, cooking time, temperature, etc.

POWER LEVEL

Press to select microwave power level.

GRILL

Press to set a grill-cooking program.

MICRO + GRILL

Press to select one of two combination cooking settings.

CONVECTION

Press to program convection cooking.

MICRO + CONVECTION

Press to select one of four combination cooking settings.

WEIGHT DEFROST

Touch to defrost food by weight.

TIMER/CLOCK

Use to set the clock and the oven timer.

QUICK COOK BUTTONS:

CAKE, REHEAT, BEVERAGE, SPAGHETTI, POTATO, POPCORN, PIZZA, CHICKEN.

STOP/CANCEL

Touch to stop cooking program or clear all previous settings before cooking starts.

QUICK START

Touch to start the oven quickly at full power.

START

Press to start cooking program.

SETTING THE CLOCK

Your microwave oven is equipped with a clock, you must set the clock when you first install your oven or after a power failure.

1. In standby mode, press TIMER/CLOCK button for 3 seconds until the LED displays "ENTER", "TIME", "CLOCK" & "Hr 24".
2. Press TIMER/CLOCK button again if you want to set 12 hour clock, and the screen will show "ENTER", "TIME", "CLOCK" & "Hr12".
3. Press number pads to enter the clock time.
4. Press TIMER/CLOCK button again to confirm.

For example: Set the current time to 8:30 in 12 hour clock.

1. In standby mode, press TIMER/CLOCK button for 3 seconds until the LED displays "ENTER", "TIME", "CLOCK" & "Hr 24".
2. Press TIMER/CLOCK button again and the screen will show "ENTER", "TIME", "CLOCK" & "Hr 12".
3. Press number pads "8", "3" & "0" to enter the clock time.
4. Press TIMER/CLOCK button again to confirm.

MICROWAVE COOKING

To cook with microwave, time and power level should be set. The longest cooking time to be set by touching the number pads is 99 min and 99 sec. You can press POWER LEVEL during cooking to check cooking temperature.

1. Press POWER LEVEL to select the microwave cooking and the display shows "MICRO" and the power level.
2. Press number pads to enter cooking time until the correct cooking time is displayed and the screen will show "ENTER", "COOK" "TIME" & "MICRO".
3. Press START pad to start cooking.

Example: Setting cooking time of 20 minutes on power 80%

1. Press POWER LEVEL to 3 times to select 80% microwave cooking and the display shows "MICRO" and P-80.
2. Press number pads "2", "0", "0", "0" to enter cooking time until 20:00 is displayed and the screen will show "ENTER", "COOK" "TIME" & "MICRO".
3. Press START to start cooking.

When the cooking is finished, the oven will display **END** and beep every two minutes until the oven door is opened or any button is pressed.

MICROWAVE POWER CHART

| No. of time to press POWER LEVEL pad | Microwave Power Level | Display |
|--------------------------------------|-----------------------|---------------|
| 1 time | 100% | "P-HI、MICRO" |
| 2 times | 90% | " P-90、MICRO" |
| 3 times | 80% | " P-80、MICRO" |
| 4 times | 70% | " P-70、MICRO" |
| 5 times | 60% | " P-60、MICRO" |
| 6 times | 50% | " P-50、MICRO" |
| 7 times | 40% | " P-40、MICRO" |
| 8 times | 30% | " P-30、MICRO" |
| 9 times | 20% | " P-20、MICRO" |
| 10 times | 10% | " P-10、MICRO" |
| 11 times | 0% | " P-00、MICRO" |

Always remember that cooking instructions are intended only as a guide. If you have followed the instructions and the food is still not piping hot throughout, simply return it to the oven and cook it until it is.

WEIGHT DEFROST

The oven allows the defrosting food based on the weight you entered. The time and the defrosting power are adjusted automatically once the weight is programmed. The food weights range from 100g to 1800g.

1. In standby state, press WEIGHT DEFROST once or repeatedly to select weight (100g~1800g). The LED will show "ENTER", "CODE", "DEF" and the weight.

2. Press START to start the cooking.

EXAMPLE: To defrost f 600g food.

1. In standby state, press WEIGHT DEFROST repeatedly until the screen shown 600. The LED will show "ENTER", "CODE", "DEF" and the weight.

2. Press START to start the cooking and the screen will show "CODE", "COOK", "DEF" and the cooking time .

| Input Weight | Cooking Time | Power | | |
|--------------|--------------|---------|---------|---------|
| | | Stage 1 | Stage 2 | Stage 3 |
| 100 | 4: 00 | 40% | 20% | 20% |
| 200 | 6: 00 | | | |
| 300 | 8: 00 | | | |
| 400 | 10: 00 | | | |
| 500 | 12: 00 | | | |
| 600 | 14: 00 | | | |
| 700 | 16: 00 | | | |
| 800 | 18: 00 | | | |
| 900 | 20: 00 | | | |
| 1000 | 22: 00 | | | |
| 1100 | 24: 00 | | | |
| 1200 | 26: 00 | | | |
| 1300 | 28: 00 | | | |
| 1400 | 30: 00 | | | |
| 1500 | 32: 00 | | | |
| 1600 | 34: 00 | | | |
| 1700 | 36: 00 | | | |
| 1800 | 38: 00 | | | |

Note: The cooking time for each stage is 1/3 of total cooking time.

During defrosting process, the system will pause and signal to remind you to turn over the food, after that, press START to resume.

AUTO COOK

This auto function has eight pre-set cooking program. You do not need to set either cooking times or power level. The table below shown the details of the programs.

1. In standby state, press the repectively food icon to choose the food and weight. And the LED will display "ENTER" and the weight (for Beverage and Potato, the screen will show "ENTER", "AMT" and portion of the food).

4. Press START to start the cooking, "CODE", "COOK", cooking mode icon and the cooking time will be shown.

Example: To cook 2 portions potato.

1. In standby state, press POTATO twice, and the screen will show "ENTER", "AMT" and 2.

2. Press START to start cooking, and the screen will show "CODE", "COOK", "MICRO" and "8:00".

AUTO FUNCTION COOKING CHART

| Auto Manual | Weight | Display | Power |
|-------------|--|---|-------------------------|
| POPCORN | 99g | 99g | P- 100 |
| BEVERAGE | 1 portion / 200 ml 2 portions / 400 ml 3 portions / 600 ml | 1 2 3 | P-100 |
| SPAGHETTI | 100 g 200 g 300 g | 100 g 200 g 300 g | P-80 |
| CHICKEN | 800 g 1000 g 1200 g 1400 g | 800 g 1000 g 1200 g 1400 g | MICRO.+CONVECTION 170°C |
| CAKE | 475 g | 475 g | CONVECTION 140°C |
| REHEAT | 200 g 300 g 400 g 500 g 600 g 700 g 800 g | 200 g 300 g 400 g 500 g 600 g 700 g 800 g | P-100 |
| POTATO | 1 portion / 230 ml 2 portions / 460 ml 3 portions / 690 ml | 1 2 3 | P-100 |
| PIZZA | 150g 300g 450g | 150g 300g 450g | MICRO.+CONVECTION 200°C |

Note:

1. For Beverage and Potato, parameters on display are not weight but number of servings.
2. For popcorn and cake, there is only one weight choice.
3. For chicken, oven will stop and beep during cooking to let you to turn food over and then close the door, press START to resume cooking.

The result of auto cooking depends on factors such as fluctuation of voltage, the shape and size of food, your personal preference as to the doneness of certain foods and even how well you happen to place food in the oven. If you find the result at any rate not quite satisfactory, please adjust the cooking time a little bit accordingly.

GRILL COOKING

This function allows food to be cooked and grilled for the browning at the same time, and Grill cooking is particularly useful for thin slices of meat, steaks, chops, kebabs, sausages or piece of chicken. It is also suitable for hot sandwiches and au gratin dishes. The longest cooking time you can set is 99 minutes and 99 seconds.

1. Press GRILL button to select Grill cooking and LED displays "ENTER", "COOK", "TIME" & "GRILL". And ":" is flashing.
2. Press number pads to enter cooking time until the correct cooking time is displayed.
3. Press START to start the cooking, "COOK", "GRILL" and cooking time will be shown.

Example : To broil the food for 12 minutes.

1. Press GRILL button to select Grill cooking and LED displays "ENTER", "COOK", "TIME" & "GRILL". And ":" is flashing.
2. Press number pads "1", "2", "0". "0" to enter cooking time until 12:00 is shown.
3. Press START to confirm the setting.

NOTE: When the cooking is finished, the oven will display **END** and beep every two minutes until the oven door is opened or any button is pressed.

MICRO+GRILL COOKING

The function allows the food to be cooked and grilled for browning at the same time. Always use microwave-safe and Oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly, Always use gloves when touching the cookware in the oven, as they will be very hot. The longest cooking time you can set is 99 minutes and 99 seconds.

1. Press MICRO.+GRILL once or twice to choose the required combination setting.

| No. of time to press MICRO.+GRILL Button | Display | Microwave Cooking Time | Grill Cooking Time | Cycle(sec.) |
|--|-----------------|------------------------|--------------------|-------------|
| Once | C-1,GRILL,MICRO | 30% | 70% | 33 |
| Twice | C-2,GRILL,MICRO | 55% | 45% | 33 |

2. Press number pads to enter cooking time until the correct cooking time is displayed.

3. Press START to start the cooking, "COOK", "GRILL", "MICRO" and cooking time will be shown.

Example: set the oven to micro+grill cooking for 25 Minutes under Combi.1 setting.

1. Press MICRO.+GRILL once. The LED will display "C-1", "GRILL" & "MICRO".

2. Press number pads "2", "5", "0", "0" to enter cooking time and 25:00 will appear.

3. Press START to start cooking, "COOK", "GRILL", "MICRO" and 25:00 will be shown.

NOTE:When the cooking is finished, the oven will display **END** and beep every two minutes until the oven door is opened or any button is pressed.

During cooking, you can press MICRO.+GRILL pad to check the cooking power.

CONVECTION COOKING

During convection cooking, hot air is circulated throughout the oven cavity to brown and make crisp foods quickly and evenly. This oven can be programmed for ten different cooking temperatures, i.e. 110°C,120°C,130°C,140°C,150°C,160°C,170°C,180°C,190°C,200°C. The longest cooking time you can set is 9 hours and 99 minutes. You can press CONVECTION during cooking to check cooking temperature.

To Cook with Convection

1. Press CONVECTION button once and the LED will display "ENTER", "CODE" & "CONV".

2. Press number pad to enter your needed cooking temperature. And the LED will show "ENTER", "COOK", "TIME", "CONV" and the cooking temperature.

3. Press number pads to enter the cooking time.

4. Press START to confirm the setting. And the LED will show "COOK" & "CONV".

Example: to cook at 170°C for 40 minutes.

1. Press CONVECTION button once and the LED will display "ENTER", "CODE" & "CONV".

2. Press number pad 7 to enter 170°C. And the LED will show "ENTER", "COOK", "TIME", "CONV" and 170°C.

3. Press number pads "4", "0" to enter the cooking time, "H:40" will show on the screen.

4. Press START to confirm the setting. And the LED will show "COOK" & "CONV".

To Preheat and Cook with Convection

Your oven can be programmed to combine preheating and convection cooking operations.

1. Press CONVECTION button once and the LED will display "ENTER","CODE" & "CONV".
2. Press number pad to enter your needed cooking temperature. And the LED will show "ENTER","COOK", "TIME", "CONV" and the cooking temperature.
3. Press START to start cooking. And the LED will show "CONV","COOK" and "PREH" is flashing. When the oven reaches the programmed temperature, one beep will sound every 5 seconds and "PREH" stop flashing.
4. Open the door and place the food into the oven. The LED will display "ENTER","COOK", "TIME" & "CONV".
5. Press number pads to enter the cooking time.
6. Press START to start cooking.

Example: to preheat to 150°C and then cook 30 minutes.

1. Press CONVECTION button once and the LED will display "ENTER","CODE" & "CONV".
2. Press number pad 5 to enter 150°C. And the LED will show "ENTER","COOK", "TIME", "CONV" and 150°C.
3. Press START to start cooking. And the LED will show "CONV","COOK" and "PREH" is flashing. When the oven reaches the programmed temperature, one beep will sound every 5 seconds and "PREH" stop flashing.
4. Open the door and place the food into the oven. The LED will display "ENTER","COOK", "TIME" & "CONV".
5. Press number pads "3", "0" to enter the cooking time, "H:30" will show on the screen.
6. Press START to start cooking. And the LED will show "COOK" & "CONV".

NOTE:When the cooking is finished, the oven will display **END** and beep every two minutes until the oven door is opened or any button is pressed.

MICRO.+CONVECTION COOKING

This oven has four pre-programmed settings that make it easy to cook with both convection heat and microwave automatically. The longest cooking time you can set is 9 hours and 99 minutes. You can press MICRO.+CONVECTION during cooking to check cooking temperature.

1. In standby mode, press MICRO.+CONVECTION once. And the LED will show "ENTER","CODE", "MICRO", "CONV"
2. Press number pad to select cooking temperature. And the LED will show "ENTER","COOK", "TIME", "CONV","MICRO" and the cooking temperature.

| Number Pad | Display | Microwave Cooking Time | Convection Cooking Time | Cycle(sec.) |
|------------|------------------------------------|------------------------|-------------------------|-------------|
| 1 | ENTER,COOK, TIME, CONV,MICRO,110°C | 73% | 27% | 33 |
| 2 | ENTER,COOK, TIME, CONV,MICRO,140°C | 58% | 42% | 33 |
| 3 | ENTER,COOK, TIME, CONV,MICRO,170°C | 45% | 55% | 33 |
| 4 | ENTER,COOK, TIME, CONV,MICRO,200°C | 30% | 70% | 33 |

3. Press number pads to enter the cooking time.
4. Press START to start cooking.

Example: set a micro+convection cooking program for 1 hour at 140°C.

1. In standby mode, press MICRO.+CONVECTION once. And the LED will show "ENTER","CODE", "MICRO", "CONV"
2. Press number pad 2 to select 140°C. And the LED will show "ENTER","COOK", "TIME", "CONV","MICRO" and 140°C.
3. Press number pads "1","0","0" to enter the cooking time. "1H:00" will show on the screen.
4. Press START to start cooking.

NOTE:When the cooking is finished, the oven will display **END** and beep every two minutes until the oven door is opened or any button is pressed. And the LED will show "COOK" , "CONV" & "MICRO".

MULTI-STAGE COOKING

Your oven can be programmed for up to 3 automatic cooking sequences. You can set a cooking program and then enter another cooking program instantly before pressing START button. However, QUICK START, WEIGHT DEFROST, REHEAT with CONVECTION and AUTO COOK cannot be set in a multi-stage cooking program.

1. Set a cooking program without pressing START button.
2. Set another cooking program.
3. Press START to start cooking.

Example: to set a multi-stage cooking program involving the below cooking stages

1st stage:100% microwave cooking for 20 minutes.

2nd stage: 60% microwave cooking for 10 minutes.

3rd stage: 40% microwave cooking for 10 minutes.

1. Press POWER LEVEL button once and the display shows "P-HI、 MICRO".
2. Press number pads to enter cooking time until 20:00 is displayed and the screen will show "ENTER", "COOK" "TIME" & "MICRO".
3. Press POWER LEVEL button 5 times and the display shows "P-60、 MICRO & MEM".
4. Press number pads to enter cooking time until 10:00 is displayed and the screen will show "ENTER", "COOK" "TIME", "MICRO" & "MEM".
5. Press POWER LEVEL button 7 times and the display shows "P-40、 MICRO & MEM"..
6. Press number pads to enter cooking time until 10:00 is displayed and the screen will show "ENTER", "COOK" "TIME", "MICRO" & "MEM".
7. Press START to start cooking.

NOTE:When the cooking is finished, the oven will display **END** and beep every two minutes until the oven door is opened or any button is pressed.

TIMER

Use the timer feature, when you need to be reminded of the cooking or some other things. The timer can be set at any cooking mode or standby mode. The longest time you can set is 99 minutes and 99 seconds.

1. Press TIMER/CLOCK pad once, the LED will appear "ENTER", "TIMER", "TIME" and ":" is flashing.
2. Press number pads to enter the time.
3. Press START to confirm.

Example: to set the timer for 20 minutes.

1. Press TIMER/CLOCK pad once, the LED will appear "ENTER", "TIMER", "TIME" and ":" is flashing.
2. Press number pads "2", "0", "0", "0" to enter the time.
3. Press START to confirm.

NOTE: During the time is counting down, you can press TIMER/CLOCK pad to check the timer, you could also cancel this function by pressing STOP/CANCEL pad within 5 seconds.

QUICK START

In the standby mode, press the QUICK START button once, the oven will start to cook with 100% power for 30 sec. Each additional press on the QUICK START button will increase the cooking time for another 30 sec for 0 to 1 minute, and 60 sec for 1 minute to 10 minutes, and the longest time for this setting can be added up to 10 minutes.

Example: To cook for 2 minutes with 100% power

Press QUICK START button 3 times, the LED displays "ENTER", "COOK", "TIME" & "MICRO" and the cooking time will increase to 2 minutes. The oven starts cooking immediately at full microwave power.

CHILD LOCK

Lock: In standby state, press STOP/CANCEL over 3 seconds, a "beep" will be heard denoting entering the children—lock state, and the lock indicator "LOCK" will be illuminated.

Unlock: In locked state, press STOP/CANCEL over 3 seconds, a long "beep" will be heard denoting entering the lock is released, and the "LOCK" will be disappeared.

AUTOMATIC PROTECTION MECHANISM

Anytime in the operation of the oven, when the oven cavity temperature reaches a phenomenon of 250°C, the oven automatically enters into self protection mode with the screen displaying error code E 01 and beeps can be heard. As soon as this malfunction disappears by pressing STOP/CANCEL, the oven will back to normal.

Error may also occur to the system sensor, which will make the oven enter into protection mode with the screen displaying E 03, and beeps can be heard. As soon as this malfunction disappears by pressing STOP/CANCEL, the oven will back to normal.

COOLING FEATURE

The controlling system of the microwave oven has the feature of cooling. As for any cooking mode which cooking time above 2 minutes, after cooking, the oven fan will work about 3 minutes automatically to cool the oven for prolonging the life of the oven.

WARNIG UP AND HEATING

Times stated are approximate and can vary depending on the quality, size of the chopped pieces, storage temperature and moisture content of the foodstuff. It is advisable to set a shorter cooking time at first, and then if necessary continue the cooking process, until the food is cooked to your satisfaction.

| Foodstuff | Quantity | Output Level | Time (Mins) | Remarks |
|---|--------------|--------------|-------------|---|
| Liquids | | | | |
| Milk, 1 cup | 150g | P100 (=100%) | 0.5 - 1 | Caution: Stir the liquid prior to and during heating/reheating, let liquid stand for at least 10 seconds after cooking and always take care when adding ingredients to hot liquids. |
| Water/Coffee /Milk 1 cup | 150g | P100 (=100%) | 1 - 2 | Caution: Stir the liquid prior to and during heating/reheating, let liquid stand for at least 10 seconds after cooking and always take care when adding ingredients to hot liquids. |
| Water | 500g | P100 (=100%) | 3 - 5 | Caution: Stir the liquid prior to and during heating/reheating, let liquid stand for at least 10 seconds after cooking and always take care when adding ingredients to hot liquids. |
| One-course meals/ Ready-to-serve meals | 450g | P100 (=100%) | 4 - 6 | Cover. |
| Soups | 250g | P100 (=100%) | 1 - 2 | Stir. |
| Stews | 500g | P100 (=100%) | 3 - 5 | Stir between times. |
| Meat / Poultry | | | | |
| Roast | 250g | P100 (=100%) | 2 - 3 | |
| Rissoles/Meatballs | 500g | P100 (=100%) | 3 - 4 | |
| 1/2 Chicken | 450g | P100 (=100%) | 3 - 4 | Lightly brush with oil. |
| Vegetables | | | | |
| Portion x 1 | 150g | P100 (=100%) | 1 - 2 | Cover, stir. |
| Portions x 2 | 300g | P100 (=100%) | 2 - 4 | Cover, stir. |
| Side Dishes | | | | |
| Noodles | 150g | P100 (=100%) | 1 - 2 | Dampen slightly beforehand, cover, stir. |
| Rice | 150g | P100 (=100%) | 1 - 2 | Dampen slightly beforehand, cover, stir. |
| Potatoes | 500g | P100 (=100%) | 3 - 4 | Cover. |
| Baby Food | approx, 200g | P100 (=100%) | 1 - 2 | Stir well, check the temperature. |
| Meat | | | | |
| Beef, Pork in one piece | 500g | P 80 (= 70%) | 11 - 14 | Cover, turn halfway through cooking, leave to stand for 3-5 minutes. |
| Lightly smoked pork loin | 500g | P 80 (= 70%) | 12 - 15 | |
| Meatloaf | | P100 (=100%) | 12 - 15 | |
| Sausages | 200g | P 80 (= 70%) | 2 - 3 | Pierce skin with fork. |
| Poultry | | | | |
| Chicken | 1000g | P100 (=100%) | 20 - 25 | Cover, turn once, leave to stand for 5 minutes. |
| Pieces of Chicken | 250g | P 80 (=70%) | 4 - 5 | |
| Fish | | | | |
| Fresh fish | 300g | P 80 (= 70%) | 5 - 7 | Cover, turn once, leave to stand for 3 minutes. |
| Fillet of fish | 300g | P 80 (= 70%) | 4 - 5 | Cover, turn once, leave to stand for 3 minutes. |
| Frozen fish | 400g | P100 (=100%) | 8 - 10 | Cover, leave to stand for 3 minutes. |
| Vegetables, fresh | | | | |
| Cauliflower, broccoli, fennel | 150g | P100 (=100%) | 8 - 10 | Chop vegetables into small pieces, cook with liquid, (3-5 tablespoons), stir in between times leave to stand for 3-5 minutes, add spices, (salt before serving). |
| French beans | 500g | P100 (=100%) | 10 - 12 | |
| Potatoes, boiled potatoes | 500g | P100 (=100%) | 8 - 10 | |
| Jacket potatoes | 500g | P100 (=100%) | 10 - 12 | Prick the jacket for boiling potatoes. |
| Carrots | 500g | P100 (=100%) | 8 - 10 | |
| Vegetables, deep frozen | | | | Take note of details on the packaging. |

| | | | | |
|------------------|------|-------------------------------|------------------|--|
| Leaf spinach | 300g | P100 (=100%) | 10 - 12 | Cover, add some liquid, stir in between times, leave to stand for 3 - 5 minutes. |
| Peas | 300g | P100 (=100%) | 7 - 9 | |
| Leeks | 200g | P100 (=100%) | 10 - 12 | |
| Carrots | 200g | P100 (=100%) | 6 - 8 | |
| Brussel sprouts | 250g | P100 (=100%) | 6 - 8 | |
| Spinach | 150g | P100 (=100%)+ P 30 (= 30%) | 3 - 4 20 - 22 | |
| Deserts | | | | |
| Pudding/Flummery | 500g | P100 (=100%) | 6 - 8 | |

CLEANING YOUR MICROWAVE OVEN

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
11. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
12. Please do not dispose this appliance into the domestic rubbish bin, it should be disposed to the particular disposal center provided by the municipalities.

Removable Parts

1. The turntable may be cleaned at the sink. Be careful not to chip or scratch the edges as this may cause the turntable to break during use.
2. The turntable roller rest should be cleaned regularly.
3. Do not immerse the turntable glass in cold water.

Special Care

For best performance and safety, the inner door panel and the oven front frame should be free of food residue. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.

TROUBLESHOOTING AND MAINTENANCE

NORMAL CONDITION

Microwave oven interfering with TV reception.

Radio and TV reception may be interfered with when microwave oven is in operation. It is similar to the interference of small electrical appliances such as food mixers, vacuum cleaners and electric fans. This is normal.

Oven light dim.

In low power microwave cooking, oven light may become dim. This is normal.

Steam accumulating on door, hot air out of vents.

In cooking, steam may come out of food. Most will come out from vents but some may condense on cool places such as the oven door. This is normal.

Oven started accidentally with no food in.

Although starting the oven with no food in it should be avoided, it does no damage to the oven provided it is only operated empty for a very short time. It is advised that a glass or microwave safe container of water is always left in the oven to absorb any heat should the oven be turned on accidentally.

MAINTENANCE

Troubleshooting

Check for problems by using the chart below. If the microwave oven still does not work properly, contact the nearest authorised service centre.

| PROBLEM | POSSIBLE CAUSE |
|--|--|
| Oven will not start | a. Plug not secure in power socket, or not switched on. b. Door is open. c. Wrong operation is set. |
| Arcing or sparking | a. Materials which should be avoided in microwave oven are used. b. The oven is operated when empty. c. Spilled food remains in the cavity. |
| Unevenly cooked food | a. Materials which should be avoided in microwave oven are used. b. Food is not defrosted completely. c. Power setting for cooking time is incorrect. d. Food is not turned or stirred. |
| Overcooked food | Power setting for cooking time is incorrect. |
| Undercooked food | a. Materials to be avoided in microwave oven are used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Power setting for cooking time is incorrect. |
| Incomplete defrosting | a. Materials to be avoided in microwave oven are used. b. Power setting for cooking time is incorrect. c. Food is not turned or stirred. |
| Noise comes from turntable when oven is turned on | Food residue exists between the turntable roller rest and cavity bottom. |
| Oven light does not glow | a. The light bulb has burned out b. START has not been pressed. |

QUESTIONS AND ANSWERS

Q: When the oven is plugged into a wall outlet for the first time, it does not work properly. What's wrong?

A: The microcomputer used in the oven control may temporarily become scrambled and fail to function as programmed. Unplug the oven from the wall outlet and then plug it back in. The microcomputer will then reset for proper functioning.

Q: Why is there noise coming from the oven when using a lower power level?

A: When cooking with power other than 100%, the oven automatically switches on and off to obtain the correct power output. The clicking noise can be heard when the oven switches on and off. This is normal.

Q: Why is there steam coming out of the air exhaust vent?

A: Steam is produced during cooking. The microwave oven has been made to vent this steam.

Q: What is wrong when the oven light will not glow?

A: There may be several reasons why the oven light will not glow. The light bulb has burned out or START has not been pressed.

Q: Why do eggs sometimes burst?

A: The egg yolk may burst because of steam build-up inside the membrane. Pierce the membrane with a toothpick before cooking it. Never microwave eggs in the shell as they may explode.

Q: How is boiling over avoided?

A: Use a larger utensil than usual for cooking. If you open the oven door or touch STOP/CLEAR, the food will stop boiling.

IMPORTANT NOTES

1. Before first using this oven please read this instruction manual and keep it for future reference.
2. Do not attempt to repair the oven yourself, please consult an authorized service agent.
3. The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature should be carefully checked before consumption, in order to avoid burns.
4. Check the oven and the cable regularly for damage. If there is any kind of damage, the oven should not be used.

Warning:

- a. It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
- b. Never allow children to use the oven without supervision unless adequate instructions have been given so that the children are able to use the oven in a safe way and understand the hazards of improper use.
- c. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

NOTE

- Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to try and override or tamper with the safety interlocks.
- Carefully clean door seals and sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the, (1) door (i.e. door is not bent or dented), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- Utensils should be checked to ensure that they are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, check the oven frequently to avoid any possibility of ignition.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the

container.

- If smoke is observed, switch off or unplug the appliance immediately and keep the door closed in order to stifle any flames.
- Eggs in their shells and whole hard-boiled eggs should not be heated in microwave ovens since they may explode.
- If the door or door seals are damaged the oven must not be operated until it has been repaired by a trained person.
- Liquids or other foods must not be heated in sealed containers since they are liable to explode.

Bulb replacement

If the interior light bulb fails, it can be easily replaced by a qualified service engineer. Do not attempt to remove the outer casing as this will expose live components. Please consult a qualified service engineer.

EARTHING INSTALLATION

DANGER


Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard

Improper earthing can result in electric shock. Do not plug into an outlet until appliance is properly installed and earthed. Three pin earthed plug. Properly polarised and earthed outlet.

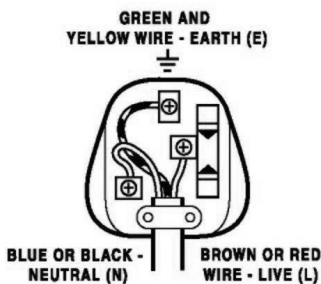

This appliance must be earthed. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a earthing plug. The plug must be plugged into an outlet that is properly installed and earthed.

Consult a qualified electrician or serviceman if the earthing instructions are not completely understood or if doubt exists as to whether the appliance is properly earthed. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3 pin earthing plug, and a 3-slot socket which will accept the plug.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If an extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The extension cord must be earthed, a 3-wire cord.
 - c. The extension cord should be arranged so that it will not drape over the worktop or tabletop where it can be pulled on by children or tripped over accidentally.

Check that the voltage marked on the product corresponds with your supply voltage.

This product is fitted with a 13 A plug complying with BS1363. If this plug is unsuitable or needs to be replaced, please note the following:

Important: The wires in the mains lead are coloured in accordance with the following code:

GREEN / YELLOW - EARTH,
BLUE - NEUTRAL, BROWN - LIVE

For UK use only

Plug fitting details (where applicable):

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The GREEN/YELLOW wire is the EARTH and must be connected to the terminal which is marked with the letter (E) or by the earth symbol or coloured GREEN or GREEN/YELLOW.

The BLUE wire is the NEUTRAL and must be connected to the terminal marked with the letter (N) or coloured BLACK.

The BROWN wire is the LIVE and must be connected to the terminal marked with the letter(L) or coloured RED.

Always ensure that the plug cord grip is fastened correctly.

If a 13A (BS 1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved.

If in doubt contact a qualified electrician.

Important:

**For expert product advice,
please phone the
Russell Hobbs
Helpline on**

0844 8793277

Monday – Thursday: 9am until 5pm

Friday: 9am until 4pm

**Or send your enquiries through email to
microwaves@russellhobbs.co.uk**



Revision 1

This symbol is known as the 'Crossed-out Wheelie Bin Symbol'. When this symbol is marked on a product, it means that the product should not be disposed of with your general household waste. Only discard electrical/electronic items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment.

We reserve the right due to possible changes to design to alter the instruction manual without prior notice.