


**FLUSH BOLT**

FOR USE ON WOOD DOUBLE DOORS TO SECURE INACTIVE DOOR.

**INSTALLATION INSTRUCTIONS**

TOOLS REQUIRED: Drill,  $\frac{3}{8}$ " and  $\frac{3}{32}$ " drill bits, hammer, small chisel and Phillips screwdriver.


1. Position template on top or bottom center of door edge.
2. Outline and mortise (A)  $\frac{1}{16}$ " deep.
3. Using template, mark screw holes and with the  $\frac{3}{32}$ " drill bit, drill pilot holes.
4. Outline section B, mortise  $\frac{3}{4}$ " deep, and secure bolt.
5. Rub chalk on end of bolt, close door and push lever up to mark strike hole position.
6. Outline strike plate, mortise area  $\frac{1}{16}$ " deep, drill strike hole (C) 1" deep with  $\frac{3}{8}$ " bit.
7. Position strike and mark screw holes, with the  $\frac{3}{32}$ " drill bit, drill pilot holes, align strike and secure.

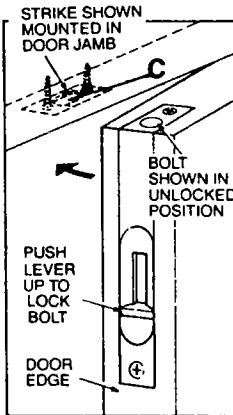

**MAINTENANCE INSTRUCTIONS**

H. B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



FLUSH BOLT C266B3 BRT

MADE IN U.S.A.

**TEMPLATE**

