

We have moved - Effective 2/7/04

Combi

Combi USA, Inc.
1962 Hwy 160 W, Ste. 100
Fort Mill, SC 29708

1-800-99-COMBI M-F 8:30am-5pm EST
803-548-3663 FAX

New SC
Sales Tax
is 5%



Ultra Savvy™ TS 2800 Travel System Stroller

Patent Pending

Acoustic Canopy



Be sure to carefully read this instruction manual before using the product to ensure proper use of the stroller, and keep it for future reference. Record the following information for quick reference.

Note: Illustrations are only representative and not actual.

Date Purchased: _____ Model Number: 2800 - _____ Color _____


Attach copy of sales receipt.

Located near the rear right leg.


Fabric Pattern _____

Parts List

Make sure you have all the parts listed below before using your stroller. If any parts are missing, call Customer Service at 1-800-992-6624.

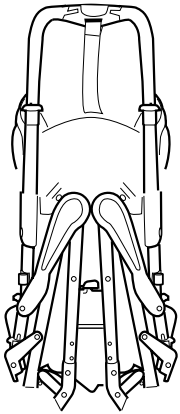


Main Body

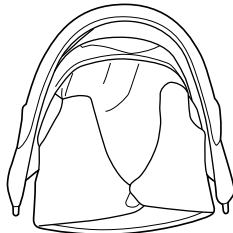

Canopy




Stroller Pack



Rear Wheel
x2

Speakers
in a Box


Warranty
Card

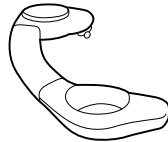

Standard Guardrail




Travel System Guardrail




Front Wheel
x2

Instruction
Manual

Name of Parts

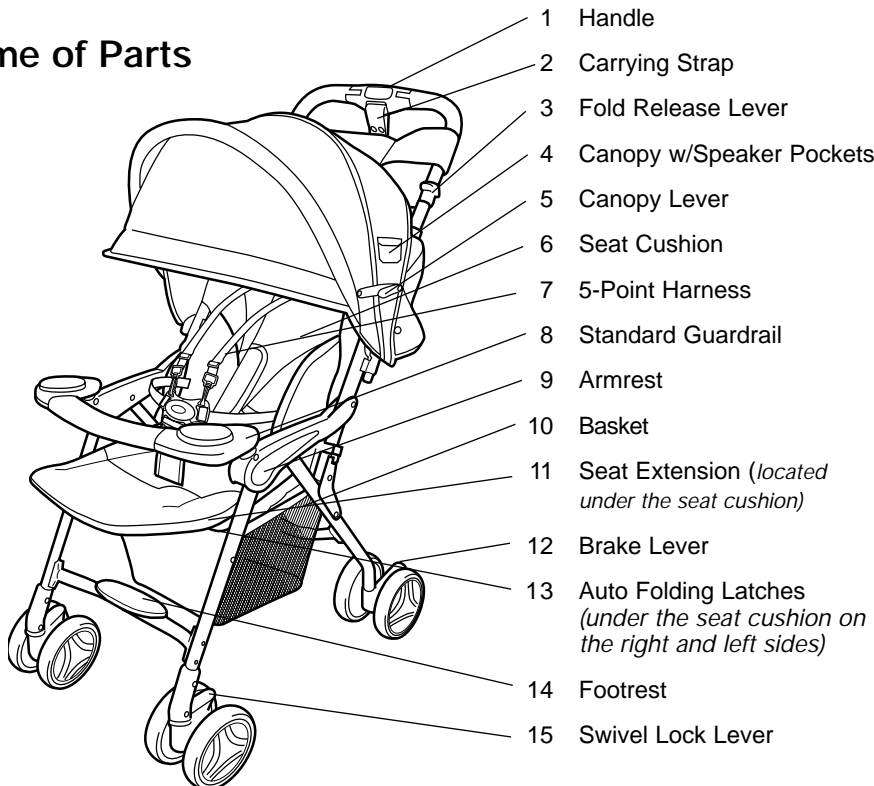


- 1 Handle
- 2 Carrying Strap
- 3 Fold Release Lever
- 4 Canopy w/Speaker Pockets
- 5 Canopy Lever
- 6 Seat Cushion
- 7 5-Point Harness
- 8 Standard Guardrail
- 9 Armrest
- 10 Basket
- 11 Seat Extension (located under the seat cushion)
- 12 Brake Lever
- 13 Auto Folding Latches (under the seat cushion on the right and left sides)
- 14 Footrest
- 15 Swivel Lock Lever

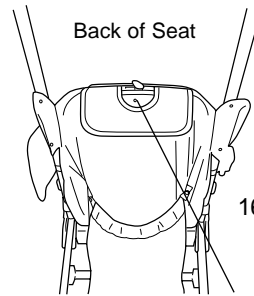

Back of Seat

- 16 Player Storage Pocket (located on the back of the canopy)
- 17 Reclining Lever

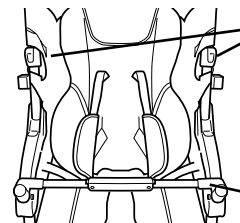

- 18 Infant Car Seat/Carrier Locks
- 19 Travel System Guardrail

⚠️ WARNINGS For your child's safety:

If your stroller is not used in compliance with these instructions, serious injury may result.

In the event of damage or problems, discontinue use and contact COMBI Customer Service for instructions: 1-800-992-6624.




⚠️ WARNING
AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE 5-POINT HARNESS.




⚠️ WARNING
NEVER LEAVE CHILD UNATTENDED.

⚠️ WARNING

Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. See Page 11 of this manual for more information.

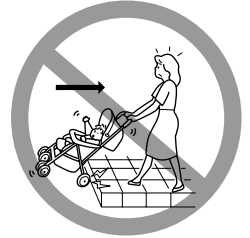

⚠️ WARNING
DO NOT LIFT AND CARRY the stroller while open with a child in it. The stroller may slip.

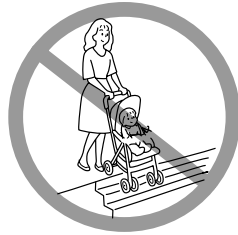

⚠️ WARNING
Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.

⚠️ WARNING

DO NOT ALLOW CHILD TO LEAN OVER SIDES OF STROLLER. IT MAY BECOME UNBALANCED AND TIP OVER.

⚠️ WARNING

Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition to exist.



⚠️ WARNING
Do not allow your child to stand in or on the stroller.



⚠️ WARNING
Do not put or hang things on the canopy or handle because it could cause the stroller to become unbalanced or tip over.

⚠️ WARNING

TO AVOID BURNS, do not place bottles/cups with hot liquids in the Stroller Pack. Do not place more than 2 lbs. in the Stroller Pack.

⚠️ WARNING

Do not load more than 11 lbs. (5kg) in the basket. Do not load more than 2 lbs. (0.9kg) combined weight in the bottle holder (including bottles and contents).



⚠️ WARNING
Never carry more than one child in the stroller. Do not allow a child to ride or sit on areas of stroller other than seat. Maximum weight of child: 45 lbs. (20 kg)



⚠️ WARNING
Always engage both brakes when parking the stroller.

Questions, concerns or to enter our monthly sweepstakes check our website:

CAUTIONS:

1. Improper usage or lack of knowledge regarding the instructions can result in dangerous situations, personal injury or damage to the stroller.
2. Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.
3. Push the stroller at a normal walking speed only.

All products specifications are subject to change without notice. Sizes and weights are intended as guides and are approximations. COMBI® reserves the right to modify the products in its line during the course of the year. Non contractual media. Colors are accurate as the media in which they appear allows.


© COMBI International Corporation 2003

COMBI


www.combi-intl.com

- 2 -

Opening the Stroller

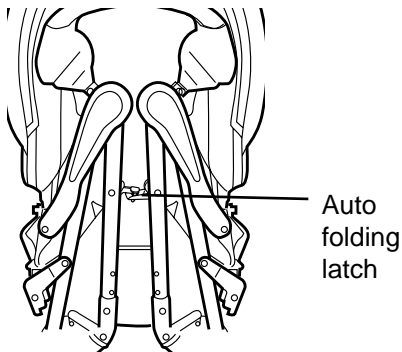


Holding the handle from underneath will make it easier.

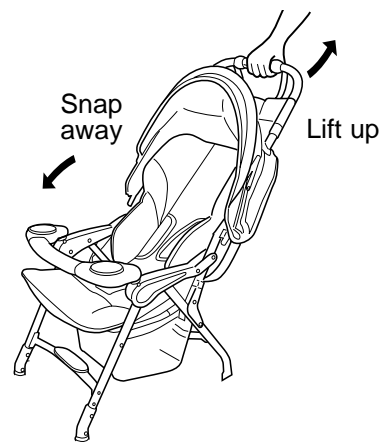


2. Grip the handle on each side and turn outward to open fully.

3. Lift up the handle and snap the stroller away from you.

Attaching the Rear Wheels

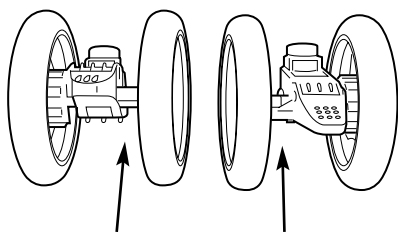

Note:
Attach the rear wheel assemblies to each stroller leg with the wheel spacer facing inward.

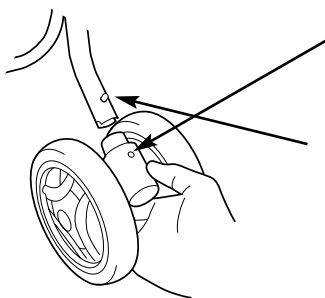

1. Stand behind the stroller.


2. Locate the small opening on each rear wheel assembly.

3. Locate the small silver pin on each rear stroller leg.

4. Insert the leg into the wheel assembly until the small silver pin locks into the opening.


Attaching & Removing the Front Swivel Wheels

Place front swivel wheel assembly on the swivel shaft. The assembly is secure when it locks onto the shaft.

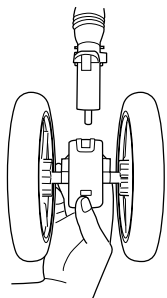


Removing the Swivel Wheels

Press in the square button located at the bottom of the wheel holder while pulling the assembly off of the swivel shaft.

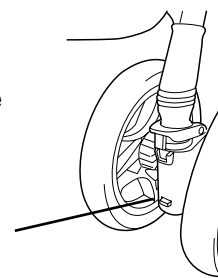

Attaching the Canopy

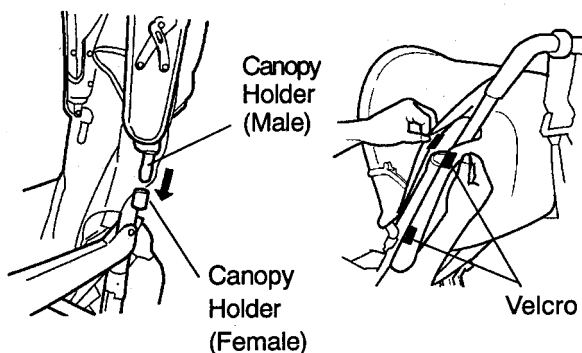

CAUTION

Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller by laying it down, be sure the canopy is off the ground to prevent it from bending.


Attaching the Canopy

1. Confirm the canopy is facing in the proper direction.
2. Fully insert the canopy holder (male) to the canopy holder (female) until a click is heard.
3. Fasten the canopy velcro on both sides around the handles to the seat back velcro (2 places.)


Removing the Canopy

Pull the velcro apart and squeeze the bottom of the canopy holder (male). Lift the canopy until it releases from the female holder.

Installing the Speakers

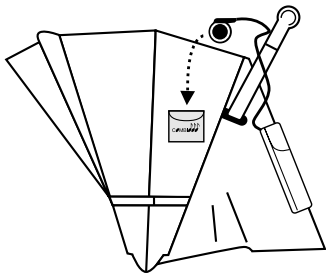


1. Insert a speaker into the small pockets located on both sides of the canopy.
2. Place your portable CD, cassette or MP3 player inside the large storage pocket on the back of the canopy.

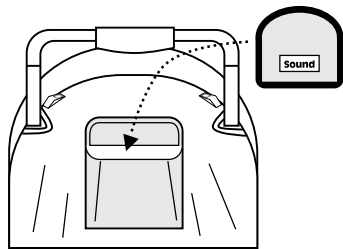

3. Attach the speaker cords through the Velcro holders on both sides of the storage pocket.

4. Insert the (2.8mm) plug into player.

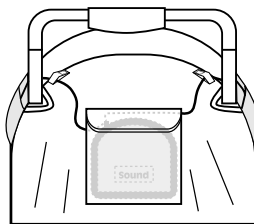

CAUTION

Be sure to test the volume on your player. Set it at a comfortable level so that it does not startle your baby when turning it on. Loud volume can hurt your baby's ears. If you notice that the sound has become weak or distorted or if tracks do not change, this is an indication that your batteries are low. Replace the batteries and set the volume at a comfortable level.

CAUTION

Before folding your stroller, be sure to remove your player from the back pocket of the canopy. This will make it easier to fold the stroller.

When you fold the stroller, you may leave the speakers in the Acoustic Canopy, but only for short periods of time.

In the summer, the temperature may get as high as 212°F/100°C or more. Do not leave your stroller, with the speakers in the Acoustic Canopy pockets, in your car trunk where the temperature may reach high levels. Store speakers in a cool and dry area.




WARNING:

To avoid serious injury keep stereo speakers and cords out of reach of children.

Using the Front Swivel Wheels

To lock swivels, push both swivel lock levers down.


To unlock swivels, lift both swivel lock levers up.

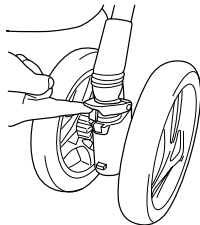

Using the Brakes

To lock brakes, push both brake levers down.


To unlock brakes, lift both brake levers up.

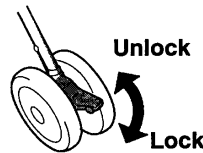

CAUTION

Push the stroller forward to ensure that the brakes are properly engaged.

Using the Safety Cover

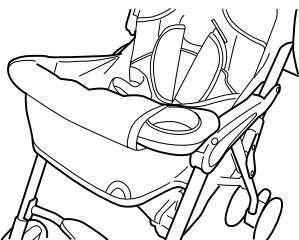


Installing the Safety Cover

1. Lift the seat cushion and pull safety cover out.
2. Place the safety cover over the guardrail and secure it with the velcro.

CAUTION

Before folding the stroller, unfasten and store the safety cover under the seat. The stroller will not fold with it attached.

Using the Reclining Backrest

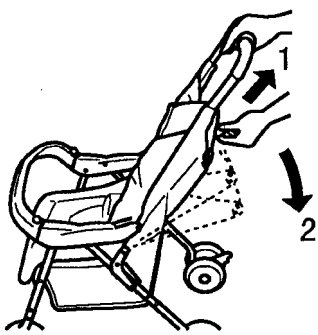

1. Press the lever at the top of the seat to the left.
2. Adjust the backrest gently to any of three positions.

To return the backrest to the upright position, simply lift the backrest gently into place.




WARNING:

Never use seat in reclined position unless the permanently attached safety cover is used.


CAUTION

Be careful when reclining the backrest while your baby is in the stroller to prevent abrupt changes in seating position.

Using the Guardrail

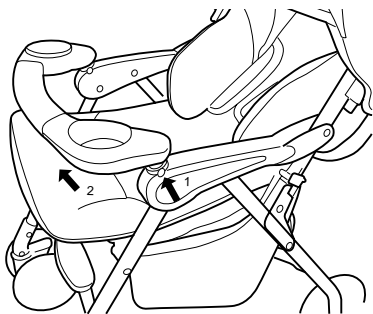


1. Squeeze the guardrail release buttons on both sides to release the guardrail.
2. When one side is released, the guardrail will pivot to allow easy access to the seating area.

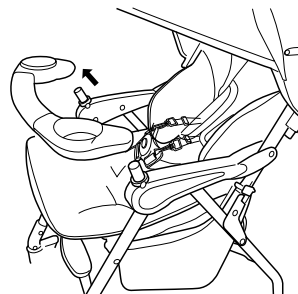

3. When both sides are released the guardrail can be removed.
4. To attach the guardrail slip it over the armrest pins until you hear the pins click into position.

Using the Seat Extension

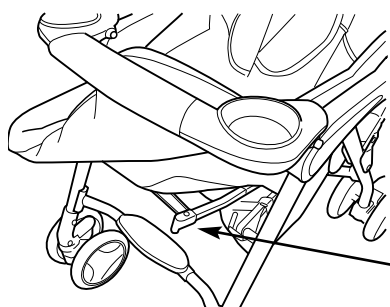


1. Lift the seat cushion and locate the seat extension.
2. Pull out the seat extension.


When not in use, push the seat extension back to the original position.

Seat extension

Using and Adjusting the 5-Point Harness

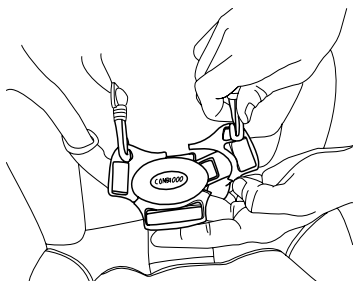

1. Place the crotch belt between the baby's legs.
2. Insert both waist belt buckles into the middle plastic piece.
3. Attach each shoulder strap's hook to the top of the waist belt clips.
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle.

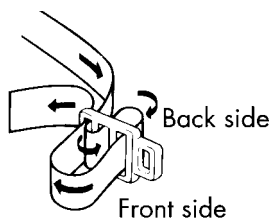

⚠ WARNING:


Avoid serious injury from falling or sliding out. Always use the 5-point harness.

CAUTION


Even when the seat belt is fastened, be careful not to let the child slip out or stand.

Folding the Stroller


1. Fold the canopy by lifting the canopy levers.
2. Remove your player from the back pocket of the canopy.
3. Place seat in the upright position.
4. Hold the folding levers up on both sides of the handle while completing step 5.
5. Tilt the stroller onto its back wheels and roll forward. Then pull the handle back quickly to fold front guardrail to backrest.
6. Turn handle inward with an underhand hold to latch and lock.

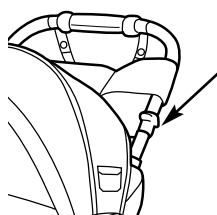

Fold Release Lever

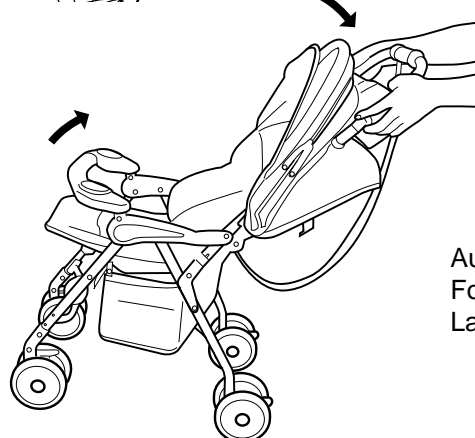


Turn inward to fold.

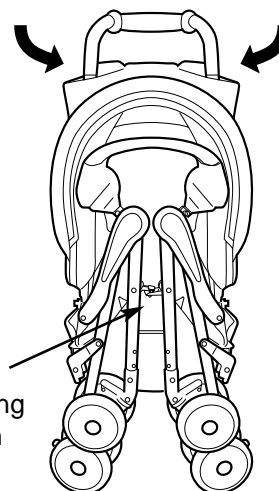

Auto Folding Latch

Removing/Attaching the Seat Cushion

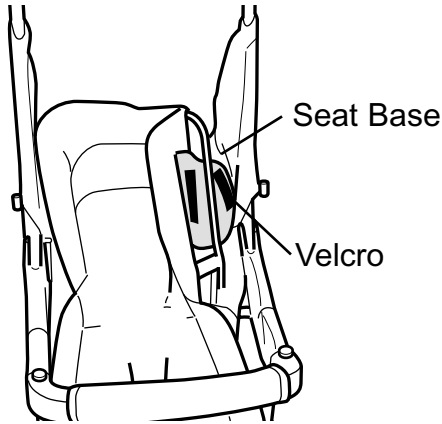

Removing

1. Unbuckle the 5-point harness and pull all the straps through the seat cushion.
2. Grasp the seat cushion at the top and unfasten from the velcro.

Attaching

1. Pass the 5-point harness waist belt straps through the appropriate locations of the seat cushion.
2. Fasten the velcro.


CAUTION

If seat cushion is ripped or torn, do not use.

Do not use the stroller without the seat cushion.



Using the Basket

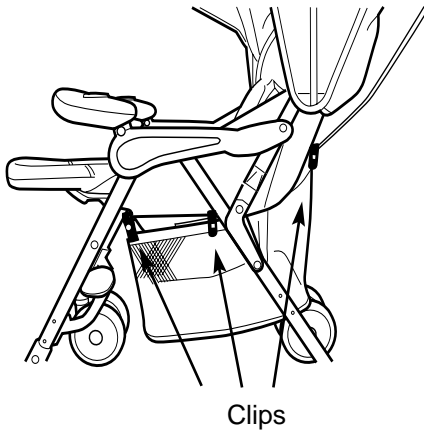

Removing

Unfasten clips on front and side of basket.

Attaching


Reverse the procedures for **Removing**.

CAUTION

Do not place more than 11 lbs. in the basket.

Remove all items from the basket before folding the stroller.

Using the Stroller Pack

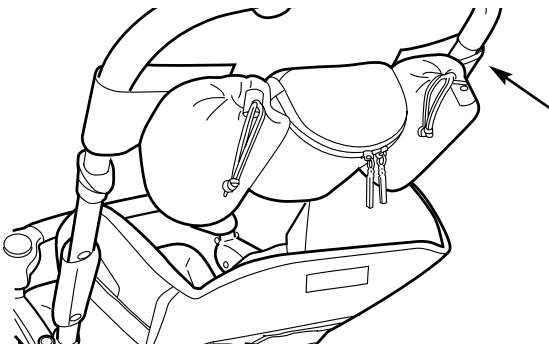

Attaching

Hook the clips into the slots on the handle and wrap the velcro straps around the handle.

Removing








Unfasten the velcro straps and unhook the clips.

⚠ WARNING:

To avoid burns, do not place bottles/cups with hot liquids in the stroller pack. Do not place more than 2 lbs. in the stroller pack. Remove all items from the stroller pack before folding.

The Travel System Guardrail


WARNINGS

-  When the COMBI Infant Car Seat/Carrier is in the stroller, always lock into the COMBI Infant Car Seat/Carrier Locks and Travel System Guardrail.
-  Discontinue use if damage is noted on the Travel System Guardrail or the COMBI's Infant Car Seat/Carrier Locks on the stroller.
-  The Travel System Guardrail is only to be used when attaching COMBI's Infant Car Seat/Carrier. Do not use for any other purpose.
-  Do not lean on or hang things from the Travel System Guardrail.
-  To assure safety for the baby, please refer to COMBI's instructions for use with your COMBI Infant Car Seat/Carrier.
-  If unable to securely attach COMBI's Infant Car Seat/Carrier using the Travel System Guardrail, discontinue use and contact COMBI Customer Service.
-  Do not carry stroller by using COMBI's Infant Car Seat/Carrier handle.

Using the Travel System Guardrail


CAUTION

Pull on each side of Travel System Guardrail to make sure that it is completely attached.

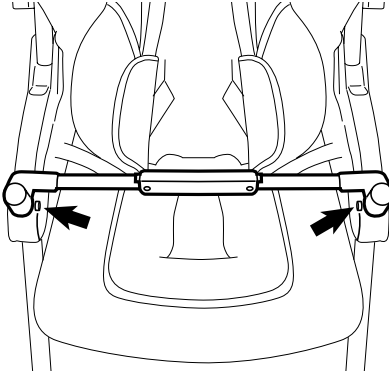


ATTACHING THE TRAVEL SYSTEM GUARDRAIL


1. After removing the Kid's Tray Guardrail attach the Travel System Guardrail by slipping it over the armrest pins until you hear the pins click into position. Gently tug on the side, to be sure it is secure.

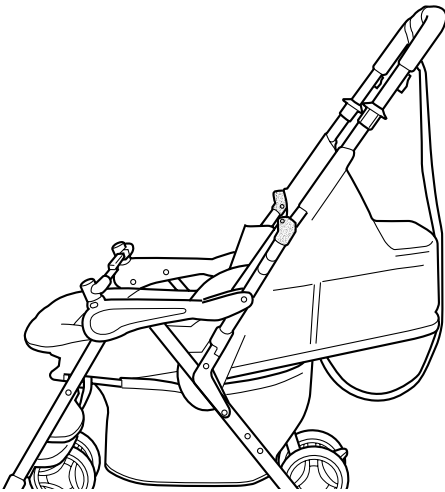

2. Recline the backrest to the middle position or lower.

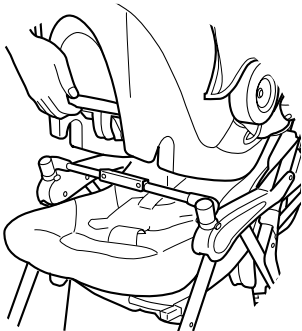


3. Lock the "V" slot of the COMBI Infant Car Seat/Carrier over the Travel System Guardrail.

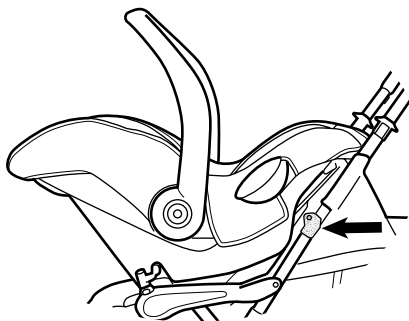


4. Rotate until the foot end of COMBI Infant Car Seat/Carrier locks into the Infant Car Seat/Carrier Locks located on each side of the handle.
5. Be certain that the COMBI Infant Car Seat/Carrier is securely attached to the stroller by lifting up on the COMBI Infant Car Seat/Carrier handle.

Removing the Infant Car Seat from the Travel System Guardrail

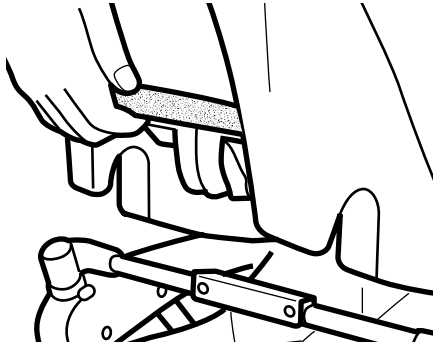

1. Locate the release lever and pull upward to unlock the back of the COMBI Infant Car Seat/Carrier from the Travel System Guardrail.

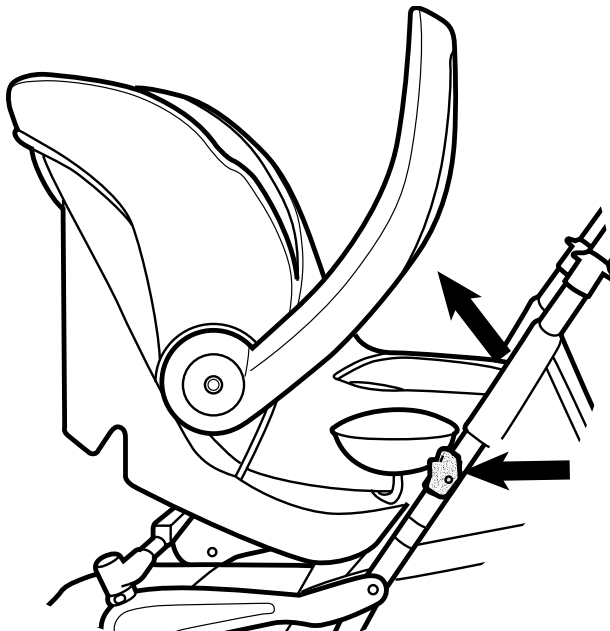

2. Lift up the front end of the COMBI Infant Car Seat/Carrier to release from the Carrier Locks located on either side of the handle.

Routine Maintenance

STORE IN A COOL AND DRY AREA, especially in the summer. Do not store the stroller in the trunk of a vehicle.

SEAT CUSHION

The seat cushion is machine washable. Set to gentle cycle using warm water and a mild detergent. Do not use bleach. Lay seat cushion and canopy and car seat covers flat to dry in shaded area. Do not machine dry. To prevent color fading, do not leave soaking for a long period. If the seat cushion is frayed or unraveling, discontinue use and call customer service for further instruction.

CANOPY, SEAT BELT, FIXED BASE SEAT, TRAVEL BAG, STROLLER PACK AND BASKET

Hand wash with a soft brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent then apply directly to the dirty area. Wipe out the detergent.

MAIN BODY

Briskly wipe off any mud and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry. Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

WHEEL ASSEMBLIES


After prolonged normal use, the wheels of your stroller may not swivel or turn as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheels by pressing the release button and wiping off mud and dirt. **Do not use soap and water to wash wheels.** Periodically check that all screws, bolts and nuts are tight.

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration.


Add silicone* to the wheel assemblies in small amounts.

Do not use cooking oil or WD-40 because oil attracts dust and would hinder the movement rather than improve it.

*Silicone spray is available in varying size cans at most hardware stores.

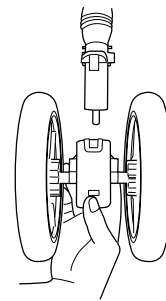

Front Swivel Wheel

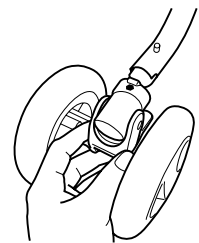

Rear Wheel

Trouble Shooting

STROLLER WON'T FOLD


- Check to see that the seat belt is not caught in the side.
- Make sure front swivels are locked.
- Make sure the backrest is in the upright position.
- Remove all items from the basket.
- Remove your player from back pocket of the canopy.

DIFFICULT TO STEER/STROLLER PULLS TO ONE SIDE

- Remove any items hanging from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean and add silicone to wheels, if necessary.

DIFFICULT TO GET UP CURBS

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.

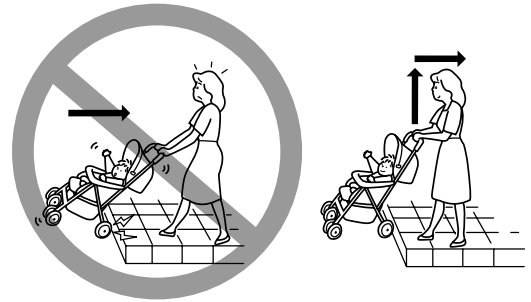

DIFFICULT GOING DOWN CURBS

- Turn stroller around, bringing rear wheels toward the edge of the curb. Gently lower rear wheels onto the surface below. Once the rear wheels have landed, guide the front portion of the stroller, using the armrest as support.

We have moved - Effective 2/7/04

Combi

Combi USA, Inc.

1962 Hwy 160 W, Ste. 100
Fort Mill, SC 29708

1-800-99-COMBI M-F 8:30am-5pm EST
803-548-3663 FAX

New SC
Sales Tax
is 5%



nts
Form

Ultra Savvy™ TS 2800 Travel System Stroller

Acoustic Canopy

Patent Pending



If you would like to place an order for the following parts, please fill out the form below and return it to the following address:

~~COMBI International Corporation~~
~~Attn: Customer Service Department~~
~~189-199 Easy Street~~
~~Carol Stream, IL 60188~~

or ~~Fax this completed form to us at~~
~~630-871-0606~~

IMPORTANT: We must have this information to process your order:

Model Number: 2800 - _____ Color & Pattern of Fabric: _____

Located near the rear right leg.

Parts List for the Ultra Savvy™ TS 2800.

	Price	Quantity	Total
1. Acoustic Canopy	\$ 40.00		
2. Should Pad Set	5.00		
2. Basket	20.00		
3. Seat Cushion	35.00		
4. Standard Guardrail	15.00		
5. Travel System Guardrail	10.00		
6. Stroller Pack	15.00		
7. Carrying Strap	12.00		
8. Acoustic Canopy Speaker Set	10.00		
9. Rear Wheel Assemblies (left and right sides)	20.00/set		
10. Front Swivel Wheel Assemblies (left and right sides)	20.00/set		
	Amount of Order		
	ADD Shipping & Handling		
	Sales Tax (7.25%) (IL residents only)		
	Total		

If you need to order other parts for your stroller, please call us toll-free at 1-800-992-6624.

Shipping and Handling Fees: Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S. Combi USA reserves the right to change pricing at any time.

Ship To:

Customer Name _____

Street Address _____

Street Address _____

City, State, Zip _____

Telephone Number _____

Charge to my credit card:

VISA

MASTERCARD

AMERICAN EXPRESS

DISCOVER

Card Number _____

Expiration Date

-

Cardholder's Signature _____

Check enclosed

9/5/2003