

Wadia 302 Compact Disc Player



Owner's Manual

W
A
D
I
A

3
0
2

C
O
M
P
A
C
T

D
I
S
C

P
L
A
Y
E
R

Safety Precautions



To get the best performance from your Wadia 302 CD Player, and for your own safety, please read and follow these important safety instructions:

Never place the Wadia 302 CD Player near heat sources such as radiators, fireplaces, stoves, or other appliances that produce heat. Avoid placing the Wadia 302 CD Player where it will be subject to direct sunlight or low temperatures.

- This product is equipped with a three-prong IEC power cord that includes an earth ground connection. To prevent shock hazard, all three connectors must always be used. If your electrical outlets will not accept this type of plug, an adapter may be purchased. If an adapter is necessary, be sure it is an approved type and that it is used properly, supplying an earth ground.
- AC extension cords are not recommended for use with this product. If an extension cord must be used, be sure it is an approved type and has sufficient current carrying capacity for this product.
- Before cleaning the Wadia 302 CD Player, always disconnect the power supply cord. Use a soft cloth and, if necessary, dampen with clean water or mild cleaning agent. Never apply water, or any other cleaner, directly to the chassis.
- If you smell smoke or an abnormal smell, immediately unplug the Wadia 302 CD Player from the power supply and contact your Wadia dealer.
- Never attempt to service the Wadia 302 CD Player beyond what is described in this Owner's Manual. Qualified service personnel should perform all repairs.
- Unplug unit if it becomes wet.
- Do not open unit when attached to AC outlet; dangerous voltages and laser radiation may be encountered.
- Replace fuse only with the exact type originally included:
 - 100 volt: 1 amp Slo-Blo (1 fuse)
 - 120 volt: 1 amp Slo-Blo (1 fuse)
 - 220 volt: 1/2 amp Slo-Blo (2 fuses)
 - 240 volt: 1/2 amp Slo-Blo (2 fuses)

Contents

Safety Precautions	2
Introduction	4
A Brief History of Wadia	4
Wadia 302 CD Player Design Philosophy	5
Installation	7
Unpacking	7
The Accessory Kit	7
Installing Batteries In Remote Control	7
Installing Cone Feet	8
Choosing a Location for the Wadia 302 CD Player	8
Connections	9
Connecting to AC Power	10
Questions about Connecting the Wadia 302 CD Player	11
Bypassing the Wadia Digital Volume Control	12
Connecting Directly to an Amplifier	12
Connecting to a Preamplifier	12
Adjusting the Maximum Output Voltage	13
Infrared Input and Pass-through	14
Optional Digital Inputs	14
Digital Output	14
Choosing a Digital Cable	15
Connecting to the Digital Inputs or Output	15
Operation	16
Front Panel Display and Controls	16
Remote Control	17
Operation Commands	18
Appendices	22
Trouble shooting	22
DigiMaster Software License Agreement	22
Environmental Care	22
Warranty	23
Specifications	24

Introduction

All of us at Wadia would like to offer thanks and congratulations to you for purchasing the Wadia 302 Compact Disc Player. We sincerely believe that your Wadia 302 CD Player is an intelligent purchase decision that will bring you many years of musical pleasure and satisfaction. While every new owner is anxious to begin listening, we encourage you to take a few minutes to read this manual and familiarize yourself with the full capabilities of the Wadia 302 CD Player.



To reduce the risk of injury or damage to your Wadia 302 CD Player, please read the safety instructions on the first page of this manual. In addition, please pay particular attention to the sections of this manual where the symbol at left is shown.

A Brief History of Wadia

Wadia was originally founded in 1988, making it the first high-end audio company dedicated to digital audio reproduction. Wadia was formed by a group of telecommunications engineers from 3M Corporation who were committed to using advanced digital technology to improve the performance of digital audio equipment.

Wadia's first product, the Wadia 2000 Decoding Computer, was a breakthrough in that it proved the viability of the Compact Disc as a musically involving format. Wadia has continued to develop new methods and technology and each successive product has resulted in a new standard of performance for digital audio decoding. Here is an abbreviated list of the technological innovations Wadia engineers pioneered:

- Patented DigiMaster™ up-sampling algorithm, optimized for extracting maximum musical information from digital-audio data stream.
- First company to apply high bandwidth glass fiber optics to home audio.
- Direct-Connect™ system to connect digital audio products directly to an amplifier.
- ClockLink™ proprietary jitter-reduction technology.
- Swift-Current™ zero-feedback current to voltage converter.

Wadia's digital expertise and record of accomplishment exceed those of any audio company, but technology alone does not guarantee musical performance. Wadia designs are born of a delicate balance of technology shaped by a passion for music.

Wadia is proud to introduce the Wadia 302 CD Player, a breakthrough in sonic performance and value, and a strong evidence of our dedication to music reproduction.

Wadia 302 CD Design Philosophy

The Wadia 302 Compact Disc player is the first of Wadia's new 3 – series, a range of products that set a new standard for performance, aesthetics, and value. The Wadia 302 CD Player has received the benefit of over 13 years and thousands of hours of development that have resulted in the Wadia legacy. Viewed this way, the Wadia 302 CD Player is one of the most outstanding values in the world of high-end music reproduction.

Wadia Digital Volume Control with Direct-Connect™

The Digital Volume Control and Direct-Connect circuitry perform the functions of a preamplifier while the signal is in the digital domain. This allows the Wadia 302 CD Player to be connected directly to your power amplifier, bypassing the losses inherent in conventional preamplifiers. New in the Wadia 302 CD Player is the ability to optimize the output level to match your system by setting switches on the Wadia 302 CD Player rear panel.

DigiMaster™ Upsampling System

Wadia's DigiMaster is a patented digital upsampling system designed to extract maximum musical realism and detail from digital audio. In the Wadia 302 CD Player, Wadia introduces the latest version of DigiMaster, with the best cost/performance ratio of any DigiMaster system to date. In addition, this new version of DigiMaster accepts 96kHz signals and upsamples incoming signals to 705.6 kHz or 768 kHz.

Swift Current I-V Converter

The Wadia 302 CD Player is the first Compact Disc player in this price range to use Wadia's patented Swift Current technology. This proprietary, custom-fabricated integrated circuit performs the sonically critical current-to-voltage conversion with no global negative feedback, resulting in demonstrably superior sound quality.

The Music Comes First

As with all Wadia products, the Wadia 302 CD Player is the result of a design philosophy that bridges the gap between the traditional engineering and empirical approach to audio design. That is, Wadia engineers are guided equally by advanced measurement techniques and extensive listening during the development process. The result is performance that exceeds the expectations of even the most demanding listener.

Installation

This section includes information on how to unpack and position your Wadia 302 CD Player.

Unpacking



After carefully unpacking your Wadia 302 CD Player, inspect for any shipping damage and call your dealer immediately if any is found. Do not plug your Wadia 302 CD Player into any outlet if you find shipping damage.

Please save all packing materials so the unit can be easily and safely shipped if the need arises.

The Accessory Kit

Included in the carton, you will find an accessory kit that contains the following:

- AC power cord
- Remote Control
- Two type-AA batteries
- Three cone feet and flat metal discs
- One 75 Ohm BNC-to-RCA adapter

Installing Batteries In Remote Control

The Wadia 302 CD Player remote control requires two batteries, which you will find in the accessory kit. To install the batteries, unscrew the battery cover on the back of the remote. Insert the batteries as indicated on the battery holders, and replace the cover.

Installing Cone Feet


The Wadia 302 CD Player is equipped with three cone feet that screw into inserts in the bottom panel. These feet will improve performance by reducing vibration. If the Wadia 302 CD Player is sitting on a shelf that can be damaged by the sharp feet, place the steel discs under each foot to protect the shelf surface.

Choosing a Location for the Wadia 302 CD Player

The sound quality of all high-performance digital and analog components can be degraded by vibration. Although the Wadia 302 CD Player uses some of the most advanced noise-reduction circuitry available, it too will benefit from any efforts taken to reduce vibration. For best performance, place the Wadia 302 CD Player on a solid, non-resonant shelf that will minimize vibration.

Connections

This section provides instructions to connect the Wadia 302 CD Player to the rest of your music system. Below is an illustration of the Wadia 302 CD Player rear panel, showing all inputs and outputs.

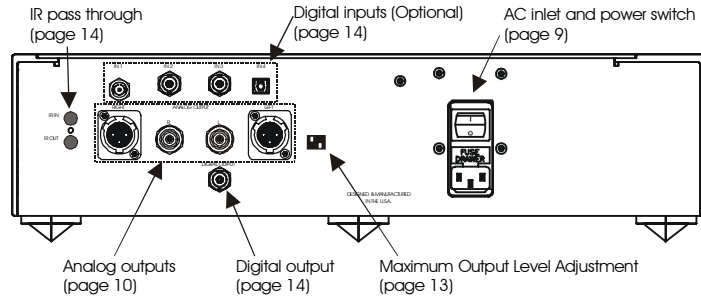

Avoid allowing static shocks to be applied to the inputs or outputs. To prevent static shocks, touch any grounded surface, such as the chassis of a component that is plugged into an AC socket, before connecting or removing a cable. It is unlikely that a static shock will damage the unit, but it may cause the Wadia 302 CD Player circuitry to lock-up (see Trouble Shooting in Appendices).

Inputs and outputs can be safely connected to the Wadia 302 CD Player:

- When the AC power is switched off OR
- When the unit is in Relay-Mute mode (See Mute in Operation)

Connecting to AC Power



Check to make sure your Wadia 302 CD Player has been manufactured for operation at your AC line voltage. Attempting to use your Wadia 302 CD Player at any voltage other than that specified on the rear of the unit may cause damage that is not covered by Wadia's warranty.

Using AC Line Conditioners

Of the wide range of power line conditioners currently available, some can provide substantial improvement in sound while others actually degrade sonic performance. Use caution in selecting a power line conditioner for your system. In particular, avoid using inexpensive "surge protectors". Although these can prevent damage from high voltage spikes, they often degrade performance.

Leaving the AC power on

The Wadia 302 CD Player is designed to be able to have the AC power on with no harm or wear to the unit. To reduce wear and power consumption, all motors and laser circuitry turn off when the unit stops playing. Leaving the power on allows the circuitry to remain at a constant operating temperature, providing better performance and longer life. However, there is always a slight increase in risk of fire or damage to any electrical component when the power is left on. We leave the decision to leave the Wadia 302 CD Player powered to the individual owner.

Break-in and warm-up

Careful listeners will notice that the sound of the Wadia 302 CD Player improves steadily after the unit is powered-up. A new unit will undergo more dramatic changes when power is applied for the first time. Depending on the resolution of the system and the attentiveness of the listener, you may find that the sound continues to improve over the first several weeks of operation. If the power is disconnected for a period of an hour or more, the unit will undergo similar but less dramatic break-in.

Questions about Connecting the Wadia 302 CD Player

To help you decide the best way to connect the Wadia 302 CD Player to your system, read the following list of questions asked by Wadia owners:

Direct-Connect™ or Pre-Amplifier?

The Wadia 302 CD Player is designed to produce excellent performance in systems with or without preamplifiers. However, in many systems a preamplifier is unnecessary when using your Wadia 302 CD Player. The Direct Connect technology incorporated into the Wadia 302 CD Player provides all the necessary control functions of a preamplifier while the signal is still in the digital domain. This avoids the sonic degradation caused by analog circuitry, switches, and wire. The Direct-Connect output stage can drive any power amplifier and any interconnects, even very long lengths. Many listeners are surprised by the improvement in performance compared to even the most expensive preamplifiers. Even if you purchased your Wadia 302 CD Player with the intention of connecting it through a preamplifier, we suggest that you experiment with direct connection to your amplifier.

Does Direct-Connect™ compromise performance with a preamplifier?

Although we encourage listeners to bypass their preamplifier, the Wadia 302 CD Player is not compromised in any way when used with a preamplifier. The Wadia 302 CD Player performs all preamplifier functions such as input selection and volume control in the digital domain. As a result, there is no circuitry associated with Direct-Connect that affects the audio performance. The Wadia 302 CD Player offers uncompromised performance in systems with and without preamplifiers.

How should I connect Analog Sources?

To use analog sources in a system using Wadia's Direct Connect system, Wadia has introduced the Wadia 130 and 150 Analog-to-Digital converters. Now it is possible to use analog sources, such as a tuner, tape deck, or even a turntable (in conjunction with a suitable phono stage) in your system without using a conventional analog preamplifier. Consult your dealer for more information on the Wadia Analog-to-Digital products.

Bypassing the Wadia Digital Volume Control

Unlike conventional volume controls, there is absolutely no circuitry in the analog signal path of the Wadia Digital Volume Control -- no passive parts, switch contacts, resistors, or even circuit board traces. The Wadia Digital Volume Control operates in the digital domain; it comprises one computer-programming step in the Wadia's digital filter algorithm.

If you are connecting the Wadia **302** CD Player to a preamplifier or amplifier with volume control integrated, you can set the Wadia **302** CD Player volume control to the maximum level (99) and achieve full resolution.

Connecting Directly to an Amplifier

To connect your Wadia **302** CD Player to a power amplifier, ensure that your power amplifier is turned off, and then connect your analog interconnects from the Wadia **302** CD Player balanced or unbalanced analog outputs to the amplifier's inputs.

Connecting to a Preamplifier

To connect the Wadia **302** CD Player, simply connect the balanced or unbalanced analog outputs from the Wadia **302** CD Player to a pair of line-level inputs on the preamplifier.

When using a preamplifier, turn the Wadia **302** CD Player volume control to its maximum volume (99).

Adjusting the Maximum Output Voltage

The Maximum Output Voltage is the output voltage when the volume control is set to maximum setting (99). The Maximum Output Voltage is factory set to 4.0 V on the balanced output and 2.0 V on the unbalanced output. You can adjust the Maximum Output Voltage on the Wadia 302 CD Player to match your system by setting the two small switches on the rear panel as shown in the table below.

Switch Settings		Maximum Output Voltage		Attenuation Level
Switch 1	Switch 2	Unbalanced Output	Balanced Output	
up	up	4.0V	8.0V	+6 dB
up*	down*	2.0V*	4.0V*	0 dB*
down	up	1.0V	2.0V	-6 dB
down	down	0.5V	1.0V	-12 dB

*Factory setting

The Maximum Output Level is factory set to match the majority of audio systems. However, you may want to adjust the Maximum Output Voltage under two circumstances.

First, if you are connecting the Wadia 302 CD Player to a preamplifier, you may find that other components in your system, such as phonograph or tuner, play either louder or softer than the Wadia 302 CD Player. In this case, adjust the Maximum Output Level so the volume of the Wadia 302 CD Player more closely matches the level of your other source components.

Second, if you are connecting the Wadia 302 CD Player directly to your amplifier, you may need to adjust the Maximum Output Voltage to match the sensitivity of your amplifier or speakers. The Wadia Digital Volume Control performs best when operated in the top one-third of its range, (67 or higher). If you find that you listen often with the digital volume set lower than 50, reduce the Maximum Output Voltage so that the digital volume control is set higher during normal listening.

If you have unusually inefficient loudspeakers or a low-gain amplifier, you may find that the output of the Wadia 302 CD Player is too low and that even at a volume setting of 99 the sound level is not loud enough. In this case, increase the Maximum Output Voltage.

Infrared Input and Pass-through

The Wadia 302 CD Player is equipped with a pair of 1/8" mini-plug infrared (IR) pass-through jacks. The IR pass-through jacks can be used with an IR receiver/transmitter system to send remote control commands directly to the Wadia 302 CD Player. This may be useful for example, if the Wadia 302 CD Player is located outside the field of view of your listening position.

Optional Digital Inputs

Digital inputs are available as an option on the Wadia 302 CD Player. The digital inputs allow you to connect other digital sources and receive the benefits of Wadia's decoding performance. The Wadia 302 CD Player Digital Input card has the following inputs:

Input 1: Glass-fiber optical

Input 2: Coaxial with BNC connector

Input 3: Coaxial with BNC connector

Input 4: Plastic-optical TOSLINK

All inputs automatically adjust to any of the standard digital-audio data-rates from 32 to 96 kHz.

Digital Output

The Wadia 302 CD Player is equipped with one digital output to allow the internal CD transport to feed another component, such as a digital recording device. The digital output is a S/PDIF signal on a high-quality BNC jack.

Choosing a Digital Cable

For maximum performance we recommend using an ST glass-optical cable, which can be purchased from your Wadia dealer, for any digital audio connections. Wadia Digital was the first company to use glass fiber-optic data-transmission in digital audio and we believe that it offers the best performance of all the available options. Based on our experience, here is a list of digital interface methods in descending order of performance:

1. ST-type Glass optical (as implemented by Wadia, with high quality glass-optical cable)
2. AES/EBU using XLR connector
3. Coaxial S/PDIF cable using BNC connector
4. Coaxial S/PDIF cable using RCA connector
5. TOSLINK plastic-optical cable

The quality of any of these transmission methods depends on the quality of the cable and the sophistication of the transmitter and receiver. For example, a high-quality coaxial S/PDIF cable can outperform a low-quality AES/EBU cable. A high-quality AES/EBU cable may outperform a poorly implemented glass-optical system.

If you are using a coaxial S/PDIF connection, we recommend having the cable terminated with a BNC connector. This will provide higher performance than an RCA connector. Your Wadia 302 CD input kit comes with an RCA/BNC adapter that can be used for experimentation between different types of coaxial S/PDIF cables.

Again, we highly recommend that you take advantage of your dealer's experience and, most importantly, trust your ears.

Connecting to the Digital Inputs or Output


To connect to either the digital inputs or output of the Wadia 302 CD Player, simply connect the appropriate digital input or output to the outboard component.

Operation

This section describes how to operate the Wadia 302 CD Player.


Front Panel Display and Controls

Below is an illustration of the Wadia 302 CD Player front panel display and controls. Refer to the table on page 17 for information on each control.

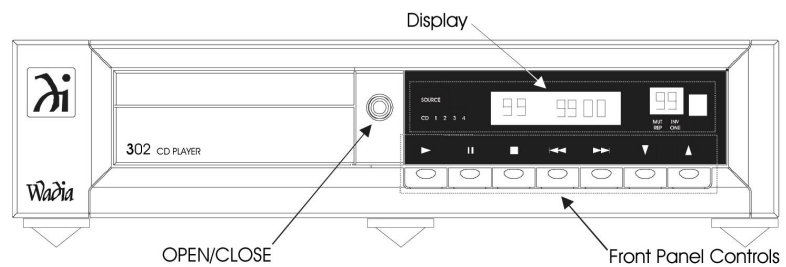





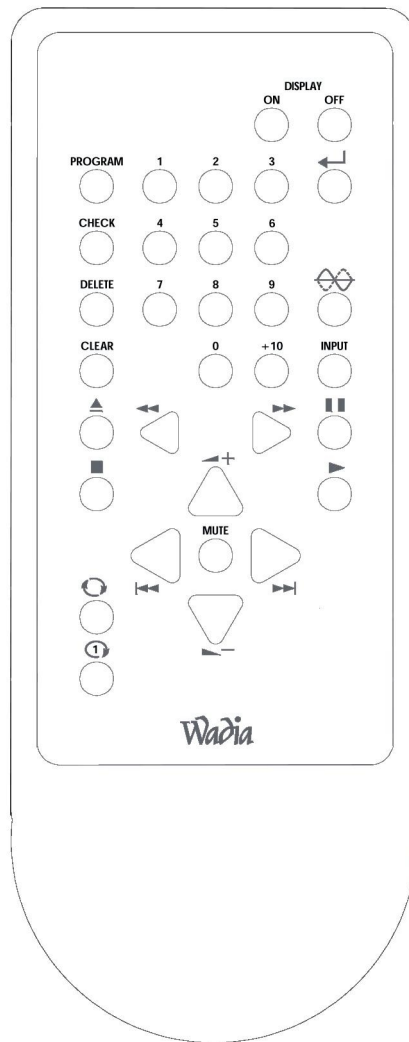








Remote Control

Below is an illustration of the Wadia 302 CD Player remote control. Refer to the table on the following page for information about each command.



Operation Commands

Shown below is a table of all the controls on the front panel and the remote to operate your Wadia 302 CD Player. Refer to the page number noted for more information about each command.

Command	Icon	Description	Control Location	Page
Open/Close		Open or close loading drawer	Front panel and remote	19
Play		To begin playing disc	Front panel and remote	19
Stop		Stop playing	Front panel and remote	19
Pause		Pause playing	Front panel and remote	19
Skip forward		Move to next track	Front panel and remote	19
Skip back		Move to beginning of current track	Front panel and remote	19
Skip back (repeated)		Move to beginning of previous tracks	Front panel and remote	19
1-10 (key pad)		Select tracks or program	Remote only	19
>10		Select tracks with track numbers greater than ten.	Remote only	19
Volume Up/Down		Increase or decrease playback level	Front panel and remote	19
Mute		Mute output	Remote only	20
Input		Select internal CD transport or external digital inputs	Remote only	20
Invert		Invert output 180°	Remote only	20
Repeat		Repeat disc or program	Remote only	20
Single		Play a single track	Remote only	21
Program		Used to create program	Remote only	21
Check		Used to check program	Remote only	21
Delete		Used to delete track from program	Remote only	21
Clear		Used to clear program	Remote only	21
Enter		Available for future upgrades	Remote only	21

OPEN/CLOSE

Pressing the OPEN/CLOSE key causes the disc-loading drawer to either open or close. You can also close the drawer by gently pushing on the drawer front, or by pressing PLAY or SKIP FORWARD.

PLAY

Pressing PLAY causes the unit to begin playing. If the drawer is open, pressing PLAY will close the drawer before playing begins.

STOP

Pressing STOP causes the disc to stop playing.

PAUSE

Pressing PAUSE suspends playing until play is pressed, or until pause is pressed again. Playing will resume at the same point on the CD where the pause button was pressed.

SKIP FORWARD/SKIP BACK

Pressing these keys skips to the next or previous track. SKIP FORWARD always moves to the next track. However, the function of the SKIP BACK key is different. If a CD is playing, pressing SKIP BACK once will return to the beginning of the current track. Pressing SKIP BACK repeatedly will select the previous tracks. If the CD is not playing, then pressing SKIP BACK will move to the previous track.

Direct Access Keypad

Use the direct access keypad to move directly to any track on the disc. For track numbers greater than 10, use the >10 key to set the first digit and then one of the number keys for the second digit.

VOLUME UP/DOWN

Pressing these keys increases or decreases volume by 0.5 dB for each time the key is pressed. The two-digit LED on the front panel indicates the volume level, with a range of 0-99. When the volume is set to zero the output is muted. Volume level of 01 is -50dB from maximum output, and each successive step increases the output by ½ dB until maximum output is reached and the display indicates 99.

MUTE

The Wadia 302 CD Player has two mute modes that are automatically implemented under different circumstances.

1. **Software Mute:** When the MUTE key is pressed on the remote control, the Wadia 302 CD Player DSP engine transmits a stream of zero signal-level samples to the DAC section, which results in zero output.
2. **Relay Mute:** The Wadia 302 CD Player has mute relay connected between the positive and negative outputs. When this relay is engaged, it connects the positive output to the negative output, reducing the output to zero. This relay, which produces an audible click when it engages or disengages, is not in the music signal path. The mute relay is engaged under any of the following three conditions:
 - Each time the Wadia 302 CD Player power switch is turned on.
 - When the Wadia 302 CD Player detects AC input level below its minimum operating range.
 - When the volume control is set to zero AND the MUTE key on the remote control is pressed.

When the Wadia 302 CD Player is in either software or relay mute, the Mute indicator on the front panel will illuminate. Note that the CD will continue playing even when the output is muted.

INPUT

The Wadia 302 CD Player can be configured with four optional digital inputs (See section on Optional Inputs). Each time the INPUT key is pressed, the next input is selected. For example, if you are listening to the internal CD drive, and you press the INPUT, Input 1 will be selected. Press it again, and Input 2 will be selected and so on. After Input 4, the list will begin again with the internal CD drive.

INVERT

Pressing the INVERT key on the remote control will cause the Wadia 302 CD Player to invert phase; pressing it again will switch the phase back to normal. When the phase is inverted, the INVERT indicator on the front panel will illuminate.

REPEAT

Pressing the REPEAT key will repeat the entire disc, program, or single track continuously. Pressing it a second time will stop repeating. The repeat mode is indicated by the front panel display.

SINGLE

To play a Single track first press the Single button (a ONE indicator will light in the display window), then press the numeric button(s) that correspond(s) to the track you would like to play.

PROGRAM

The PROGRAM key can be used to create a program to play tracks on a disc in any order you choose. Programming functions are available only when the CD is stopped. Follow these steps to create a program:

1. Press the PROGRAM key to enter the programming mode (the display will indicate Pr).
2. Use the Direct Access Keypad to select a desired track.
3. Repeat until all desired tracks are entered.
4. Press PLAY to hear the tracks in the program order.
5. Pressing Program a second time will return you to the programming mode where you may check your program.
6. Opening the disc loading drawer or turning the power off will erase the program.

CHECK

The CHECK key can be used to confirm the tracks in a program, and the time of each track. While in the programming mode, with each instance that the CHECK key is pressed the display will indicate the next programmed track number and track time in the order they were input into the program.

DELETE

The DELETE key can be used in conjunction with CHECK key to remove a track in a program. Simply press the CHECK key until the track you wish to remove appears on the display and then press the DELETE key. After a track is deleted the display will indicate the total number of remaining tracks and time in the program.

CLEAR

While in the programming mode, the CLEAR key will erase program memory and then exit the programming mode.

ENTER

The ENTER Key is available to allow for future updates and upgrades.

Appendices

Trouble Shooting

If the Wadia 302 CD Player experiences a powerful static shock or sudden AC surge, it is possible to “lock-up” the computer circuitry. A locked-up computer may result in erratic display, no output, and no response to remote commands.

If your Wadia 302 CD Player should lock-up, unplug the AC cord. Wait at least 30 seconds before plugging the unit in again. If the unit still does not operate normally, contact your dealer.

DigiMaster Software License Agreement

The DigiMaster software is copyrighted and patented and is the property of Wadia.

Title to Licensed Software is not transferred to the customer. The customer is granted a nonexclusive license to use the Licensed Software on a single CD Player basis. The Licensed Software cannot be shared among multiple CD Players. Each CD Player must have its own separately Licensed Software.

At the sole discretion of Wadia, the customer may be provided with updates of the Licensed Software. Wadia retains the right to provide the Licensed Software updates for a fee. The customer may refuse to accept such Licensed Software updates.

Environmental Care

Wadia Digital makes every effort to minimize our environmental impact. We greatly appreciate it when our customers join our efforts. Please dispose of batteries and packing material in a manner that is environmentally responsible.

Warranty

Wadia warrants that Wadia products shall be free from defects in materials and workmanship for:

5 years for parts and labor (excluding batteries)

1 year for the transport mechanism's mechanical structure and associated electronics

The warranty period begins at the date of retail sale by an authorized Wadia dealer and is subject to the following requirements and understandings:

1. This is a non-transferable warranty applicable to the original purchaser exclusively.
2. The product must not have been modified in any manner whatsoever, or the warranty is immediately voided.
3. The product must not have been stored in humid environment; nor subjected to weather, water, or salt spray.
4. During the warranty period Wadia will repair the product to working order, or, at Wadia's option, replace the defective equipment with a similar available product, at no cost to the owner for the labor, materials, and return shipping from Wadia.
5. Wadia shall not, under any circumstances, be liable for any incidental or consequential damages arising from the loss of property or other damage or losses due to the failure of a Wadia product. Wadia will not pay for loss of use or inconvenience caused by the failure of a Wadia product. Wadia will not pay for damage caused to other audio components because of the failure of a Wadia product within the limits allowed by State Law.
6. All repairs performed after the warranty period has expired will be billed to the owner and will carry a 90 day warranty on parts and labor.
7. The customer is responsible for shipping the unit to Wadia.
8. Wadia product is only warranted in the country of original sale.

Specifications

Decoding Software:.....DigiMaster 3.1 upsampling filter system

Digital Processing Capability 24 Bits

Digital Volume Control Range..... 50 dB in one-hundred 1/2 dB steps

Analog Outputs..... 1 pair of Balanced (XLR)
1 pair of Unbalanced (RCA)
(Both can be used simultaneously).

The balanced outputs use the standard audio pin configuration: pin 1 is ground, pin 2 is positive, and pin 3 is negative.

Digital Output 1 - S/PDIF (BNC)

Digital Inputs (Optional)..... 1 - Glass Fiber-Optic (ST);
2 - S/PDIF (BNC);
1 - Plastic Optical (Toslink)

The optional digital inputs will accept data rates up to a 24 bit word length and 96 kHz sample rate.

Output Impedance 75 ohms

Power Consumption 18 watts

Weight..... 19 lbs.; 22 lbs. including carton

Dimensions Width: 17.2" (43.7 cm)
Depth: 16" (40.6 cm)
Height:
with tiptoes: 4.7" (11.9 cm)
without tiptoes 3.9 (9.9 cm)

©2004 Wadia

795 Highland Drive

Ann Arbor MI, 48108

734-975-4217

Subject to change without notice.