




CABINET PARTS

29" ELECTRIC DRYER

For Model: WED6400SW1, WED6400SB1, WED6400SG1
(White/Grey) (Black) (Biscuit/Gold)

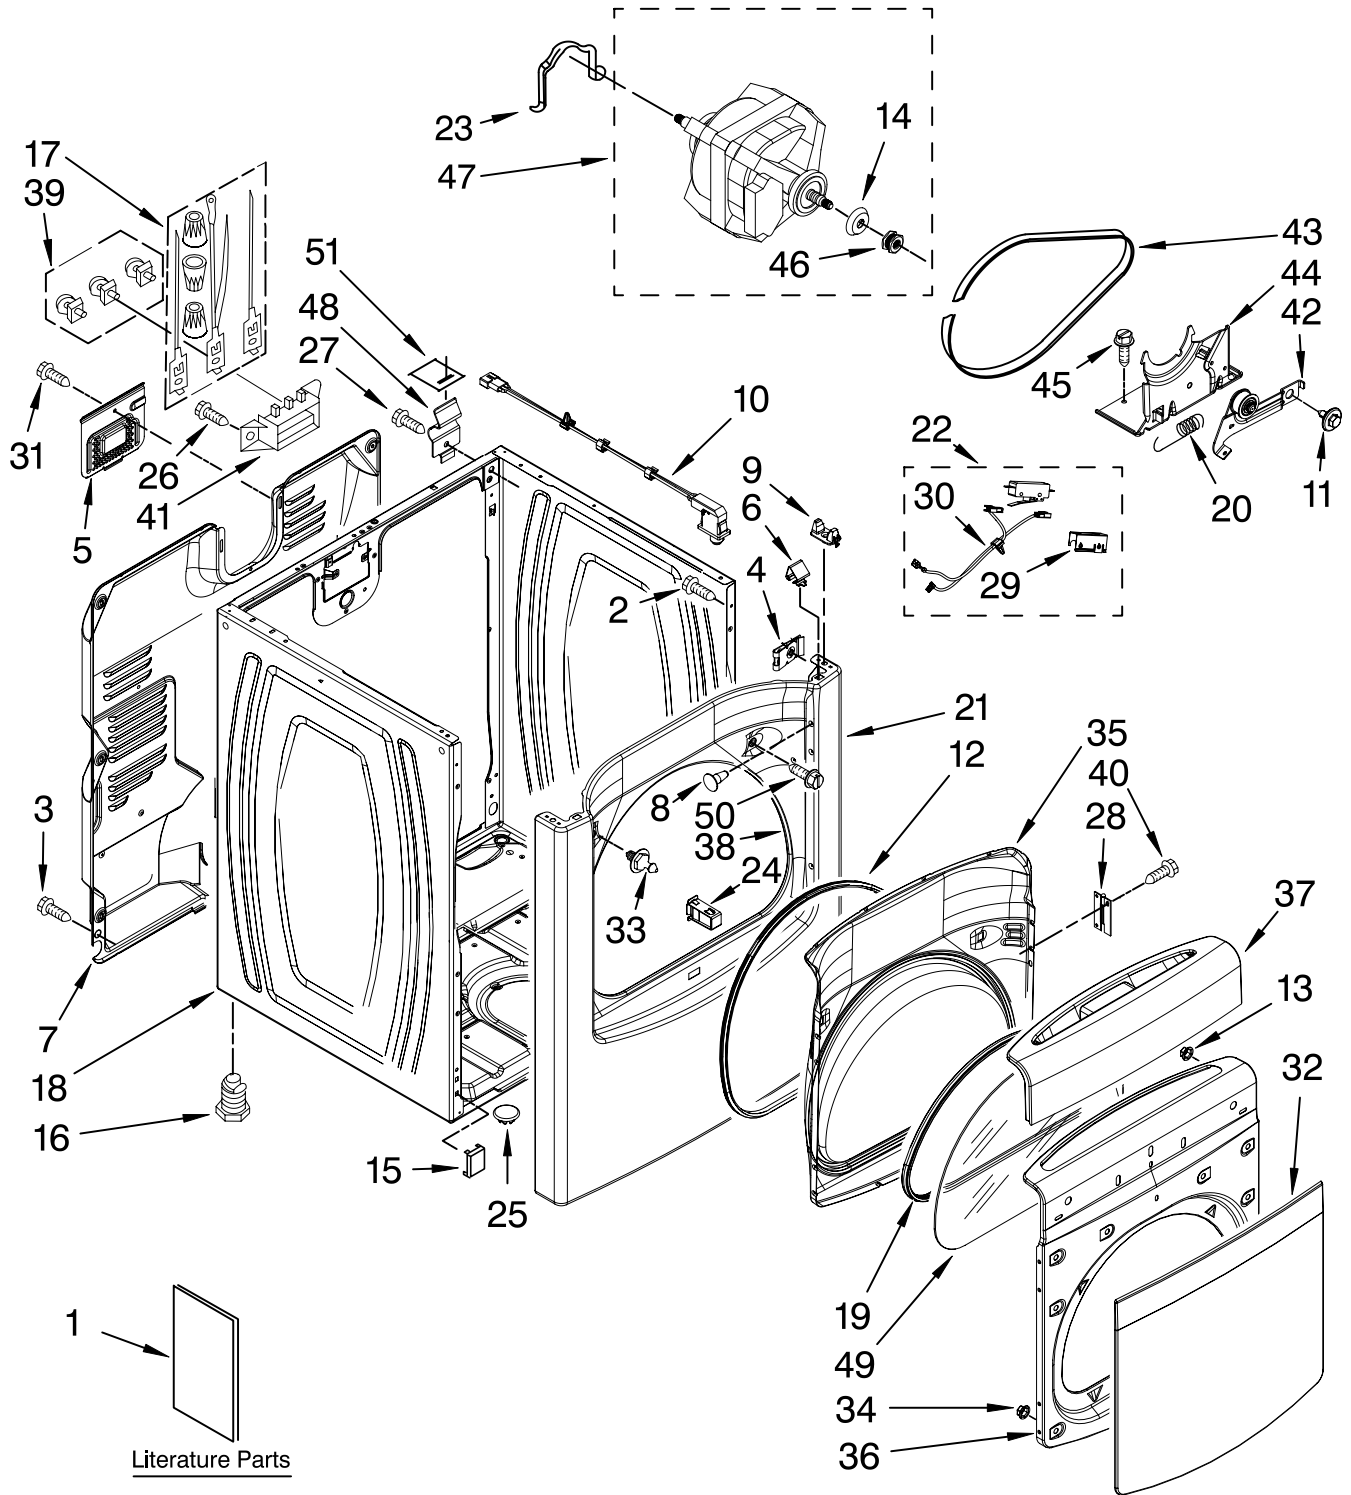

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS


For Model: WED6400SW1, WED6400SB1, WED6400SG1
(White/Grey) (Black) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	16	3392100	Foot, Dryer	32		Window, Outer Door
	W10054150	Tech Sheet		279810	Foot-Optional		8575030	White
	W10054090	Guide, Quick Start			(Extended Length Package of 2) (Not Included)		8575049	Black
	W10054070	Use & Care Guide	17	279318	Terminal, Tinned & Brass (3) (Includes Illus. 39) Cabinet	33	8572983	Biscuit
Following May Be Purchased						34	308499	Strike, Door Palnut (10) Door Inner
<u>DO-IT-YOURSELF REPAIR MANUALS</u>			18			35	8565037	White
	LIT677818	Dryer		8557569	White		8575052	Grey
2	343641	Screw, 10-16 x 1/2		W10045390	Black	36		Door, Outer
3	693995	Screw, 8-18 x 3/8		8572115	Biscuit		W10116925	White
4	W10007520	Clip, Ground (2)	19	W10076060	Seal-Window		W10116927	Black
5	W10110241	Cover, Block	20	3387374	Spring, Idler		W10116926	Biscuit
6	8576625	Lock-Top Front (2)	21		Panel, Front	37		Door Handle
7	8558830	Panel, Rear		8565029	White		W10111246	White
8		Plug-Hole		8565032	Black		W10111248	Black
	3404413	White		8565031	Biscuit		W10111247	Biscuit/Gold
	3404416	Black	22	8566208	Switch Assembly	38	W10044490	Seal, Front Panel
	3404415	Biscuit	23	660658	Clamp, Motor	39	279393	Terminal Block Kit (For Terminal Block)
9	8568303	Locator, Snap Down	24	8572982	Catch, Door Assembly	40	342055	Screw, 10-32 x 5/8
10	3978977	Door Switch Assembly	25	8578560	Hole-Plug (Cabinet Base)	41	3397659	Block, Terminal
11	3389420	Retainer, Idler	26	3393008	Screw, 10-16 x 1/2	42	8547174	Pulley Assembly
12	8575027	Seal, Door	27	3390631	Screw, 8-18 x 1/2	43	8547168	Belt, Drive
13	342055	Pal Nut (4)	28		Hinge, Assembly	44	8547166	Base, Motor
14	8578538	Restrainer, Belt		8565018	White	45	W10002600	Bolt, 6-20 x 1 1/4
15	3394083	Clip, Front Panel (2)		W10050090	Black	46	8578565	Pulley, 60 HZ
				W10050050	Biscuit	47	8566152	Motor Assembly 60 HZ.
			29	8564011	Bracket, Switch	48	238088	Hinge, Top (2)
			30	8539897	Belt-Switch Jumper	49	8565015	Glass, Inner Door
			31	8533974	Screw Ground	50	W10100830	Screw, 10-16 x 3/64
						51	18849	Pad-Top Hinge

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Model: WED6400SW1, WED6400SB1, WED6400SG1
 (White/Grey) (Black) (Biscuit/Gold)

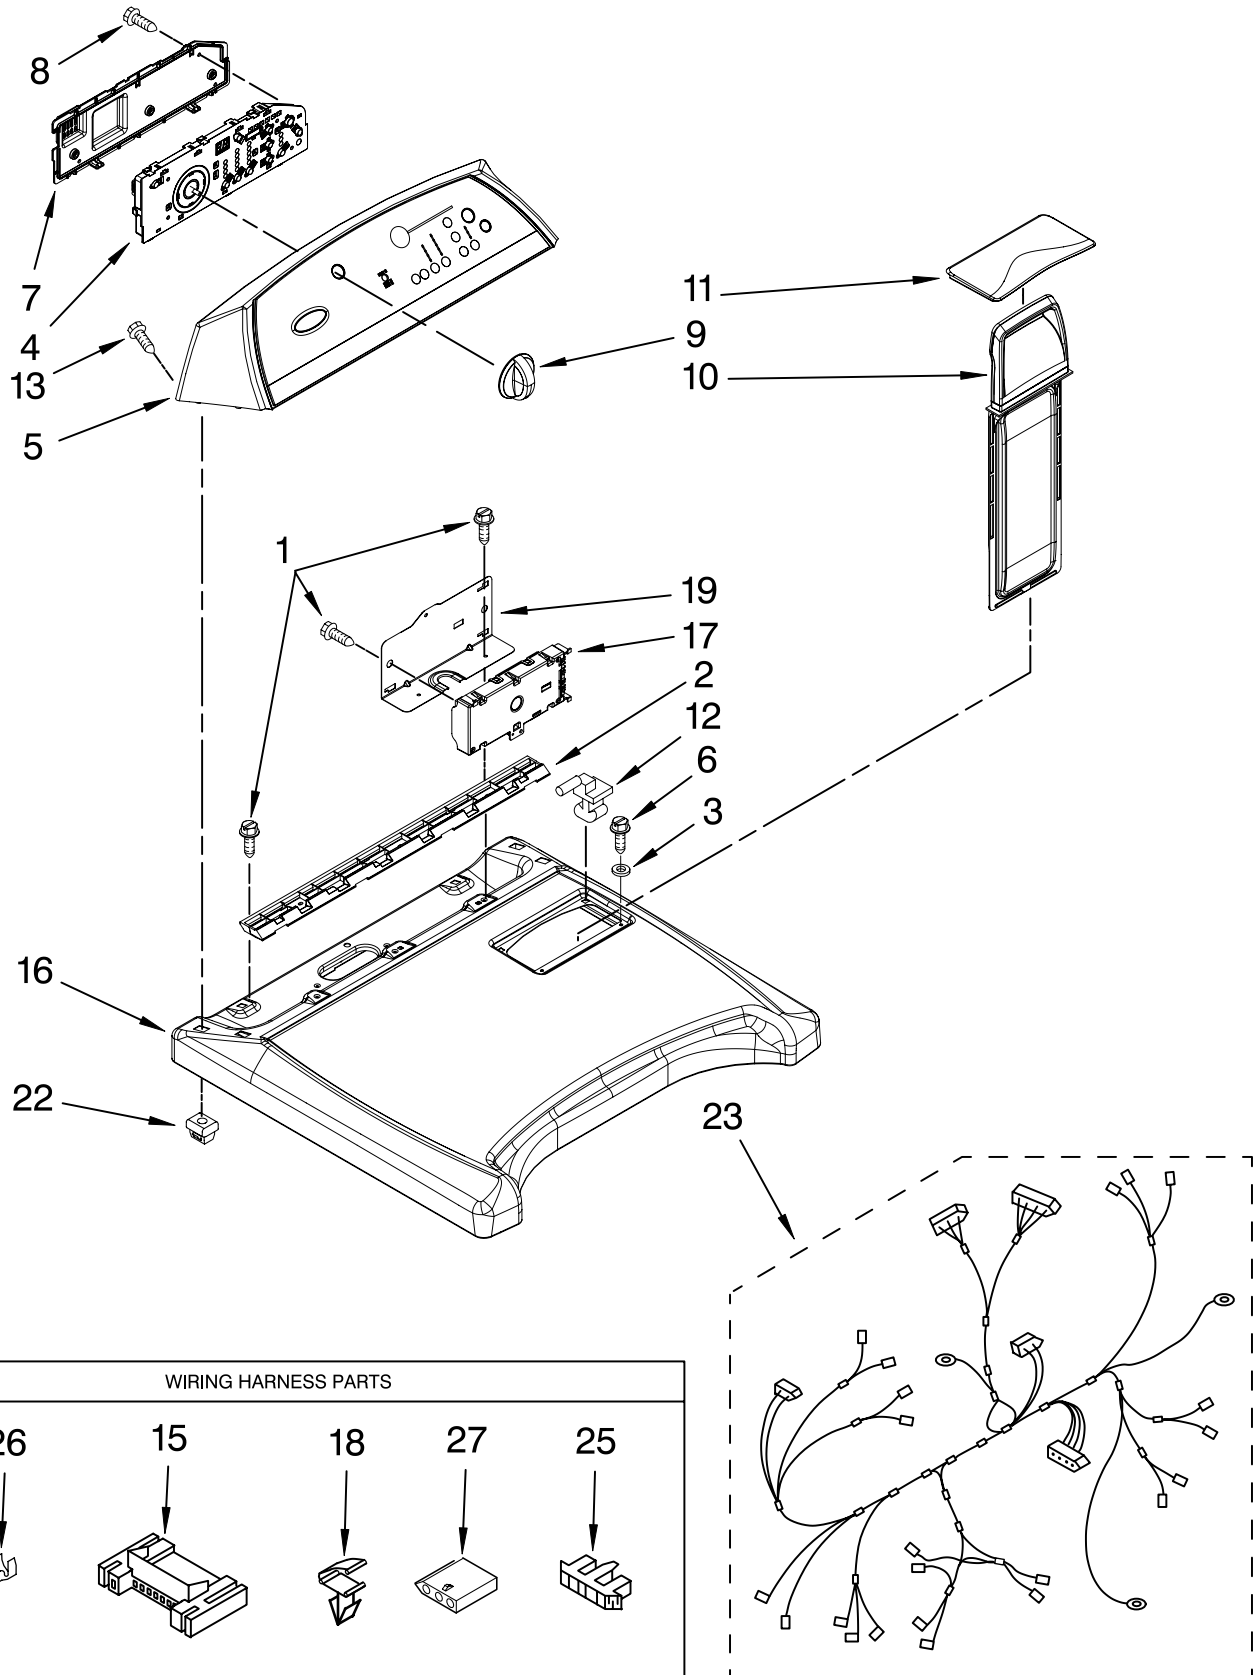

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Model: WED6400SW1, WED6400SB1, WED6400SG1
 (White/Grey) (Black) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	337686	Screw, 8-18 x 7/16
2	8558863	Bracket, Console
3	237446	Washer (Top/Chute)
4	8563974	User Interface
5		Panel, Console
	W10110325	White
	W10110330	Black
	W10110328	Biscuit
6	3196537	Screw, 8-18 x 5/8
7	8564265	Cover, Rear
8	W10003770	Screw, 6-19 x 3/64
9		Knob, Assembly
	8574957	White
	8574959	Black
	8574958	Biscuit
10	8572270	Assembly, Lint Screen
11		Cover, Lint Screen
	W10044320	White
	W10044360	Black
	W10044330	Biscuit
12	W10044470	Hinge, R.H.
	W10044480	Hinge, L.H.
13	W10001580	Screw
15	3395683	Connector (Motor)
16		Top
	8565025	White
	8565028	Black
	8565027	Biscuit
17	W10111607	Control, Electronic
18	3394427	Clip-Harness
19	8563853	Bracket, Machine Controller
22	8558853	Grommet
23	8299914	Harness Wiring
25	3936144	Connector
26	94614	Terminal
27	3397269	Connector, Timer

BULKHEAD PARTS

For Model: WED6400SW1, WED6400SB1, WED6400SG1
 (White/Grey) (Black) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	8544805	Lint Chute Assembly
2	487909	Screw, 8-15 x 1/2
3	3387459	Washer-Support
4	347139	Seal, Lint Chute
5	90767	Screw, 8-18 x 3/8
6	8573836	Shield, Exhaust
8	8566498	Thermostat, HI-Limit
9	3977393	Thermal Cut-Off (Includes Illus. 15)
10	694089	Wheel, Blower
11	8577230	Housing, Blower
12	8546149	Clip-Heater Box
13	343641	Screw, 10-16 x 1/2
14	8544801	Box, Heater
15	W10053480	Bracket, Lint Chute
16	3977373	Bracket, Drum Light
17	8573069	Element, Heater
18	8544813	Seal
19	279457	Wire Kit, Terminal (For Heater Element Wiring Harness Repair)
20	489463	Screw, 8-18 x 5/8
21	3196537	Screw
22	3406124	Bulb
23	8558890	Bulkhead, Front
24	3402841	Lens, Drum Light
25	690997	Ring Tri
26	8575325	Shaft, (L.H.)
27	8575324	Shaft, (R.H.)
28	8536973	Roller, Support
29	W10001120	Nut, 3/8-16
30	8576468	Assembly, Sensor
31	8557242	Bulkhead, Rear
32	3934666	Nut 3/8-16 (R.H.)
35	8557277	Seal Drum (2)
36	W10109200	Screw, 11-16 x 3/4
37	8557270	Drum, Assembly
38	8565688	Baffle, Drum (2)
39	3403634	Socket Assembly
40	8577274	Thermistor
41	8544810	Collar, Lint Chute

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Model: WED6400SW1, WED6400SB1, WED6400SG1
(White/Grey) (Black) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
-------------------	-----------------	--------------------

ACCESSORY PARTS

	279948	Kit, Dryer Repair
	W10071550	Dry Rack
	8522199	Kit, Dryer Vent Testing

PAINT, TOUCH-UP (1/2oz.)

	72017	White
	4392899	Biscuit
	72032	Black

PAINT, PRESSURIZED SPRAY

(12 oz.)

	350930	White
	4392901	Biscuit
	285006	Black
	350938	Primer, Gray

PAINT, BULK (1 qt.)

	799344	White (Uncut)
--	--------	---------------

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST