

INSTALLATION INSTRUCTIONS

PROFESSIONAL RANGE MODELS

36" ALL GAS RANGE WITH OPEN BURNERS**

36" NATURAL GAS MODELS *TN310-7BW *TN310-7W

THESE MODELS ARE FIELD CONVERITBLE FOR LP/PROPANE GAS.

36" LP/PROPANE GAS MODELS
*PN310-7BW
*PN310-7W

THESE MODELS ARE FIELD CONVERTIBLE FOR NATURAL GAS.



If you have questions, call 800-251-7224, 8 am to 5 pm Eastern Time, or visit our website, www.FiveStarRange.com.

Installation Instructions



BEFORE YOU BEGIN

Read these instructions completely and carefully.

- IMPORTANT Save these instructions for local inspector's use.
- IMPORTANT Observe all governing codes and ordinances.
- **Note to Installer -** Be sure to leave these instructions with the Consumer.
- Note to Consumer Keep these instructions for future reference.
- FiveStar recommends this product be installed by a licensed professional.
- Product failure due to improper installation is not covered under the Warranty.



WARNING:

This appliance must be properly grounded.

In the Commonwealth of Massachusetts:

• This product must be installed by a licensed plumber or gas

fitter.

- When using ball type gas shut-off valves, they shall be T handle type.
- A flexible gas connector, when used, must not exceed Three (3) feet.



CAUTION:

THESE RANGES SHOULD BE INSTALLED IN CONJUNCTION WITH A SUITABLE OVERHEAD VENT HOOD. Due to the high heat capacity of this unit, particular attention should be paid to the hood duct work installation to assure it meets local building codes.

Standard countertop installations:

A 1200 CFM hood is recommended for 48" & 60" ranges. A 600 CFM hood is recommended for 30" & 36" ranges.

Hoods should be 24" min. deep and at least the same width as the cooktop. FiveStar hoods may be installed from 24" to 30" above the cooking surface. A minimum of 28" is required when a FiveStar Backsplash with warming shelves is used.

Check local building codes for the proper method of gas range installation. Local codes vary. Installation, electrical connections and grounding must comply with applicable codes. In the absence of local codes, the gas range should be installed in accordance with the National Fuel Gas Code ANSI 223.1, latest edition and National Electrical Code ANSI/NFPA 70, latest edition.



CALITION:

These ranges weigh up to 510 pounds. Some

disassembly will reduce the weight considerable. Due to the weight and size of the range and to reduce the risk of personal injury or damage to the produce and/or damage to the floor, TWO PEOPLE ARE REQUIRE FOR PROPER INSTALLATION.



INSTALLATION INSTRUCTIONS

Please read these instructions before attempting to install this range

Inspection & Unpacking
Check the range carton for visible
damage. If there is damage or even
creases in the carton, contact the
carrier, request an inspection and file
the appropriate freight claim. Do not
refuse shipment. Responsibility for
shipping damage is with the carrier
or end user. Cut the shipping straps,
then carefully lift the carton up from
the range. This will help eliminate
possible damage to the backguard that
is packed in the top of the range carton.

Remove, unwrap and temporarily lay aside any parts that are not attached to the range. Make sure no parts are left in the carton for accidental disposal. Carefully inspect the range for damage.

REMOVE PACKAGING

Before moving the range indoors:

 Remove outer carton and packing material from the shipping base. The range is now ready for removal from the wooden base.

STEP 2

Due to the weight of these ranges, use a dolly with soft wheels to move this range.

- Lift the range onto the dolly and move indoors.
- The range should be placed onto sliders to prevent damage to the floor.

STEP 3

To simplify handling and to reduce the weight of the range:


- Remove the grates and the burner pans.
- Remove griddle/grill and housing.
- Remove the broiler pan, racks and literature package from inside oven.

STEP 4

LIFT OFF DOOR To remove oven door(s):

- Open door fully.
- Rotate the "hinge retainers" into the locked position, as shown over the hook located on the bottom side of each hinge quadrant.
- Lift the door slightly, to clear "hinge slots", and pull straight out to clear hinge mechanism from main front opening.

Lift-Off Oven Door

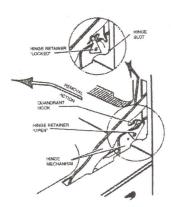

INSTALLING THE BACKGUARD – OPEN BURNER MODELS NOTE: PLEASE READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.

5-1

Remove the burner grates, griddle/grill and housing.

5-2

From the rear of the range, remove two screws from the rear of the side panels, the upper most screw on each side. You will need a $^{5}/_{16}$ " nut-driver or $^{5}/_{16}$ " socket to remove these screws. (Tools with a magnetized tip will be helpful in replacing the backguard screws.)

5-3

From the rear of the range, locate the upper wire cover with tab slots. Remove two ⁵/₁₆" mounting screws. This cover will be reinstalled once the backguard is installed.

5-4

Screws are installed in the backguard, at the Factory for assembly to the backguard support. It is important that you locate and remove these four screws from the backguard before you attempt to install the backguard to the range backguard support.

<u>5-5</u>

Remove the vinyl protective covering from the front of the backguard.

5-6

The front of the backguard should fit in front of the rear support. Slide the backguard over the exhaust vent(s). Align the slots in the front of the backguard with the rear support bar locator studs.

5-7


With the backguard in position, secure the backguard to the rear backguard support using the four $\frac{5}{16}$ " screws removed in step 5-3, re-install the screws in the edge of the side panels.

5-8

Reinstall the upper wire cover that was removed in Step 5-3. Place the cover into position with the lower backguard panel fitting into the tab slots. Reinstall the two $\frac{5}{16}$ mounting cover screws.

5-9

Re-install griddle/grill housing and grates.

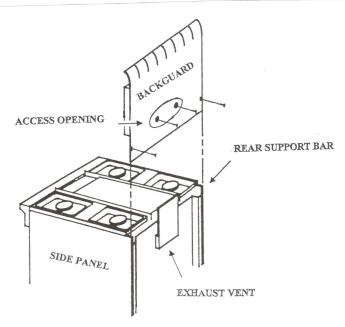

BACKGUARD INSTALLATION

ELECTRIC CONNECTION

This range must be supplied with 120 volt, 60 Hz. and connected to an individual, properly grounded branch circuit protected by a 15 amp circuit breaker or time delay fuse.

The power cord of this appliance is equipped with a three-prong (grounding) plug which mates with a standard three-prong grounding wall receptacle to minimize the possibility of shock hazard from this appliance.

If the electrical service provided does not meet the above specifications, it is recommended that a licensed electrician install an approved outlet.

DO NOT, UNDER ANY CIRCUMSTANCES, CUT OR REMOVE THE THIRD (GROUND) PRONG FROM THE POWER CORD.

DO NOT USE AN EXTENSION CORD WITH THIS APPLIANCE.

- Locate the electric supply within the area shown or within reach of the cooktop's six foot power cord.
- To avoid tangling cord with items stored in the cabinet, locate the receptacle or rear wall, inside the cabinet.

ELECTRICAL REQUIREMENTS FOR ALL GAS RANGES: 120 volts, 60 Hz, 15 amps

CONNECTING THE RANGE TO GAS

Because hard piping restricts movement of the range, the use of an A.G.A. certified <u>flexible</u> metal appliance connector is recommended unless local codes require a hard-piped connection.

Never use an old connector when installing a new range. If the hard piping method is used, you must carefully align the pipe; the range cannot be moved after the connection is made.

To prevent gas leaks, put pipe joint compound on, or wrap pipe thread with Teflon* tape all around male (external) pipe threads.

- 7-1. Remove the left most burner pan.
 Locate the pressure regulator
 Left of the rear burner.
- 7-2. Install a manual gas shut-off valve in the gas line in an easily accessed location outside the range. Make sure everyone operating the range knows where and how to shut off the gas supply to the range.
- 7-3. Install male ½" flare union adapter to the ½" NPT internal thread at inlet of the regulator. Use a backup wrench on the regulator fitting to avoid damage.
- 7-4. Install male ½" or ¾" flare union adapter to the NPT internal thread of the manual shut-off valve, taking care to back-up the shut-off valve to keep it from turning.
- 7-5. Connect flexible metal appliance connector to the adapter on the range. Position range to permit connection at the shut-off valve or vise versa.
- 7-6. When all connections have been made, make sure all range controls are in the off position and turn on the main gas supply valve. Use a liquid leak detector at all joints and connections to check for leaks in the system.

When using test pressures greater than ½ psig to pressure test the gas supply system of the residence, disconnect the range and individual shut-off valve from the gas supply piping. When using test pressures of ½ psig or less to test the gas supply system, simply isolate the range from the gas supply system by closing the individual shut-off valve.

*Teflon: Registered trademark of Dupont.

LEVEL THE RANGE

- 1. Remove shipping tape from the leveling legs.
- Carefully slide the range into position.
 Be careful not to damage the floor or entangle power cord and gas flexible tubing.
- 3. To adjust leveling legs, turn counterclockwise to raise the range; clockwise to lower. "Channel-lock" type pliers are recommended. Avoid using a pipe wrench which can scar the legs.

IMPORTANT: The range should always be installed at countertop height or higher. DO NOT INSTALL THE RANGE LOWER THAN ADJACENT COUNTERTOP HEIGHT, DUE TO RISK OF A FIRE HAZARD

STEP 9


REPLACE THE OVEN DOORS

To replace the oven door(s);

- Insert hinges into front frame opening locating "hinge slots" on front frame as shown.
- Rotate "hinge retainers" back into the "open" position.
- Rotate door to make sure it functions properly.


CAUTION:


Take care when replacing the oven doors. If the hinge latch is not securely locked, the hinge may snap back and separate. If the hinge separates, you must apply pressure (possibly with your foot) to press it back together and then engage the hinge tech.

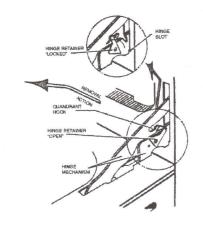

INSTALLATION OF ANTI-TIP BRACKET ON 24", 30" AND 36" MODELS

- 1. Re-check to make sure tape has been removed from leveling legs.
- 2. Place range in proper location with back of range against rear wall.
- 3. Adjust leg levelers to match counter height.
- 4. Remove range and install anti-tip bracket to wall. (See Note: Fig. 2)
- 5. Re-install range. Anti-tip bracket flange must enter slot in back to prevent tipping.

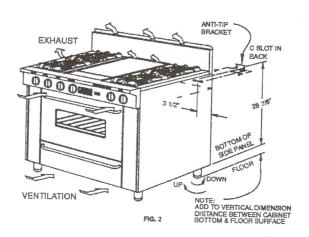

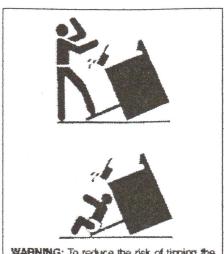

WARNING: To reduce the risk of tipping the appliance by abnormal usage or improper door loading, the appliance must be secured by properly installing the anti-tip device packed with the appliance. To check the installation remove the right top burner grates and pan and verify that the anti-tip device is engaged in the backguard slot.

ASSEMBLE SURFACE BURNER COMPONENTS

- Remove shipping screw from each surface burner.
- Remove each surface burner.
- Place drip pan in position under each burner. Locate "dimples".
- Re-install surface burners.
- Install burner pans.
- Install burner grates.

STEP 12

SURFACE BURNER OPERATION

OPEN SURFACE BURNERS

- Check for proper ignition:
- Push in one control knob and turn 180° counter clockwise to LITE position.
- The igniter will spark and the burner will light; the igniter will continue sparking until the knob is turned from the light position.
- First test may require some time, while air is flushed out of the gas line.
- Turn knob to OFF.
- Repeat the procedure for each burner.
- Burner flames should be blue and stable with no yellow or yellow tips, excessive noise or lifting of the flame from the burner. If any of these conditions exist, check that the burner ports are not blocked, and check the air mixture. If one of these conditions continues, call for service.

STEP 13

OVEN OPERATION

GAS OVEN

- Turn oven thermostat knob counter clockwise to 350°.
- The oven burner should light within 60 seconds.

GRIDDLE OPERATION

- Turn griddle thermostat knob counter clockwise to 350°.
- The griddle burner should light within 60 seconds.

STEP 14

GAS & ELECTRIC SUPPLY

- Turn gas supply "on".
- Turn electric supply "on".

CHECKLIST FOR OPEN BURNER INSTALLATION

MAKE SURE ALL CONTROLS ARE IN THE "OFF" POSITION.

MAKE SUKE ALL CONTROLS ARE IN THE OFF TOSITION.
Gas supply is "on"
Electric power is "on"
Burner drip pans in position under burners
Surface burners in position
Burner pans in positions
Burner grates in position
Oven and broiler racks installed
Surface burner ignition test
Griddle/Grill burner ignition test
Griddle/Grill assembly in position
Gas oven ignition test
MAKE SURE ALL CONTROLS ARE LEFT IN THE "OFF" POSITION
Date Installed & Inspected
Authorized Installer's Signature
Please Print Name

NOTE: Please leave this checklist, Use & Care manual and product registration card with the Homeowner.