

# ReadyLight™

Rechargeable LED Lantern

**VB05**

Job#:	Title: VB05 Manual
Date: 9/24/10	Version: VB05-MAN-Rev6



Dear Customer,

Thank you for purchasing the Verilux ReadyLight™ Rechargeable LED Lantern. You have received an innovative and quality manufactured product, backed by a 90-day limited warranty.

Many other healthy lighting products are available through our catalog and online. Visit us on the web at [www.verilux.com](http://www.verilux.com) to request a free catalog and learn more about all our quality Verilux products, or call our toll-free number 1-800-454-4408.

As a Verilux customer, your satisfaction means everything to us. We look forward to serving you now and in the future.

Have a bright day!

Nicholas Harmon  
President, Verilux, Inc.

## Important Safety Instructions

- Please read these instructions before using this lamp.
- Do not place near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Unplug this lamp during lightning storms or when unused for long periods.
- There are no user serviceable parts in this lamp. Do not dismantle. If the lamp has been damaged in any way, such as power cord or plug is damaged, liquid has been spilled or objects have fallen onto the lamp, the lamp has been exposed to rain or moisture, does not operate normally or has been dropped, it should not be operated.
- Avoid placing the lamp in areas that are dusty, humid/moist, lack ventilation or are subject to constant vibration.



**WARNING:** TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY:

- Do not operate the lamp in close proximity to flammable or combustible vapors, such as aerosol spray products, or where oxygen is being administered.
- Never cover the lamp when it is in operation.
- When cleaning lamp, make sure you have first turned off and unplugged the lamp.


**SAVE THESE INSTRUCTIONS**

Job#:	Title: VB05 Manual
Date: 9/24/10	Version: VB05-MAN-Rev6

## Features and Operation

### Main Parts and Controls

- A. LED Bulbs
- B. Power/Dimmer Touch Sensors (Dome and Button)
- C. DC Socket
- D. DC Jack
- E. USB Connector
- F. USB Cable

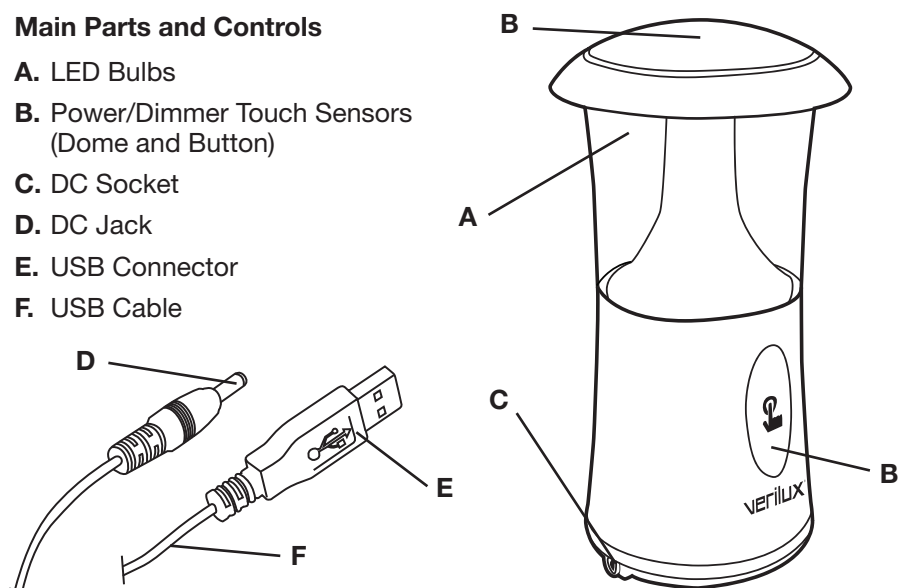

### Lantern Operation

1. The lantern may be operated either by the internal rechargeable battery or by using the USB cable plugged into a USB power source, e.g., a computer.
2. Before first operation, the lantern should be charged for 6 hours to fully charge the battery. This will allow up to 4 hours of operation.
3. To charge the lantern, plug the DC jack into the DC socket of the lantern and plug the USB connector into a computer (computer must be on).
4. The lantern can be operated by touching the power/dimmer touch sensor to turn on or off.
5. To dim the lantern, touch and hold either touch sensor. Release when the lantern is dimmed to desired level.

**NOTE:** The ReadyLight™ is dimmable to help preserve battery power or reduce light for recreational uses.

**NOTE:** An optional USB adapter can be purchased for the unit to allow charging in a 120 VAC wall outlet. For ordering information, go to [www.verilux.com/parts-and-accessories](http://www.verilux.com/parts-and-accessories) or return the order form on page 5 of this manual.

**NOTE:** Due to electrical current limitations of USB (500mA), a USB powered light may not seem as bright as a battery powered light.

## Component Order Form

Order Online at [www.verilux.com/parts-and-accessories](http://www.verilux.com/parts-and-accessories).

Mail or Fax your order by using this form to:

Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Fax: 802-496-3105

Quantity	Price	Part Number	Product
	\$12.95	VEX-035	USB Adapter
	\$6.95	<b>Shipping &amp; Handling</b>	
		<b>Subtotal</b>	
		<b>CT &amp; VT Residents ONLY add 6% Sales Tax</b>	
		<b>Total Payment Enclosed</b>	

Cut Along Dashed Line

**Payment Method:**

VISA  
  MASTERCARD  
  DISCOVER  
  AMERICAN EXPRESS  
  CHECK

**Name as it Appears on Card**

\_\_\_\_\_

**Credit Card Number** \_\_\_\_\_

**Expiration Date** \_\_\_\_\_

**Security Code** \_\_\_\_\_

**Authorized Signature** (credit card purchasers ONLY)

\_\_\_\_\_

**Ship to Address** \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

**Phone Number** \_\_\_\_\_

**Email Address** \_\_\_\_\_

Job#:	Title: VB05 Manual
Date: 9/24/10	Version: VB05-MAN-Rev6



## Warranty Registration

Thank you for purchasing one of the finest vision, therapy or sanitizing products on the market. This Warranty Registration **MUST** be completed and mailed in a timely manner in order for your warranty to be effective. You may also register this product online at [www.verilux.com/warranty](http://www.verilux.com/warranty).

**Name** \_\_\_\_\_

**Address** \_\_\_\_\_

\_\_\_\_\_

**Phone Number** \_\_\_\_\_

**Email Address:** \_\_\_\_\_

**Model #** \_\_\_\_\_

**Date of Purchase (Month/Day/Year)** \_\_\_\_\_

**Receive 20% off your next order when you complete  
your warranty registration online at [www.verilux.com/warranty](http://www.verilux.com/warranty).  
Some restrictions apply.**

Please cut out form and send to:

**VERILUX INC  
PO BOX 451006  
OMAHA NE 68145-5006**

Or register online at [www.verilux.com/warranty](http://www.verilux.com/warranty)

Cut Along Dashed Line

Job#:	Title: VB05 Manual
Date: 9/24/10	Version: VB05-MAN-Rev6

## 90-Day Limited Warranty

**ATTENTION!** ONCE OPENED, PLEASE **DO NOT** RETURN THIS PRODUCT TO THE STORE WHERE IT WAS PURCHASED FOR REPAIR OR REPLACEMENT!

Many questions may be answered by visiting [www.verilux.com](http://www.verilux.com), or you may call our Customer Service Department at 800-786-6850 during normal business hours.

This limited warranty is provided by: Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Verilux warrants this product to be free from defects in material and workmanship for a period of 90 days from the date of the original retail purchase from Verilux or an authorized Verilux distributor. **Proof of purchase is required for all warranty claims.** During the limited warranty period, Verilux, Inc. will, at its option, repair or replace defective parts of this product, at no charge to the customer, subject to the following limitations: This limited warranty does not include any postage, freight, handling, insurance or delivery fees. This warranty does not cover damage, defect or failure caused by or resulting from accident, external destruction, alteration, modification, abuse, misuse or misapplication of this product.

This warranty does not cover damage to the product resulting from return shipping or handling. The use of shipping insurance is recommended to help protect your product.

**Return Authorization is required for all returns.** To obtain a Return Authorization, please contact the Verilux Customer Service Department at 800-786-6850.

If, during the first 90 days of ownership, this product fails to operate properly, it should be returned as specified at [www.verilux.com/warrantyreplacement](http://www.verilux.com/warrantyreplacement) or as instructed by a Verilux customer service representative at 800-786-6850.

**Note:** *Verilux recommends using a quality surge suppressor on all electronics equipment. Voltage variations and spikes can damage electronic components in any system. A quality suppressor can eliminate the vast majority of failures attributed to surges and may be purchased at electronics stores.*

Due to ongoing improvements, actual product may have slight variations from the product described in this manual.

Please visit our web site at: [www.verilux.com](http://www.verilux.com) or call

**1-800-786-6850**

Representatives are available Monday — Friday, 9am — 5pm EST

**verilux®**

340 Mad River Park, Waitsfield, VT 05673

Made in China

Printed in China for Verilux, Inc.

© Copyright 2010 Verilux, Inc. All rights reserved.