



ICS-SP20 for Sony Installation Manual

Manual# 050301
Model: ICS-SP20

205 Commercial Court
Morganville, NJ 07751
www.auroramultimedia.com



TABLE OF CONTENT

1	INTRODUCTION	2
2	SUPPORTED IR TRANSMITTER(S) AND BASIC KEY FUNCTIONS	2
3	QUICK START GUIDE	3
4	SONY DISPLAY SETTINGS	4
5	LED FUNCTIONS	4
6	CONNECTIONS	5
6.1	A/V & CONTROL CONNECTORS	5
6.2	RF CONNECTOR	5
6.3	LODGING (PPV) INTERFACE CONNECTOR.....	5
7	OPERATING MODES	6
7.1	LODGING MODE	7
7.2	STAND-ALONE AND SERVICE MODE.....	7
7.3	MENU SYSTEM IN STAND-ALONE AND SERVICE MODES	8
7.4	GENERAL SETTINGS	9
7.5	VIDEO SETTINGS	10
7.6	AUDIO SETTINGS	11
7.7	TUNER SETTINGS.....	11
7.8	PANEL SETTINGS	12
7.9	CC SETTINGS	13
7.10	V-CHIP SETTINGS.....	14
7.11	TEST PATTERNS.....	14
7.12	TROUBLESHOOTING.....	16
8	CLONING PROCEDURE	17
9	SPECIFICATIONS	18
9.1	APPLICABLE SIGNALS	18
9.2	CONNECTION TERMINALS	18
9.3	DIMENSIONS	18
9.4	WEIGHT	18
10	LIMITED WARRANTY	19
11	FCC PART 15 STATEMENT	19

1 Introduction

The ICS-SP20 is a TV Tuner/Scaler, primarily for Lodging purposes. ICS-SP20 also supports stand-alone applications, in which it effectively functions as an autonomous TV Tuner/Scaler, if supplied with compatible IR remote transmitter. The ICS-SP20 supports advanced functionality, like video format /scan rate conversions, audio effects, Closed Captioning decoding and output, V-Chip functions, cloning capabilities (using the control (lodging) port), Sleep Timer, etc.

2 Supported IR transmitter(s) and basic key functions

The ICS-SP20 is controlled using an IR remote controller. It utilizes IR receiver of the display via the Control S output port (**FWD-50PX1 only**) or the built in IR sensor of the display.

The ICS-SP20 unit is compatible with the Sony IR remote transmitter(s) below (see Fig.1 & 2). These transmitter(s) can be used to control the ICS-SP20 in Stand-alone and service modes.

In the Lodging mode the unit supports IR remote transmitters compatible with the corresponding lodging (PPV) systems (e.g., Lodgenet, OnCommand, SeaChange systems).



Fig. 1



Fig. 2

For details of ICS-SP20 operation in Stand-alone and Service mode refer to the corresponding chapter of this document. Below is a brief description of remote transmitters key used for ICS-SP20 control purposes in these modes.

<i>Fig. 1 IR Remote</i>	<i>Function</i>
ON	Switch Power on
STBY	Switch Power off
ENTER	Select option in menu Also finishes input in dialog panels
VOLUME +	Raises volume level
VOLUME -	Lowers volume level
ARROWS	When menu active – move the cursor up/down/left/right
CHROMA	Exit the current menu or dialog
ID OFF	Displays the Menu
CONTRAST +	Channel Up
CONTRAST -	Channel Down
0..9, digits	When no dialog input active – directly enter tuner channel number to switch to. When dialog input active – enter digits.

3 Quick Start Guide

1. Make sure the Sony Display is off red LED and disconnected from power.
2. Remove the blank plate covering the card slot expansion slot or if an existing card is present it must be removed from slot 1 (some models have 2 slots). If you have Sony model **FWD-50PX1** you will need to loop the Control-S output into the Control-S of the ICS-SP20 using a 1/8" TRS to 1/8" TRS cable. All other Sony displays do not need to do this.
3. Connect the appropriate video source to input connectors of ICS-SP20 (see "Connections" chapter for details).
4. Connect PPV system to RJ11 connector of ICS-SP20 if necessary. Make certain if device is used for lodging that the ICS-SP20 is setup for lodging mode in the service menu. **Warning:** Make certain the RJ11 is connected only to the lodging interface. Damage may occur if plug into a different port such as a phone line or gaming port. This will void the warranty.
5. Connect the power source to the display (refer to Operating Instructions of the Display).
6. The subsequent behavior of ICS-SP20 depends on its mode of operation (see the "Operating Modes" chapter). A quick way to test correctness of setup is to use the "Power" key of Sony remote to switch the "Power" state of ICS-SP20 on – (1) when pressing key on remote the upper LED should blink fast (signaling the IR signal reception); (2) the ICS-SP20 and the panel should switch on, which should be observable on the panel.

4 Sony Display Settings

The ICS-SP20 is designed and tested to work with your Sony display to provide TV Tuner source for flexible use. To experience the best possible image quality, suggested adjustments are recommended for your Sony display.

ICS-SP20 Monitor Selection

The ICS-SP20 has a setting for which Sony display you are using with your TV tuner device. Enter the menu for the ICS-SP20 and under General Settings, select the correct model of your Sony display. Normally it should auto detect the model but has a manual selection as well.

Screen adjustment (Horizontal / Vertical)

It may be necessary to adjust your display screen for best picture alignment on the first use of the ICS-SP20 with your Sony display. Using the supplied Sony remote, use the HSIZE, VSIZE, HSHIFT and VSHIFT buttons inside the ICS-SP20 menus and make adjustments using the directional arrows until you fill the screen and align the image to your preferred setting.

TVs and Displays often "overscan" the image slightly to ensure that difference in channel signals are not reflected on the screen. You may choose to "overscan" the image and confirm that the image is filled on the screen for different channels used.

5 LED functions

The two LEDs located on the ICS-SP20 indicate the current state of ICS-SP20 and may be useful for troubleshooting.

During the startup (after powering on) the LEDs blink as the unit goes through self-test procedures and firmware booting. If, after connecting the power, LEDs do not show any activity, then probably there are problems with the power supply.

If the LEDs blink in alternative pattern -- upper/lower/upper/lower/etc – then the bootblock is active and no valid main firmware is detected. This can happen if, for instance, the preceding firmware update procedure was aborted for some reason. The bootblock waits for the new firmware upload, see the "Firmware update" section of this document.

During the normal functioning of ICS-SP20 (when a valid firmware is loaded and self-test and startup procedures are finished, which takes about 2 seconds), the LED functions are:

Upper LED:

- Flashes for 50ms once in 6 seconds when ICS-SP20 is attached to power supply, but is in "Power Off" ("sleep") state. Flashes for 50ms once in 3 seconds when ICS-SP20 is in "Power On" state. This activity can be overridden by other activities of the same LED.
- Blinks fast when IR signal are detected. This can be used to see whether ICS-SP20 receives any IR control packets or not. This does not mean that ICS-SP20 recognizes any IR command.

Lower LED:

- Switches ON when a control packet is sent to Sony Display Panel.


The upper LED has also another purpose – if the ICS-SP20 encounters an internal irrecoverable error, it stops all activities and starts blinking the upper LED in series (series of blinks, then a longer delay, then the series of blinks is repeated, so on).

6 Connections

6.1 A/V & Control connectors

- Composite video input
- S-Video input (4-pin mini DIN)
- Audio inputs (Left and Right RCA Phono are shared for Video and S-Video)
- IR Input for direct connection of IR from IR control devices.
- Lodging Port RJ-11

Example of interconnections for a display device, ICS-SP20, VCR (or other source of composite video), and TV antenna or cable is shown below. Note that standard RCA cables for audio and video connections, standard S-Video cable, RJ11, or RF antenna cables are not supplied with the ICS-SP20.

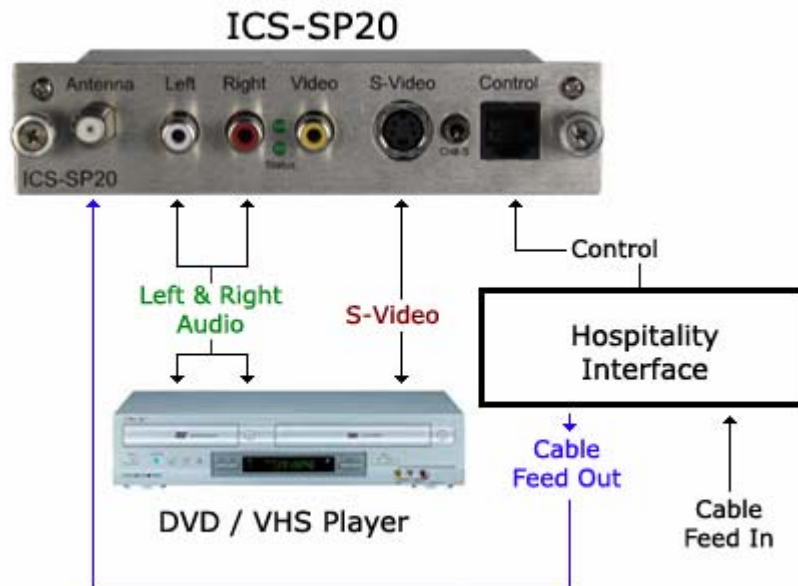

6.2 RF connector

The coaxial connector (ANT) of ICS-SP20 is RF signal input – either aerial or cable TV, UHF/VHF, if the ICS-SP20 shall be used as TV tuner.

6.3 Lodging (PPV) interface connector

RJ11 connector of ICS-SP20 is used to connect to the outside “hospitality” (Pay per view) system, utilizing MATE/TV systems proprietary serial protocol. This is assuming the ICS-SP20 is setup for lodging mode in the service menu. Example systems are LodgeNet, OnCommand, SeaChange, and NXTV.

Warning: Make certain the RJ11 is connected only to the lodging interface. Damage may occur if plug into a different port such as a phone line or gaming port. This will void the warranty.

7 Operating modes

The ICS-SP20 unit can operate in one of the three modes. The menu structure and ICS-SP20 behavior is different in these modes.

1. Lodging mode
2. Stand-alone mode
3. Service mode

The modes differ in what IR remote transmitters can be used to control ICS-SP20 and how autonomous ICS-SP20 functions are.

The basic functions in all modes are similar. A user can switch the unit on or off, control volume level, switch the current TV channel, either directly entering channel number, or browsing through valid channels using Channel +/- keys (usually Arrow Up/Down key on a remote controller). “Valid” channels are the channels where a valid TV signal was discovered during recent “channel scan” operation (in stand-alone mode) or which were labeled as “Valid” by the lodging system (in lodging mode).

Since the ICS-SP20 allows to attach several additional video signal sources to its AV inputs, to facilitate user selection of these inputs ICS-SP20 maps some additional “channel numbers” to its AV inputs. So when a user selects one of these “channels”, the ICS-SP20 switches to the respective AV input. These reserved channel numbers are based on the values selected in the service menu and could be setup in many different ways as shown below.

- 26 - Composite video IN (Default is 126)
- 97 - S-Video IN (Default is 127)
- 108 - RGB+HV IN (Default is 128)
- 2 - YPbPr IN (Default is 129)
- 10 - DVI IN (Default is 130)

When a user changes to one of the channels above the appropriate input will display instead of the normal TV channel signal.

Note that RGB and YPbPr inputs actually share the same connection (15-pin female VGA-like), so channels 128 and 129 change only interpretation of this input. For instructions on selecting or changing a “channel” for an assigned input, please see section 7.6 “Map A/V Input to Channel”

More advanced functionality differs in different operating modes, which is described in more detail below and in the subsequent chapters of this document.

The **Lodging mode** is the primary mode of ICS-SP20 unit. In this mode most of ICS-SP20 behavior is controlled by the PPV network – all user commands issued using PPV system remote controller go to the PPV system, and then the PPV system instructs ICS-SP20 to switch channels or perform other actions.

In this mode the behavior of ICS-SP20 is mostly determined by the PPV system, and internal ICS-SP20 menu system is not used.

The Lodging mode is entered immediately at power-up of ICS-SP20, if this was pre-set (using the Service Mode).

The **Stand-alone mode** is a “basic stand-alone TV” mode. In this mode the ICS-SP20 does not interact with the PPV system. User can use one of IR remote transmitters directly supported by the ICS-SP20 to navigate ICS-SP20 menu system, switch channels, change volume, and perform other functions implemented in ICS-SP20.

The stand-alone mode is entered immediately at power-up of ICS-SP20, if this was pre-set (using the Service Mode).

The **Service mode** is a special mode intended for service people to change the settings of ICS-SP20. In particular this mode allows to select to which mode – “Lodging” or “Stand-alone” -- the ICS-SP20 defaults after powering on. In many respects the service mode is similar to the stand-alone mode; in addition it allows the changing of some “privileged” settings.

The Service mode can be entered from either Lodging or Stand-alone mode by pressing “Select” key for a prolonged (at least 5 seconds) time and then, after a prompt, entering the correct service mode password + Select key. The factory default password is digits **7262**.

The Service mode is indicated by red “Service Mode” label at top of screen, so that a user (in this case a person doing maintenance work) does not forget that the Service mode is currently active.

The Service mode is exited by cycling ICS-SP20 power off/on.

7.1 Lodging mode

In this mode ICS-SP20 behavior is controlled primarily by the PPV system. Therefore for details of ICS-SP20 operation in this mode refer to the particular PPV system operating instructions.


Information drawn on screen in this mode consists of:

- (1) graphics and texts generated by ICS-SP20 internally;
- (2) graphics and texts generated by ICS-SP20 upon request from PPV system.

The first category includes:

- Volume slider;
- Channel numbers and text labels (shown on cyan background after channel change) – if this was enabled in Service mode ;
- Closed Caption text;
- Some menus generated by ICS-SP20 upon request from PPV system

Example of such menu is the Hotel Menu, allowing the control of Closed Captioning and V-Chip settings. This menu is entered upon pressing “Function” key of remote transmitter.

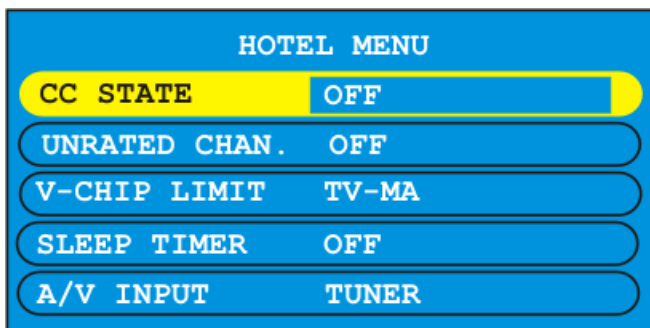

7.2 Stand-alone and Service mode

In the Stand-alone and Service modes, the ICS-SP20 is controlled using one of directly supported IR transmitters by Sony.

When no menu is active, usual keys of IR transmitter can be utilized to change volume level and switch channels. These control keys are:

Key: Volume+/- (“VOL”)

“VOLUME “ – volume up/down adjustment




Key: Contrast +/- (“CH”)

Change TV channel. Number and label (if was defined) of the new channel is shown at top of screen for 5 seconds.



Keys: 0-9

Dialog: “SWITCH TO” – enter new channel number, several digits can be entered if necessary. Channel is switched to after a 3 seconds timeout (since the most recent digit is entered) or after pressing *TV/Video/FM* or *R* key.

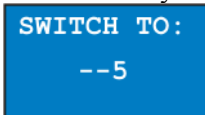

Key: “ID OFF”

Enter the main configuration menu. See the Menu System chapter

Key: “Chroma”

Enter selections for the menu.

Key: “ON/STBY”

Switch ICS-SP20 power on/off. The display panel is switched accordingly if it is connected using the RS-232 port or IR output port.


7.3 Menu system in Stand-alone and service modes

The menu system allows a user to control various aspects of ICS-SP20 configuration. The menus of the Service mode are similar to menus of Stand-alone, with some additional configuration options.

For all menus, up/down arrows move the cursor (yellow “selection” highlight) up/down. Central key selects the current submenu/option and finishes text entry (passwords, channel labels, etc.). Left/right arrow changes the currently active option, if possible.

When in “text edit” dialog (e.g., channel label editing), left/right arrows move the cursor left/right, up/down arrows change the character at the cursor.


The main menu:

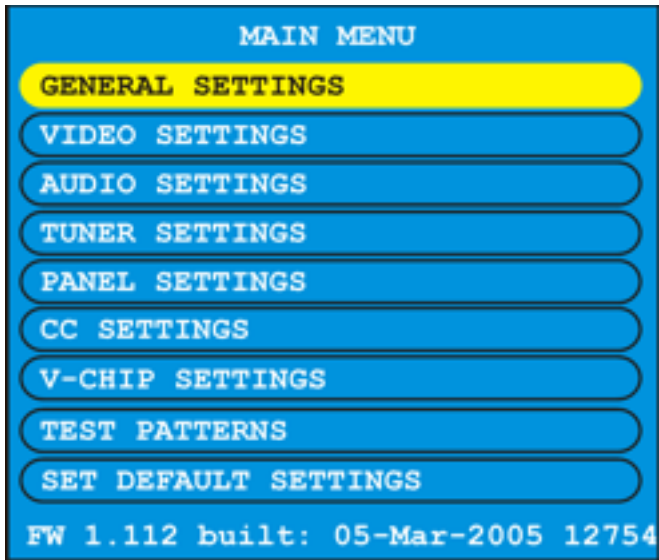

This menu allows a user to select the desired sub-menu for further configuration or to set default settings. “Set default settings” option is available only in Service mode.

These sub-menus are discussed in more detail in the subsequent chapters.

7.4 General Settings

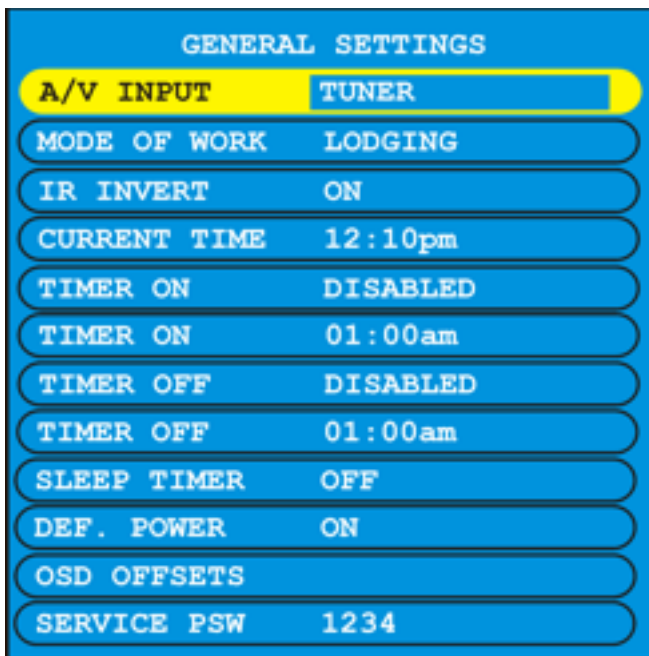


This menu allows control of various “general” aspects of ICS-SP20 behavior. Note that the *-marked options are accessible only in Service mode, and not in Stand-alone mode.

A/V Input – Allows user to select the audio/video input source (among the built-in Tuner and available AV-inputs)

Mode of work* – Allows selection between Lodging/Stand-alone mode


- IR Invert** – Inverts the incoming IR signal output to the lodging interface. This may be necessary if the built in IR sensor is used verse the IR input connector. If the built in IR sensor is used the IR invert should be set to off.
- Current time** – Allows to set the current time
- Timer On** – Allows display turn on time enable/disable and the time at which it occurs
- Timer Off** – Allows display turn off time enable/disable and the time at which it occurs
- Sleep timer** – Allows user to set the sleep timer
- Def. power** – Configures default “power” state when the power is applied to the ICS-SP20 (it is connected to the mains). “Off” means the ICS-SP20 will remain in a “sleep” state after attaching power supply until switched on by IR transmitter command. “On” means the ICS-SP20 will switch on automatically (no need to manually switch the power on after power supply connection).
- OSD Offsets** – Allows positioning of the OSD such as channel closed captioning etc.
- Service PSW*** – Allows to specify the password to be used to enter Service Mode from any other mode.

7.5 Video Settings

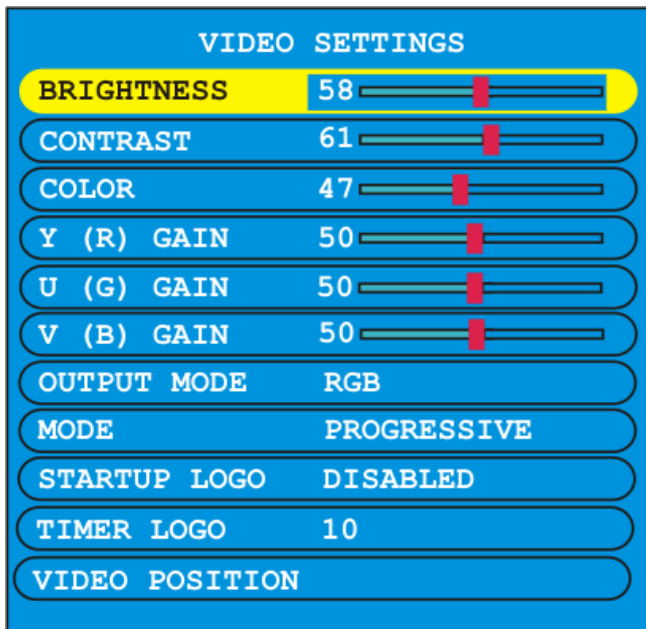


- Brightness** -- Controls the brightness of the picture.
- Contrast** -- Controls the contrast of the picture.
- Color** -- Controls color saturation (0 corresponds to grayscale picture)
- YUV(RGB) Gains*** -- Individually controls gains for component signals
- Output Mode** -- Selects between RGB and YPbPr output signal type
- Mode** -- Selects between progressive and interlaced output signal scanning modes
- Startup Logo** -- Enabled or disables “logo” picture display after ICS-SP20 powering on.
- Timer Logo** -- Time, in seconds, for which the “logo” picture is shown after ICS-SP20 powering on.
- Video Position** -- Opens the “Video position” submenu, allowing control of picture position on screen.

7.6 Audio Settings

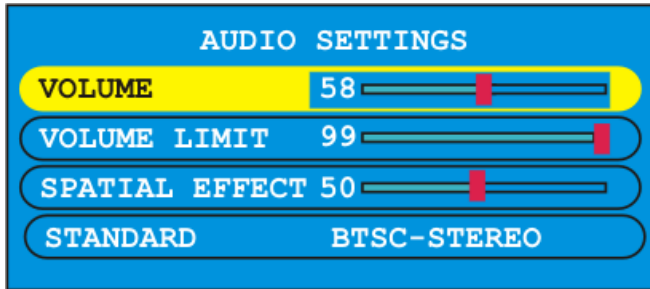



- Volume** -- Selects the current (default) volume level
- Volume limit*** -- Selects the volume limit (so that volume cannot be risen above this limit)
- Spatial Effect** -- Specifies the strength of 3D-spatial effect
- Standard*** -- Selects the standard of the audio signal, including automatic detection.

7.7 Tuner Settings

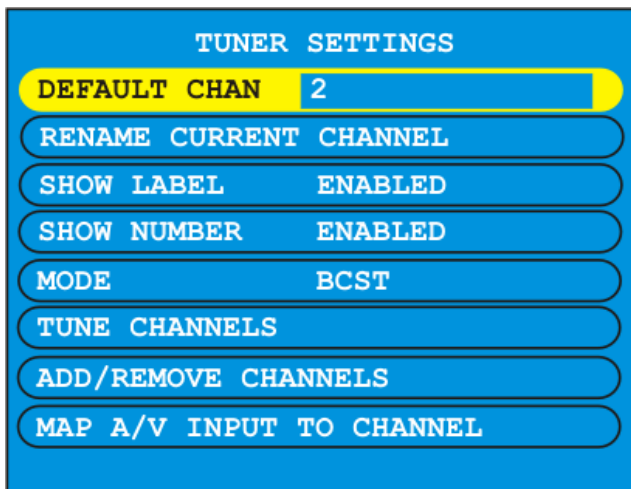


- Default Chan** -- Specifies the default channel, which will be selected upon ICS-SP20 power-up. If this default channel is set to “0” -- the default channel will be the last channel selected before the ICS-SP20 was powered off.
Note that in the Lodging mode the “Default channel” setting will most probably be overridden by the Lodging system.
- Rename Current Channel** -- Change the text label assigned to the current channel. This label is shown (if enabled) on screen, along with the channel number, when the ICS-SP20 is switched to this channel. Display of labels and channel numbers can be globally disabled on enabled, see the subsequent menu options.
- Show Label** -- Setting to enable will show up to an 8 character label specific to the channel when changing channels.
- Show Number** -- Setting to enable will show up the channel number when changing channels.
- Mode** -- Select tuner mode (channels allocation) to use, among broadcast and several cable options.

Tune Channels -- Scans the channels, looking for valid signal presence, and “remembers” which channels are valid and which are not. This “validity mask” is used then for channel browsing using channel +/- buttons (so that a user browses through the defined channels only). Note that before this operation ICS-SP20 must be connected to RF-antenna or cable TV.

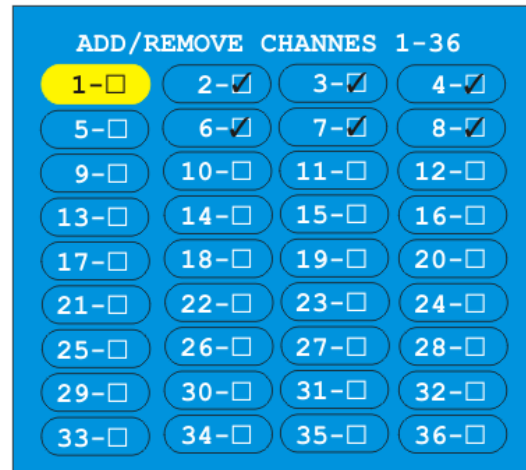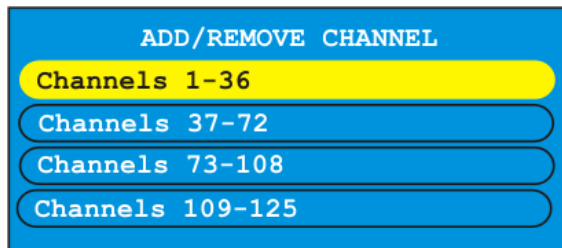

Add/Remove Channels – Allows user to add or remove channels (edit the “validity mask”) manually.

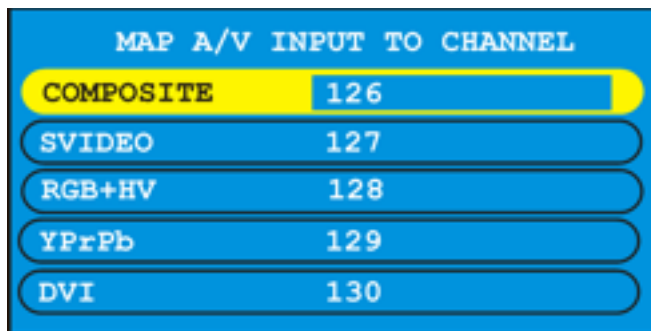


Map A/V Input to Channel – Allows user to make an association between a channel number and the AV inputs. This is especially useful for lodging mode when a channel must be selected to pick the AV input desired.

7.8 Panel Settings

This menu controls various aspects of interaction with the Sony display through the RS-232 port. This menu is accessible in Service mode only (not in Stand-alone).

All these parameters do not affect behavior of ICS-SP20, they are transferred to Display Panel in control packets over the serial port and should be interpreted by Display Panel. If the panel control is disabled, all other options effectively do not affect anything.



Note that for the serial control interface to work, the Display Panel must be connected to ICS-SP20 using the RS-232 cable.

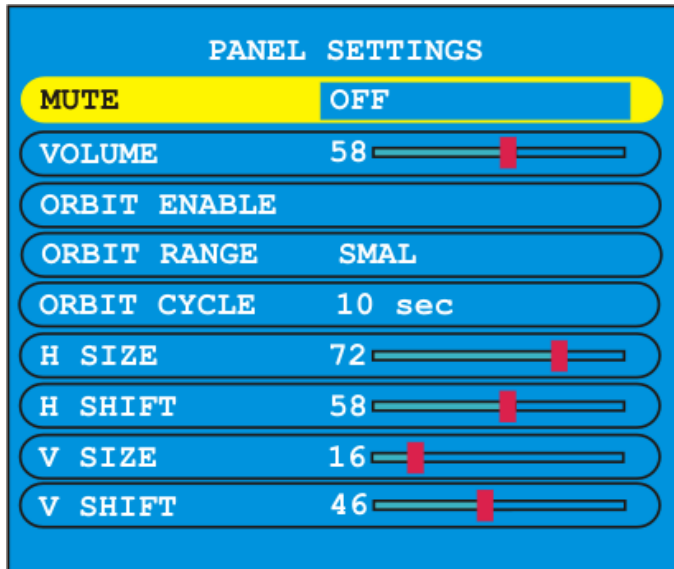

Model -- This option controls the RS-232 protocol for the model selected and defaults the position, size, brightness, contrast and RGB gains best suited.

Mute -- This option controls the “Mute” parameter value in the control packet. “On” switches “Mute” function of the panel “On”.

Volume -- This option controls the default “Volume” parameter value in the display.

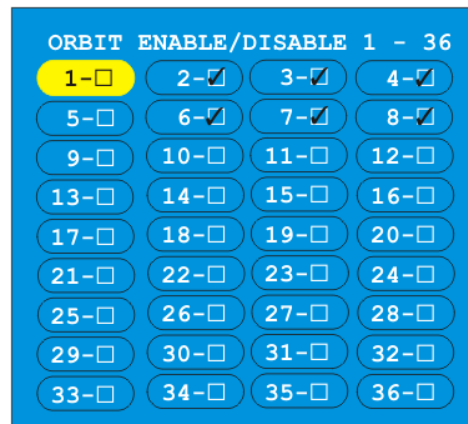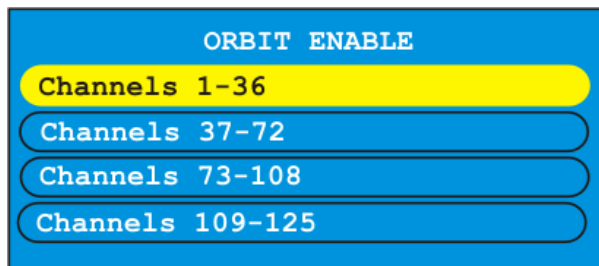

Orbit Enable -- Allows the enabling of Orbit mode on a per channel basis.


Orbit Range -- Selects how much orbit movement will occur.

Orbit Cycle -- Determines how often it will orbit.

H/V size/shift -- These parameters tell the panel how to position the picture on the screen, and can be used for picture position/size adjustment.

7.9 CC Settings


This menu control Closed Caption decoder – CC signal type, and CC text color.

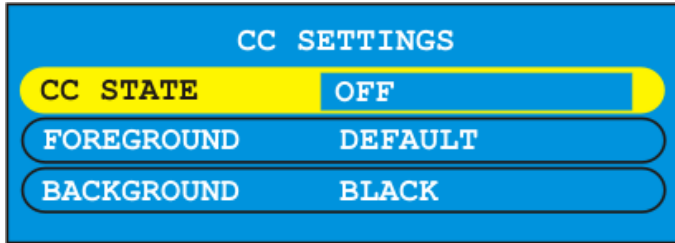

- CC State** -- CC decoder state: Off – Closed Caption output is switched off.
- Foreground** -- Color for CC text foreground.
- Background** -- Color for CC text background.

7.10 V-Chip Settings

This menu configures V-Chip parental control system.

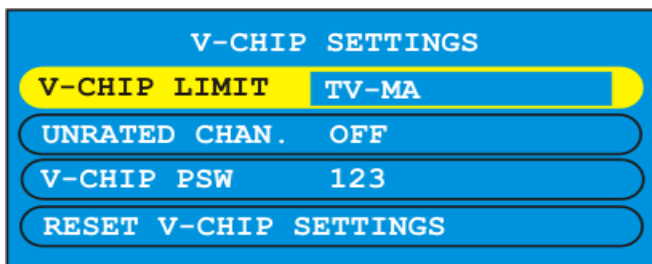

- V-Chip Limit** -- Sets the threshold for program content indicator. Content rated as set in this option (and below) can be viewed using the TV. Content rated above the setting is rejected (red screen with message is shown).
- Unrated chan.** -- Allows to enable/disable viewing of “unrated” channels. Off=Do not allow viewing.
- V-Chip PSW*** -- Change the password used to change V-Chip threshold
- Reset V-Chip Settings*** -- Reset all V-Chip settings to default (no limitation and no access password).

*- In Lodging and Stand-alone modes a user cannot change or reset password. Instead, to change the V-Chip limit user must enter the V-Chip password.


If the password is reset, the user is prompted to enter new password on his/her first access to V-Chip limit. For all subsequent accesses the user will have to use the password that was specified during the first access.

Password can be reset by the lodging system command (e.g., when a user checks out), or using the Service Mode.

7.11 Test Patterns

This menu does not change ICS-SP20 configuration. Its purpose is generation of test signals, which may be convenient for maintenance purposes. Switching any option to ON causes immediate output of the requested signal.

This menu is accessible in Service Mode only (not in Stand-alone).

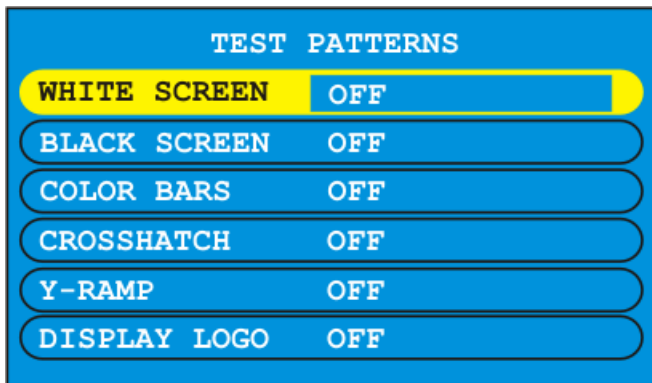

- White Screen*** -- Show white screen
- Black Screen*** -- Show black screen
- Color Bars*** -- Show color bars
- Crosshatch*** -- Show crosshatch pattern
- Y-Ramp*** -- Show Y-Ramp pattern
- Display Logo*** -- Show pre-loaded “logo”-picture (the same one that is shown after power-on).

7.12 Troubleshooting

Symptom	Checks
Key on remote is pressed but nothing happens	<p>See if the upper LED of ICS-SP20 is fast-blinking while pressing key and aiming remote at IR sensor on the display Display. If it is not — check the batteries in the remote.</p> <p>If the upper LED is fast-blinking when a button is pressed on remote – in Stand-alone and Service modes: check that the IR remote transmitter is supported by the ICS-SP20.</p> <p>Lodging mode: When the Lodging interface is functioning properly, the upper LED should blink with a period of 0.5 or 1 second. If the LED does not blink this way – check the Lodging system connection (RJ11); check Lodging equipment power and configuration. If the LED does blink periodically -- make sure the IR transmitter is compatible with the Lodging system. Check Lodging system configuration.</p>
Image is Green	Make certain Option slot is select to YPbPr
No control of the display via Menus	Under panel settings check to see if correct model is selected.
Image is Green	Make certain Option slot is select to YPbPr
Cannot switch to a particular TV channel using channel +/- browse keys.	<p>Lodging mode: This functionality is controlled by the Lodging network. Check Lodging network connections, power, and configuration. When Lodging network functions properly, the lower LED should blink periodically.</p> <p>Stand-alone and Service mode: The channel is selectable by browsing keys only if it is marked as “valid”. To be marked as “valid” the channel must have a good TV signal during the “channel scan” operation. Repeat the channel scan (making sure aerial/cable connection is good). Also the channel validity can be edited manually.</p>

8 Cloning Procedure

To clone a display device the ECS-SPC cloning device will be required. This device connects to the lodging port of the ICS-SP20.

Learning:

Holding the learn button for 5 seconds will start the cloning process. When held the red LED will be solid once the process begins the red LED will start to blink. When done the blinking will stop and the LED will turn off.

Playback:

Press the playback button and the green LED will begin to blink. When done, anything that was last learned will be transferred to the unit the ECS-SPC is connected to and the LED will stop blinking.

If the LED does not activate check the battery for replacement.

9 Specifications

9.1 Applicable signals

Color system: NTSC (RF and AV inputs)
Scanning format: 525i (480i), 525p (480p)

Receiving RF signals – US Standard Air, US Standard Cable, Cable HRC, Cable IRC

Supported audio standards: auto-detection, BTSC-STEREO, BTSC-MONO+SAP

9.2 Connection terminals

Video IN (RCA)
S-Video IN (Mini DIN 4pin)
Audio Left Right – RCA Phono
ANT (aerial) IN – RF UHF/VHF
Control (Hospitality / Lodging Port) – RJ11
IR IN – 3.5mm TRS (Tip – Signal, Ring – NC, Sleeve – Ground)

9.3 Dimensions

Height: 1.25”
Depth: 3.25”
Length: 5.25”

9.4 Weight

Approx. 0.8 lbs for ICS-SP20 unit and 1 lbs with all accessories and boxed

10 Limited Warranty

Aurora Multimedia Corp. Warrants that this product is free of defects in both materials and workmanship for a period of 24 months for parts and labor from date of purchase. During the warranty period, and upon proof of purchase, the product will be repaired or replaced (with same or similar model) at our option without charge for parts or labor for the specified warranty period (24 months parts and labor).

This warranty shall not apply if any of the following:

- A) The product has been damaged by negligence, accident, lightning, water, act-of-God or mishandling; or,
- B) The product has not been operated in accordance with procedures specified in operating instructions; or,
- C) The product has been repaired and or altered by other than manufacturer; or,
- D) The product's original serial number has been modified or removed; or,
- E) External equipment other than supplied by manufacturer, in determination of manufacturer, shall have affected the performance, safety or reliability of the product.

In the event that the product needs repair or replacement during the specified warranty period, product should be shipped back to Manufacturer at Purchaser's expense. If requested, an estimate of any applicable charges will be given before the repairs are made.

No other warranty, express or implied other than Manufacturer's shall apply.

Manufacturer does not assume any responsibility for consequential damages, expenses or loss of revenue or property, inconvenience or interruption in operation experienced by the customer due to a malfunction in the purchased equipment. No warranty service performed on any product shall extend the applicable warranty period.

This warranty does not cover damage to the equipment during shipping and Manufacturer assumes no responsibility for such damage.

This product warranty extends to the original purchaser only and will be null and void upon any assignment or transfer.

11 FCC Part 15 Statement

RADIO AND TELEVISION INTERFERENCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You may also find helpful the following booklet, prepared by the FCC: "How to Identify and Resolve Radio-TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402.

Changes and Modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commissions rules.

In order to maintain compliance with FCC regulations shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio & television reception.